# User's Guide Dell SE2216H Dell SE2216HV

Regulatory model: SE2216Hf / SE2216HVf





NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

#### © 2015 Dell Inc. All rights reserved.

Information in this document is subject to change without notice. Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell™ and the DELL logo are trademarks of Dell Inc.; Microsoft®, Windows, and the Windows start button logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

2015 - 07 Rev. A00

# **Contents**

Ab	oout Your Monitor 5
	Package Contents
	Product Features
	Identifying Parts and Controls
	Monitor Specifications
	Plug and Play Capability
	LCD Monitor Quality & Pixel Policy
	Maintenance Guidelines
Se	tting Up the Monitor17
	Attaching the Stand
	Connecting Your Monitor
	Organizing Your Cables
	Removing the Monitor Stand
Oı	perating the Monitor
	Power On the Monitor
	Using the Front-Panel Controls
	Using the On-Screen Display (OSD) Menu
	Setting the Maximum Resolution
	Using the Tilt

Trou	bleshooting	46
S	elf-Test	46
В	uilt-in Diagnostics	47
C	ommon Problems	48
P	oduct-Specific Problems	51
Арр	endix	52
S	fety Instructions	52
F	CC Notices (U.S. Only) and Other Regulatory Information	52
C	ontact Dell	52

# **About Your Monitor**

# **Package Contents**

Your monitor ships with all the components shown below. Ensure that you have received all the components and <u>Contact Dell</u> if anything is missing.

**NOTE:** Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.



#### **Product Features**

The Dell SE2216H / SE2216HV flat-panel display has an active matrix, Thin-Film Transistor, Liquid Crystal Display and LED backlight. The monitor's features include:

- **SE2216H / SE2216HV**: 54.61 cm (21.5 inches) diagonal viewable image size, 1920 x 1080 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or while moving from side-to-side.
- · Tilt adjustment capability.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation media which includes an information file (INF), Image Color Matching File (ICM), and product documentation.
- Dell Display Manager Software
- ENERGY STAR-compliant.
- · Security lock slot.
- Capability to switch from wide aspect to standard aspect ratio while maintaining the image quality.
- · Asset Management Capability.
- EPEAT Sliver rating.
- · CECP (for China).
- · RoHS compliant.
- BFR/PVC- Reduced.
- TCO Certified Displays.
- High Dynamic Contrast Ratio (8,000,000:1).
- Energy Gauge shows the energy level being consumed by the monitor in real time.
- 0.3 W standby power when in the sleep mode.
- Analog backlight dimming control for flicker free display.

# **Identifying Parts and Controls**

#### **Front View**



1.	Function buttons (For more information, see <b>Operating the Monitor</b> )
2	Power On/Off button (with LED indicator)

NOTE: For displays with glossy bezels the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

#### **Back View**



Back View with Monitor Stand

Label	Description	Use
1	Security lock slot	Secures monitor with security lock (security lock not included).
		(Security lock flot included).
2	Barcode serial number label	Refer to this label if you need to contact
		Dell for technical support.
3	Cable management slot	Use to organize cables by placing them
		through the slot.

#### **Side View**



#### **Bottom View**



Label Description		Use
1	AC power connector	To connect the monitor power cable.
2	HDMI connector	Connect your computer with HDMI cable.
3		To connect your computer to the monitor using a VGA cable.
4	Regulatory rating label	Lists the regulatory approvals.



Label Description		Use
1	AC power connector	To connect the monitor power cable.
2	2 VGA connector To connect your computer to the monitor us a VGA cable.	
3	Regulatory rating label	Lists the regulatory approvals.

# **Monitor Specifications**

The following sections give you information about the various power management modes and pin assignments for the various connectors of your monitor.


# **Power Management Modes**

If you have VESA's DPM compliance display card or software installed in your PC, the monitor automatically reduces its power consumption when not in use. This is referred to as Power Save Mode. If the computer detects input from keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power-saving feature:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	White	24 W (Maximum)**
					18 W (Typical)
Active-off mode	Inactive	Inactive		Glowing white	Less than 0.3 W
Switch off	-	-		Off	Less than 0.3 W *

Energy Star	Power Consumption
On Mode	18.2 W***

The OSD will only function in the *normal operation* mode. When any button except power button is pressed in Active-off mode, the following messages will be displayed:

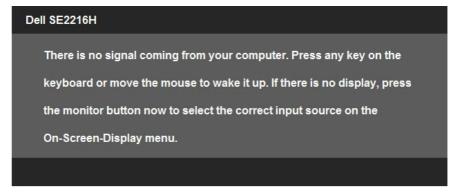

#### Dell SE2216HV

There is no signal coming from your computer. Press any key on the

keyboard or move the mouse to wake it up.

Activate the computer and monitor to gain access to the OSD.






- \* Zero-power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.
- \*\* Maximum power consumption with max luminance and contrast.
- \*\*\* Energy consumption (On Mode) is tested at 230 Volts / 50 Hz.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.


# **Pin Assignments**

15-pin D-Sub connector

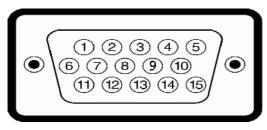

Pin Number	Monitor Side of the 15-pin Side Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	DDC +5 V
10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

#### **HDMI** connector

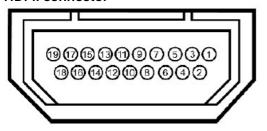

Pin Number	19-pin Side of the Connected Signal Cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	No Connection
14	No Connection
15	DDC CLOCK (SDA)
16	DDC DATA (SDA)
17	GND
18	+5 V POWER
19	HOT PLUG DETECT

# Plug and Play Capability

You can install the monitor in any Plug and Play compatible system. The monitor automatically provides the computer with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so that the system can configure itself and optimize the monitor settings. Most monitor installations are automatic. You can select different settings if required.

# **Flat-Panel Specifications**

Model number	SE2216H / SE2216HV	
Screen type	Active matrix - TFT LCD	
Panel Type	Vertical Alignment	
Viewable image		
Diagonal	546.1 mm (21.5 inches)	
Horizontal Active Area	476.064 mm (18.74 inches)	
Vertical Active Area	267.786 mm (10.54 inches)	
Area	127483.27 mm² (197.52 inches²)	
Pixel pitch	0.24795 x 0.24795 mm	
Viewing angle:		
Horizontal	178° typical	
Vertical	178° typical	
Luminance output	250 cd/m² (typical)	
Contrast ratio	3000 to 1 (typical)	
Dynamic Contrast ratio	8,000,000 to 1 (typical) *	
Faceplate coating	Antiglare with hard-coating 3H	
Backlight	LED light bar system	
Response Time	12 ms typical (grey to grey)	
Color Depth	16.7 mil colors	
Color Gamut	84 % (typical) **	

<sup>\*</sup> Based on estimation.

<sup>\*\*</sup> SE2216H / SE2216HV color gamut (typical) is based on CIE1976 (84 %) and CIE1931 (72 %) test standards.

# **Resolution Specifications**

Model	number	SE2216H / SE2216HV
Scan range		
•	Horizontal	30 kHz to 83 kHz (automatic)
•	Vertical	56 Hz to 76 Hz (automatic)
Maximum preset resolution		1920 x 1080 at 60 Hz

# **Electrical Specifications**

Model number	SE2216H	SE2216HV		
Video input signals	Analog RGB: 0.7 Volts ± 5 %, 75 ohm input impedance	Analog RGB: 0.7 Volts ± 5 %, 75 ohm input impedance		
	HDMI, 600mV for each differential line, 100 ohm input impedance per differential pair			
Synchronization input signals	Separate horizontal and vertical synchronizations, polarity-fre- TTL level, SOG (Composite SYNC on green)			
AC input voltage / frequency / current	100 VAC to 240 VAC / 50 Hz or 60 Hz $\pm$ 3 Hz / 1.0 A (typical)			
Inrush current	120 V: 30 A (Max.)			
	240 V: 60 A (Max.)			

# **Preset Display Modes**

The following table lists the preset modes for which Dell guarantees image size and centering:

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/ Vertical)
VESA, 720 x 400	31.5	70.1	28.3	-/+
VESA, 640 x 480	31.5	59.9	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+

VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 900	60.0	60.0	108.0	+/+
VESA, 1920 x 1080	67.5	60.0	148.5	+/+

# **Physical Characteristics**

The following table lists the monitor's physical characteristics:

Model Number	SE2216H	SE2216HV
Connector type	<ul><li>15-pin D-subminiature (Black connector);</li><li>HDMI</li></ul>	15-pin D-subminiature (Black connector)
Signal cable type	<ul><li>Analog: D-Sub, 15 pins;</li><li>Digital: HDMI, 19 pins (cable not included)</li></ul>	Analog: D-Sub, 15 pins
Dimensions: (with stand)		
Height	395.7 mm (15.58 inches)	395.7 mm (15.58 inches)
Width	506.2 mm (19.93 inches)	506.2 mm (19.93 inches)
Depth	179.9 mm (7.08 inches)	179.9 mm (7.08 inches)
Dimensions: (without stand)	702 7 maga (44 02 in ala as)	702 7 maga (44 02 in ale as)
Height	302.7 mm (11.92 inches)	302.7 mm (11.92 inches)
Width	506.2 mm (19.93 inches)	506.2 mm (19.93 inches)
Depth	54.7 mm (2.15 inches)	54.7 mm (2.15 inches)
Stand dimensions:		
Height	174.7 mm (6.8 inches)	174.7 mm (6.8 inches)
Width	250.0 mm (9.84 inches)	250.0 mm (9.84 inches)
Depth	179.9 mm (7.08 inches)	179.9 mm (7.08 inches)
Weight:		
Weight with packaging	4.80 kg (10.58 lb)	4.80 kg (10.58 lb)
Weight with stand assembly and cables	3.61 kg (7.96 lb)	3.61 kg (7.96 lb)
Weight without stand assembly ( no cables)	2.78 kg (6.13 lb)	2.78 kg (6.13 lb)
Weight of stand assembly	0.54 kg (1.19 lb)	0.54 kg (1.19 lb)

#### **Environmental Characteristics**

The following table lists the environmental conditions for your monitor:

Model Number	SE2216H / SE2216HV				
Temperature					
<ul> <li>Operating</li> </ul>	0 °C to 40 °C (32 °F to 104 °F)				
Non-operating	Storage: -20 °C to 60 °C (-4 °F to 140 °F) Shipping: -20 °C to 60 °C (-4 °F to 140 °F)				
Humidity					
<ul> <li>Operating</li> </ul>	10 % to 80 % (non-condensing)				
Non-operating	Storage: 5 % to 90 % (non-condensing) Shipping: 5 % to 90 % (non-condensing)				
Altitude					
<ul> <li>Operating</li> </ul>	5,000 m (16,404 ft) max				
Non-operating	12,191 m (40,000 ft) max				
Thermal dissipation	81.9 BTU/hour (maximum) 61.4 BTU/hour (typical)				

# **LCD Monitor Quality & Pixel Policy**

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state. The visible result is a fixed pixel that appears as an extremely tiny dark or bright discolored spot. When the pixel remains permanently lit, it is known as a "bright dot." When the pixel remains black, it is known as a "dark dot."

In almost every case, these fixed pixels are hard to see and do not detract from display quality or usability. A display with 1 to 5 fixed pixels is considered normal and within competitive standards. For more information, see Dell Support site at: http://www.dell.com/support/monitors.

#### **Maintenance Guidelines**

### **Caring for Your Monitor**



CAUTION: Read and follow the safety instructions before cleaning the monitor.



CAUTION: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your antistatic screen, slightly dampen a soft, clean cloth with water. If
  possible, use a special screen-cleaning tissue or solution suitable for the antistatic
  coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed
  air.
- Use a slightly dampened, warm cloth to clean the plastics. Avoid using detergent of any kind as some detergents leave a milky film on the plastics.
- If you notice a white powder when you unpack your monitor, wipe it off with a cloth. This white powder occurs during the shipping of the monitor.
- Handle your monitor with care as a darker-colored monitor may scratch and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and power off your monitor when not in use.

# **Setting Up the Monitor**

# **Attaching the Stand**

**NOTE:** The stand base is detached when the monitor is shipped from the factory.

1. Assemble the stand riser to stand base.



- a. Place the monitor stand base on a stable table top.
- **b.** Slide the monitor stand body in the correct direction down onto the stand base until it clicks into place.
- 2. Attach the stand assembly to the monitor:



- a. Place the monitor on a soft cloth or cushion near the edge of desk.
- **b.** Align the stand assembly bracket to the monitor groove.
- **c.** Insert the bracket towards monitor until it locks in place.

# **Connecting Your Monitor**

MARNING: Before you begin any of the procedures in this section, follow the <u>Safety Instructions</u>.

To connect your monitor to the computer:

- **1.** Turn off your computer and disconnect the power cable.
- 2. Connect the black VGA or HDMI cable to the corresponding video port on the back of your computer. Do not use all cables at the same time. Use the all cables only when they are connected to different computers with appropriate video systems.

# **Connecting VGA Cable**

#### SE2216H:



#### SE2216HV:



# Connecting HDMI cable (Optional Purchase) (for SE2216H)



NOTE: The graphics are used for the purpose of illustration only. Appearance on the computer may vary.

# **Organizing Your Cables**



After attaching all necessary cables to your monitor and computer, (See Connecting Your Monitor for cable attachment), organize all cables as shown above.

# **Removing the Monitor Stand**

**NOTE:** This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the removal instructions.



- **1.** Use a long screwdriver to push the release latch located in a hole just above the stand.
- **2.** Once the latch is released, remove the base away from the monitor.

# **Operating the Monitor**

# **Power On the Monitor**

Press the **1** button to turn on the monitor.



# **Using the Front-Panel Controls**

**Use the keys** on the front of the monitor to adjust the image settings.

#### SE2216H:



Front-Panel Keys		Description		
A	Preset modes	Use the <b>Preset modes</b> key to choose from a list of preset color modes. See <u>Using the OSD Menu</u> .		
В	Input Source	Use the <b>Input Source</b> key to select between different video signals that may be connected to your monitor.  VGA input HDMI input		
С	Menu	Use the <b>Menu</b> key to open the on-screen display (OSD).		
D	Exit	Use the <b>Exit</b> key to exit on-screen display (OSD) from menu and sub-menus.		

#### SE2216HV:



Front-Panel Keys		Description				
A Preset modes		Use the <b>Preset modes</b> key to choose from a list of preset color modes. See <u>Using the OSD Menu</u> .				
В	Brightness /Contrast	Use the <b>Brightness / Contrast</b> key to direct access to the "Brightness" and "Contrast" control menu.				
С	Menu	Use the <b>Menu</b> key to open the on-screen display (OSD).				
D	Exit	Use the <b>Exit</b> key to exit on-screen display (OSD) from menu and sub-menus.				

# **Front-Panel Keys**




Front-	Panel Keys	Description
A	<b>A</b> Up	Use the <b>Up</b> key to adjust (increase ranges) items in the OSD menu.
В	<b>Down</b>	Use the <b>Down</b> key to adjust (decrease ranges) items in the OSD menu.
С	<b>⊘</b> OK	Use the <b>OK</b> key to confirm your selection.
D	<b>S</b> Back	Use the <b>Back</b> key to go back to the previous menu.

# Using the On-Screen Display (OSD) Menu


# **Accessing the Menu System**

- **NOTE:** If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.
  - 1. Press the  $oldsymbol{\Theta}$  button to open the OSD menu and display the main menu.

#### Main Menu

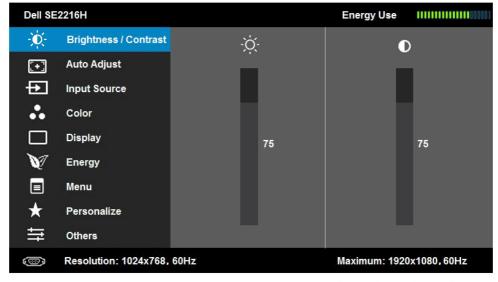



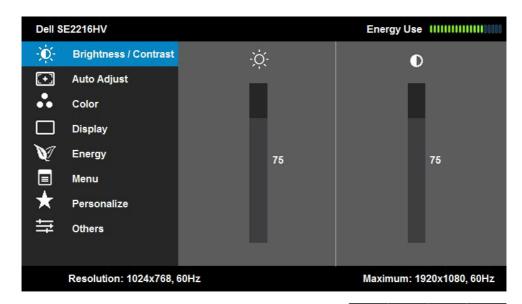



- **NOTE:** Auto Adjust is only available when you use the analog (VGA) connector.
  - 2. Press the 
    and 
    buttons to toggle between options in the Menu. As you move from one icon to another, the option name is highlighted.
  - **3.** To select the highlighted item on the menu press the button again.
  - **4.** Press the **△** and **∨** buttons to select the desired parameter.
  - 5. Press the ⇒ button to enter the slide bar and then use the o or ⇒ buttons, according to the indicators on the menu, to make your changes.
  - **6.** Select the **9** to return to previous menu without accepting current settings or **9** to accept and return to previous menu.

The table below provides a list of all the OSD menu options and their functions.

	1	ides a list of all the OSD m	nenu options and th	neir functions.		
lcon	Menu and Submenus	Description				
	Energy Use	This meter shows the enmonitor in real time.	nergy level being co	onsumed by the		
	Brightness/ Contrast	Use the <b>Brightness</b> and <b>Contrast</b> menu to adjust the Brightness/Contrast.				
		Dell SE2216H		Energy Use		
		- Brightness / Contrast	-ġ-	0		
		+ Auto Adjust				
		Input Source				
		Color		_		
		Display	75	75		
		<b>V</b> Energy		_		
		<b>■</b> Menu		_		
		★ Personalize		_		
		Resolution: 1024x768, 60	Hz	Maximum: 1920x1080, 60Hz		
				^ <b>∨</b> → <b>×</b>		
		Dell SE2216HV		Energy Use		
		- D- Brightness / Contrast	- <u>ö</u> -	0		
		+ Auto Adjust				
		Color				
		Display				
		₩ Energy	75	75		
		<b>■</b> Menu		,,		
		★ Personalize				
		<b>≒</b> Others				
		Resolution: 1024x768, 60Hz	:	Maximum: 1920x1080, 60Hz		
				^ <b>∨</b> → <b>×</b>		
	Brightness	Allows you to adjust the brightness or luminance of the backlight.				
		Press the key to incredecrease brightness (mi		press the Vex key to		
	Contrast	Allows you to adjust the between darkness and l brightness first, and adjuadjustment.	contrast or the de ightness on the mo ust contrast only if	onitor screen. Adjust you need further		
		Press the key to incredecrease contrast (min		oress the ♥ key to		



Auto Adjust Use this key to activate automatic setup and adjust menu.




The following dialog appears on a black screen as the monitor self-adjusts to the current input:


#### Auto Adjustment in Progress...


Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can further tune your monitor by using the Pixel Clock (Coarse) and Phase (Fine) controls under **Display**.

NOTE: Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables.

This option is only available when you are using the analog (VGA) connector.

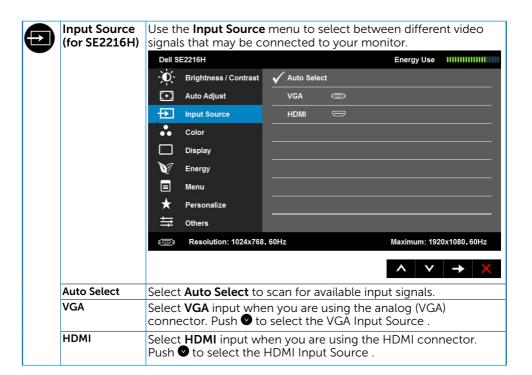

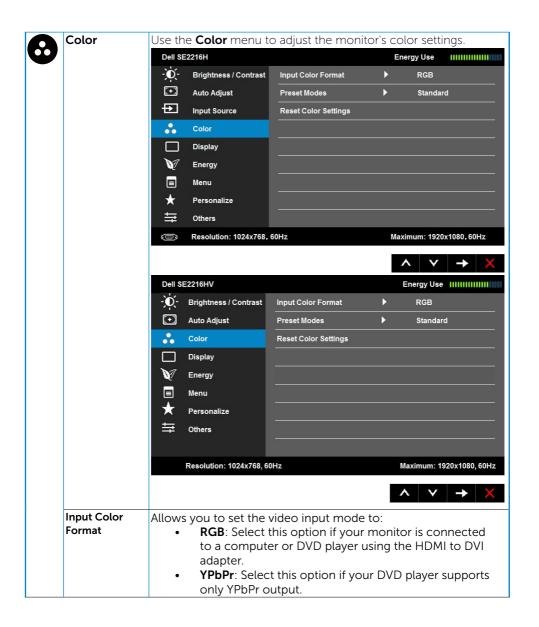


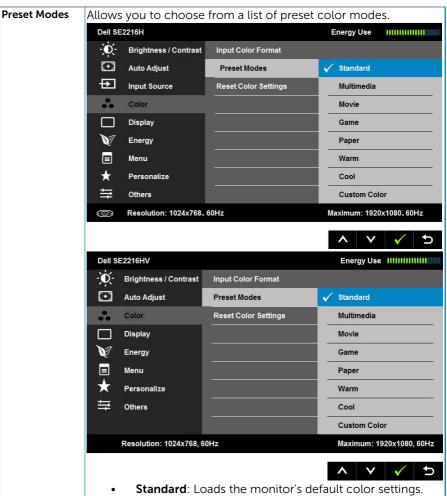



- This is the default preset mode.
- Multimedia: Loads color settings ideal for multimedia applications.
- **Movie**: Loads color settings ideal for movies.
- **Game**: Loads color settings ideal for most gaming applications.
- **Paper**: Loads brightness and sharpness settings ideal for viewing text. Blend the text background to simulate paper media without affecting color images. Applies to RGB input format only.
- Warm: Increases the color temperature. The screen appears warmer with a red/yellow tint.
- **Cool**: Decreases the color temperature. The screen appears cooler with a blue tint.


	•		or: Allows you to			
	settings. Press the 🐼 and 💿 keys to adjust the Red,					
Hue	Green, and Blue values and create your own preset color mode.					
	This fo		the color of the v	ideo im	age to green or	
liuc	purple	e. This is used to	adjust the desire from '0' to '100'	d flesh		
	Press image		ne monochrome	appeara	ance of the video	
	Press	to increase the	ne colorful appear	rance o	f the video image	
		i: Hue adjustmer <b>me</b> preset mode	nt is available only	y when	you select <b>Movi</b>	
Saturation	This fo	eature can adjus or ♥ to adjust	t the color satura the saturation fro	tion of om '0' to	the video image. oʻ100'.	
	Press image		ne monochrome	appeara	ance of the video	
	Press	Press to increase the colorful appearance of the video image.				
		NOTE: Saturation adjustment is available only when you select				
	Movie or Game preset mode.					
Decet Color				+l f		
Reset Color			t mode. color settings to	the fac	tory defaults.	
Reset Color Settings Display	Resets	s your monitor's				
Settings	Resets Use th	s your monitor's	color settings to	onitor's	display settings.	
Settings	Use th	s your monitor's ne <b>Display</b> menu	color settings to	onitor's	display settings.	
Settings	Resets Use th	s your monitor's ne <b>Display</b> menu	color settings to I to adjust the mo	onitor's Er	display settings.	
Settings	Use the Dell St	s your monitor's ne <b>Display</b> menu =2216H Brightness / Contrast	color settings to  to adjust the mo	onitor's Er	display settings.  ergy Use	
Settings	Use the Dell St	s your monitor's ne <b>Display</b> menu E2216H Brightness / Contrast Auto Adjust	color settings to  to adjust the mo  Aspect Ratio  Horizontal Position	onitor's	display settings.  Bergy Use	
Settings	Use the pell state.	s your monitor's ne <b>Display</b> menu E2216H Brightness / Contrast Auto Adjust Input Source	color settings to  I to adjust the mo  Aspect Ratio  Horizontal Position  Vertical Position	enitor's	display settings.  Bergy Use	
Settings	Use the Dell Si	s your monitor's ne <b>Display</b> menu E2216H Brightness / Contrast Auto Adjust Input Source Color Display	Aspect Ratio Horizontal Position Vertical Position Sharpness	enitor's	display settings.  lergy Use	
Settings	Use the point of t	s your monitor's ne <b>Display</b> menu  =2216H  Brightness / Contrast  Auto Adjust  Input Source  Color	Aspect Ratio Horizontal Position Vertical Position Sharpness Pixel Clock Phase	enitor's  Er	display settings.  lergy Use	
Settings	Use the Dell state of the Dell	s your monitor's ne Display menu E2216H Brightness / Contrast Auto Adjust Input Source Color Display Energy	Aspect Ratio Horizontal Position Vertical Position Sharpness Pixel Clock	enitor's	display settings.  Hergy Use HIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	
Settings	Use the Dell state of the Dell	s your monitor's ne Display menu E2216H Brightness / Contrast Auto Adjust Input Source Color Display Energy Menu	Aspect Ratio Horizontal Position Vertical Position Sharpness Pixel Clock Phase Dynamic Contrast	enitor's  Er	display settings.  Vide 16:9  50  50  50  50  00  00	


	Dell S	SE2216HV			Energy Use	
	<b>(</b> 0)	Brightness / Contrast	Aspect Ratio	<b>•</b>	Wide 16:9	
	(±)	Auto Adjust	Horizontal Position	<b>•</b>	50	
	**	Color	Vertical Position	<b>&gt;</b>	50	
		Display	Sharpness	<b>•</b>	50	
	V	Energy	Pixel Clock	<b>)</b>	50	
		Menu	Phase	<b>▶</b>	50	
	*	Personalize	Dynamic Contrast		On	
	≒	Others	Response Time		Normal	
			Reset Display Settings	r .		
		Resolution: 1024x768, 6	0Hz		Maximum: 1920x1080, 60Hz	
					^	
Aspect Ratio	Adjus	ts the image rati	o as Wide 16:9, 4	1:3, or 5:	4.	
		<mark>E:</mark> Wide 16:9 adju ution 1920 x 108		quired a	t maximum prese	
Horizontal Position	Use <b>4</b>		ns to adjust ima	ge left a	nd right. Minimur	
Vertical Positior	Ose i	the <b>o</b> r <b>v</b> butto (-). Maximum is '		ige up ai	nd down. Minimu	
			sition and Vertica vailable for VGA		on adjustments	
Sharpness	or 👽	to adjust the sha	arpness from '0' t	to '100'.	or softer. Use 🔕	
Pixel Clock	or  to adjust the sharpness from '0' to '100'.  The Phase and Pixel Clock adjustments allow you to adjust your monitor to your preference. Use or buttons to adjust for best image quality.					
Phase	adjus Phase	tment, use the P e (fine), again.		se) adjus	tment and then u	
	VGA i	nput.			only available for	
Dynamic Contrast	and n	nore detailed im	age quality.		provide sharper	
	Press "Off".	the or ve but	ton to select the	: Dynam	ic Contrast "On" (	
	<b>NOTE</b> : <b>Dynamic Contrast</b> provides higher contrast if you select <b>Game</b> or <b>Movie</b> preset mode.					
	Allows you to set the Response Time to <b>Normal</b> or <b>Fast</b> .					
Response Time	AllOw	s you to set the	Response Time	(O NOITI	ial or Fast.	

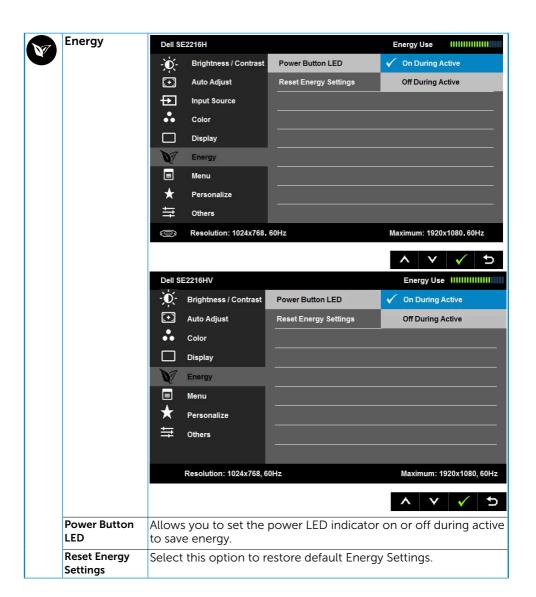


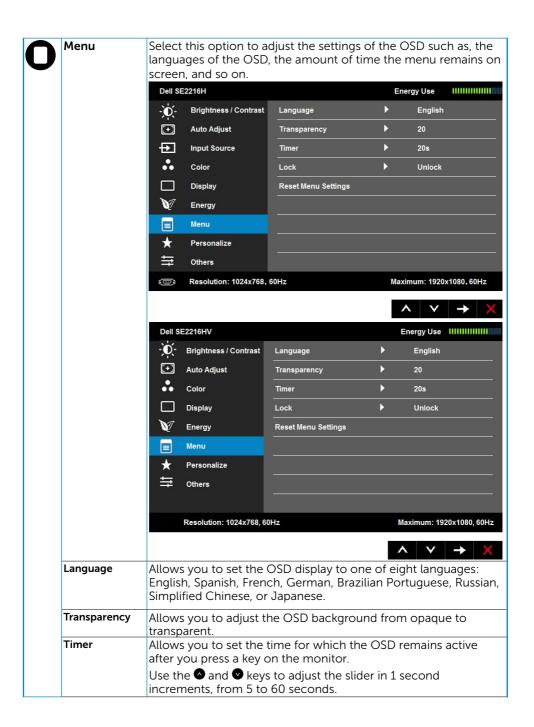

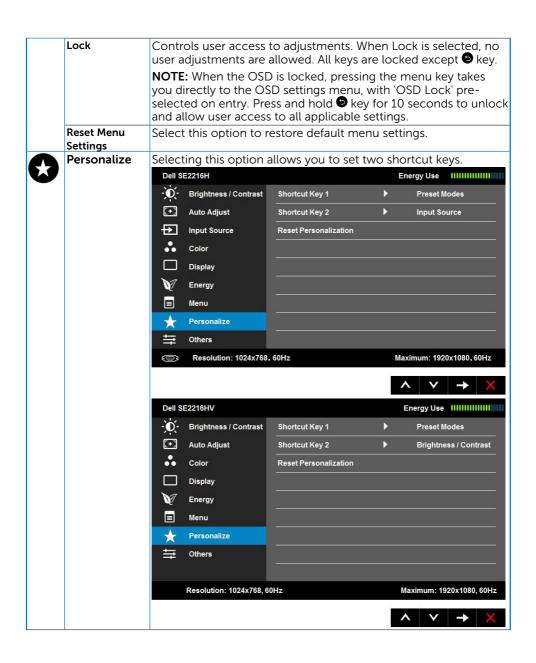

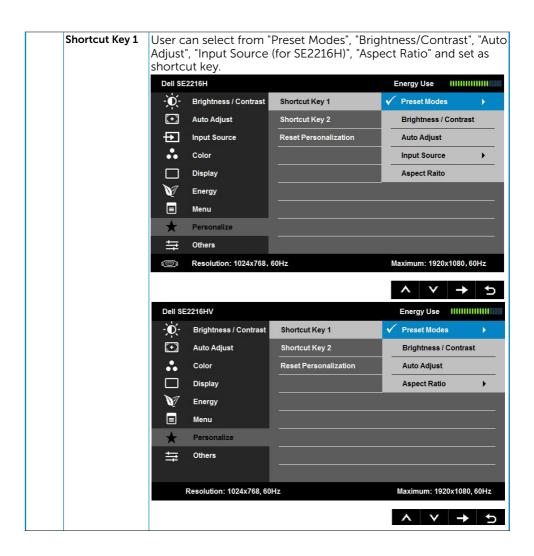

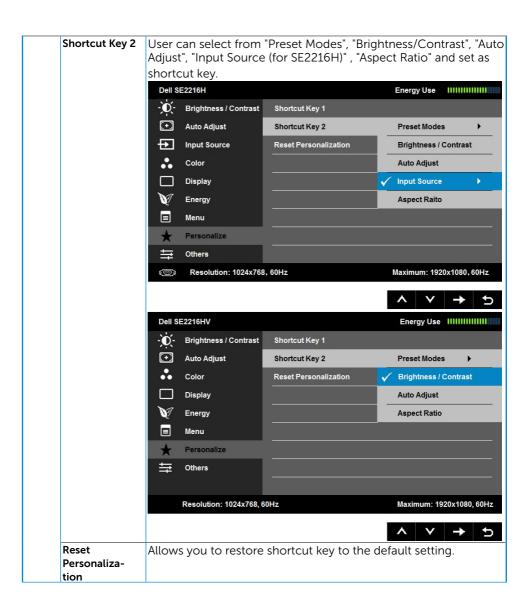

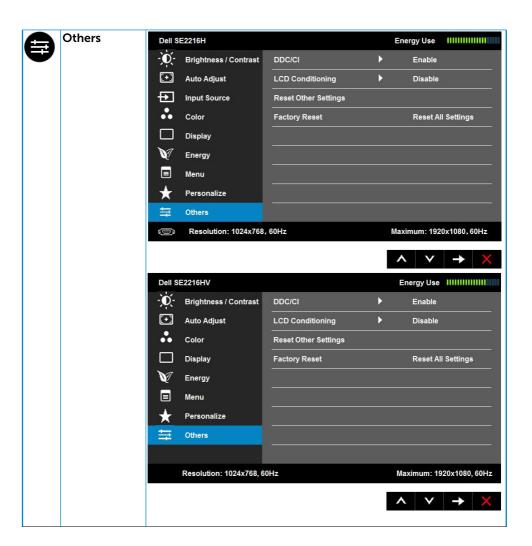


#### DDC/CI

DDC/CI (Display Data Channel/Command Interface) allows a software on your computer to adjust the monitor display settings like the brightness, color balance etc.

Enable (Default): Optimizes the performance of your monitor and provides a better customer experience.

Disable: Disables the DDC/CI option and the following message appears on the screen.

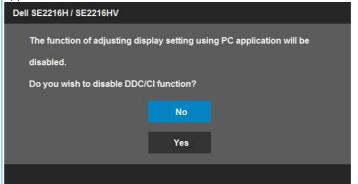


#### LCD Conditioning

This feature will help reduce minor cases of image retention. If an image appears to be stuck on the monitor, select **LCD** 

Conditioning to help eliminate any image retention. Using the LCD Conditioning feature may take some time. LCD Conditioning feature cannot remove severe cases of image retention or burn-in.

**NOTE**: Use LCD Conditioning only when you experience a problem with image retention.

The below warning message appears once user selects "Enable" LCD Conditioning.

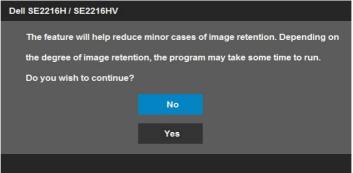


Reset Other Settings Select this option to restore default other settings, such as DDC/

Factory Reset

Resets all OSD settings to the factory preset values.


### **OSD Messages**

When the monitor does not support a particular resolution mode you will see the following message:

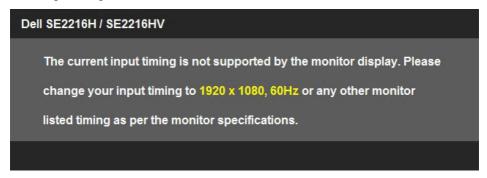

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See <u>Monitor Specifications</u> for the horizontal and vertical frequency ranges addressable by this monitor. Recommended mode is  $1920 \times 1080$ .

You will see the following message before the DDC/CI function is disabled.

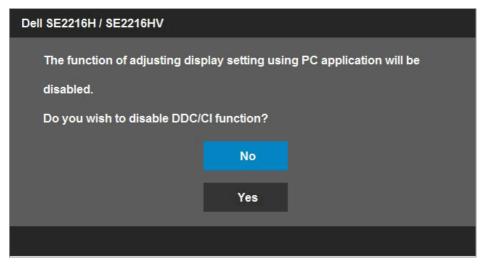

When the monitor enters the **Power Save** mode, the following message appears:



Activate the computer and wake up the monitor to gain access to the OSD.

If you press any button other than the power button, the following messages will appear depending on the selected input:


### Dell SE2216H

There is no signal coming from your computer. Press any key on the keyboard or move the mouse to wake it up. If there is no display, press the monitor button now to select the correct input source on the On-Screen-Display menu.

#### Dell SE2216HV

There is no signal coming from your computer. Press any key on the keyboard or move the mouse to wake it up.

If VGA or HDMI cable is not connected, a floating dialog box as shown below appears. The monitor will enter **Power Save Mode after 5 minutes** if left at this state.

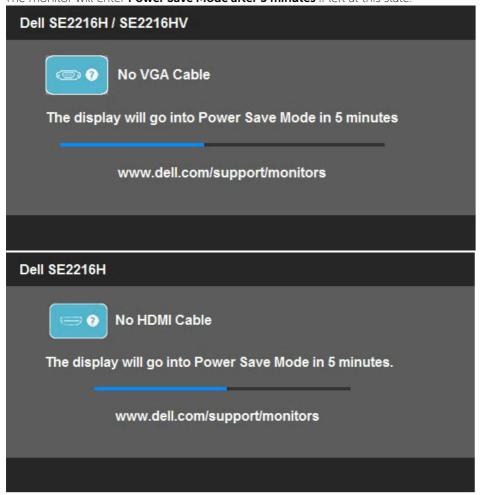

See **Solving Problems** for more information.

## **Setting the Maximum Resolution**

For optimal display performance while using the Microsoft Windows operating systems, set the display resolution to 1920 x 1080 pixels by performing the following steps:

### In Windows Vista, Windows 7, Windows 8 or Windows 8.1:

- **1.** For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop.
- 2. Right-click on the desktop and click Screen Resolution.
- 3. Click the dropdown list of the screen resolution and select 1920 x 1080.
- 4. Click OK

#### In Windows 10

- 1. Right-click on the desktop and click **Display settings**.
- 2. Click Advanced display settings.
- **3.** Click the dropdown list of **Resolution** and select 1920 x 1080.
- 4. Click Apply.

If you do not see  $1920 \times 1080$  as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided

1: If you have a Dell desktop or a Dell portable computer with Internet access

2: If you have a non Dell desktop, portable computer, or graphics card

# If you have a Dell desktop or a Dell portable computer with Internet access

- **1.** Go to <a href="http://www.dell.com/support">http://www.dell.com/support</a>, enter your service tag, and download the latest driver for your graphics
- **2.** After installing the drivers for your graphics adapter, attempt to set the resolution to  $1920 \times 1080$  again.
  - **NOTE:** If you are unable to set the resolution to 1920 x 1080, please contact Dell to inquire about a graphics adapter that supports these resolutions.

# If you have a non Dell desktop, portable computer, or graphics card

In Windows Vista, Windows 7, Windows 8 or Windows 8.1:

- **1.** For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop.
- 2. Right-click on the desktop and click **Personalization**.
- 3. Click Change Display Settings.
- 4. Click Advanced Settings.
- **5.** Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
- **6.** Please refer to the graphics card provider website for updated driver (for example, <a href="http://www.ATI.com">http://www.ATI.com</a> OR <a href="http://www.NVIDIA.com">http://www.NVIDIA.com</a> ).
- **7.** After installing the drivers for your graphics adapter, attempt to set the resolution to  $1920 \times 1080$  again.

#### In Windows 10:

- **1.** Right-click on the desktop and click **Display settings**.
- 2. Click Advanced display settings.
- 3. Click Display adapter properties.
- **4.** Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
- **5.** Please refer to the graphics card provider website for updated driver (for example, <a href="http://www.ATI.com">http://www.ATI.com</a> OR <a href="http://www.NVIDIA.com">http://www.NVIDIA.com</a> ).
- **6.** After installing the drivers for your graphics adapter, attempt to set the resolution to  $1920 \times 1080$  again.
  - **NOTE:** If you are unable to set the resolution to 1920 x 1080, please contact the manufacturer of your computer or consider purchasing a graphics adapter that will support the video resolution of 1920 x 1080.

# **Using the Tilt**

Tilt

With the stand assembly, you can tilt the monitor for the most comfortable viewing angle.



**NOTE:** The stand base is detached when the monitor is shipped from the factory.

# **Troubleshooting**


MARNING: Before you begin any of the procedures in this section, follow the <u>Safety Instruction</u>

### **Self-Test**

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

- **1.** Turn off both your computer and the monitor.
- 2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both VGA and HDMI cables from the back of computer.
- **3.** Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains white. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

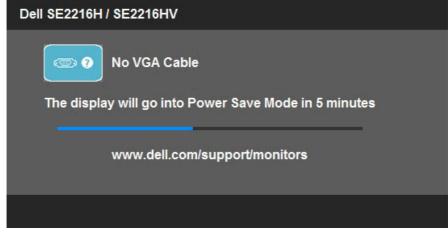


- **4.** This box also appears during normal system operation, if the video cable becomes disconnected or damaged. The monitor will enter **Power Save Mode after 5 minutes** if left at this state.
- **5.** Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

## **Built-in Diagnostics**

 Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.



**NOTE:** You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.

To run the built-in diagnostics:

- **1.** Ensure that the screen is clean (no dust particles on the surface of the screen).
- 2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
- **3.** Press and hold the **Button 1** and **Button 4** on the front panel simultaneously for 2 seconds. A gray screen appears.
- **4.** Carefully inspect the screen for abnormalities.
- **5.** Press the **Button 4** on the front panel again. The color of the screen changes to red.
- 6. Inspect the display for any abnormalities.
- 7. Repeat steps 5 and 6 to inspect the display in green, blue, black, white screens.

The test is complete when the Text screen appears. To exit, press the **Button 4** again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

### **Common Problems**

The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	What You Experience	Possible Solutions
No Video/Power LED off	No picture	Ensure that the video cable connecting the monitor and the computer is properly connected and secure.
		Verify that the power outlet is functioning properly using any other electrical equipment.
		Ensure that the power button is depressed fully.
		Ensure that the correct Input Source is selected via the Input Source Select button.
		Check the "Power LED Button" option under Energy in OSD Menu.
No Video/Power LED on	No picture or no brightness	Increase brightness & contrast controls via OSD.
		Perform monitor self-test feature check.
		Check for bent or broken pins in the video cable connector.
		• Ensure that the correct Input Source is selected via the <b>Input Source</b> Select menu.
		Run the built-in diagnostics.
Poor Focus	Picture is fuzzy, blurry, or ghosting	Perform Auto Adjust via OSD.
		Adjust the Phase and Pixel Clock controls via OSD.
		Eliminate video extension cables.
		Reset the monitor to Factory     Settings.
		Change the video resolution to the correct aspect ratio (16:9).
Shaky/Jittery Video	Wavy picture or fine movement	Perform Auto Adjust via OSD.
		Adjust the Phase and Pixel Clock controls via OSD.
		Reset the monitor to <b>Factory Settings</b> .
		Check environmental factors.
		Relocate the monitor and test in another room.

Missing Pixels	LCD screen has spots	Cycle power on-off.
	,	Pixel that is permanently off is a natural defect that can occur in LCD technology.
		For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: <a href="http://www.dell.com/support/monitors">http://www.dell.com/support/monitors</a> .
Stuck-on Pixels	LCD screen has bright	Cycle power on-off.
	spots	Pixel that is permanently off is a natural defect that can occur in LCD technology.
		For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at:
		http://www.dell.com/support/monitors.
Brightness Problems	Picture too dim or too bright	Reset the monitor to Factory     Settings.
		• Auto Adjust via OSD.
		Adjust brightness & contrast controls via OSD.
Geometric Distortion	Screen not centered correctly	Reset the monitor to Factory     Settings.
		• Auto Adjust via OSD.
		Adjust brightness & contrast controls via OSD.
		<b>NOTE</b> : When using 'HDMI', the positioning adjustments are not available.
Horizontal/Vertical Lines	Screen has one or more lines	Reset the monitor to Factory     Settings.
		Perform Auto Adjust via OSD.
		Adjust Phase and Pixel Clock controls via OSD.
		Perform monitor self-test feature check and determine if these lines are also in self-test mode.
		Check for bent or broken pins in the video cable connector.
		<b>NOTE</b> : When using 'HDMI', the Pixel Clock and Phase adjustments are not available.

Synchronization Problems	Screen is scrambled or appears torn	Reset the monitor to <b>Factory Settings</b> .
		Perform Auto Adjust via OSD.
		Adjust Phase and Pixel Clock controls via OSD.
		Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode.
		Check for bent or broken pins in the video cable connector.
		Restart the computer in the safe mode.
Safety-Related Issues	Visible signs of smoke or sparks	Do not perform any troubleshooting steps.
		Contact Dell immediately.
Intermittent Problems	Monitor malfunctions on & off	Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.
		Reset the monitor to <b>Factory Settings</b> .
		Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing Color	Picture missing color	Perform monitor self-test feature check.
		Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.
		Check for bent or broken pins in the video cable connector.
Wrong Color	Picture color not good	Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending on the application.
		Try different Color Preset Settings in Color Settings OSD. Adjust R/G/B value in Color Settings OSD if the Color Management is turned off.
		Change the Input Color Format to PC RGB or YPbPr in the Advance Setting OSD.

a static image left on	Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see <u>Power Management</u> <u>Modes</u> .
	<ul> <li>Alternatively, use a dynamically changing screensaver.</li> </ul>

NOTE: When choosing HDMI mode, the Auto Adjust function is not available.

# **Product-Specific Problems**

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	Check the <b>Aspect Ratio</b> setting in the <b>Display</b> OSD.
		Reset the monitor to Factory     Settings.
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	Turn off the monitor, unplug the power cord, plug back, and then turn on the monitor.
		Check whether the OSD menu is locked. If yes, press and hold the button beside the Power button for 10 seconds to unlock (for more information, see Lock).
No Input Signal when user controls are pressed	No picture, the LED light is white. When you press "up", "down" or "Menu" key, the message " No input signal" will appear.	Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard.
		Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary.
		Reset the computer or video player.
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.
		Run the built-in diagnostics.

# **Appendix**

## **Safety Instructions**

WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the Product Information Guide.

# FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com\regulatory\_compliance.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received including interference that may cause undesired operation

### **Contact Dell**

For customers in the United States, call 800-WWW-DELL (800-999-3355).

**NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

To get online monitor support content:

1. Visit www.dell.com/support/monitors

To contact Dell for sales, technical support, or customer service issues:

- 1. Visit www.dell.com/support.
- **2.** Verify your country or region in the **Choose A Country/Region** dropdown menu at the top left of the page.
- 3. Click Contact Us on the top left side of the page.
- **4.** Select the appropriate service or support link based on your need.
- 5. Choose the method of contacting Dell that is convenient for you.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com