



user manual

Tumble Dryer

EDC78550W

# Electrolux. Thinking of you.

Share more of our thinking at [www.electrolux.com](http://www.electrolux.com)

## CONTENTS

Conditions of use	2	Daily use	8
Important safety information	2	Cleaning and maintenance	10
Environment	4	What to do if ...	12
Installation	5	Technical data	13
Product description	6	Machine settings	13
Before first use	7	Service	14
Programme chart	7	Warranty	14

Subject to change without notice

## CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Farm Houses

- By clients in serviced apartments, holiday apartments and other residential type environments

## IMPORTANT SAFETY INFORMATION

**Important! In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.**

ance by a person responsible for their safety.

- Make sure that small children and pets do not climb inside the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Items that have been soiled with substances such as cooking oil, acetone,



- Please read the instruction book before using this appliance.



— Caution, risk of fire

## GENERAL SAFETY

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appli-

petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- **Danger of explosion:** Never tumble dry items that have been in contact with flammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments in case they are loaded into appliance



### Warning!

- **Risk of fire! Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**
- **Lint must not be allowed to accumulate around the tumble dryer.**
- **Risk of electric shock!** Do not spray down the appliance with jets of water.
- The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Oil affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil affected items can

prevent heat from escaping and so create a fire hazard.

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce but not eliminate the hazard.

## INSTALLATION

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

## USE


- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to

- ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
  - Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
  - Fabric softeners, or similar products should be used as specified by the fabric softener instructions.
  - **Caution - hot surface** : Do not touch the door light cover surface when the light is switched on.  
(Only dryers equipped with internal drum light)

### CHILD SAFETY

- This machine is not intended for use by young children or infirm persons without supervision.

### ENVIRONMENT

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

### OLD APPLIANCE

#### **Warning!**

Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug. Destroy loading door hook from the inside of the dryer.... Children cannot then lock themselves in the machine and put their lives at risk.

- Children often do not recognise the hazards associated with electrical appliances. Children should be supervised to ensure that they do not play with the appliance.


#### **Warning!**

- Danger of suffocation! The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb inside the drum.

### PACKAGING MATERIAL

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

### ENVIRONMENTAL TIPS

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
  - Your dryer will function most economically if you:
    - always keep the ventilation slots on the base of the dryer unobstructed;
    - use the loading volumes specified in the programme overview;
    - ensure you have good ventilation in the installation room;
    - clean the micro-fine filter and fine strainer after each drying cycle;
    - spin the laundry well before drying.
-  Energy consumption depends on spinning speed set in washing machine. Higher spinning speed - lower energy consumption.

## INSTALLATION

### APPLIANCE POSITIONING

- It is recommended that, for your convenience, the machine is positioned close to your washing machine.
- The tumble dryer must be installed in a clean place, where dirt does not build up.
- Air must be able to circulate all around the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.
- To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.
- Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.
- The feet must never be removed. Do not restrict the floor clearance through deep-pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.


#### Important!

- The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.
- When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.
- Should the appliance be moved, it must be transported vertically.
- The appliance must not be installed behind a lockable door, sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the dryer is restricted.

### REMOVING TRANSPORT SAFETY PACKAGING

#### ⚠ Caution!

Before use all parts of the transport packaging must be removed.

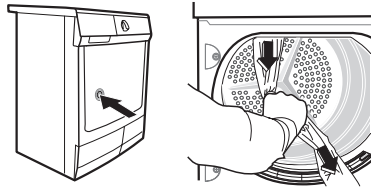

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

### ELECTRICAL CONNECTION

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Product description" chapter).

**Connect the machine to an earthed socket, in accordance with current wiring regulations.**

**⚠ Warning! The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions.**  
**If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.**

**⚠ Warning! The plug must be accessible after installing the machine.**

### SPECIAL ACCESSORIES

#### • Stacking kit

These intermediate installation kits can be used to arrange the dryer and a washing machine (60 cm wide, front loaded) as a space-saving washer/dryer stack. The washing machine is at the bottom and the dryer is at the top. Read carefully the instructions supplied with the kit.

**i** Available from your Service Force Centre or your specialist dealer

• **Draining kit**

Installation kit for direct draining of the condensed water into a basin, siphon, gully, etc. The water reservoir then no longer has to be drained, it must however remain in its intended position in the machine.

The fixed hose should be a minimum of 50cm to a maximum of 1m from floor level and cannot be looped. If possible shorten the draining hose.

Read carefully the instructions supplied with the kit.


• **Pedestal with the drawer**

To situate the dryer at the optimal height and have some additional space to store (e.g. laundry).

Read carefully the instructions supplied with the kit.


**i** Available from your Service Centre or your specialist dealer

PRODUCT DESCRIPTION

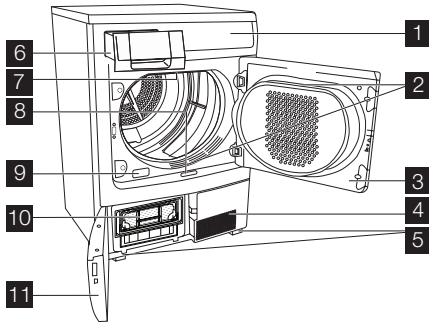


- 1** Control panel
- 2** Fluff filters
- 3** Loading door
- 4** Ventilation grille
- 5** Adjustable feet
- 6** Drawer with condensed water container
- 7** Drum light
- 8** Push button for base door opening
- 9** Rating Plate
- 10** Heat exchanger
- 11** Heat exchanger door

CONTROL PANEL

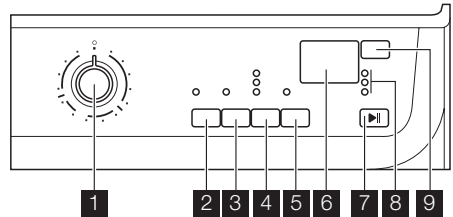

- 1** Programme selector and **O** off switch
- 2** **Delicate** button
- 3** **Buzzer** button
- 4** **Dryness** button
- 5** **Time** button
- 6** Display
- 7** **Start/Pause** button
- 8** Warning lights:  $\Rightarrow$  Condenser,  $\oplus$  Filters,  $\text{Full tank}$
- 9** **Delay** button

## DISPLAY

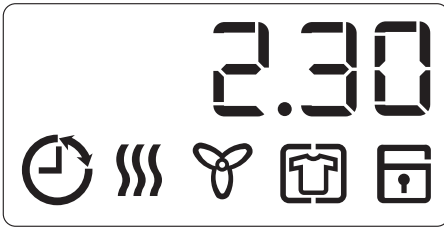

SYMBOL	DESCRIPTION
2 . 3 0	Time to end (time of time programm, time of start delay)
	Delay start
	Drying phase
	Cooling phase
	Anti-crease guard phase
	Child lock
E r r	Error, incorrect selection











## BEFORE FIRST USE



In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 MIN) with damp cloths in the machine.

1. Turn the programme knob to TIME .
2. Press the TIME button repeatedly until 0.30 appears in the display.
3. Press the START/PAUSE button.

## PROGRAMME CHART



Programme	max. load (dry clothes)	Application/properties	Care label
<b>Cottons</b>			
<b>Extra</b>	8 kg	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	
<b>Cupboard</b>	8 kg	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels.	
<b>Iron</b>	8kg	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	
<b>Synthetics</b>			
<b>Extra</b>	3 kg	Thorough drying of thick or multi-layered fabrics, e.g. pull-overs, bedding, table linen.	
<b>Cupboard</b>	3 kg	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	
<b>Iron</b>	3 kg	For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts.	
<b>Special</b>			
<b>Time</b>	8 kg	For further drying of individual items of laundry. ( Dryness function not available)	
<b>Mix</b>	3 kg	For drying cotton and synthetic fabrics, uses low temperature.	


Programme	max. load (dry clothes)	Application/properties	Care label
 <b>Easy Iron</b>	1 kg (or 5 shirts)	Special program with anti-crease mechanism for easy care fabrics such as shirts and blouses; for minimum ironing effort. The results depends on the type of fabric and its finish. Place fabrics in the dryer straight after spinning; once dried, immediately remove fabrics and place on a clothes hanger.	
 <b>Jeans</b>	8 kg	For leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	
 <b>Wool</b>	1 kg	For drying woollen fabrics after they have been washed, using warm air at minimum mechanical load (Follow section "Sorting and preparing washing"). Recommendation: Remove fabrics immediately after drying, as no anti-crease programme follows. The wool drying cycle of this tumble drying machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry knitted wool garments which are labelled "hand wash" provided that the garments are washed in a Woolmark endorsed hand washing cycle and tumble dried according to the instructions issued by the manufacturer. (M1022)	
 <b>Cooling</b>	8 kg	Special programme, lasting around 10 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.)(Only Buzzer function available)	
 <b>Quick</b>			
<b>Synthetics quick</b>	2 kg	For quick drying synthetics fabrics with minimum creasing. Drying result: ready to store.	
<b>Cottons quick</b>	3 kg	For quick drying cotton fabrics with minimum creasing. Drying result: ready to store.	


 Time function available only with  Time programme.

## DAILY USE


### SORTING LAUNDRY

- Sort by fabric type:
  - Cotton/linen for programmes in  Cottons programme group.
  - Mixtures and synthetics for programmes in  Synthetics programme group.
- Sort by care label: The care labels mean:

 Drying in the tumble dryer possible in principle

 Drying at normal temperature



 Drying at reduced temperature

 Drying in the tumble dryer **not** possible

**Important!** Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying.

This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.



- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the  Extra programme. Items may shrink!
- Wool and wool-like textiles can be dried using the  Wool programme. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together of similar or the same material, colour and weight. Please dry heavy laundry items made of wool separately.

### Preparing laundry


- To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove metal items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

**Important!** Do not overload the appliance. Observe max. loading volume of **8 kg**.

### SWITCHING MACHINE ON


Turn the programme selector to any programme. The machine switches on. When the loading door is open, the internal lamp illuminates the drum.


### OPERATING

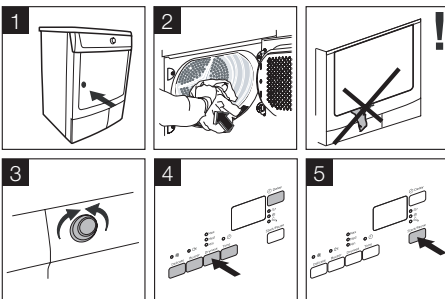

### DRYING OPTIONS

 Delicate

gentle drying with reduced heat of sensitive fabrics and temperature-sensitive textiles (e.g. acrylic, viscose) marked on care label with: 

 Buzzer

audible confirmation of:

- cycle end
- anti-crease phase start and end
- cycle interruption
- error

Dryness

increases the dryness of the dried laundry adequately to the selected level:

- **Max** - maximum
- **Med** - medium
- **Min** - minimum

this option helps to achieve satisfying result of drying (inactive with some programmes)

 Time


allows to set individual time of drying from minimum 20 min. to maximum of 3 hours (in 10 min. steps - press the button repeatedly until the desired programme duration is shown in the display, e.g. **1 20** - for a programme of 1 hour and 20 minutes); active with suitable programme


 Delay

allows to delay the start of a drying programme from minimum of 30 min. to maximum of 20 hours

1. select the drying programme and additional drying options
2. press the Delay button repeatedly until the desired delay start is shown on the display, e.g. **1 2 H** if the programme has to start after time of 12 hours
3. to activate the delay timer, press the Start/Pause button - time to start elapses on the display

### SETTING CHILD LOCK

The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed. The child lock function locks all buttons and the programme selector. The child lock can be activated or deactivated by holding down the Dryness and  Time buttons simultaneously for 5 seconds.

The symbol:  on the display means that the child lock is active.

- i** Any changes of drying parameters require child lock deactivation. The child lock cannot be deactivated in the last phase of the drying cycle.



 
 

## STARTING THE PROGRAMME

Press the Start/Pause button. The programme starts. The programme progress is shown by elapsing *dry time* on the LCD.

## CHANGING PROGRAMME

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to **O** *off* and then set the programme again.

## DRYING CYCLE COMPLETE / REMOVING LAUNDRY

Once the drying cycle is complete, the display shows the anti-crease icon  and flashing   as well as warning lamps:  *filter* and  *full tank*. If the Buzzer button has been pressed, an acoustic signal sounds intermittently for about one minute.

- i** The drying cycles are automatically followed by an anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See “Maintenance and cleaning” chapter.)
3. Remove laundry.
4. Turn the programme selector to **O** *off*.

**Important!** After each drying cycle:



- Clean the micro-fine filter and fine filter
  - Drain the condensed water container (See chapter “Maintenance and cleaning”).
5. Close the door.

## CLEANING AND MAINTENANCE

### CLEANING FLUFF FILTERS

The filters collect all the fluff which accumulates during drying. To ensure that the dryer works perfectly, the fluff filters (fine filters and fluff filters) must be cleaned after each drying cycle.

- !** **Caution!** Never operate the dryer without fluff filters or with damaged or blocked fluff filters.

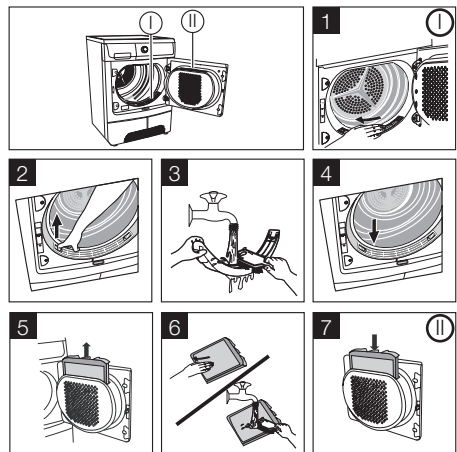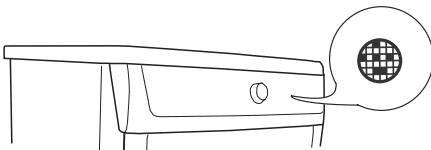



### CLEAN THE DOOR SEAL

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

## EMPTYING THE WATER CONTAINER

Empty the water container after each drying cycle.


- i** To drain the water container automatically you can install draining kit (see chapter: *Installation – Special accessories*)

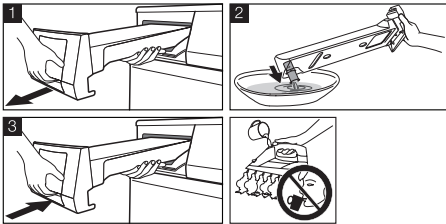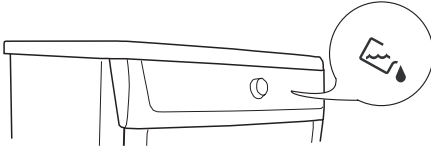

- !** **Warning!** Risk of poisoning. The condensed water is not applicable to drink or to prepare food.

- i** The condensed water can be used as distilled water, e.g. for a steam iron. If necessary filter the condensed water (e.g. with a coffee filter) to remove possible residue and small pieces of fluff. The programme can be stopped as a result of the full water container. Drain the water container. Push the Start/Pause button to continue the drying cycle.


## CLEANING CONDENSER

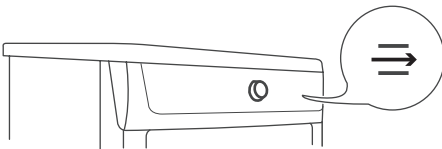

### Important!

- Never operate the dryer without condenser.

- Clogged condenser cause higher energy consumption (drying cycle elongation) and dryer damage.
- Do not use sharp objects to clean.

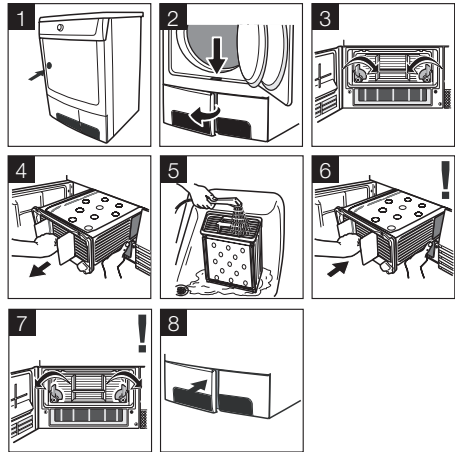

## CLEANING THE DRUM

- !** **Caution!** Do not use abrasives or steel wool to clean the drum.

- i** Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the appliance.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

## CLEAN CONTROL PANEL AND HOUSING

- !** **Caution!** Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the control panel and housing.

## WHAT TO DO IF ...

## TROUBLESHOOTING BY YOURSELF

Problem <sup>1)</sup>	Possible cause	Remedy
Dryer does not work.	Dryer not connected to mains supply.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door opened.	Close loading door
	The START PAUSE button not pressed.	Press the START PAUSE button.
Unsatisfactory drying results.	Incorrect programme set.	Set suitable programme. <sup>2)</sup>
	Fluff filters clogged.	Clean fluff filters. <sup>3)</sup>
	Heat exchanger clogged.	Clean heat exchanger. <sup>3)</sup>
	Max. loading exceeded.	Respect max. loading volume.
	Covered ventilation grill.	Uncover ventilation grill in base area.
	Residue inside the drum.	Clean the drum inside.
	High water hardness.	Set suitable water hardness <sup>4)</sup> .
Loading door does not close	Filters not locked in place.	Install fine filter and/or snap course filter into place.
<b>Err</b> (Error) on the LCD. <sup>5)</sup>	Attempt to change parameters after start of the programme.	Turn the dryer off and on. Set requested parameters.
No drum light	Programme selector in OFF position.	Turn it to DRUM LIGHT (if available) or to any programme.
	Defective light bulb.	Replace light bulb (see next section).
Abnormally elapsing time on the LCD <sup>5)</sup>	Time to end is calculated on the basis of: type, volume and dampness of laundry.	Automatic process; this is not a machine fault.
Programme inactive	Full water reservoir.	Empty water reservoir <sup>3)</sup> , press START PAUSE button.
Drying cycle to short	Small laundry volume./Too dry laundry for selected programme.	Select time programme or higher drying level (e.g. EXTRA DRY).
Drying cycle to long <sup>6)</sup>	Fluff filters clogged.	Clean fluff filters.
	To high loading volume.	Respect max. loading volume.
	Laundry insufficiently spun.	Spun adequately the laundry.
	Particularly high room temperature - no machine fault.	Lower the room temperature if possible.

1) In case of error message on the LCD (e.g. **E51** - only dryers with the LCD): Switch the dryer off and on. Set programme. Press the START PAUSE button. Does not work? - inform local service and quote the error code.

2) follow program recommendation - see Programme overview chapter

3) see Care and cleaning chapter

4) see Machine settings chapter

5) only dryers with the LCD

6) Note: After around 5 hours the drying cycle ends automatically (see Drying cycle complete section).

## CHANGING THE BULB FOR INTERIOR LIGHTING

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local service centre.

**Important!** When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.

**Warning!** Do not use standard bulbs! These develop too much heat and may damage the appliance! Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)

2. Replace defective bulb.
3. Screw cover back down.

Check the correct positioning of o-ring gasket before screwing back the door light cover. Do not operate the dryer when missing o-ring gasket on door light cover.



**Warning!** For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

## TECHNICAL DATA



height x width x depth	85 x 60 x 58 cm
drum volume	108 l
depth with the load door opened	109 cm
adjustable height	1.5 cm
the appliance weight	40,5 kg
maximum load volume	<b>8 kg</b>
voltage	230 -240 V
total power	2350 W
annual energy consumption	353 kWh
type of use	Domestic
permitted ambient temperature	+ 5°C to + 35°C

## MACHINE SETTINGS

Setting	Implementation
<b>Buzzer permanent on/off</b>	The alarm is by default always off. To set permanent alarm on (off): <ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the Buzzer and Dryness buttons simultaneously and hold down for approx. 5 seconds.</li> </ol>
<b>Water hardness<sup>1)</sup></b>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the Dryness and Start/Pause buttons simultaneously and hold down for approx. 5 seconds.</li> <li>3. Press the Start/Pause button until you set desired level:   <ul style="list-style-type: none"> <li>- low conductivity &lt;300 µS/cm</li> <li>- medium conductivity 300-600 µS/cm</li> <li>- high conductivity &gt;600 µS/cm</li> </ul> </li> <li>4. To memorise setting press the Dryness and Start/Pause buttons simultaneously or turn knob to  position</li> </ol>

1) Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.

## SERVICE

If there are technical faults, first check if you can remedy the problem yourself with the help of the operating instructions - see chapter *What to do if...*

If you cannot remedy the problem on your own, get in touch with the Customer Care Department or one of our service partners. To assist you quickly, these data are necessary:

- Model description
- Product number (PNC)
- Serial number (S No. is on rating plate stuck to the product - to find it see chapter *Product description*))

- Type of failure
- Any error messages shown by the display.

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:	.....
PNC:	.....
S No:	.....

## WARRANTY

### Electrolux

FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: ELECTROLUX DRYER

**This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.**

1. In this warranty

- a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
- b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
- c) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
- d) 'ASC' means Electrolux' authorised serviced centres;
- e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;

- f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
- g) 'Warranty Period' means:
  - where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 24 months and in New Zealand for 24 months, following the date of original purchase of the Appliance;
  - where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance.
- h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
  - a) travel of an authorised representative;
  - b) transportation and delivery of the Appliance to and from Electrolux or its ASC,

In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
  - a) the Appliance is damaged by:
    - accident
    - misuse or abuse, including failure to properly maintain or service
    - normal wear and tear
    - power surges, electrical storm damage or incorrect power supply
    - incomplete or improper installation
    - incorrect, improper or inappropriate operation
    - insect or vermin infestation
    - failure to comply with any additional instructions supplied with the Appliance;
  - b) the Appliance is modified without authority from Electrolux in writing;
  - c) the Appliance's serial number or warranty seal has been removed or defaced;
  - d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.

11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
  - a) carefully check the operating instructions, user manual and the terms of this warranty;
  - b) have the model and serial number of the Appliance available;
  - c) have the proof of purchase (eg an invoice) available;
  - d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before calling for service, please ensure that the steps listed in point 13 above have been followed.

#### FOR SERVICE

or to find the address of your nearest state service centre in Australia

**Please call 13 13 4 9**

For the cost of a local call (Australia only)

#### SERVICE AUSTRALIA



**ELECTROLUX HOME PRODUCTS**

[www.electrolux.com.au](http://www.electrolux.com.au)

#### FOR SPARE PARTS

or to find the address of your nearest state spare parts centre in Australia

**Please call 13 13 50**

For the cost of a local call (Australia only)

#### FOR SERVICE

or to find the address of your nearest authorised service centre in New Zealand

**Free call 0800 10 66 10**

(New Zealand only)

#### SERVICE NEW ZEALAND



**ELECTROLUX HOME PRODUCTS**

[www.electrolux.co.nz](http://www.electrolux.co.nz)

#### FOR SPARE PARTS

or to find the address of your nearest state spare parts centre in New Zealand

**Free call 0800 10 66 20**

(New Zealand only)











[www.electrolux.com/shop](http://www.electrolux.com/shop)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>