 


CASSETTE PLAYBACK

 
1. Set the source selector to TAPE/POWER OFF.
 - The POWER indicator lights up.
2. Press STOP•OPEN ■▲ to open the cassette holder.
3. Insert a recorded cassette.
4. Press PLAY ◀ and playback will start.
5. Adjust the sound using the VOLUME, and DBB controls.
6. For brief interruptions, press PAUSE ■■. Press PAUSE ■■ again to resume playback.
7. By pressing ◀◀ or ▶▶, fast winding of the tape is possible in both directions.
8. To stop playback, press STOP•OPEN ■▲.
 - The keys are automatically released at the end of the tape.
9. Set the source selector to TAPE/POWER OFF position (with the cassette keys released) to switch off the set.
 - The POWER indicator goes out.

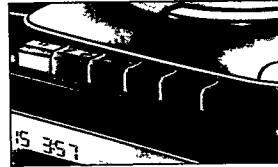

CASSETTE RECORDING

General information on cassette recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suited for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- Check and tighten slack tape before use with a pencil, to avoid jamming the deck mechanism
- The recording level is set automatically. Altering the VOLUME or DBB controls will not affect the recording in progress.
- No recording will take place during the first 7 seconds, when the leader tape passes the recorder heads.
- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Recording on this side is no longer possible.

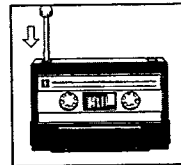

CASSETTE RECORDER

English

RECORDING FROM THE RADIO

1. Set the source selector to TUNER.
 - The POWER indicator lights up.
2. Tune to the desired radio station using the TUNING knob.
3. Press STOP•OPEN ■▲ to open the cassette holder.
4. Insert a blank cassette.
5. Press RECORD ● to start recording.
 - A whistling sound during MW recordings can be eliminated by setting the OSC switch to any of the three positions (1,2 or 3) to give the best reception.
6. For brief interruptions, press PAUSE II. To resume recording, press PAUSE II again.
7. To stop, press STOP•OPEN ■▲.



CD SYNCHRO - RECORDING FROM THE CD PLAYER

1. Set the source selector to CD.
 - The POWER indicator lights up.
2. Insert a CD and if desired, program track numbers.
3. Press STOP•OPEN ■▲ to open the cassette holder.
4. Insert a blank cassette.
5. Press RECORD ● to start recording.
 - Playing of a disc or CD program starts automatically from the beginning of a disc or a program. It is not necessary to start the CD player separately.
6. For brief interruptions, press PAUSE II. To resume recording, press PAUSE II again.
7. To stop recording press STOP•OPEN ■▲.

 


To select and record a particular passage within a track

1. Press SEARCH ◀◀ or ▶▶ to select a passage.
2. Put the CD player in PAUSE II position at the selected passage.
 - Recording will start from this exact point when you press RECORD ●.



PRECAUTIONS & GENERAL MAINTENANCE

- Place the set on a hard, flat surface so that it does not tilt.
- Do not expose the set, CDs, batteries or cassettes to humidity, rain, sand, direct sunlight or other places where high temperatures can occur, such as in the vicinity of heating apparatus or in motor cars parked in the sun.
- Do not cover the set. The amplifier produces heat which must dissipate freely, so make sure that there is sufficient ventilation around the set. A minimum gap of 15 cm is necessary.
- The mechanical parts of the CD player and the cassette deck contain self-lubricating bearings and must not be oiled or lubricated.
- A chamois leather slightly moistened with water is sufficient for cleaning the housing. Do not use cleaning agents containing alcohol, spirits, ammonia or abrasives as these may harm the housing.

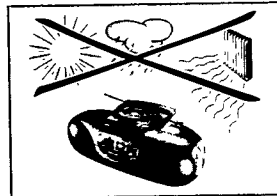

CD MAINTENANCE

  - The lens of the CD player should never be touched.
- The lens may cloud over if the CD player is moved from cold to warm surroundings. The CD player will not start. Give the player some time to acclimatise.
- To take a CD out of its box, press the centre spindle while lifting the CD. Always pick up the CD by the edge and replace the CD in its box after use to avoid scratching and dust.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach stickers to it.

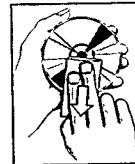


RECORDER MAINTENANCE

To ensure a good recording and playback quality, clean the indicated parts (A), (B) and (C) after every 50 hours of operation or, on average, once a month. Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid.

1. Open the cassette holder by pressing STOP•OPEN ■▲.
2. Press PLAY ◀ and clean the rubber pressure roller (C).
3. Then press PAUSE || and clean the capstan (B) and the heads (A).
4. After cleaning, press STOP•OPEN ■▲.

 Cleaning of the heads (A) can also be done by playing a cleaning cassette through once.

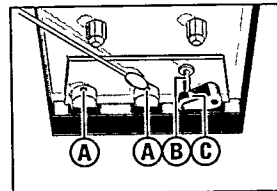

TROUBLESHOOTING

English

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: Under no circumstances should you try to repair the set yourself, as this would invalidate the guarantee.

PROBLEM	POSSIBLE CAUSE	REMEDY
Set does not react to operation of any control.	<ul style="list-style-type: none"> – Electrostatic discharge. 	<ul style="list-style-type: none"> • Switch off the set, disconnect the mains plug and reconnect after a few seconds.
Display does not function properly.	<ul style="list-style-type: none"> – Electrostatic discharge. 	<ul style="list-style-type: none"> • Switch off the set, disconnect the mains plug and reconnect after a few seconds.
No sound.	<ul style="list-style-type: none"> – VOLUME is not adjusted. – Headphones are connected. – Batteries are exhausted. – Batteries are incorrectly inserted. – Mains lead is not securely connected. 	<ul style="list-style-type: none"> • Adjust the VOLUME. • Disconnect headphones. • Insert fresh batteries. • Insert the batteries correctly. • Connect the mains lead properly.
Bad sound.	<ul style="list-style-type: none"> – Batteries are exhausted. 	<ul style="list-style-type: none"> • Replace batteries.
Severe radio hum or noise.	<ul style="list-style-type: none"> – Set too close to TV, VCR or computer. 	<ul style="list-style-type: none"> • Increase the distance.
Poor radio reception.	<ul style="list-style-type: none"> – Weak radio signal. 	<ul style="list-style-type: none"> • FM: aim and extend the telescopic aerial for best reception; • MW: rotate the entire set.
Poor cassette sound quality.	<ul style="list-style-type: none"> – Dust and dirt on the heads, capstan or pressure roller. 	<ul style="list-style-type: none"> • Clean the heads etc., see Maintenance.
Recording does not work.	<ul style="list-style-type: none"> – Cassette tab(s) may be broken out. 	<ul style="list-style-type: none"> • Apply a piece of adhesive tape over the missing tab space.
CD playback does not work.	<ul style="list-style-type: none"> – CD is badly scratched or dirty. – No CD inserted. – CD inserted upside down. – Laser lens is steamed up. 	<ul style="list-style-type: none"> • Replace or clean the CD, see Maintenance. • Insert CD. • Insert CD with printed side facing up. • Wait until lens has acclimatized.
The CD skips tracks.	<ul style="list-style-type: none"> – CD is damaged or dirty. – PROGRAM is active. 	<ul style="list-style-type: none"> • Replace or clean the CD. • Switch off the PROGRAM-function.

GUARANTEE FOR AUSTRALIA

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

- C-series HiFi-systems 12 months.
- Compact Disc Players: 12 months.
- Home Audio Systems: 6 months.
- Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

Note: Please retain your purchase docket to assist prompt service.

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

**Philips
Consumer Products Division
Technology Park
Figtree Drive, Australia Centre
Homebush 2140
New South Wales**

GUARANTEE FOR NEW ZEALAND

Thank-you for purchasing this quality Philips product. Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product. However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact.

**The Guarantee Controller
Philips New Zealand Ltd.**

☐ P.O. Box 41.021

Auckland

☎ (09) 84 94 160

fax ☎ (09) 84 97 858

GARANTÍA PARA MÉXICO

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestras Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor. Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo.

Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía. Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con:

Oficinas Centrales de Servicio,
Av. Coyoacán No. 1051,
Col. del Valle,
03100 México, D.F.
☎ 5-75-20-22 o 5-75-01-00

BR CERTIFICADO DE GARANTIA INTERNACIONAL PARA O BRASIL

(Os dados deste manual estão sujeitos a alterações.)

Este aparelho é garantido pela PHILIPS DA AMAZÔNIA INDÚSTRIA ELETRÔNICA LTDA, por um período superior ao estabelecido por lei, porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

1. A PHILIPS DA AMAZÔNIA INDÚSTRIA ELETRÔNICA LTDA, assegura ao proprietário consumidor deste aparelho a garantia de 365 dias (90 dias legal mais 275 dias adicional) **CONTADOS A PARTIR DA DATA DE ENTREGA DO PRODUTO, CONFORME EXPRESSO NA NOTA FISCAL DE COMPRA**, que passa a fazer parte deste certificado.
2. Esta garantia perderá sua validade se:
 - A) O defeito apresentado for ocasionado por uso indevido ou em desacordo com o seu manual de instruções.
 - B) O produto for alterado, violado ou conser-tado por pessoa não autorizada pela Philips.

C) O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características diferentes das recomendadas no manual de instruções e/ou no produto.

D) O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.

3. Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior, bem como aqueles causados por agentes da natureza e acidentes.
4. Excluem-se igualmente desta garantia defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado.
5. Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do Sr. consumidor requerente do serviço.
6. Este produto tem **GARANTIA INTERNACIONAL**. O serviço técnico (durante ou após a garantia) é disponível em todos os países onde este produto é oficialmente distribuído pela Philips. Nos países onde a Philips não distribui este produto, o serviço técnico da Philips local poderá prestar tal serviço, contudo poderá ocorrer algum atraso no prazo de atendimento se a devida peça de reposição e o manual técnico não forem prontamente disponíveis.
7. A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitá-lo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

PHILIPS DA AMAZÔNIA INDÚSTRIA ELETRÔNICA LTDA.

Dentro do Brasil, para informações adicionais sobre o produto ou para eventual necessidade de utilização da rede de oficinas autorizadas, ligue para o CENTRO DE INFORMAÇÕES AO CONSUMIDOR, TEL 0800-123123 (discagem direta gratuita) ou escreva para a Caixa Postal 21462 – CEP 04698-970 – SÃO PAULO – SP.

 
Horário de atendimento: de segunda à sexta-feira, das 08:00 às 20:00 h, aos sábados das 08:00 às 13:00.

Para atendimento fora do Brasil, contate a Philips local ou a:

Philips Consumer Service
Beukenlaan 2
5651 CD Eindhoven
The Netherlands



AZ 1000 CD Radio Cassette Recorder

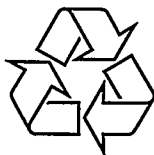

Meet PHILIPS at the internet
<http://www.philips.com>

Printed in Hong Kong

CvB/TCtext/9625

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>