


MAGNAVOX

AJ 3930 CD Clock Radio

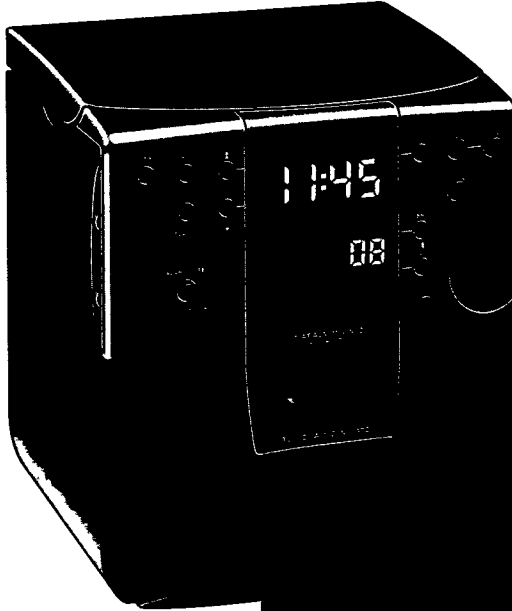

USA English.....4

CONTENTS	page
INTRODUCTION.....	4
SAFETY INSTRUCTIONS.....	5
CONTROLS	6-7
INSTALLATION	8
CD PLAYER.....	9
RADIO/CLOCK	10
ALARM.....	10-11
SLUMBER	12
ADDITIONAL INFORMATION.....	13
TROUBLESHOOTING	14
LIMITED WARRANTY	15

F Français16

TABLE DES MATIÈRES	page
INTRODUCTION.....	16
CONSEILS DE SÉCURITÉ	17
REPÉRAGE DES TOUCHES.....	18-19
MISE EN SERVICE	20
LECTEUR CD.....	21
RADIO/HORLOGE.....	22
RÉVEIL	22-23
ARRÊT PROGRAMMÉ	24
GENERALITÉS.....	25
DEPISTAGE DES PANNES.....	26
GARANTIE LIMITÉE	27

E Español.....28

ÍNDICE.....	página
INTRODUCCIÓN	28
INSTRUCCIONES SOBRE SEGURIDAD	30-31
MANDOS	18-19
CONEXIÓN.....	32
LECTOR CD.....	33
RADIO/RELOJ	34
DESPERTADOR	34-35
DORMITADO	36
INFORMACIÓN COMPLEMENTARIA.....	37
LOCALIZACION DE DESPERFECTOS	38
GARANTÍA LIMITADA.....	39

Please follow these three important steps
to get the most from your product

MAGNAVOX

**Congratulations on your new purchase ...
and welcome to the MAGNAVOX family!**

Dear MAGNAVOX family member:.

Thank you for your confidence in MAGNAVOX.
You've selected one of the best-built, best-backed
products available today.

We appreciate your support, and we'll do
everything we can do to keep you happy with
your purchase for many years to come. After all,
you're the reason we're in business!

As a MAGNAVOX family member, you're entitled
to a world of special privileges - and our
uncompromising commitment to your total
satisfaction.

Your MAGNAVOX product is protected by one of
the most comprehensive warranties and
outstanding service networks in the industry.

What's more, your purchase qualifies you to
receive advance information on exciting new
products from MAGNAVOX, convenient access to
our home shopping network for special products
and accessories, plus factory-direct rebates and
discounts on your future MAGNAVOX purchases.

All of this is our way of saying 'thanks' for joining
the MAGNAVOX family.

To start taking advantage of these great benefits,
just remember to return your MAGNAVOX
Owner's Registration Card.

Simply complete, detach and mail us your
Owner's Registration Card today. And enjoy your
new purchase with our best wishes!

Sincerely,

Donald F. Johnstone
President and Chief Executive Officer

**Return your owner's
registration card within 10 days**



Registering your purchase is an essential
step to guarantee that you'll receive all of
the benefits you're entitled to as a
MAGNAVOX product owner.

Complete and mail your Owner's Registration
Card today to ensure your right to
warranty verification, owner confirmation,
model registration, plus a wide variety of
special services and savings.

Know these safety symbols



Above symbol is located on the base of the set.

- This bolt of lightning indicates
uninsulated material within your unit may
cause an electrical shock. For the safety
of everyone in your household, please
do not remove product covering.
- This exclamation point calls attention to
features for which you should read the
enclosed literature closely to prevent
operating and maintenance problems.

**Read operating instructions
carefully**



The information in this manual can help you
take full advantage of your product's many
features, and ensure years of safe, reliable
operation. So don't miss out. Read the
enclosed instructions, safety tips and
warranty information today.


For Customer Use:

Enter below the Serial No. which is located on
the type plate on the base of the cabinet.
Retain this information for future reference.

Model No. _____

Serial No. _____

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

- 1. Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3. Read Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating and use instructions should be followed.
- 5. Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
- 6. Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.**  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 7. Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 8. Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 9. Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 10. Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 11. Grounding or Polarization** -



The precautions that should be taken so that the grounding or polarization means of an appliance is not defeated.

AC Polarized Plug Caution: To prevent electric shock, match the wide blade of this plug to the wide slot, fully insert. Do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

- 12. Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
- 13. Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
- 14. Power Lines** - An outdoor antenna should be located away from power lines.
- 15. Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 16. Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 17. Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A.** The power-supply cord or the plug has been damaged; or
 - B.** Objects have fallen, or liquid has spilled into the appliance; or
 - C.** The appliance has been exposed to rain; or
 - D.** The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E.** The appliance has been dropped, or the enclosure damaged.
- 18. Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.


CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.







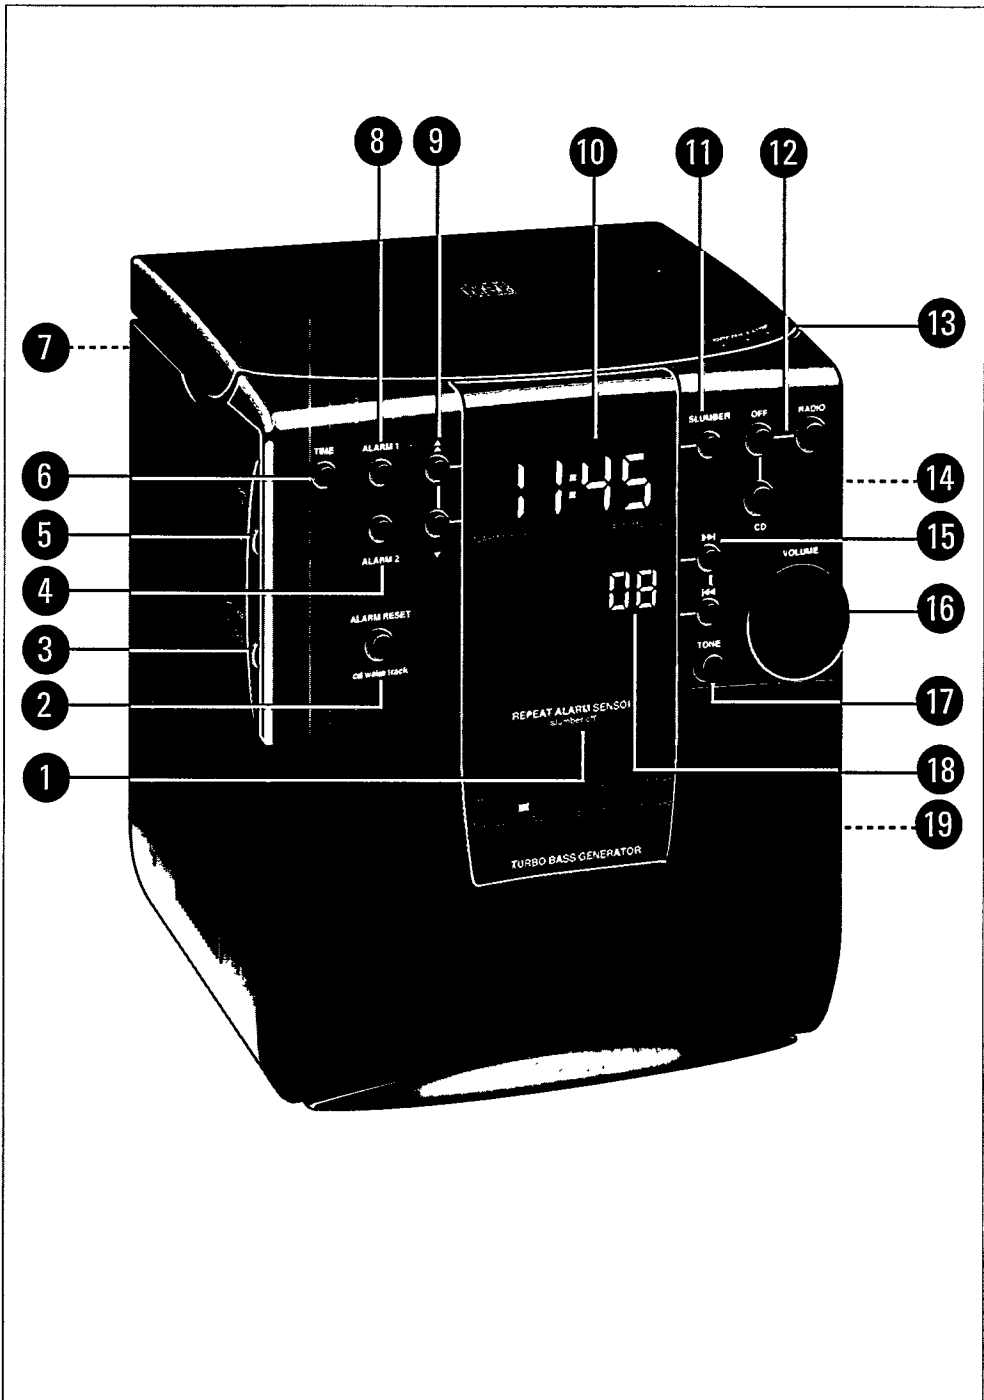


The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10

CDN Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.



CONTROLS

- ① **REPEAT ALARM SENSOR**
To switch off the alarm temporarily.
- ② **ALARM RESET/CD wake up track**
 - To switch off the alarm for 24 hours.
 - To set a CD wake up track.
- ③ **ALARM 1 MODE** switch
To wake by radio or CD at alarm time 1.
- ④ **ALARM 2**
To set alarm time 2.
- ⑤ **ALARM** switch:
 - **OFF** - alarm is switched off.
 - **1** - to wake by radio or CD at alarm time 1.
 - **2** - to wake by buzzer at alarm time 2.
 - **1+2** - to wake at alarm time 1 and alarm time 2.
- ⑥ **TIME**
To adjust the time of the clock.
- ⑦ 
 - To connect amplified speakers.
 - To connect headphones with a 3.5 mm plug. Inserting the plug will disconnect the speakers.
- ⑧ **ALARM 1**
To set alarm time 1.
- ⑨  and 
Fast forward () and slow backward ().
- ⑩ **Clock display**
- ⑪ **SLUMBER**
 - To switch on slumber function.
 - To adjust slumber time.
- ⑫ **CD** – to switch the CD player on.
RADIO – to switch the radio on.
OFF – to switch off the CD player or the radio.
- ⑬ **OPEN CLOSE**
Opening and closing the CD compartment.
- ⑭ **BAND SELECTOR**
To select the waveband.
- ⑮    
 - To select a next or previous track.
 - Search to a particular passage during play.
- ⑯ **VOLUME**
To adjust the sound level.
- ⑰ **TONE**
Tone control, high or low.

⑱ **CD display**

- **TRACK:** the total number of tracks/ the number of the current track/ the CD wake up track number
- **SLUMBER TIME:** the playing time of the slumber function.

⑲ **TUNING**

For station selection.

POWER SUPPLY

- Check that the type plate on the base of the set indicates the correct power voltage.
- If not, consult your dealer.
- Insert the power plug into the wall outlet.
- The set is now switched on. As soon as you insert the power plug into the wall outlet, the figures on the display ⑩ will blink. This means that you must set the correct time (See 'Setting the time').
- CD and radio will take a few seconds to warm up.




POWER BREAKDOWN

- As soon as the power fails, the whole appliance will be switched off.
- When the power returns, the figures on the display ⑩ will begin to blink. The CD clock radio is thereby indicating that you must set the correct time and alarm time (see 'Setting the time' and 'ALARM TIME').

Battery

- You may fit a 6F22 - 9 volt battery in the CD clock radio.
- If the power then fails, the clock will in any case continue to operate.
This will not however be visible, because the battery does not power the lighting of the display ⑩.
As soon as the power returns the display ⑩ will show the correct time.
- *To be perfectly clear:* alarm, radio, CD and display **do not** operate on the battery.
- Insert the battery into the compartment in the base of the appliance.

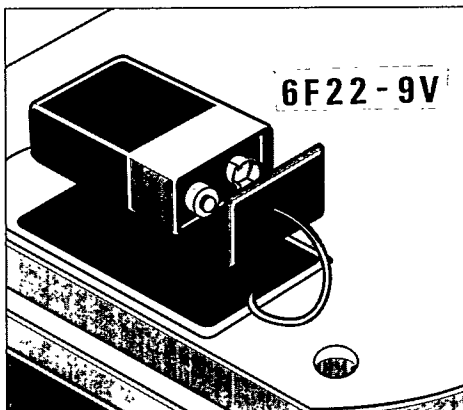

- Replace the battery once a year.
It cannot be stated precisely how long the battery will last. This depends completely on how often and for how long the power fails.
This may vary from country to country or even region to region.
- If you will not be using the appliance for any length of time, then it is advisable to remove the battery from the appliance, to avoid the possibility of leakage and consequently damage to the appliance.


Note: Any CD Wake Up track you have stored will be erased if mains power is interrupted. Inserting a back-up battery will not change this.

CONNECTING HEADPHONES/SPEAKERS

- Connect headphones with a 1/8 " (3.5 mm) jack plug to the ⑦ jack ⑦, or:
- Connect amplified speakers with a 1/8 " (3.5 mm) jack plug to the ⑦ jack ⑦.
- In both cases, the speakers of the main unit will now be muted.

PLAYBACK

- Open the CD compartment by pressing OPEN CLOSE (13).
- Insert a CD, *printed side up*, and close the compartment.

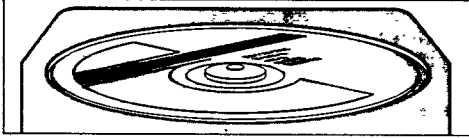

- Press CD (12) to start play.
- The number of tracks will be shown on the display (18) for about 2 seconds.
- The track being played will be shown on the display (18).
- Adjust the sound (level) with the VOLUME (16) and TONE (17) controls.
- Play will stop after the last track and the set will be switched off.
- Open the CD compartment by pressing OPEN CLOSE (13) and take out the CD.

NOTE

- You can stop playback by pressing OFF (12).
- If after pressing CD (12), E (Error) appears, this means that the CD player cannot read the CD. Possible causes are:
 - you inserted the CD upside down;
 - the CD is badly scratched or dirty, see 'MAINTENANCE';
 - no CD has been inserted;
 - the lens (X) is steamed up, see 'MAINTENANCE'.



1. Selecting another track during play:

Press briefly

- ▶▶| - **go to the next track**
- You can jump to the next track by briefly pressing ▶▶| (15) once.
- If you want to skip more than one track, then briefly press ▶▶| (15) more than once until the display (18) shows the desired track number.

◀◀ - go to the previous track

- If you want to repeat the current track from the beginning, briefly press ◀◀ (15) once.
- If you want to repeat one of the previous tracks, briefly press ◀◀ (15) more than once until the display shows the required track number.

2. Search during play:

Keep pressed

- During PLAY, keep ▶▶| (15) for search forwards or ◀◀ (15) for search backwards pressed.
- The CD is played at a higher speed but the sound remains recognizable.
- Release the button as soon as you recognize the required passage.
- The CD will be played normally from this passage onwards.
- If the button is pressed for longer than 5 seconds, the search speed will increase.

CD WAKE UP TRACK

- Press CD (12).
- Select the required wake up track by pressing ▶▶| or ◀◀ (15).
- The track number will be shown on the display (18).
- Press ALARM RESET (cd wake up track) (2) for more than 2 seconds.
- P (Program) appears on the display; your CD wake up track has now been stored in the memory.
- You can check your CD wake up track by pressing ALARM RESET (cd wake up track) (2) briefly.
- The selected track number starts blinking on the display for a few seconds.

See also 'ALARM TIME'.


RADIO

- Switch the radio on by pressing RADIO (2).
- Select the waveband with the BAND SELECTOR switch (13).
- Select the required station with the TUNING knob (19).
- Adjust the sound (level) with the VOLUME (16) and TONE (17) controls.
- You may have to adjust the position of the CD clock radio slightly for optimal reception.
- Switch the radio off by pressing OFF (12).
- For FM reception there is an aerial wire at the rear of the clock radio. This wire must be extended and, if necessary adjusted slightly, in order to obtain good reception.
- The AM aerial is built into the clock radio. To obtain optimum reception you may have to adjust the positioning of the clock radio slightly.

CLOCK

Clock display:

- The clock display (10) shows the time; PM on = PM; off = am. The display also indicates whether you have switched on the alarm.
- If alarm 1 is on, then the ALARM 1 indicator lights up in the display (10). For alarm 2, the ALARM 2 indicator lights up and for the dual alarm both indicators light up.

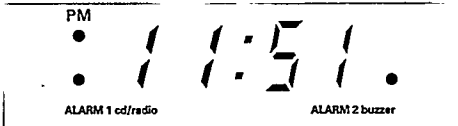

Setting the time:


- Keep TIME button (6) pressed and set the correct time as follows:
 - fast forward with the ▲ button (9);
 - slow backward with the ▼ button (9).
- Release the TIME button (6).
- The correct time appears in the display (10).

ALARM TIME

If you wish to use the alarm, then you should first of all set the alarm time. You may set two different alarm times. This can be useful if, for example, you need to be woken at a different time during the week than at the weekend.
Note: With alarm 1 you will always be woken by radio or CD and with alarm 2 by the buzzer.

Setting alarm time 1:


- Press ALARM 1 button (8).
- The display (10) will now show alarm time 1:

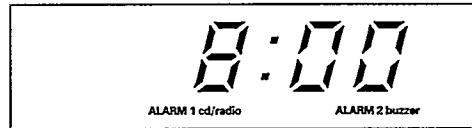

- Keep ALARM 1-button (8) pressed and set the required alarm time with the ▲ and ▼ buttons (9).
- Release ALARM 1 button (8).
- The display will now show the current time.
- You can check alarm time 1 by simply pressing ALARM 1-button (8) again.
- Select the desired alarm signal (CD or RADIO) with the ALARM 1 MODE switch (3).
- If CD has been selected, playback will start from track number 1 unless a CD wake track has been selected (see 'CD WAKE TRACK'). The CD will play for 60 minutes unless the alarm is reset. If the end of the CD is reached before 60 minutes playback will start again with track 1.
- If no CD has been inserted or if the CD compartment has been left open the buzzer will sound instead.

Setting alarm time 2:

- Press ALARM 2 button (4).
- The display (10) will now show alarm time 2:

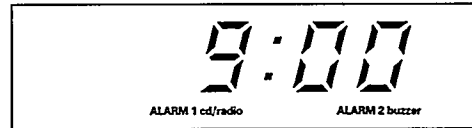

- Keep ALARM 2 button (4) pressed and set the required alarm time with the ▲ and ▼ buttons (9).
- Release ALARM 2 button (4).
- The display will now show the current time.
- You can check alarm time 2 by simply pressing ALARM 2-button (4) again.

ALARM ON

Switching on alarm 1:

- Set the ALARM switch (5) to 1.
- On the display the ALARM 1 indicator will light up.



- At the set alarm time 1 you will be woken by radio or CD.

Switching on alarm 2:


- Set the ALARM switch (5) to 2.
- On the display the ALARM 2 indicator will light up.



- At the set alarm time 2 you will be woken by the buzzer.

Switching on alarm 1+2:

- The CD clock radio can also wake you at two different alarm times on the same day.
- Set the ALARM switch (5) to 1 + 2.
- On the display the ALARM 1 and ALARM 2 indicators will light up.

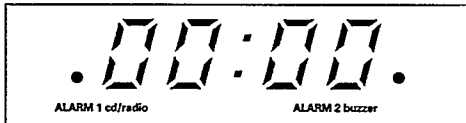

- You will be woken at alarm time 1 by radio or CD and at alarm time 2 by the buzzer.
- If ALARM 1 and ALARM 2 are set for the same time, then the ALARM 1 signal (CD or RADIO) will be used.

NOTE

- Make sure the volume of the radio or the CD player is loud enough to wake you.
- If CD has been selected as alarm signal and a CD wake track has been selected, the cd wake up track will be played at the set alarm time even if you are listening to another track or to the radio.
- If RADIO has been selected as alarm signal and you are already listening to the radio when the set alarm time 1 is reached the radio simply will continue to play.

NOTE

- When using the alarm function make sure the headphones are disconnected
- If amplified speakers are connected, make sure that the speakers are switched on.
- The buzzer alarm sound is at a fixed volume

ALARM OFF

You can switch off the alarm in three ways:

Switching off the alarm for 10 minutes:

- If you wish to sleep a little longer you may switch off the alarm signal temporarily by waving across the REPEAT ALARM SENSOR (1) (not further than 15 cm away from the sensor).
- After 10 minutes the alarm (radio, CD or buzzer) will sound again.
- If you repeat this operation, the same will happen.
- If the ALARM RESET button (2) is not pressed, the alarm will switch itself off after 60 minutes. The following day the alarm signal will sound again at the set alarm time.

NOTE

- When the CD alarm signal is on and the REPEAT ALARM SENSOR (1) is being used, playback of the CD track will continue from where it was stopped as soon as the alarm signal is resumed.
- If you open the CD compartment during playback the alarm signal source will automatically change to buzzer.

Switching off the alarm for 24 hours:

- Press the ALARM RESET button (2).
- A 'beep' tone will sound.
- The alarm is now switched off for 24 hours.
- Pressing CD or RADIO (2) will perform this function automatically.

Switching off the alarm completely:

- Press the ALARM RESET button (2).
- Set the ALARM switch (5) to OFF.
- On the display the ALARM indicators will disappear and the alarm is now switched off.
- If you wish to be awoken the following day again, you must reset the ALARM switch (5) to 1, 2 or 1+2.


SLUMBERING

The CD clock radio has a built-in slumber function. With this function you can continue to listen to the CD or the radio while falling asleep.

You do not need to switch off the radio yourself. This happens automatically. The period during which you continue to listen to the CD or the radio is called the slumber time. You can set this yourself. The maximum slumber time is 60 minutes.

Slumber time:

- If you wish to slumber for 60 minutes, you should simply press the SLUMBER button (11).
- The CD display (10) will briefly show a slumber time of 60 minutes.
- If you wish to slumber for less than 60 minutes, then press SLUMBER (11):
 - twice for 30 minutes;
 - three times for 10 minutes.
- Once you have selected the slumber time you can select CD or radio by pressing CD or RADIO (12).

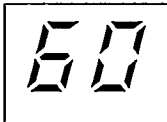**Slumber off:**

- You can switch off the CD or the radio before the slumber time has elapsed by waving across the REPEAT ALARM SENSOR (1) (not further than 15 cm away from the sensor).

NOTE

- If no selection (CD or RADIO) has been made, then RADIO will automatically be selected.
- If CD has been selected and the CD is damaged or inserted incorrectly, then RADIO will automatically be selected.
- During slumber operation the radio or CD player is often set to a lower volume. Bear this in mind if you wish to be woken the next day, as you will perhaps sleep through the sound of the CD or the radio.


MAINTENANCE

General


- If you do not intend to use the CD clock radio for a long time, it is better to remove the plug from the wall outlet. In addition to this, it is advisable to remove the battery from the CD clock radio. This will prevent any danger of leakage and the CD clock radio will not be damaged.
- Replace the battery once a year. It cannot be stated precisely how long the battery will last. This depends completely on how often and for how long the power fails. This may vary from country to country or even region to region.
- Fingerprints, dust and dirt on the CD clock radio should be removed using a clean and damp soft cloth or chamois leather. When cleaning do not use any products which contain abrasive agents or solvents (benzine, thinner, alcohol etc.). These might affect the housing.
- Rain, dampness and extreme heat may damage the CD clock radio. For this reason it should not be placed in full sun or close to heating elements for any period of time.
- Keep the set and the CDs away from sand.

CD player

- The lens (X) should never be cleaned.

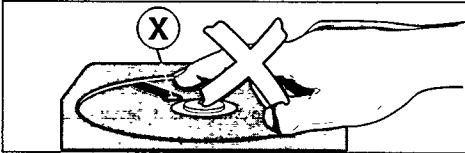

- The lens may steam up when the set is taken from a cold into a warm environment. Playing a CD is then not possible. Do not clean the lens, but let the set acclimatize for a while.
- Always pick up the CD by the edge and put it back in its box immediately after use.
- To remove dirt from a CD, first breathe on the CD and wipe it off in a straight line from centre to edge using a soft, lint-free cloth. The use of cleaning agents may damage the CD.

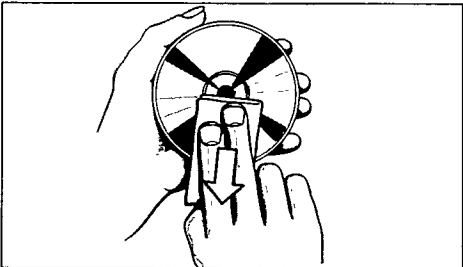

- The mechanism of the CD player is fitted with self-lubricating bearings and therefore must not be oiled or greased.

PROBLEMS AND THEIR LIKELY CAUSES

- If a problem occurs, run through the points listed on the next page before taking your player in for repair.
- If the problem remains, try to clear it by switching the set off and on again:
 - Remove the powers plug from the wall outlet.
 - Insert the power plug in the wall outlet again.
- If this also fails to help, consult your dealer.

Under no circumstances should you repair the set yourself as this will invalidate the warranty!

The type plate is located on the base of the set

English

SYMPTOM	POSSIBLE CAUSE	REMEDY
<ul style="list-style-type: none"> - No sound 	<ul style="list-style-type: none"> - The volume is not set to the proper level. - The setting of the ALARM switch ⑤ is incorrect. - Headphones are connected. 	<ul style="list-style-type: none"> • Turn VOLUME ⑯ to adjust the sound level. • Set the ALARM switch ⑤ properly. • Disconnect headphones.
<ul style="list-style-type: none"> - Broadcast cannot be received. 	<ul style="list-style-type: none"> - Insufficient antenna input. 	<ul style="list-style-type: none"> • Rotate the set for best reception.
<ul style="list-style-type: none"> - In FM mode crackling sounds occur from time to time (especially in weak signal areas). 	<ul style="list-style-type: none"> - Noise from other electrical equipment with thermostats. 	<ul style="list-style-type: none"> • Rotate the set for best reception.
<ul style="list-style-type: none"> - In AM mode continuous crackling and hiss noises occur. 	<ul style="list-style-type: none"> - These noises are caused by lightning, fluorescent lamps, motors or engines, thermostats and other electrical equipment. - The set is used near a TV, computer and so on. 	<ul style="list-style-type: none"> • Rotate the set for best reception. • Use the set apart from TV, computer and so on
<ul style="list-style-type: none"> - Playback of the CD does not start. 	<ul style="list-style-type: none"> - The CD has been loaded upside down. - The CD is badly scratched or dirty. 	<ul style="list-style-type: none"> • Reload the CD, label side up. • Clean the CD.
<ul style="list-style-type: none"> - Sound skips (at same part). 	<ul style="list-style-type: none"> - The CD is dirty. - The sound level is too high, causing the set to vibrate. 	<ul style="list-style-type: none"> • Clean the CD. • Turn down the volume.
<ul style="list-style-type: none"> - The alarm does not function. 	<ul style="list-style-type: none"> - The alarm is not set. - The current time is not correct. - Headphones are connected. 	<ul style="list-style-type: none"> • Set the alarm time. • Set the correct time. • Disconnect headphones.

LIMITED WARRANTY

Magnavox - One Year Carry-In Exchange -

One Year Coverage

For one year from the date of purchase, your product will be replaced with a new, renewed or comparable product (whichever is deemed necessary) if it becomes defective or inoperative. This is done without charge to you. Replacement products are warranted for the balance of the warranty period.

Who is Protected? ... Where?

This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A., Puerto Rico, the Virgin Islands and Canada.

What the Purchaser Must Do

Before you call for service, check your operating instruction booklet. A slight adjustment of the customer controls discussed in your instruction booklet may save you a service call. This warranty does not cover commercial use, rental agreements, shipping damage, misuse or failure due to lack of normal care.

For product purchased in the U.S.A., Puerto Rico or the Virgin Islands

If you require service during the warranty period, you must take your product to the dealer from whom it was purchased, or carefully pack the product and ship it by prepaid transportation with proof of the purchase date to the Small Product Service Center*, address listed below.

In the U.S.A., Puerto Rico or the Virgin Islands, all implied warranties including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For product purchased in Canada

Replacement product can be arranged through your dealer who will advise of the nearest repair centre. To obtain warranty service, the product must be delivered (carried-in) to a Philips Consumer Service Centre (listed below), Philips Self-Servicing Dealer or Authorized Service Depot.

All that's required to validate your original factory warranty for products you purchase is to present your bill of sale as proof of purchase.

In Canada, this warranty applies only to the normal service area of a Philips Consumer Service Centre, Philips Self-Servicing Dealer or Authorized Service Depot. Beyond this area, travel time or expense is the owner's responsibility.

How To Get Service On Your Product After The One Year Warranty Expires

Out-of-warranty service can be obtained at a nominal cost for replacement and handling under the following arrangements

For product purchased in the U.S.A., Puerto Rico or the Virgin Islands

- Contact the Philips Service Company office (☎ 615/475-0317) to obtain the cost of out-of-warranty repair for your product. Please know your model number before you call.
- Pack your product securely in a suitable container for shipment.
- Mail the product to:
*Small Product Service Center
Philips Service Company
907 Snapp Ferry Road, Plant 2, Building 6
Greeneville, Tennessee TN 37743
☎ (615) 636 - 5740

For product purchased in Canada

- Call the nearest Canadian Philips Consumer Service Centre (listed below) to obtain the cost of out-of-warranty repair for your product. Please know your model number before you call.
- Pack your product securely in a suitable container for shipment.
- Mail the product to the nearest Canadian Philips Service Centre (listed below).

Canadian Philips Consumer Service Centres

Toronto
601 Milner Avenue
Scarborough, Ontario
M1B 1M8
☎ (416) 754-6064 or 292-5161
Fax ☎ (416) 754-6290

Vancouver
3695 Grandview Highway
Vancouver, B.C.
V5M 2G7
☎ (604) 435-4411
Fax ☎ (604) 435-9911

Mississauga
1170 Burnhamthorpe Rd. West
Unit 30
Mississauga, Ontario
L5C 4E6
☎ (416) 896-0021

Ottawa
1335 Carling Avenue Unit 104
Ottawa, Ontario
K1Z 8N8
☎ (613) 722-1964
Fax ☎ (613) 728-7959

Montréal
5930 Côte de Liesse
Montréal, Québec
H4T 1E1
☎ (514) 342-9180
Fax ☎ (514) 342-9372


Winnipeg
1555 Dublin Avenue, Unit 6
Winnipeg, Manitoba
R3E 3M8
☎ (204) 786-5978
Fax ☎ (204) 786-2702

Edmonton
14104 128A Avenue
Edmonton, Alberta
T6L 4S3
☎ (403) 452-8491
Fax ☎ (403) 454-9873

Dartmouth
10 Morris Drive, Unit 39
Dartmouth, Nova Scotia
B3B 1K8
☎ (902) 468-4966
Fax ☎ (902) 468-5216

When your product is received, it will be replaced by a renewed (or comparable) product which meets Philips' high quality standards and shipped back to you by prepaid transportation.

AJ 3930

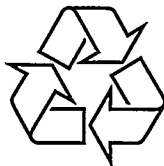

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>