 
5 Video Camera/Games Console to TV



- Connect the video cable (yellow) from the video output on camera (or other device) to the video input (yellow) located on the side of TV.
 - Note: for mono devices, connect only white audio cable from device's audio output to white audio input on the side of TV. Press PLAY on the

Connect audio cables

on the side of TV.


(red/white) from audio

outputs on device to

- Turn on TV and the device. Press the AV button on the remote control until FRONT/SIDE appears on TV screen.
 - device to verify connection.

Other Possible Connections



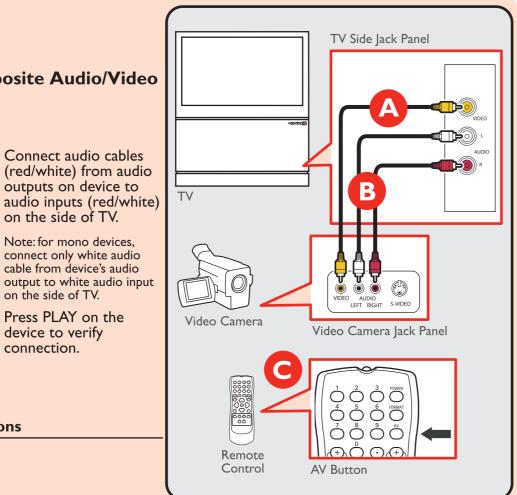

Need more help?

User manual:

Check the user manual that came with your TV.

Online help: www.usasupport.magnavox.com

MAGNAVOX How to SMART. VERY SMART. make the best connection


Use this guide to achieve the optimal connection for each of your components. Alternative connections are also provided.



Connect RF cable

B Use second RF cable to

Set-Top Box to TV

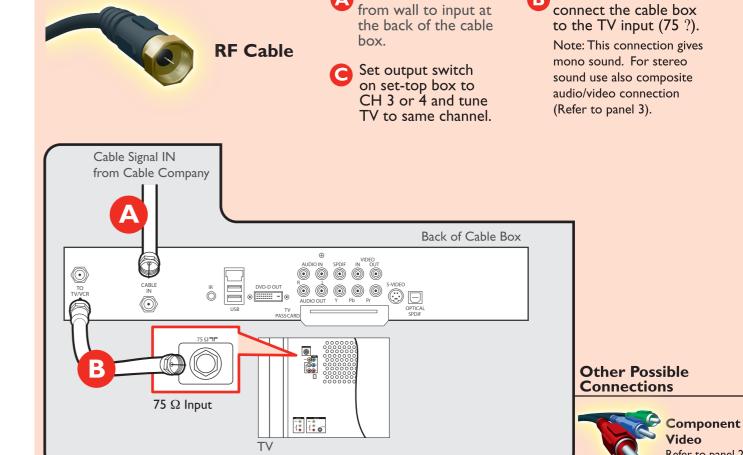

2 DVD Player or DVD Recorder to TV



HD CVI (Component Video Input) (only for HD devices)

- Insert Component Video connectors into their corresponding jacks on both HD DVD player/HD DVD recorder and TV (HD CVI-Y, Pb and Pr).
- Turn on TV and DVD player/DVD recorder. Press AV on remote control until HD CVI appears on TV screen.
- Connect red/white audio cables into the audio output jacks on DVD player/DVD recorder and audio AV inputs on TV.
 - Insert a pre-recorded DVD into DVD player/ DVD recorder and press PLAY to verify correct connection.

Note: HD CVI gives the best high definition picture. When using HD CVI, it is best not to connect a video signal to the AV input on the TV.


Other Possible Connections



S-Video




Composite Audio/Video Refer to panel 5.

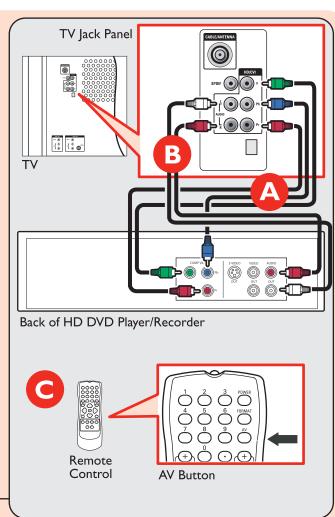

3 Audio to Hi-fi System

A Connect audio cable from the SPDIF jack on the rear of the TV to the DIGITAL IN jack on the rear of the hi-fi system.

Note: SPDIF (Sony and Philips Digital Interconnect Format) is highly recommended for high quality digital sound output.

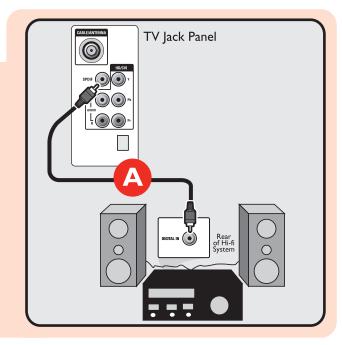


4 VCR to TV



- S-Video
- Connect S-Video cable to S-Video input on back of TV and S-Video output on back of VCR.
- Turn on TV and VCR. Dinsert pre-recorded Press AV button on the remote control until AV1 or AV2 appears on TV screen.
- B Connect audio cables (red/white) to audio AV inputs on back of TV and Audio outputs on back of VCR.
 - videotape into VCR and press PLAY to verify correct connection.

Note: When you connect S-Video and AV2 at the same time, you can only hear sound coming from S-Video.

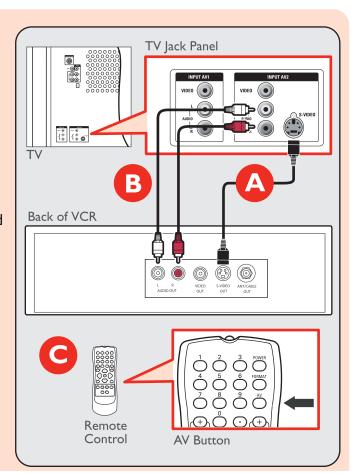


OR



Composite Audio/Video

- Connect the video cable (yellow) to the VIDEO AV input on back of TV and the corresponding video output on back.
- Turn on the TV and VCR. Press AV button on the remote control until AV1 orAV2 appears on TV screen.
- B Connect audio cables (red/white) to audio AV inputs on back of TV and the corresponding audio outputs (L & R) on back of VCR.
- Insert pre-recorded videotape into VCR and press PLAY to verify correct connection.

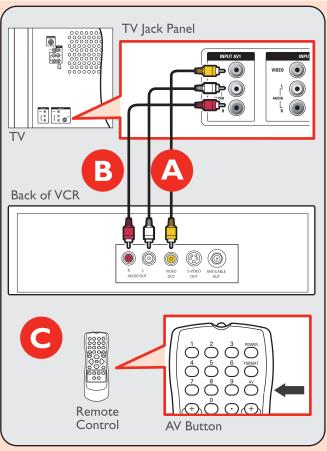

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com