


MAGNAVOX


AZ 9430 / AZ 9435 Radio Cassette Recorder/CD Player


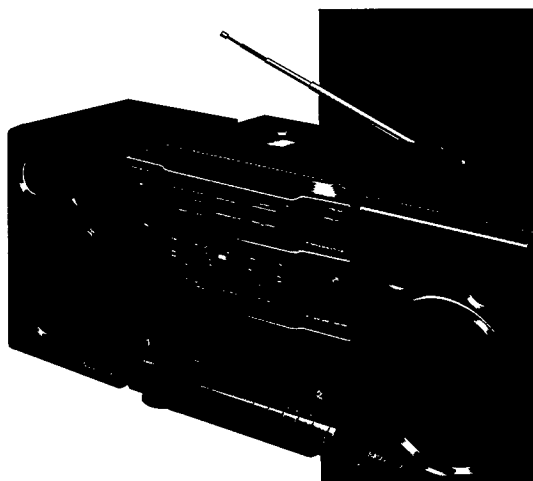



<p>The Model and Serial Number will be found on the type plate on the base of the set. Please record in the space provided below.</p>	English	page 6	English
	Illustrations Limited Warranty	page 4-5 page 16	
<p>Les numéros de modèle et de série figurent au-dessous de l'appareil. Veuillez les noter ci-après, dans l'espace prévu à cet effet.</p>	Français	page 16	Français
	Illustrations Garantie Limitée	page 4-5 page 28	
<p>El número de modelo y el de serie figuran en la placa de tipo en la base del aparato. Anótelos en el espacio a este fin reservado más abajo.</p>	Español	página 28	Español
	Ilustraciones Garantía Limitada	página 4-5 página 39	

Model number:
Numéro de modèle:
Número de modelo:


Serial number:
Numéro de série:
Número de serie:

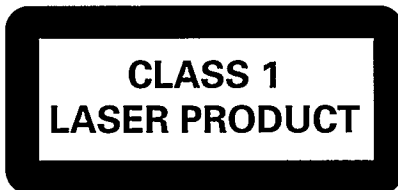

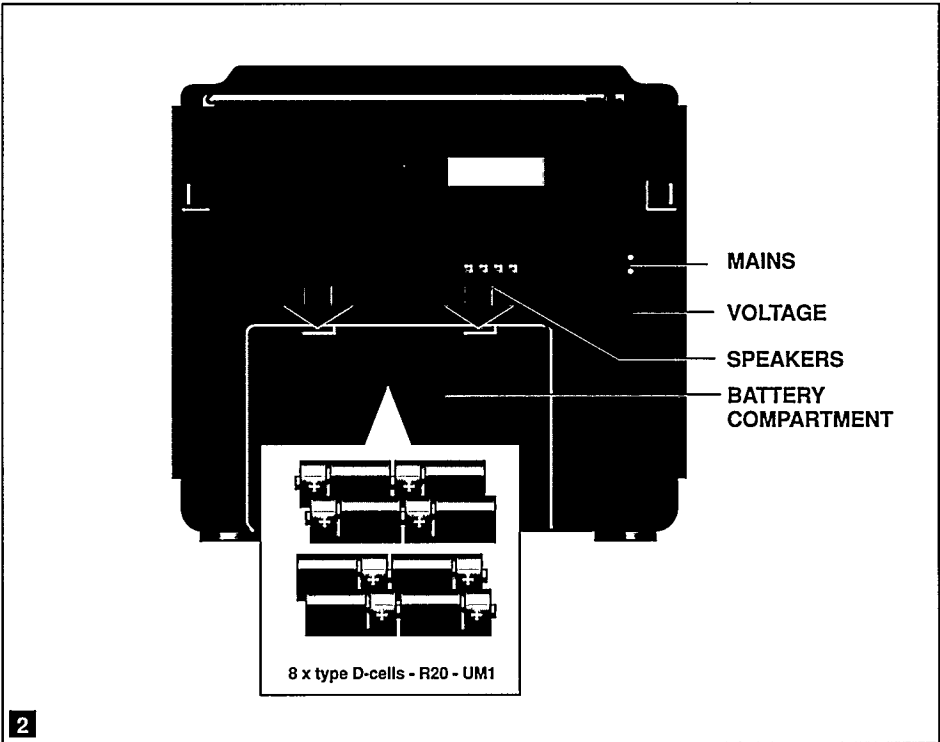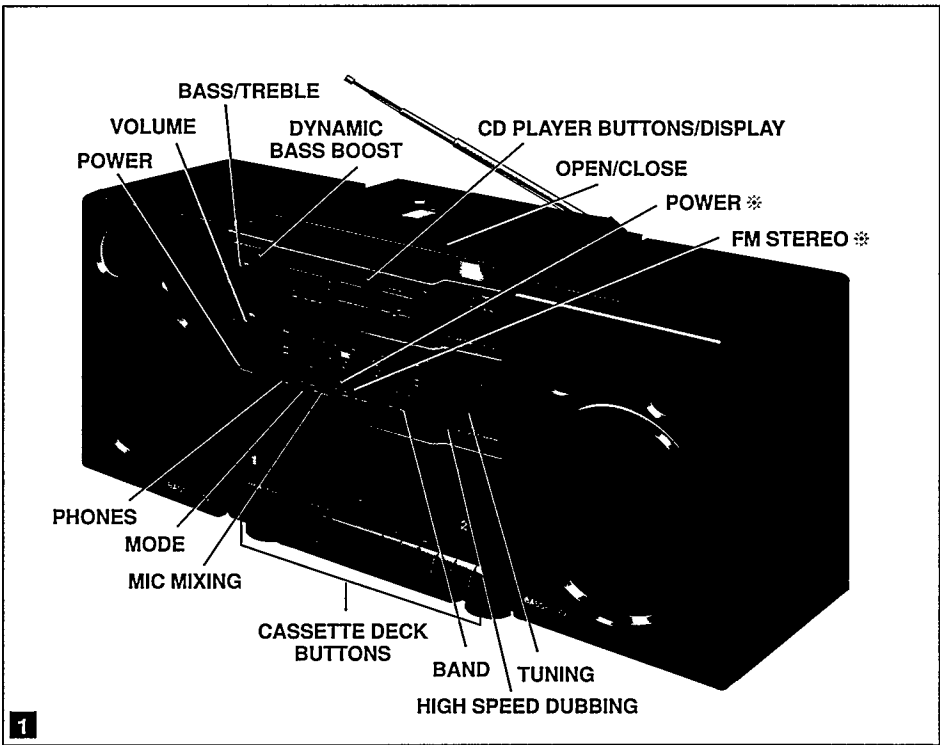


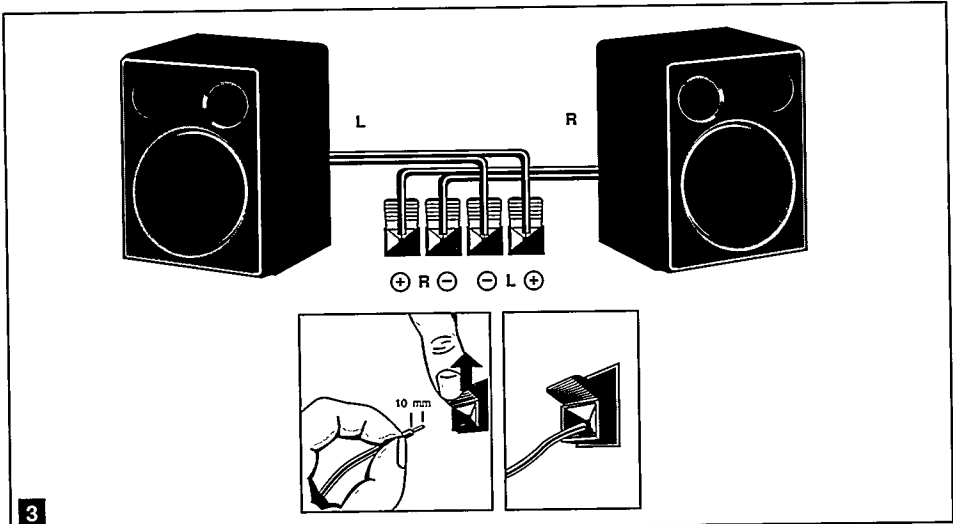


3

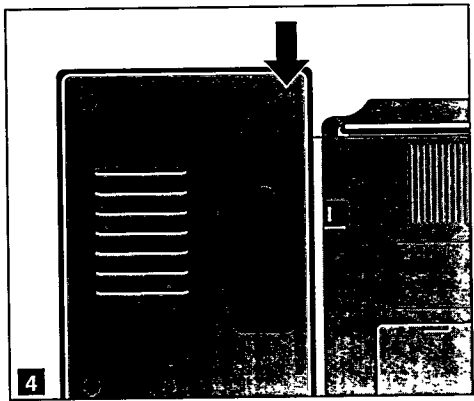


4

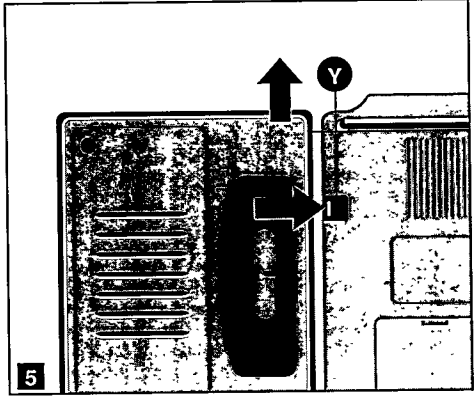


5

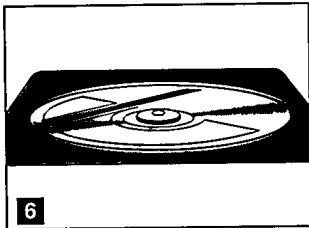


6

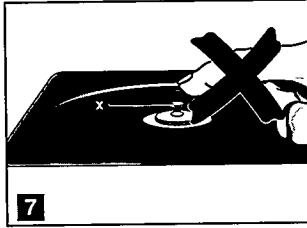


7

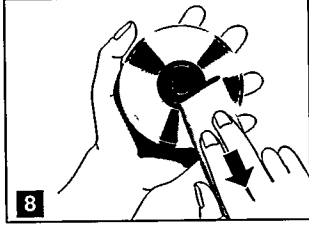


8

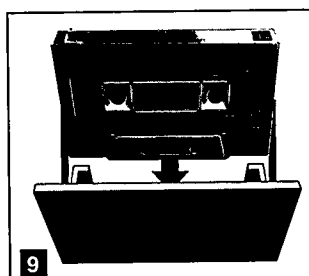

9

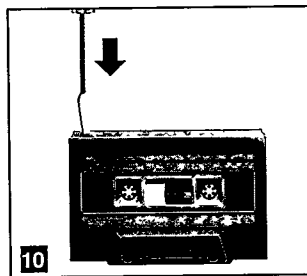

10

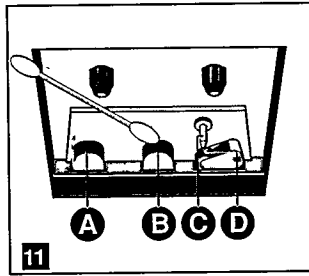

11

Please follow these three important steps
to get the most from your product

1
2
3

**Return your owner's
registration card within 10 days**



Registering your purchase is an essential step to guarantee that you'll receive all of the benefits you're entitled to as a Magnavox product owner.

Complete and mail your Owner's Registration Card today to ensure your right to warranty verification, owner confirmation, model registration, plus a wide variety of special services and savings.

Know these safety symbols



This bolt of lightning indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

This exclamation point calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**Read operating instructions
carefully**



The information in this manual can help you take full advantage of your product's many features, and ensure years of safe, reliable operation. So don't miss out. Read the enclosed instructions, safety tips and warranty information today.

MAGNAVOX

**Congratulations on your new purchase ...
and welcome to the Magnavox family!**

Dear Magnavox family member:

Thank you for your confidence in Magnavox. You've selected one of the best-built, best-backed products available today.

We appreciate your support, and we'll do everything we can do to keep you happy with your purchase for many years to come. After all, you're the reason we're in business!

As a Magnavox family member, you're entitled to a world of special privileges - and our uncompromising commitment to your total satisfaction. Your Magnavox product is protected by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase qualifies you to receive advance information on exciting new products from Magnavox, convenient access to our home shopping network for special products and accessories, plus factory-direct rebates and discounts on your future Magnavox purchases.

All of this is our way of saying "thanks" for joining the Magnavox family.

To start taking advantage of these great benefits, just remember to return your Magnavox Owner's Registration Card.

Simply complete, detach and mail us your Owner's Registration Card today. And enjoy your new purchase with our best wishes!

Sincerely,

Donald F. Johnstone
President and Chief Executive Officer

For Customer Use:

Enter below the Serial No. which is located on the type plate on the base of the cabinet. Retain this information for future reference.

Model No. **AZ 9430/AZ 9435**

Serial No. _____

SAFETY



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION
TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING
TO QUALIFIED SERVICE PERSONNEL.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.


The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.

Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

SAFETY INSTRUCTIONS – Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

11. **Grounding or Polarization** -

The precautions that should be taken so that the grounding or polarization means of an appliance is not defeated.

Caution: To prevent electric shock, match the wide blade of this plug to the wide slot, fully insert. Do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.



12. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Lines** - An outdoor antenna should be located away from power lines.
15. **Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
18. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

92/8

EL 4562-1

English

Français

Español

CONTROLS – fig. 1 and 2

POWER on/off button

VOLUME control

BASS/TREBLE tone control

DYNAMIC BASS BOOST – bass button

CD PLAYER BUTTONS and DISPLAY:

▷ – **PLAY** and **PAUSE** button

□ – **STOP** button (press again to erase the memory)

◀ PREVIOUS/NEXT ▶: in position playback or **STOP**, press briefly to jump to a previous◀ or next▶ track

◀◀ **SEARCH** ▶▶: during playback, keep pressed to search fast backward ◀◀ or forward ▶▶

INTROSCAN – to play only the beginning of each track

MODE – press repeatedly until the required function appears in the display

– **SHUFFLE** play all tracks in a random order

– **SHUFFLE REPEAT** continuously repeat the CD in the **SHUFFLE** mode

– **REPEAT ALL (MEMORY)** continuously repeat the CD (or the stored selection – **MEMORY**)

– **REPEAT 1** continuously repeat 1 title (the displayed track)

MEMORY – to store the displayed track number in the memory (press for longer than 1 second to display all stored track numbers)

CD display, shows:

no of 151 – no CD inserted

TRACK – the total number of tracks, and during play the number of the track being played

TIME – the total playing time of the CD, and during play the elapsed time of that track

REPEAT (ALL or 1) activated

SHUFFLE activated

MEMORY – the stored selection (memory) is played

SCAN (INTROSCAN) activated

PAUSE activated

OPEN/CLOSE – to open and close the CD cover

POWER * – power on/off indicator

FM STEREO * – FM stereo indicator

PHONES – stereo headphone socket

MODE selector – to select the sound source

TAPE - RADIO - CD

MIC MIXING – microphone socket

CASSETTE DECK 1 BUTTONS

● **RECORD**

▶ **PLAY**

◀◀ **REWIND** – fast rewind

▶▶ **F.FWD** – fast forward wind

■ **STOP/EJECT**

|| **PAUSE**

CASSETTE DECK 2 BUTTONS

▶ **PLAY**

◀◀ **REWIND** – fast rewind

▶▶ **F.FWD** – fast forward wind

■ **STOP/EJECT**

|| **PAUSE**

BAND selector

TUNING knob

HIGH SPEED DUBBING button

MAINS socket for mains lead

VOLTAGE selector (*not on all versions*)

SPEAKERS – loudspeaker terminals

BATTERY COMPARTMENT

The type plate is located on the base of the set.

SUPPLY

Batteries

Whenever convenient, use AC mains supply if you want to conserve battery life.

- Open the battery compartment (fig. 2).
- Insert as indicated eight (preferably Alkaline) batteries, type R20, UM1 or D-cells (fig. 2).

Note: *Instead of normal batteries, you can also insert 'Gates' rechargeable power sticks 4 x size 2D. They require no separate recharger but are recharged automatically in this set whenever connected to a wall outlet. Use only 'Gates' power sticks. Normal rechargeable D-cells are not recharged in this set.*

- The battery supply is switched off when the set is connected to the mains. When changing over to battery supply, pull out the plug from the MAINS socket (fig. 2).
- Remove the batteries if exhausted or if they will not be used again for a long period.

AC mains supply

- Check if the mains voltage as shown on the type plate (on the base of the set), corresponds to your local mains supply. If it does not, consult your dealer or service organisation.

If the set is equipped with a VOLTAGE selector (fig. 2), set this selector to the local mains voltage.

- Connect the mains lead to the MAINS socket (fig. 2) and the wall socket. The mains supply is now switched on.
- To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

CONNECTIONS

Stereo headphone socket PHONES

For stereo headphones with 3.5 mm plug. Inserting the plug will disconnect the loudspeakers.

Microphone socket MIC MIXING

For a microphone with 3.5 mm plug. To avoid disturbing noises, reduce the volume before connection.

- you can reproduce your voice amplified through the loudspeakers. Set MODE selector to TAPE.
- you can mix your voice with CD, radio or cassette. Set the MODE selector to CD, RADIO or TAPE. In the CD or RADIO mode you can record it all on the cassette deck.

Adjust the sound with the controls VOLUME, BASS/TREBLE and DYNAMIC BASS BOOST. If a howling sound occurs, keep the microphone away from the loudspeakers or reduce the volume. Disconnect the microphone when not in use.

Loudspeaker terminals SPEAKERS

See fig. 3 for connecting the supplied loudspeakers (or others having an impedance of 4 Ohms). Connect the coloured (or marked) wire to the red terminal.

To attach the loudspeakers, see fig. 4.

Move knob (Ⓢ) to take off the loudspeakers, see fig. 5.

Note

The supplied loudspeakers are different for AZ9435.

RADIO

RADIO RECEPTION

- Switch on the set using the POWER button. POWER ✱ lights up.
- Set the MODE selector to RADIO.
- Adjust the sound with the controls VOLUME, BASS/TREBLE and DYNAMIC BASS BOOST.
- Select the wave band using the BAND selector. (*LW not on all versions*).
- For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM/MW and LW (Medium and Long Wave), the set is provided with a built-in aerial, so there is no need to use the telescopic aerial. The aerial can be directed by turning the whole set.
- Tune to a radio station using the TUNING knob.
- When FM STEREO ✱ lights up, you are receiving a FM-stereo transmitter. A disturbing noise, due to a weak FM-stereo signal, can be suppressed by setting the BAND selector to FM (mono). FM STEREO ✱ will then go out and you will hear (*and record*) the FM programme in mono.
- Always switch off the set after use with the POWER button. POWER ✱ will then go out.

COMPACT DISC

PLAYING A DISC

- Switch on the set using the POWER button. POWER ✱ lights up.
- Set the MODE selector to CD.
- Press OPEN/CLOSE to open the CD cover.
- Insert the CD, printed side facing up (fig. 6).
- Close the cover. The CD-player starts and scans the contents list of the CD. After that, the total playing time and the number of tracks appear on the display and the CD player stops.
- Playback will start by pressing PLAY ▷. As soon as playback starts, the display shows the track number and the elapsed playing time of that title.
- Adjust the sound with the controls VOLUME, BASS/TREBLE and DYNAMIC BASS BOOST.
- For brief interruptions, press PAUSE. The word PAUSE then appears. To continue playback, press PAUSE again.
- To stop playback, press STOP ◻. The CD player also goes to position STOP:
 - by pressing OPEN/CLOSE;
 - when the end of the CD is reached;
 - if you move the MODE selector;
 - if the batteries run down or if the power supply is interrupted in another way.
- To take out the CD, open the CD cover by pressing OPEN/CLOSE. Open the CD cover only if the CD-player is in position STOP.
- Always switch off the set after use with the POWER button. POWER ✱ will then go out.

Remarks

- If the battery voltage is not sufficient any more for playing a CD, the CD-player will not start.
- If *no d 15 L* appears after inserting a CD, the player cannot read the CD. Possible causes are:
 - you inserted the CD the wrong way: the label should face up (fig. 6);

COMPACT DISC

- the CD is badly scratched or dirty, see 'Maintenance';
- the lens (⊗) (fig. 7) is steamed up because of a sudden transition from a cold into a warm environment; do not clean the lens, but let the set acclimatize for a while.

INTROSCAN

The INTROSCAN function can be switched on from the STOP and PLAY mode.

- Press INTROSCAN. The word SCAN then appears. Only the first few seconds of each track are played.
- The moment you press PLAY ▷, the INTROSCAN function is defeated (the word SCAN disappears) and the CD is played in the normal way from this title.
- If you press ◀ or ▶, the INTROSCAN function remains operative and the beginning of the next ▶ or previous ◀ track is played.
- If INTROSCAN is not defeated by pressing PLAY ▷ or STOP □, the CD player returns to STOP as soon as the end of the CD is reached.

MODE (SHUFFLE and REPEAT)

By pressing the MODE button several times, all play modes will successively appear on the display:

- 1x SHUFFLE to play the CD in a random order;
- 2x SHUFFLE REPEAT to repeat the CD continuously in a random order;
- 3x REPEAT ALL to repeat the CD continuously;
- 4x REPEAT 1 to repeat the current title continuously;
- 5x NORMAL (no display indication) to cancel the SHUFFLE and REPEAT modes.

In the MEMORY REPEAT ALL mode (if the word MEMORY is also visible on the display) only the titles stored in the memory will be played.

The mode MEMORY SHUFFLE is not possible. The word MEMORY will disappear when the next title is reached.

To cancel the REPEAT and SHUFFLE modes, choose NORMAL mode (no display indication).

◀ PREVIOUS/NEXT ▶ – ◀◀ SEARCH ▶▶

1. ◀ PREVIOUS/NEXT ▶

Press briefly (less than 1 second)

a. During PLAY and INTROSCAN:

▶ – go to the next track (title)

You can jump to the next title by pressing ▶ once.

If you want to skip more than one track, then press ▶ more than once until the display shows the desired track number.

◀ – go to the previous track (title)

If you want to repeat the running title from the beginning, press ◀ once.

If you want to repeat one of the previous titles, press ◀ more than once until the display shows the required track number.

b. In position STOP:

In position STOP with a CD inserted you can select the desired title using ◀ and ▶ until the display shows the required track number.

2. ◀◀ SEARCH ▶▶

During playback, keep ▶▶ for search forward or ◀◀ for search backward pressed. The CD is played partly and at high speed, however, the sound is still recognizable.

Release the button as soon as you recognize the required passage: the CD will be played in the normal way from this passage.

If the button is pressed longer than 10 seconds, the search speed increases.

PROGRAMMING TRACK NUMBERS

You may select a number of tracks and store these in the memory in the desired sequence. When playing, you will only hear the stored titles in the selected sequence. At most, 20 tracks can be stored in the memory. You may store each track more than once.

Manual selecting

- Select the desired track using the buttons **K1** and **D1** until the display shows the required track number.
- Store this track by pressing **MEMORY**.
- Select and store in this way all desired titles.

Storing during INTROSCAN

- Press **INTROSCAN** to play the first few seconds of each track.
- Press **MEMORY** as soon as you recognize a desired title.

Storing during PLAY

- During normal **PLAY** you may store the running title by pressing **MEMORY**.
- After pressing **MEMORY** the character **P** (**PROGRAM**) appears, indicating that the track has been stored.
- Store all desired titles in the required sequence. You may store each track more than once.
- At most, 20 tracks can be stored in the memory. When the memory is full, the character **F** (**FULL**) appears.
- When pressing **MEMORY** for longer than 1 second, the display will show in sequence all stored track numbers.
- You can simply erase the whole memory by pressing **STOP** **□** for a second time: the character **C** for **CLEAR** appears now. The contents of the memory are also erased:
 - by opening the CD cover using **OPEN/CLOSE**;
 - if you move the **MODE** selector;
 - if the batteries get exhausted or if the power supply is interrupted in another way.

How to play the stored selection

To play your selection, the CD-player should be in position **STOP**; then press **PLAY** **▷**: now, the word **MEMORY** appears.

CASSETTE

RECORDING

Preparation

- Switch on the set using the **POWER** button. **POWER** ***** lights up.
- Press **EJECT** **■** to open the cassette holder.
- Insert the cassette (fig. 9).

For recording you must use a cassette on which the tabs (fig. 10) are not broken out.

At the very beginning of the tape, no recording will take place during the first 7 seconds when the leader tape passes the recorder heads.

- When monitoring during recording, adjust the sound with the controls **VOLUME**, **BASS/TREBLE** and **DYNAMIC BASS BOOST**. These controls do not affect the recording.

Recording from the CD-player

- Set the **MODE** selector to **CD**. It's not necessary to start the CD-player separately: if you press **RECORD** **●**, the CD-player starts automatically:
 - if the CD-player is in position **STOP**, recording will start from the beginning of the CD (or from the beginning of the programmed selection);
 - if the CD-player is in position **PAUSE**, recording will start from this very position;
 - in position **INTROSCAN** the CD-player will first return to the beginning of that track and then recording will start.

Recording from the radio

- Set the **MODE** selector to **RADIO**.
- Tune to the desired radio station.
- In case of FM radio recordings, set the **BAND** selector to **FM (mono)** or **FM STEREO**.

CASSETTE

Microphone recording

- Connect the microphone to socket MIC MIXING.
- Microphone only: set the MODE selector to TAPE.
- Mixing with CD: set MODE selector to CD.
- Mixing with radio: set MODE selector to RADIO.
- If a howling sound occurs:
 - keep the microphone away from the loudspeakers,
 - or reduce the volume,
 - or use headphones for monitoring.

Starting and stopping the recording

- Start recording by pressing RECORD ●; in doing so, PLAY ► is pressed too.
- For brief interruptions, press PAUSE II. To restart recording, press this button once more.
- To stop recording, press STOP ■. On pressing again, the cassette holder will open.
- Always switch off the set after use with the POWER button. POWER ✳ will then go out.

FAST WINDING

Press ◀◀ or ▶▶. To stop fast winding, press STOP ■.

SAFEGUARDING AGAINST ERASURE

Keep the cassette side to be safeguarded in front of you (fig. 10) and break out the left tab. Now, recording on this side is no longer possible. You can render this safeguard ineffective by covering the aperture with a piece of adhesive tape.

DUBBING - Copying from deck 2 to 1

When copying, it is recommended to use fresh batteries or to connect the set to the mains supply.

- Switch on the set using the POWER button. POWER ✳ lights up.
- Set the MODE selector to TAPE. Do not move this selector *during* dubbing.
- Set the HIGH SPEED DUBBING button to:
 - for normal speed copying:
 - for high speed copying.

Do not switch this button *during* dubbing.

- Press both STOP/EJECT ■ buttons and insert a recorded cassette into deck 2 and a cassette which is suited for recording into deck 1 (fig. 9).
- Press on deck 1 PAUSE II and then RECORD ●.
- To start dubbing, press PLAY ► on deck 2. Deck 1 PAUSE II is then released.
- By pressing PAUSE II on deck 1, you can omit undesired passages while deck 2 continues. To restart copying, press PAUSE II once more.
- Using PAUSE II of deck 2, deck 1 will record a blank part.
- To stop dubbing, press both STOP/EJECT ■ buttons.
- Always switch off the set after use with the POWER button.

CASSETTE PLAYBACK

- Switch on the set using the POWER button. POWER ✳ lights up.
- Set the MODE selector to TAPE.
- Adjust the sound with the controls VOLUME, BASS/TREBLE and DYNAMIC BASS BOOST.
- Press EJECT ■ and insert a recorded cassette (fig. 9).
- Fast winding and rewinding: Press ◀◀ or ▶▶. To stop, press STOP ■.
- Press PLAY ► and playback will start.
- To stop playback, press STOP ■. When the end of the tape is reached, the recorder buttons are released.

- Always switch off the set after use with the POWER button. POWER ✱ will then go out.

Continuous playback

- Switch on the set using the POWER button. POWER ✱ lights up.
- Set the MODE selector to TAPE.
- Press both STOP/EJECT ■ buttons and insert a recorded cassette into both decks (fig. 9).
- Press on deck 2 PLAY ▶ and deck 2 will start.
- Press on deck 1 PAUSE II and then PLAY ▶ : deck 2 will now play and deck 1 stands still.
As soon as deck 2 stops (at the end of the cassette or when its STOP/EJECT ■ button is pressed), Deck 1 PAUSE II is released and deck 1 will start playing back.
- To stop, press STOP/EJECT ■.
- Always switch off the set after use with the POWER button.

Remarks

- The playback in deck 1 is muted when the PAUSE II and PLAY ▶ buttons of Deck 2 are engaged.

MAINTENANCE

- The CD-player and the cassette deck are fitted with self-lubricating bearings which must not be oiled or greased.
- Fingerprints, dust and dirt on the apparatus can be removed using a soft, clean and slightly damp leather cloth. Do not use any cleaning agents, since they may affect and harm the cabinet.
- Keep the set, batteries, CDs and cassettes away from rain, moisture, sand and excessive heat, e.g. near heating equipment or in cars parked in the sun.

CD-player

- The lens ⊗ (fig. 7) should never be touched or cleaned.
- The lens may steam up when the set is taken from a cold into a warm environment. Playing a CD is not possible then. Do not clean the lens, but let the set acclimatize for a while.
- Always pick up the CD by the edge and put it back in its box immediately after use.
- To clean, breath on the CD and wipe it off in a straight line from centre to edge (fig. 8) using a soft, lint-free cloth. Cleaning agents may harm the CD.

Cassette deck

To ensure a good recording and playback quality, clean the parts Ⓐ Ⓑ Ⓒ Ⓓ indicated in fig. 11 after every 50 hours of operation or, on average, once a month.

- Open the cassette holder by pressing EJECT ■.
- Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid.
- Press PLAY ▶ and clean the rubber pressure roller Ⓓ (fig. 11).
- Then press PAUSE II and clean the magnetic heads Ⓐ Ⓑ and the capstan Ⓒ.
- After cleaning, press STOP ■.

Cleaning of the magnetic heads Ⓐ Ⓑ can also be done by playing a cleaning cassette through once as an ordinary cassette.

LIMITED WARRANTY

Magnavox Portable Compact Disc - One Year Carry-In Exchange -

One Year Coverage

For one year from the date of purchase, your Portable Compact Disc will be replaced with a new, renewed or comparable product (whichever is deemed necessary) if it becomes defective or inoperative. This is done without charge to you. Replacement products are warranted for the balance of the warranty period.

Who is Protected? ... Where?

This warranty is extended to the original retail purchaser for products purchased and used in the U.S.A., Puerto Rico, the Virgin Islands and Canada.

What the Purchaser Must Do

Before you call for service, check your operating instruction booklet. A slight adjustment of the customer controls discussed in your instruction booklet may save you a service call. This warranty does not cover commercial use, rental agreements, shipping damage, misuse or failure due to lack of normal care.

For product purchased in the U.S.A., Puerto Rico or the Virgin Islands

If you require service during the warranty period, you must take your portable product to the dealer from whom it was purchased, or carefully pack the product and ship it by prepaid transportation with proof of the purchase date to the Small Product Service Center*, address listed below.

In the U.S.A., Puerto Rico or the Virgin Islands, all implied warranties including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For product purchased in Canada

Replacement product can be arranged through your dealer who will advise of the nearest repair centre. To obtain warranty service, the product must be delivered (carried-in) to a Philips Consumer Service Centre (listed below), Philips Self-Servicing Dealer or Authorized Service Depot.

All that's required to validate your original factory warranty for products you purchase is to present your bill of sale as proof of purchase.

In Canada, this warranty applies only to the normal service area of a Philips Consumer Service Centre, Philips Self-Servicing Dealer or Authorized Service Depot. Beyond this area, travel time or expense is the owner's responsibility.

How To Get Service On Your Portable Product After The One Year Warranty Expires

Out-of-warranty service can be obtained at a nominal cost for replacement and handling under the following arrangements:

For product purchased in the U.S.A., Puerto Rico or the Virgin Islands

1. Contact the Philips Service Company office (☎ 615/475-8869) to obtain the cost of out-of-warranty repair for your product. Please know your model number before you call.
2. Pack your product securely in a suitable container for shipment
3. Mail the product to:
*Small Product Service Center
Philips Service Company
907 Snapps Ferry Road, Plant 2, Building 6
Greenville, Tennessee TN 37743
☎ (615) 636 - 5740

For product purchased in Canada

1. Call the nearest Canadian Philips Consumer Service Centre (listed below) to obtain the cost of out-of-warranty repair for your product. Please know your model number before you call.
2. Pack your product securely in a suitable container for shipment.
3. Mail the product to the nearest Canadian Philips Service Centre (listed below).

Canadian Philips Consumer Service Centres

Toronto
601 Milner Avenue
Scarborough, Ontario
M1B 1M8
☎ (416) 754-6064 or 292-5161
Fax ☎ (416) 754-6290

Montréal
5930 Côte de Liesse
Montréal, Québec
H4T 1E1
☎ (514) 342-9180
Fax ☎ (514) 342-9372


Vancouver
3695 Grandview Highway
Vancouver, B.C.
V5M 2G7
☎ (604) 435-4411
Fax ☎ (604) 435-9911

When your product is received, it will be replaced by a renewed (or comparable) product which meets Philips' high quality standards and shipped back to you by prepaid transportation.

EL 4546-2

92/11

AZ9430
AZ9435

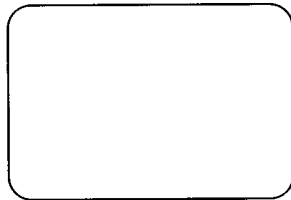

Philips Consumer Electronics Company
A Division of North American Philips Corporation

3139 116 14432

Printed In Malaysia

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>