 
 


### 3) VIDEO

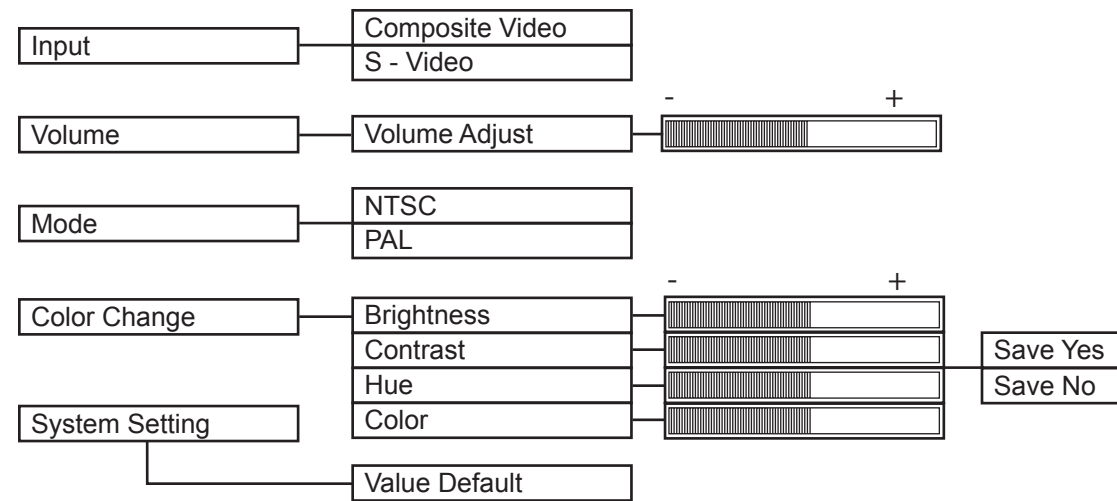

### 4) OSD ( On Screen Display) control



Press Menu → Select (System Setting) → Select OSD U/D) or OSD L/R) → use the UP, DOWN keys

### 5) System Control Menu Tree

	PC	TV	COMPOSITE	S-VHS
HORIZONTAL PAN	0			
VERTICAL PAN	0			
VALUE DEFAULT	0	0	0	0
CHANNEL ADD / REMOVE		0		
TV=AIR CH		0		
MODE			0	0
INPUT CONDITION	0			
VOLUME ADJUSTMENT		0	0	0
BRIGHTNESS	0	0	0	0
CONTRAST	0	0	0	0
HUE		0	0	0
COLOR		0	0	0

### 5) Warranty

Marshall Electronics warrants to the first consumer, that this **V-RD151P** rackmount monitor will, under normal use, be free from defects in workmanship and materials, when received in its original container, for a period of one year from the purchase date.

This warranty is extended to the first consumer only and proof of purchase is necessary to honor the warranty. If there is no proof of purchase provided with a warranty claim, Marshall Electronics reserves the right, not to honor the warranty set forth above. Therefore, labor and parts may be charged to you.

This warranty does not apply to product exterior and cosmetics. Misuse, abnormal service or handling, improper alterations or modifications in design or construction, voids this warranty.

No sales personnel of the seller, nor any other person is authorized to make any warranties other than those described above, or to extend the duration of any warranties on behalf of Marshall Electronics, beyond the time period described above.

Due to constant effort to improve products and product features, specifications may change without notice.

01/31/2007

## Marshall Electronics

1910 East Maple Ave.  
El Segundo, CA 90245  
Tel.: 800-800-6608 • 310-333-0606  
Fax: 310-333-0688  
**www.LCDRacks.com**  
Email: sales@lcdracks.com



**V-RD151P**  
Users Guide

<b>Installation</b>	<b>1</b>
Before Installation	
Components	
Operation	
Tally	
Mounting	
Connections	
<b>Computer</b>	<b>2</b>
Computer Mode Selection	
Horizontal pan / Vertical Pan control	
Value Default	
Color Change	
Input Condition Control	
<b>Composite Video / S-VHS</b>	<b>3</b>
Composite Video / S-VHS Selection	
Value Default	
Video Mode	
Volume Adjust	
Color Change	
<b>Menu Tree</b>	<b>4</b>
TV	
Computer	
Video	
OSD Control	
System Control Menu Tree	
<b>Warranty</b>	<b>5</b>

## 1 Installation

### 1) Before Installation

 
- Before using your monitor, make sure to read this manual carefully.
- In case of any problems with installation, contact Marshall Electronics.
- The monitor should be handled with caution and not be exposed to impact or shock.
- The display area is highly prone to scratches. Use cleaner suggested by the authorized service center.
- Do not expose the monitor in high temperature or in high humidity.
- There are no user serviceable parts inside your monitor. To avoid risk of electric shock, do not open your monitor case!

### 2) Components

Rackmountable TFT LCD Monitor- 1 pc  
DC Power Supply Adapter -1 pc  
Power Cable 1- pc  
Computer Cable 1- pc

### 3) Operation

Multiple Input Terminal

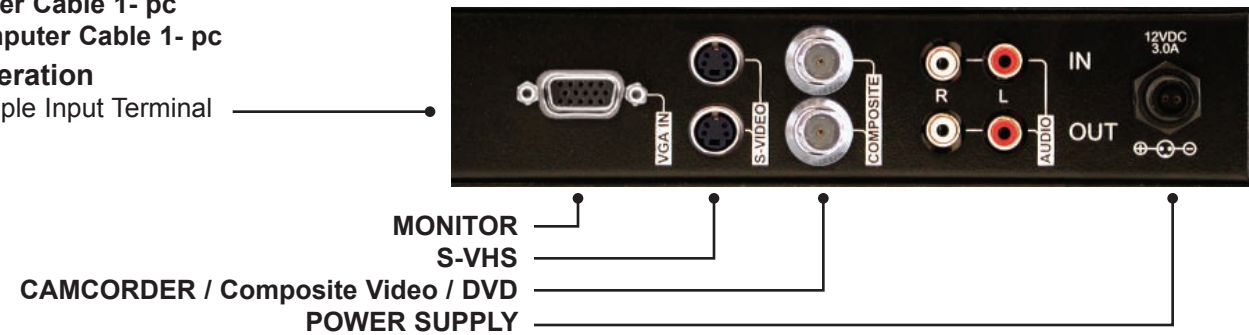

### 4) Mounting

The V-RD151P is designed to fit in a EIA standard 19" rack. It requires only 1 rack unit of vertical space and is secured with four screws.

## 2 Computer

### 1) Computer Mode Selection

Press Menu → Select (INPUT) using the UP, DOWN keys → press Select (MONITOR) and then press select.

### 2) Horizontal Pan / Vertical Pan Control

Press Menu → Select (HORIZONTAL PAN ) or (VERTICAL PAN) → control (HORIZONTAL PAN) or (VERTICAL PAN) by pressing the UP, DOWN keys.

### 3) Value Default

Press Menu → Select (SYSTEM SETTING) → press Select (VALUE DEFAULT) → press Select (System control values will be initialized as this monitor is manufactured).

### 4) Color Change

Press Menu → Select (COLOR CHANGE) → Select one of 4 modes to set → you can control selected sub-menu with the UP, DOWN keys → press Select → sub-menu (4 color mode) will appear → repeat the above steps until you have settled color change → press Menu → when you press menu, you will be asked whether (SAVE YES) or (SAVE NO) → Select one of the two options.

Color Change sub-menu will be limited to Brightness/Contrast only.

(If you press menu before selecting (SAVE YES), color will become invalid.)

### 5) Input Condition Control

Press Menu → Select (SYSTEM SETTING) → Select (INPUT CONDITION) → Select one of the five modes to set. Control the selected sub-menu with Select key. After tuning is settled, use Menu key to escape from menu tree.

## 3 Composite Video / S-VHS

### 1) Composite Video / S-VHS Selection

#### By Remote Control

Press Video or S-VHS on remote control directly.

#### By Menu key

Press Menu → Select (INPUT) using the UP, DOWN keys → press Select (COMPOSITE) or (S-VHS) and then press Select

### 2) Value Default

Press Menu → Select (MODE) → press Select → Select (NTSC) or (PAL) depends on manufactured country Video Mode will not work on (TV) and (Monitor)

### 3) Volume Adjust

 
Press Menu → Select (VOLUME ADJUST) → use the UP, DOWN keys → press Select (If you press menu before pressing select, volume adjust will become invalid)

### 4) Color Change


Press Menu → Select (COLOR CHANGE) → Select one of 4 modes to set → you can control selected sub-menu with the UP, DOWN keys → press Select → sub-menu (4 color mode will appear → repeat the above steps until you have settled color change → press Menu → when you press Menu, you will be asked whether (SAVE YES) or (SAVE NO) → Select one of the two options. (If you press menu before selecting (SAVE, YES) color change will become invalid.)

## 4 Menu Tree

### 1) TV

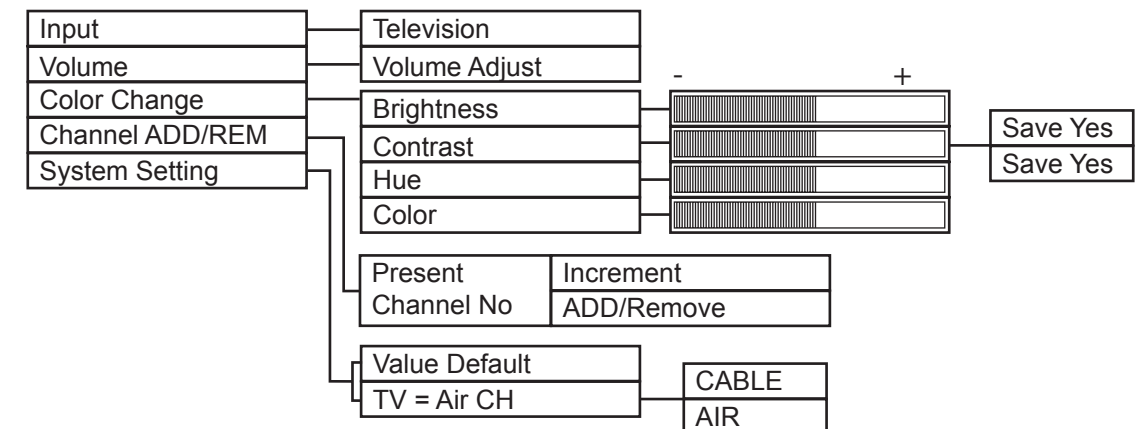

### 2) PC Monitor

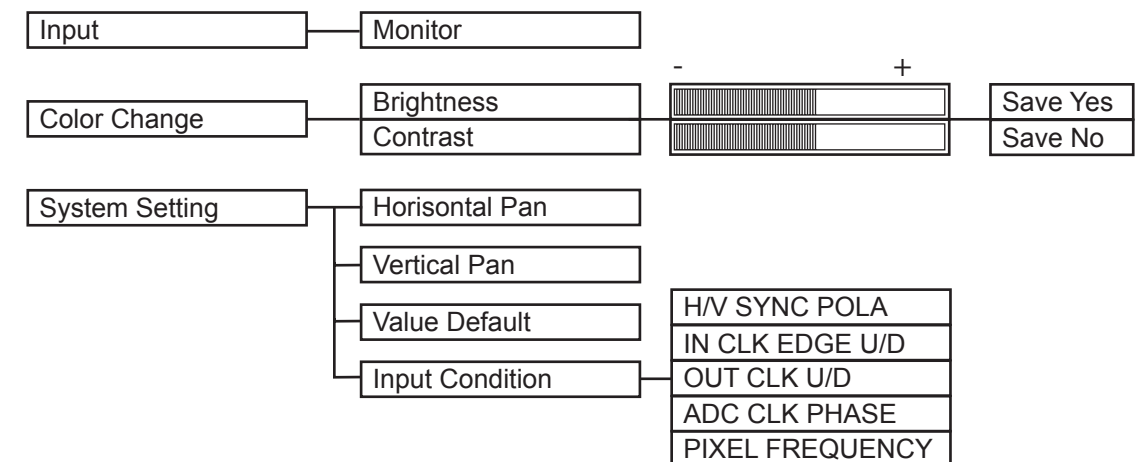 

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>