

**Use & Care Guide
Washing Machine
MAYTAG
MAF 9801**



CONTENTS

READ FIRST	Page
1 Before washing the first time	3
2 Safety instructions	4-5
General. Installation. Washer door. Over-fill protection. Interrupting a programme. Packing material. Transport/Winter storage. Disposal.	
3 Children's safety	6
Child-safe washing. Protect children. Child lock on Start/Stop and Menu buttons.	
4 Parts of the washing machine	7
5 Detergent compartment	7
6 Panel	8
7 LC Display	8

INSTALLATION

See instructions for installation.

WASHING

8 Before washing	9-11
Sorting the washing. Garments. Recommended washing marking. Coloured cotton. Delicate washing. High water level, Save time, Minimizing allergy hazards. Economy and efficiency. Detergents. Textile dyeing. Washing time.	
9 Washing	12-17
Washing, Washing step-by-step, Delayed start, Temporary spin drying or rinsing	

	Page
10 Consumption values - Pre-set washing programmes	18
11 Making own washing programmes	19-24
General, Available settings and options, Create your own washing programmes, Interrupt input, Reset programme, Available types of programme, Menu system for altering pre-set programmes	

CARE

12 Care and Cleaning	26-27
Cleaning the coin trap and drain pump, Cleaning the detergent compartment, Cleaning the outside of the machine, Cleaning the inside of the machine to prevent problems with odour, Clean-out recess under the ridges. If you have hard water.	

PROBLEMS?

13 Trouble shooting	28-30
Door will not open. Machine will not start. No water entering the machine when it starts. Water in the machine after the final spin or pump out. Fault indications. Wrong language on the display, Celsius or Fahrenheit, Reset programme	

MISCELLANEOUS

14 Technical information	31
Technical data. Standard tests.	
15 Service and guarantee	33
16 Quick guide	34
17 Index	35

1 BEFORE WASHING THE FIRST TIME





CAUTION WITH CERTAIN MATERIALS

Always check and adhere to recommended washing marking on the items concerned. If no recommendations are given, refer to those in chapter 8, Before washing.

TRANSPORT SUPPORTS

Are the transport supports removed? If not, see the Installation instructions.

Carry out the following:

1. Turn the main power switch, , OFF and then back ON again to put the machine in its start mode.
 2. Press the  button 5 times. All five presses must be within 15 seconds.
 3. Press the  button once. The rinse sensor is now reset. Ignore any message on the display.
- Press the  button once to return.

WASHER DOOR

The door of the washer opens electrically. Consequently, the door cannot be opened normally until the machine is connected to an electric power supply. However, emergency opening is available, see chapter 13, Trouble shooting.

For brief operating instructions; see Chapter 16, Quick guide.

CHECK HARDNESS OF THE WATER

Call your local water company to find out what degree of water hardness applies. This has significance in relation to the amount of detergent that should be dispensed.

2 SAFETY INSTRUCTIONS



GENERAL

- Study and save this Use and Care Guide for future reference.
- Electrical and water installation, if required, must be carried out by authorized persons.
- The machine may only be used for washing in accordance with these operating instructions - not for dry cleaning.
- Use only detergents intended for machine washing.
- Remove the transport supports before using the machine, see installation instructions.
- Repairs and maintenance which affect safety or performance must be carried out by an authorized specialist.

INSTALLATION

See the accompanying installation instructions.

WASHER DOOR

The door of the washer opens electrically. Consequently, the door cannot be opened normally until the machine is connected to an electric power supply.

To open the door manually, see the heading, Door will not open, in chapter 13, Trouble shooting.


The machine cannot be started with the door open.


To open the door during an ongoing programme, see below, Interrupting a programme.

OVERFILL PROTECTION

If the level of water in the machine rises above normal, the overflow protection will start to pump out water and shut off the water supply. The programme will be interrupted if the level does not fall within 60 seconds.

INTERRUPTING A PROGRAMME

You can interrupt a washing programme by holding the  button down for three seconds. The machine will then “remember” the point in the washing programme at which it was interrupted. To restart: fill with new detergent, if required, and close the door. The machine will then start from the point at which it was interrupted.

You can also interrupt a programme by pressing  for three seconds. However, if you stop the machine in this way it will forget where it was in the programme and you will have to select a programme to restart.

PACKING MATERIAL

Sort the packing material for recycling according to recommendations by the local authorities.

TRANSPORT/ WINTER STORAGE

If the machine is to be transported, or stored in unheated premises where the temperature can fall below freezing point, you should proceed as follows:

- Empty the coin trap and the drain pump; see Chapter 12, Care - Cleaning.
- Turn off the water supply to the washing machine, disconnect the supply hose to the inlet valve, and let the water drain from the valve and the hose.

DISPOSAL

When the machine is no longer useful and is to be scrapped it should be made unusable.

Get in touch with the refuse collection service or your local authorities for advice on how to scrap the machine in a proper manner.

The machine is made and marked to facilitate recycling.

3 CHILDREN'S SAFETY



CHILD-SAFE WASHING



Always close the washer door and start the programme immediately after filling the detergent.

Do not allow children to play with the washing machine.

PROTECT CHILDREN



Keep detergents and conditioner out of the reach of children.




CHILD LOCK ON AND BUTTONS

By locking the  and  buttons, you can prevent that for example a child starts the machine or changes the settings by mistake.


Child lock On/Off

Turn the main power switch, , off and then turn it on again.




Press the  button five times, then press the  button five times. These ten times must be completed within fifteen seconds.

Within three seconds after the last press on the  button, use the   buttons to choose Child lock ON (the figure 3 will appear at the bottom right in the display) or OFF (the figure 0 will appear at the bottom right in the display).


To start a programme with locked button.

Press the  button for three seconds and the machine will start.

To change programme settings with Child locked button.

Press the  button for three seconds, after that the  button works normally again. If you do not press any button within two minutes, the  button will be locked again.

NOTE

If you want to change the settings after you have started a programme, you always have to press the  button for three seconds.

4 PARTS OF THE WASHING MACHINE

1. DETERGENT COMPARTMENT

2. MAIN POWER SWITCH

3. PROGRAMME PANEL


4. DATA PLATE

5. COVER - DRAIN PUMP

6. DRAIN PUMP (BEHIND THE COVER)

7. WASHER DOOR

8. OUTER DOOR

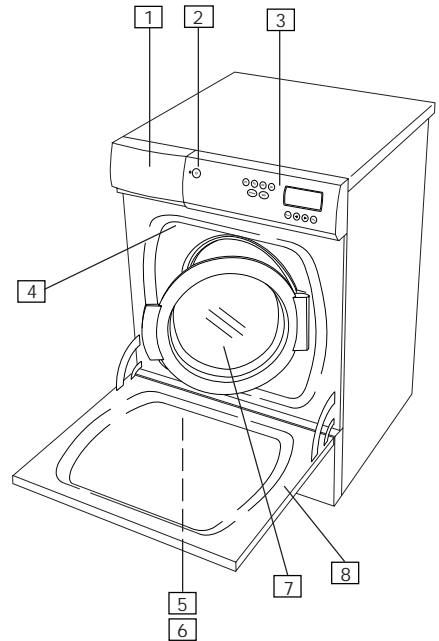


5 DETERGENT COMPARTMENT


1. DETERGENT COMPARTMENT - PRE-WASH

2. DETERGENT COMPARTMENT - MAIN WASH

3. FABRIC CONDITIONER COMPARTMENT

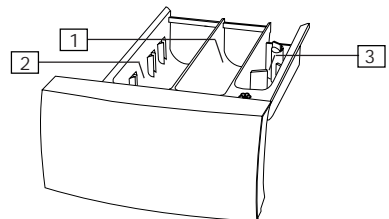


6 PANEL

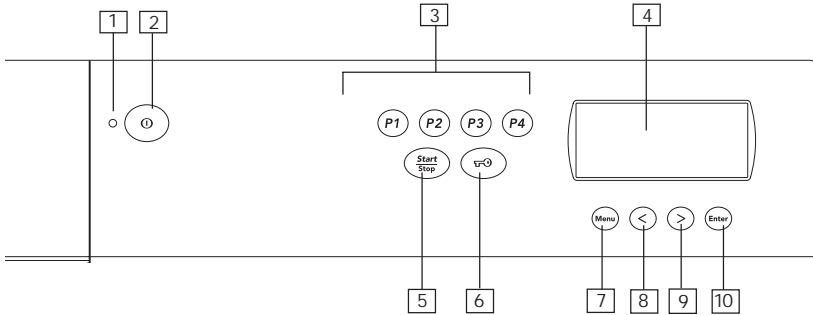

- | | |
|-------------------------------------|---|
| 1. INDICATOR LAMP ON/OFF | 7. MENU BUTTON |
| 2. MAIN POWER SWITCH | 8. BUTTON FOR CHANGING TEMPERATURE/INDEX BACK |
| 3. PROGRAMME SELECTOR BUTTONS P1-P4 | 9. BUTTON FOR CHANGING SPIN SPEED/INDEX FORWARD |
| 4. DISPLAY | 10. ENTER BUTTON |
| 5. START/STOP BUTTON | |
| 6. DOOR OPENING BUTTON | |

7 LC-DISPLAY

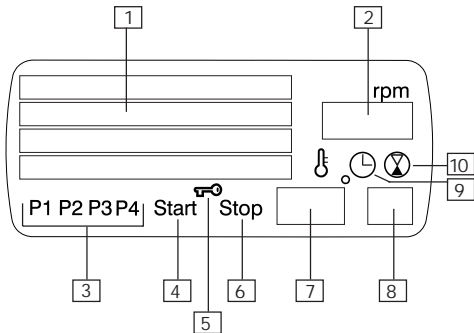

- | |
|--|
| 1. TEXT FIELD INDICATING PROGRAMME, OPTIONS AND FAULT MESSAGES, ETC. |
| 2. DISPLAYS SELECTED SPIN SPEED |
| 3. INDICATES SELECTED PROGRAMME |
| 4. INDICATES THAT A PROGRAMME HAS STARTED |
| 5. INDICATES THAT THE WASHER DOOR IS OPEN OR MUST BE OPENED |
| 6. INDICATES THAT A PROGRAMME HAS BEEN COMPLETED OR HAS STOPPED |
| 7. DISPLAYS THE SELECTED WASHING TEMPERATURE |
| 8. SEE 9 AND 10 BELOW |
| 9. INDICATES THAT DELAYED START IS ON. [8] THEN DISPLAYS HOURS REMAINING TO START |
| 10. INDICATES THAT [8] IS DISPLAYING THE PROGRAMME TIME REMAINING IN HOURS AND MINUTES (ALTERNATING) |

NOTE

The display will be extinguished if no buttons are pressed within three minutes. The display will be reinstated the next time any button is pressed.

8 BEFORE WASHING

Before you start washing, here is some advice that can be useful.


SORTING THE WASHING

Sort garments in relation to:

- How soiled they are
- Colour
- Material

GARMENTS

- Close zip-fasteners so that they do not chafe against other items.
- New coloured garments can have surplus dye and should therefore be washed separately the first time.
- Turn garments inside out. This reduces the risk of burling, dye creases, etc.
- Empty pockets and suitably let them wash turned inside out.

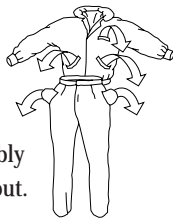

RECOMMENDED WASHING MARKING

Check the recommended washing marking on garments. The table below gives useful information on suitable washing programmes for different materials and amounts of washing.

COLOURED COTTON








Coloured cotton garments marked with a recommendation for 60°C should the first time be washed at 60°C to get rid of any surplus dye. If this advice is ignored there is a risk that colours will run. Use a detergent without bleach to safeguard the colours.

DELICATE WASHING

Unbleached linen

Unbleached linen should be washed at 60°C using a detergent without bleach or optical whitening agent. Severely soiled linen can occasionally be washed at a higher temperature, but not too often because heat can destroy the lustre and strength of linen.

Symbols in washing instructions

WASHING LABEL	MATERIAL	PROGRAMME	LOAD
	Cotton, linen, white and light coloured garments.	Normal 60° to 95°	1/1
	Cotton, linen. Darker coloured garments.	Normal 60°	1/1
	Polyester, cotton/polyester, nylon. White garments.	Synthetics 60°	1/2
	Rayon, acetates, acrylics. Garments with more sensitive colours.	Synthetics 40°	1/2
	Polyester, cotton/polyester, nylon. Coloured garments.	Synthetics 40°	1/2
	Silk and very delicate garments.	Synthetics 30°	1/3
	Garments marked IWS or Superwash	Wool/Hand 40°	1/3





Wool and silk

Wool and silk are sometimes marked machine wash, and sometimes hand wash. The Wool and Hand programmes of the machine are at least as gentle as washing by hand.

Wool is particularly sensitive to mechanical processing. If you wish to avoid spin drying, you can press out the water instead using terry towelling. In this case, you should select No Spin. See Chapter 9, Washing, for details of how to select this setting.

Most garments will tolerate a short spin, however. The Wool and Hand programmes always include a short spin.

Man-made fibres and synthetic fibres

These materials require a lot of space if they are not to crease. Fill the drum only to half load when washing man-made/synthetic fibres. Select a short spin by selecting a spin speed of 800 revolutions/minute or lower.

NOTE

Viscose and acetate are brittle when wet.

HIGH WATER LEVEL

If you require more water for the main wash and rinsing, you can use the High water level option. See Chapter 11, Making your own programmes, for details of how to select this option.

High water level is always used in the Wool and Hand programmes.

AVOID CREASES WASHING

You should use the Anti-crease option to avoid

creased washing. This option means that the washing will continue to be rotated for two hours after the programme has ended. See Chapter 11, Making your own programmes, for details of how to select this option.

MINIMIZING ALLERGY HAZARDS

This washing machine offers a Super rinse function. You should use this to take account of persons with a sensitive skin, for example persons with allergies and infants. See Chapter 11, Making your own programmes, for details of how to select this option.

SAVE TIME

Use the White/Coloured programme to save time. This programme has a shorter main wash than Normal, but it is often sufficient for normally soiled washing.

ECONOMY AND EFFICIENCY

You can save a lot of energy by not using a stronger programme than necessary.

- Without increasing the temperature, the washing effect can be increased by selecting the E2 option. You will then save energy without losing any washing effect.

See Chapter 11, Making your own washing programmes, for details of how to select E2.

- Select a fast spin speed to reduce the energy consumption for subsequent drying in a tumble dryer or a drying cabinet.

- Select Quick if you simply need to freshen up shirts or training kit, etc. You will save both water and energy.

DETERGENTS

Overdosing detergent will not give better results, it only increases the burden on the environment.

Try using less detergent, and increase the dose only if you are displeased with the washing results.

TEXTILE DYEING

If you want to dye fabrics in the machine, select Normal with the Super rinse option. Choose a temperature according to recommendations from the dye maker.

If the fabrics to be dyed are mixtures such as cotton/polyester, you should select a spin speed of 800 revolutions/minute.

See chapter 11, Making own washing programmes (Super rinse) and chapter 9, Washing - Temporary alterations (Spin speed), to see how these selections are made.

NOTE

Bleaches or stain removers that contain the chemical $\text{Na}_2\text{S}_2\text{O}_4$, known as sodium dithionite or sodium hyposulphite, must not be used in this washing machine. If these substances are used they could cause corrosion and discoloration.

NOTE

Put the dye directly in the drum - not in the detergent compartment. After dyeing, the empty machine should be run using the same programme. Use a normal amount of detergent.


WASHING TIME

The Ⓢ -symbol indicates that the remaining washing time is shown at the bottom right in the display within ten minutes after the washing programme starts.

When a programme is chosen the washing time is calculated. The calculated washing time can vary from time to time due to the temperature of incoming water.

The remaining time is recalculated during the programme and may then be increased or reduced to some extent.

9 WASHING

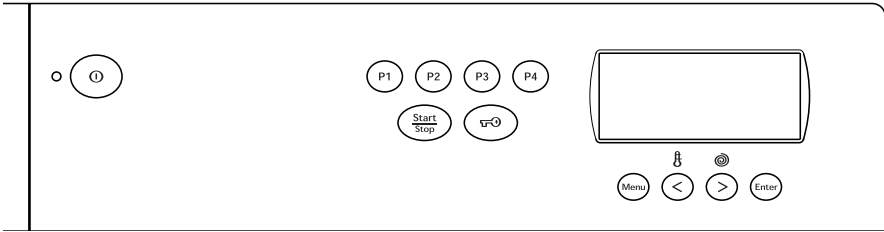

WASHING WITH EASY CONTROL

Easy washing by pushing a few buttons

Your washing machine works like a radio with pre-set tuning. Instead of radio stations, however, you select your preferred washing programme in this case. We have preset the **P1**-**P4** buttons with four common programmes.

Switch on the machine and press the button for your preferred programme. You can change the temperature and the spin speed by pressing one or more extra buttons. You then simply press the Start button.

To alter the settings for **P1**-**P4**

You can create your own favourite programmes, if you wish. There is a range of different programme types. You can also enter various options, such as Delayed start, Pre-soaking and Super rinse so that the programmes suit your particular needs.

Chapter 11 - Making your own washing programmes, tells you what to do to create a temporary or permanent programme. It also includes a list of all the available programmes and options.

The following step-by-step instructions are provided to help you to achieve the best possible washing result.

1 SORT THE WASHING

For tips and advice, see Chapter 8 – Before washing.


NOTE

Empty the pockets. Coins, nails and similar items can cause damage to the machine.

2 TURN ON THE MAIN POWER SWITCH



3 OPEN THE DOOR AND PUT IN THE WASHING.

Press the  button, and a key will appear on the bottom edge of the display. The door will open after three seconds. Put in the washing.


The table above the washing programme indicates how much washing you can put in for each programme.

4 PUTTING IN THE WASHING AND DETERGENT

Follow the recommendations on the detergent packet for how much detergent should be used. The capacity of the machine is for 6,0 kg washing. If you put a smaller amount in the machine, you can reduce the amount of detergent accordingly.

Powder detergent

Pour in the powder for main wash (**2**) and any pre-wash (**1**), see figure.

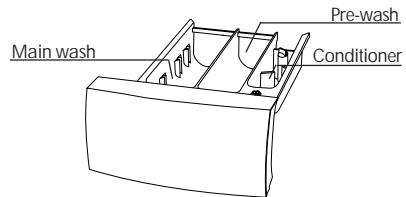


Liquid detergent

When using liquid detergent, follow the detergent manufacturer's recommendations.

Detergent ball or dosing bag

If you are using a detergent ball or dosing bag, load it directly with the washing and select a programme without pre-wash.

Fabric conditioner

Pour conditioner in the compartment marked . Follow the maker's instructions.

NOTE

Do not exceed the maximum dose level of the container, the conditioner will otherwise flow in too soon and deteriorate the washing effect.





5 SELECT A PRE-SET PROGRAMME

The machine has four pre-set programmes. Press the button for the desired programme. The programmes are shown in the table below.

You can then easily adjust the Temperature and the Spin speed; see the next step.

You can also make permanent alterations (to programmes, settings and options, etc.) in the pre-set programmes so that they meet your particular needs; see Chapter 11, Making your own washing programmes.

If you only wish to spin or rinse without changing the settings permanently, see below in this Chapter.

6 TEMPORARY ALTERATION OF TEMPERATURE AND SPIN SPEED

Temperature

Alter the temperature by indexing forward with the button.

The selected temperature is indicated on the bottom edge of the display together with the symbol as you index forward.

You can select temperatures between 30°C and 95°C or C. By selecting C, the wash temperature will be the same as that of the incoming water.

It is not possible to select a temperature higher than 40°C for the Hand programme.

If you wish to save the change permanently (max. 60°C), you can press the button after making the change.

Spin speed/No spin

Change the spin speed by indexing forward with the button.

The selected speed is indicated in the top right corner of the display together with the rpm symbol as you index forward.

You can choose between different speeds (400 - 1800 revolutions/minute), No Spin or No Spin or No Drain.

Programme information					Programme content								
	Programme type	Max quantity	Temperature °C (A)	Spin speed r/min (A)	Pre-wash	Main wash	Spin	Rinse	Spin	Rinse	Spin	Rinse	Spin
P1	Normal	●	60°C	1800		■	⊙	🧺	⊙	🧺	⊙	🧺	⊙
P2	White/Coloured	●	40°C	1200		■	⊙	🧺	⊙	🧺	⊙	🧺	⊙
P3	Quick	◐	40°C	800		■		🧺		🧺			⊙
P4	Hand (B)	◑	30°C	800		■		🧺		🧺		🧺	⊙

● 1/1 (6,0 kg)

■ Wash

⊙ Short spin (max 800 r/min)

(A) Can be changed before start; see instructions.

◐ 1/2 (3,0 kg)


🧺 Rinse

⊙ Long spin

(B) Gentle programme – high water level.

◑ 1/3 (2,0kg)


WM5566-P14-3

If you wish to save the change permanently, you can press the  button after making the change.

Spinning at 400-800 revolutions/minute always means a short spin.

It is not possible to select a spin speed higher than 800 revolutions/minute for the Hand programme.

No Spin means that the programme will be executed without spinning and will end with draining.

No Drain means that the programme will be executed without spinning and will end with the final rinsing water remaining in the machine. The wash will then remain floating in the final rinsing water. You can then select a spin programme or press the  button to empty the machine, if required.


7 CLOSE THE DOOR AND START THE PROGRAMME WITH THE BUTTON

The text *Start* on the bottom edge of the display indicates that the programme has started.

NOTE

If the child lock is on, the button must be held down for 3 seconds.

Remaining time

The remaining time is shown in hours and minutes (alternating) at the bottom right of the display together with the  symbol.

Once a programme has been selected, an estimated running time for the programme is displayed. This time may vary to some extent from time to time due to the temperature of the in-


coming water and the size of the load.

The remaining time is recalculated during the programme and may then be increased or reduced to some extent.

DURING THE PROGRAMME


The actual sequence is shown in the display during the programme, e.g. “Main wash” or “Rinse”.

If you wish to interrupt or change the programme

Hold down the  button for three seconds. The text *Stop* on the bottom edge of the display indicates that the programme has been interrupted.

Add more detergent, if necessary, before selecting a new programme.

Putting in or taking out washing






If you wish to put in or take out washing after you have started the machine, you must hold down the  button for three seconds, and a key will appear on the bottom edge of the display. Any water will be pumped out, and the door can then be opened. Put in more washing, add more detergent, if necessary, and close the door. The washing programme will restart automatically from the point at which it was interrupted.

Change settings after starting

It is possible for you to alter certain settings and options after you have started the washing programme.






Hold down the  button for three seconds. Within 15 seconds of releasing the button, you must index forward with the  button to the new desired setting. Make any alterations with   and then press .

In order to make an alteration, however, the part of the programme that you wish to alter must not have been activated yet.


- Temperature – can be altered before the main wash has started.
- Spin speed – can be altered before the water is pumped out after the main wash.
- Super rinse – can be changed before pumping out the water after the main wash.
- E2 – can be changed before the main wash has started.
- Anti-crease – can be changed for the final spin.

PROGRAMME COMPLETED


The text stop on the lower edge of the display indicates that the programme is completed.


Press the  button, and a key will appear on the bottom edge of the display. The door will open after three seconds.







WHEN WASHING IS FINISHED

Turn off the main power switch .
Close the washer door to prevent small children from crawling into the machine.

DELAYED START (1-24 HOURS)

 

If Delayed start is set to 5 hours, for example, this means that the machine will start the programme 5 hours after you press the  button.








If you wish to delay the start of any programme temporarily, you should proceed as follows before pressing the  button:

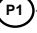1. Select the programme, but do not press the  button.
2. Index forward with the  button until Delayed start appears in the display.
3. Index forward to the desired number of hours with  .
4. Press the  button once. The selected programme appears in the display.
5. Close the door and press  to start the programme.

Delayed start is disconnected automatically at the end of the programme.

TEMPORARY SPINNING OR RINSING

If you wish to run a temporary spin or rinse programme without altering -, you can do the following:

1. Put in the washing and close the door.
2. Press the  button once.
3. Press the  button once.
4. Index forward with   until Spin or Rinse appears in the display.
5. Press the  button once. The selected programme appears in the display.
6. Adjust the spin speed by indexing forward with  if required.
7. Press  to start the programme.

If you wish to have Spin or Rinse as one of the four pre-set programmes, see Chapter 11, Making your own washing programmes.

IMPORTANT

If you store a programme by mistake, you can reset it to its settings at the time of delivery; see Reset programme in Chapter 11, Making your own washing programmes.

10 CONSUMPTION VALUES - PRE-SET PROGRAMMES

The following conditions apply for the consumption values indicated below:

Temperature of incoming water: 15°C.

Element power: 2000 W.

PROGRAMME	WASHING/ TEMPERATURE (1)	AMOUNT OF WASHING (2)	WATER CONSUMPTION (ca litre)	ENERGY CONSUMPTION (ca kWh)	PROGRAMME TIME (ca min.)
P1 Normal	Cotton, linen, 60 °C	1/1 (6,0 kg)	54	1,14	130
P2 White/Coloured	Cotton, linen, 40 °C	1/1 (6,0 kg)	54	1,05	90
P3 Quick	Polyester, cotton/poly- ester, 40 °C	1/2 (3,0 kg)	22	0,30	35
P4 Hand	Wool/Hand, IWS, Superwash, 30 °C	1/3 (2,0 kg)	54	0,30	40

(1) All programmes are set to the highest available spin speed.

(2) The machine can handle a maximum load of 6,0 kg.

11 MAKING OWN WASHING PROGRAMMES

GENERAL

We have preset **P1**-**P4** with the most common washing programmes. These programmes usually suit most users. You can adjust the temperature and the spin speed temporarily, and you can run a spin or rinse programme temporarily without reading this Chapter; see Chapter 9, Washing.

You can also create your own programmes to suit you and your washing needs even better.

You can select a different type of programme, for example Heavy with pre-wash, Wool or Light. You can also alter settings such as temperature and spin speed and options such as Pre-soak, Delayed start and E2 Eco/Efficiency.

Tables containing a description of all programme types, settings and options are included later in this Chapter.

Change programme

In this Chapter we tell you how to replace one or other of the pre-set programmes with a programme of your own.

By storing the programme, it will then be accessible simply by pressing a button every time you wish to use the washing machine.

Temporary programme

You can also make a temporary change of programme type, settings or options. The change is not stored in this case, but is deleted when you switch off the machine or when you select one of the pre-set programmes.

SETTINGS AND OPTIONS FOR THE FOUR PRE-SET PROGRAMMES AT THE TIME OF DELIVERY

Programme information		Settings and options									
	Programme type	Temperature °C	Spin speed r/min	Delayed start (A)	Super rinse	E2 Eco/Efficiency	Pre-soak	Anti-crease	High water level		
P1	Normal	60°C	1800	0 tim	Off	Off	Off	Off	Off		
P2	White/Coloured	40°C	1200	0 tim	Off	Off	Off	Off	Off		
P3	Quick	40°C	800	0 tim	Off	(B)	Off	Off	Off		
P4	Hand (B)	30°C	800	0 tim	Off	(B)	Off	Off	(C)		

WM5566-OPT

(A) 0 hours means that the option is not activated. This option can only be changed temporarily.

(B) This option is not available for this programme type.

(C) This option is always on for this programme type and cannot be switched off.




AVAILABLE SETTINGS AND OPTIONS

Setting/Option	Description	Restrictions
Programme types	Available programmes are described in a separate table in this Chapter. Change of programme type resets all options and settings to their original values.	
Temperature, 30-95°C	Here you select the temperature to be displayed when you have selected the pre-set programme (P1-P4). It is always possible to adjust the temperature by pressing buttons before the start. C indicates the temperature of the incoming water. Temperatures above 60°C are not stored permanently.	For some types of programme, only temperatures between 30 and 40°C can be selected. See table.
Spin speed 400-1800 rev/min No spin No drain	Here you select the speed to be displayed when you have selected the pre-set programme (P1-P4). If No spin or No Drain is selected, no spin will be performed. No drain allows the water to remain in the machine after washing. It is always possible to adjust the setting by pressing buttons before the start.	For some types of programme, only speeds between 400 and 800 revolutions/minute can be selected. See Table. No Spin and No Drain cannot be selected for programme types Spin and Drain.
Delayed start (0-24 hours)	If you select a delayed start of five hours, for example, the machine will start five hours after you pressed the start button. The time remaining until the start is shown in the display. Changes to this option are not stored permanently.	Cannot be selected for programme type Drain.
Super rinse	With Super rinse On, extra rinses will be included in the rinse programme. See Table.	Cannot be selected for programme types Rinse, Spin and Drain.
E2 Eco/Efficiency	With E2 Eco/Efficiency On, the main wash is extended by about 22 minutes. For more information about how to use E2, see Chapter 8, Before washing.	Can only be selected for the Heavy, Normal and White/Coloured programmes.
Pre-soak	Pre-soak On means that the washing will be left to soak for two hours before the washing programme starts.	Cannot be selected for programme types Rinse, Spin and Drain.
Anti-crease	Anti-crease On means that the machine will rotate the drum for a few seconds every minute for two hours after the programme is completed. You can end the programme during this period with the door opening button.	Cannot be used together with No spin and No Drain. Cannot be selected for programme types Rinse, Spin and Drain
High water level	High water level On means that an extra quantity of water is used in the main wash and rinses.	Can be used for all programmes apart from Wool and Hand. These always use a high water level.


CREATE YOUR OWN WASHING PROGRAMME

1. Press one of the buttons (P1)-(P4) under which you wish to store your programme. You can select any button you like if you only want to make a temporary programme.
2. Index forward with the (Menu) button to the setting or option that you wish to change. If the child lock is activated, nothing will happen. Hold down the button for 3 seconds, and then press as usual.


All the programme types, settings and options are described in the table alongside.

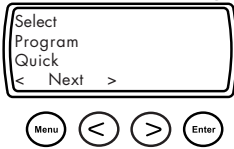

3. If you wish to change a setting, you should index forward or back with the (<) (>) buttons until the desired setting appears in the display.

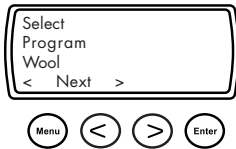

4. Then index further with the (Menu) button to the next setting/option, and change it in the same way if required.
5. Repeat this until the finished programme appears in the display together with the spin speed and any preferred temperature and other options. The text Stop will be displayed on the bottom line.

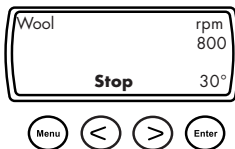

You can now use the programme without storing it (temporary programme). Close the door and press the (Start/Stop) button to start the programme.

Store the programme permanently

If you wish to store the programme for use whenever you intend to use the washing machine, press the (Enter) button before starting. The button selected by you originally (P1-P4) will appear at the bottom left of the display.

You can now select the programme by pressing the button chosen by you in Step 1.

NOTE

The Delayed start option and temperatures over 60°C are not stored permanently.

IMPORTANT

If you store a programme by mistake, you can reset it to its settings at the time of delivery; see Reset programme later in this Chapter.

TIP

If you do not wish to index through all the settings/options, you can terminate the input by pressing the (Enter) button ONCE.

To store the programme, you must then press the (Enter) button once more.

INTERRUPT INPUT


If you change your mind and wish to interrupt the input sequence, you should switch off the machine with the main power switch (⏻). When you switch it on again, you can start from the beginning or select one of the pre-set programmes as usual.





RESET PROGRAMME

If you wish to revert to the settings which a pre-set programme had at the time when the machine was supplied, you can reset the programme.

1. Hold down the programme button (P1-P4) for the programme that you wish to reset.
2. Press the  button once.
3. Release the programme button.

The programme for the button concerned will now have reverted to its settings at the time when the dryer was supplied.

AVAILABLE TYPES OF PROGRAMME

Programme information			Programme content							Other			
Programme No.	Programme	Max. quantity	Temperature °C (A)	Max. spin speed rev/min	Pre-wash	Main wash	Spin	Rinse (B)	Spin	Rinse (B)	Spin	Rinse (B)	Spin
1	Heavy	●	C,30-95	1800	■	■	⊙	🌀	🌀	🌀	🌀	🌀	🌀
2	Normal	●	C,30-95	1800		■	⊙	🌀	🌀	🌀	🌀	🌀	🌀
3	White/Coloured	●	C,30-95	1800		■	⊙	🌀	🌀	🌀	🌀	🌀	🌀
4	Synthetics	◐	C,30-95	800		■	🌀	🌀	🌀	🌀	🌀	🌀	🌀
5	Light	●	C,30-95	1800		■	🌀	🌀	🌀	🌀	🌀	🌀	🌀
6	Quick	◐	C,30-95	1800		■	🌀	🌀	🌀	🌀	🌀	🌀	🌀
7	Wool (C)	◐	C,30-40	800		■	🌀	🌀	🌀	🌀	🌀	🌀	🌀
8	Hand (C)	◐	C,30-40	800		■	🌀	🌀	🌀	🌀	🌀	🌀	🌀
9	Rinse	●		1800									🌀
10	Spin	●		1800									🌀
11	Drain	●											

- 1/1 (6,0 kg)
- ◐ 1/2 (3,0 kg)
- ◑ 1/3 (2,0 kg)



Rinse

- ⊙ Short spin (max. 800 rev/min)
- 🌀 Long spin

(A) C in the display denotes the temperature of the incoming water.


(B) With the Super Rinse On option: For programmes 1-3, four extra rinses will be included, and one spin will be omitted.

For programmes 4-8: two extra rinses will be included before the final ordinary rinse.

(C) Delicate wash – high water level.

WM50566-3

MENU SYSTEM FOR CHANGING A PRESET PROGRAMME

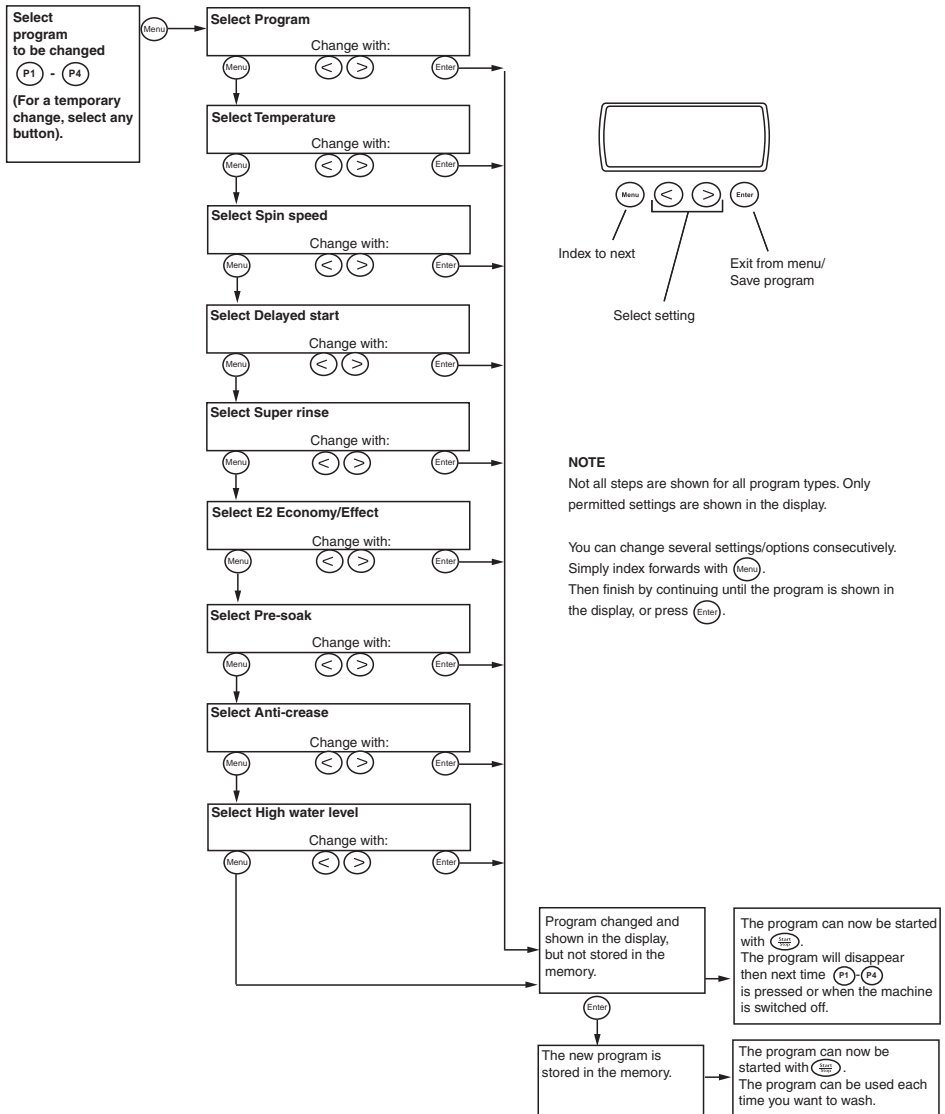


This page has been left blank for technical printing reasons.

12 CARE AND CLEANING


CHECKING THE COIN TRAP AND THE DRAIN PUMP

The washing machine has a trap in which coins, hairpins and similar items fasten. Clean the coin trap and the drain pump as follows:


1. Ensure that the main power switch is turned OFF.

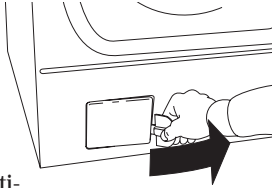

 
2. Using the partition piece for liquid detergent, open the drain pump cover as illustrated.

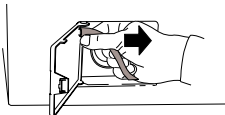

3. Drain off the water, eg, in a bowl, by pulling loose the drain hose on the inside of the cover.

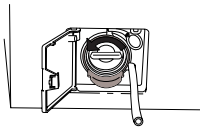


4. Open the pump by turning its cover anticlockwise. Lift off the cover and coin trap.

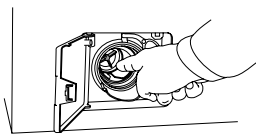


5. Clean out any objects and foreign matter from the pump housing. Ensure that the pump blade, at the rear, can be rotated.

6. Screw on the cover and coin trap, put the drain hose back on the cover lug and close the cover.

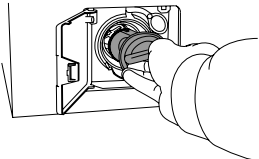


CLEANING THE DETERGENT COMPARTMENT

Pull out the detergent compartment as far as it goes.

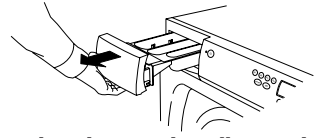

Then pull upwards and outwards as illustrated.

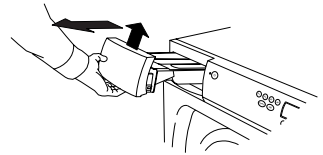

Flush and brush the detergent compartment to remove any residues.

Put the detergent compartment back in.

NOTE

Do not wash the detergent compartment in a dishwasher.

CLEANING THE OUTSIDE OF THE MACHINE

Use a mild detergent to clean the outside of the machine. Do not use any solvents, they can damage the machine.

NOTE

Do not spray the machine with water.

CLEANING THE INSIDE OF THE MACHINE TO PREVENT PROBLEMS WITH ODOUR

Today's modern detergents mean that washing at low temperatures is often sufficient. However, this can result in small deposits forming inside the machine. These can eventually lead to odour problems.

To avoid these problems, we recommend running a 95° programme on a few occasions

each year. You should use a small quantity of detergent at the same time. It is not necessary to fill the machine with washing.


CLEANING HOLES UNDER THE RIDGES

If you suspect that objects, eg. nails, paperclips, pins and so on, have fallen through the washing drum you should check the space underneath the ridges. Such items can corrode and cause rust stains on your washing. Nails and other sharp objects can tear fabrics.


Proceed as follows:

1. Use a screwdriver or similar tool.

2. Insert the screwdriver in the middle hole in the ridge and carefully push the screwdriver handle to the left.

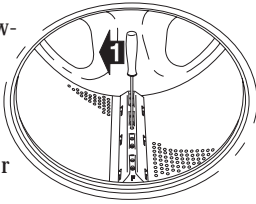

3. Grip the ridge with your other hand and lift it towards you as illustrated.

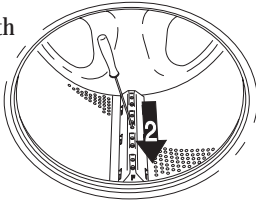

4. Lift up the ridge.

5. Remove any objects.

6. Position the ridge in the fixing hole with the F marking towards you. Ensure that the ridge lugs fit firmly in their holes in the drum. Slide the ridge away from you until it stops.


HARD WATER

If you live in an area that has hard water, the washer drum may become coated with a grey-white deposit. To get rid of the deposit, pour a packet of citric acid, about 20 gram, in the drum and run the Normal programme at 95°C. You will find citric acid on the spice shelf in your grocer's store.

13 TROUBLE SHOOTING

DOOR WILL NOT OPEN

1. Check that the main switch is ON.
2. Is the power supply cut off? Check the fuses.


The door cannot be opened using the  button if the power supply is broken.

3. If the door cannot be opened in the normal manner, proceed as follows to make an emergency opening:


- Make certain that there is no water in the machine. If there is water left in the machine and you can not run the programme Drain, drain off the water, eg. in a bowl, by pulling loose the drain hose on the inside of the cover as illustrated in chapter 12, Care and cleaning.

- Make certain that the main power switch is OFF.


- Open the drain pump cover, down to the left. Use the partition piece for liquid detergent, as illustrated.

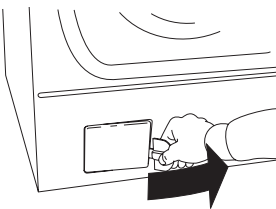

- Unscrew the screw holding the red plastic handle in place.

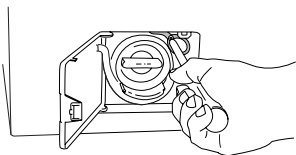

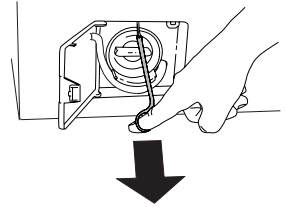

- Pull the handle and the door will open.



- Put the handle into its slot and screw it into place. Close the drain pump cover.

If the door still cannot be opened in the normal way after this, phone for service.

MACHINE WILL NOT START

1. Is the door properly closed? Press it shut firmly. The display flashes  down on the right if the door is not closed.
2. Is power cut off? Check the fuses.
3. Check whether you have not selected Delayed start. See Chapter 6, LC Display. To interrupt, see Chapter 2, Safety instructions.
4. Is the child lock switched on? Hold down the  button for three seconds to start the programme.

FAULT INDICATIONS

Error messages appear in the display text field if faults occur while a programme is in progress. To exit the error messages, switch the machine off or change the programme.

The error messages that can be displayed are:

Door lock fault. Phone Service.

Foaming. (Not available in all markets). Run the Rinse programme once. Check dosing of detergent. Use low-lather detergent.

Over flow. Phone Service.

Temperature stop fault. Faulty temperature stop, phone Service.

Thermistor fault. Faulty thermistor, phone Service.

Water inlet fault. Fault in the supply of water, ensure:

- that the water tap is open.
- that the strainer in the water inlet connection is not clogged.

1. Turn off the water tap.
2. Disconnect the hose.
3. Clean the strainer in the water inlet of the machine.
4. Re-connect the hose.
5. Open the water tap.
6. Run the programme again to check that the fault is remedied.


Water outlet fault. Faulty pumping, check the drain hose and the drain pump.

1. Straighten out any kinks in the drain hose.
2. Is there anything stuck in the drain hose outlet? Clear the hose.
3. Is the drain pump blocked by foreign objects? Clear the pump, see Chapter 12, Care and cleaning.
4. Run the programme Drain.


Wash motor fault. Phone Service.

0000 flashes at the top right of the display. The machine has failed to spin.

1. The machine incorporates an out-of-balance detector, which reduces spin speed or prevents spinning from starting if the load is very unba-

lanced. Turn the main switch,  off and turn it on again. Open the door and redistribute the washing.

2. After correcting, run the programme Spin.

 


If  flashes at the lower right corner of the display it is an indication that you have attempted to start a programme with the door open. Close the door and try again.




WRONG LANGUAGE ON THE DISPLAY

If the language on the display becomes altered for any reason, it can be restored to the initial language again.

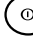The available languages are Dansk, Deutsch, English, Espanol, Français, Italiano, Nederlands, Norsk, Português, Suomi and Svenska.

 Proceed as follows to change the language:

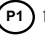Turn the main switch,  off and turn it on again. Press the  button five times, then press the  button five times. These ten times must be completed within fifteen seconds.

Within three seconds after pressing  the last time, step to the desired language using the   buttons.





 





CELSIUS OR FAHRENHEIT

The temperature is shown in the display either in degrees Celsius or in degrees Fahrenheit.

You can change between Celsius and Fahrenheit as follows:

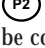
Turn off the main power switch  and then turn it on again so that the machine is in stand-by mode.

Press the  button five times, and then press the  button five times. These ten presses must be completed within 15 seconds.

Within three seconds after pressing the  button for the last time, you must then use the   buttons to index to your desired alternative.

RESET PROGRAMME

If you wish to revert to the settings which a pre-set programme had at the time when the dryer was supplied, you can reset the programme.

1. Hold down the programme button (P1-P4) for the programme that you wish to reset.
2. Press the  button once.
3. Release the programme button.

The programme for the button concerned will now have reverted to its settings at the time when the dryer was supplied.

14 TECHNICAL INFORMATION

TECHNICAL DATA

Height:	850 mm
Width:	595 mm
Depth:	585 mm
Weight:	79 kg
Drum volume:	50 litre
Max. washing capacity:	6,0 kg
Spin speed:	400 - 1800 r/min
Rated power, connection:	See data plate
Rated power, element:	See data plate
Water pressure:	0.1 - 1 MPa 1 - 10 kp/cm ² 10 - 100 N/cm ²
Material: Washing drum and water container	Stainless steel.
Material: Outer cover	Hot-galvanized, powder lacquered steel or stainless steel.
Positioning:	Stationary on four adjustable, rubber coated feet.
Water connection:	1.5 m PEX pipe.
Drain:	1.7 m polypropylene hose.

STANDARD TESTS

Europe:	EN 60 456 Ed. 4
Washing programme: ton	Programme 1 (Normal), 60°C, 6,0 kg cot-
Connection:	Cold water 15°C
Procedure for acoustic measurement:	IEC 60 704-2-4

This page has been left blank for technical printing reasons.

15 SERVICE AND GUARANTEE

SERVICE

Before calling for service, check to see whether the faults is due to something that you can put right yourself. See chapter 13, Trouble shooting.

If you do require service, telephone your local MAYTAG retailer or the MAYTAG representative for your country. See guarantee card for address and telephone number.



GUARANTEE

For guarantee details, see the guarantee card.

BEFORE CONTACTING THE SERVICE DEPARTMENT

Before contacting the Service Department, make a note of the model designation, type designation and serial number.

The model designation is on the detergent compartment. The type designation and the serial number are on the type plate located above the washer door.

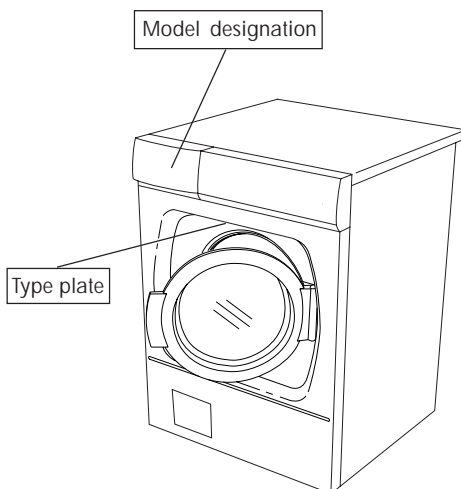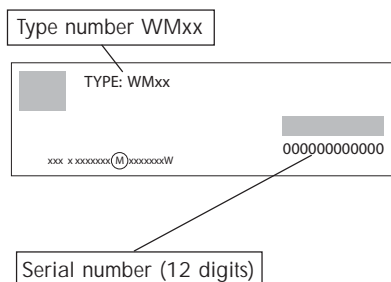


16 QUICK GUIDE

1. Sort the washing.

2. Turn on the main power switch, .

3. Open the door  and put in the washing.

4. Fill with detergent and conditioner as required.

Detergent (main wash) to the left (**2**), detergent if required (pre-wash) in the middle section (**1**) and conditioner to the right (). When washing with a liquid detergent, the partition piece, which can be found underneath the detergent compartment, should be inserted in the inner slot in the detergent compartment.

5. Select a programme.

The machine has four pre-set programmes (**P1**) - (**P4**). Press the button for the desired programme.

6. Temporary alteration of temperature, spin.


Alter the temperature with .

Alter the spin speed with .


7. Close the door and start the programme



8. Washing programme completed

Open the door  and take out the washed garments.

9. When washing is completed.

Turn off the main power switch  and close the washer door.

	WASHING →			
	Cotton, linen, white and light coloured garments.	Cotton, linen. Darker coloured garments.	Washing that needs a quick freshener, eg-shirts and tracksuits	Garments marked HWS, Superperwash or Hand.
SET THE:				
Programme	P1 or P2 Normal/ White/Coloured	P1 or P2 Normal/ White/Coloured	P3 Quick	P4 Hand
Temperature (°C)	60-95	40-60	30-40	30-40
Spin Speed	400-1800	400-1800	400-1800	400-800
Amount of washing	1/1	1/1	1/2	1/3

17 INDEX

	Chapter		Chapter		Chapter
Acetate	8	Hand	8, 9, 11, 16	Rinse	9, 11
Acrylate	8	Hard water	12	Safety instructions	2
Allergic	8, 11	Heavy	11	Select programme	9, 11, 16
Alter settings after starting	9	Height	14	Service	15
Anti-crease	8, 11	High water level	8, 11	Short spin	9, 11
Arrow buttons	9, 11	Installation; see Installation instructions		Silk	8
Bleach	8	Interrupting the programme	2, 9	Sort washing	8
Burling	8	Language	13	Spinning	8, 9, 11, 14, 16
Care	12	LC display	7	Start	9, 16
Celsius/Fahrenheit	13	Light	11	Stop	2, 9
Child locks	3	Linen	8, 16	Strainer	12, 13
Child safety	3	Liquid detergent	9	Super rinse	11
Cleaning	12	Main power switch	6, 9, 16	Synthetic fibre	8
Clean-out recess	12	Make your own washing programmes	11	Synthetics	8, 11
Coin trap	12	Man-made fibre	8	Technical data	14
Colour	8	Material	8, 16	Temperature	8, 9, 11, 16
Conditioner	5, 9, 16	Menu button	11	Temporary changes	9, 16
Consumption values	10	No drain	9, 11	Terry	8
Cotton	8, 16	No spin	9, 11	Time taken	8
Delayed start	9, 11	Normal	8, 9, 11, 16	Transport support, see Installation Instructions	
Delicate garments	8	Nylon	8	Transport	2
Delicate washing	8	Odour	12	Trouble shooting	13
Depth	14	Options	11	Type plate	4
Detergent container	5, 9	Overfill protection	1	Unbalance	13
Detergent	5, 8, 9, 16	Own washing programme	11	Wash	9, 16
Display, see LC display		Packing materials	2	Washer door	2, 4, 13
Disposal	2	Panel	6	Washing ball	9
Door – drain pump	4, 12, 13	Polyester	8	Washing capacity	9, 14
Door opening; see washer door		Powder detergent	9	Washing instructions	8
Door; see washer door		Pre-set washing programmes	9, 11	Washing machine parts	4
Dosage bag	9	Pre-soaking	11	Washing mark	12
Dosage	9	Pre-wash detergent	5, 9, 16	Water hardness	1
Drain hose	12	Pre-wash	11	Weight	14
Drain pump	3	Programme mode	9	White/Coloured	11, 16
Draining	11	Programme	9, 11	White wash	8, 16
Dyeing; see fabric dyeing		Quantity of washing	8, 16	Width	14
E2 Eco/Efficiency	8, 11	Quick guide	16	Winter storage	2
Emergency stop; see Interrupting the programme		Quick	11	Viscose	8
Energy consumption	10	Rayon	8	Wool	8, 9, 11, 16
Enter button	11	Remaining pre-set programmes	11	Zip fasteners	8
Fabric dyeing	8	Remaining washing time	7, 8, 9		
Fahrenheit/Celsius	13				
Fault message	13				
Guarantee	15				



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>