

**Use & Care Guide
Washing Machine
MAYTAG
MAF9601**



CONTENTS

READ FIRST	PAGE
1 Before washing for the first time	3
2 Safety instructions General, Installation, Washer door, Interrupting a programme, Overfill protection, Packing materials, Transport/Winter storage, Disposal	4-5
3 Child safety Child-safe washing, Watch that Child, Child lock on Start/Stop button	6
4 Parts of the washing machine	7
5 Detergent compartment	7
6 Panel	8
7 Option buttons	8

INSTALLATION

See Installation Instructions

START WASHING

8 Before washing Sorting the washing, Garments, Washing instructions, Coloured cotton, Delicate washing, Minimizing allergy risks, Pre-Soak, Save time, Economy and efficiency, Detergents, Textile dyeing	9-11
9 Washing Washing – step-by-step, Table of available programmes	12-17
10 Consumption values	19

CARE	PAGE
11 Care and cleaning Inspecting the coin trap and drain pump, Cleaning the detergent compartment, Cleaning the outside of the machine, Cleaning the inside of the machine to prevent odour problems, Clean-out recess under the ridges, If you have hard water	20-21

PROBLEMS?

12 Trouble shooting Machine will not start, Door will not close, Door will not open, Fault indications on the display, Normal indications on the display, Washing temperature – Celsius or Fahrenheit	22-25
---	-------

MISCELLANEOUS

13 Technical information Technical data, Standard tests	27
14 Service and guarantee	29
15 Quick guide	30
16 Index	31

1 BEFORE WASHING THE FIRST TIME

CAUTION WITH CERTAIN MATERIALS

Always check and adhere to recommended washing marking on the items concerned. If no recommendations are given, refer to those in Chapter 8, Before washing.

TRANSPORT SUPPORTS

Are the transport supports removed? If not, see the Installation instructions.

WASHER DOOR

The door of the washer opens electrically. Consequently, the door cannot be opened normally until the machine is connected to an electric power supply. However, emergency opening is available, see Chapter 12, Trouble shooting.

CHECK HARDNESS OF THE WATER

Call your local water company to find out what degree of water hardness applies. This has significance in relation to the amount of detergent that should be dispensed.

For brief operating instructions; see Chapter 15, Quick guide.

2 SAFETY INSTRUCTIONS



GENERAL

- Study and save this Use and Care Guide for future reference.
- Electrical and water installation, if required, must be carried out by authorized persons.
- The machine may only be used for washing in accordance with this Use and Care Guide - not for dry cleaning.
- Use only detergents intended for machine washing.
- Remove the transport supports before using the machine, see installation instructions.
- Repairs and maintenance which affect safety or performance must be carried out by an authorized specialist.

INSTALLATION

See the accompanying installation instructions.

WASHER DOOR


The door of the washer opens electrically. Consequently, the door cannot be opened normally until the machine is connected to an electric power supply.


To open the door manually, see the heading, Door will not open, in Chapter 12, Trouble shooting.

The machine cannot be started with the door open.

To open the door during an ongoing programme, see below, Interrupting a programme.

INTERRUPTING A PROGRAMME

You can interrupt a washing programme and open the door by holding the  button down for three seconds. The machine will then “remember” the point in the washing programme at which it was interrupted. To restart: fill with new detergent, if required, and close the door. The machine will start automatically from the point at which the programme was interrupted.

You can also interrupt a programme by pressing the  button for three seconds. If you interrupt a programme with this button, the machine will forget where it was in the programme, and you will have to select a new programme to restart and fill with new detergent, if required.

OVERFILL PROTECTION

If the level of water in the machine rises above normal, the overfill protection will start to pump out water and shut off the water supply. The programme will be interrupted if the level does not fall within 60 seconds.

PACKING MATERIAL

Sort the packing material for recycling according to recommendations by the local authorities.

TRANSPORT/ WINTER STORAGE

If the machine is to be transported, or stored in unheated premises where the temperature can fall below freezing point, you should proceed as follows:

- Empty the coin trap and the drain pump; see Chapter 11, Care - Cleaning.
- Turn off the water supply to the washing machine, disconnect the supply hose to the inlet valve, and let the water drain from the valve and the hose.

DISPOSAL

When the machine is no longer useful and is to be scrapped it should immediately be made unusable.

Get in touch with the refuse collection service or your local authorities for advice on how to scrap the machine in a proper manner for recycling.

The machine is made and marked to facilitate recycling.

3 CHILDREN'S SAFETY



CHILD-SAFE WASHING


Always close the washer door and start the programme immediately after filling the detergent.

Do not allow children to play with the washing machine.

PROTECT CHILDREN

 
Keep detergents and conditioner out of the reach of children.



CHILD LOCK ON BUTTON



You can prevent a child from starting the washing machine by mistake. You can do this by locking the  button, as follows.

Child lock On/Off:


Set the programme selector knob to the position in which it points directly upwards.

Turn off the main power switch  and then turn it on again so that the machine is in stand-by mode.

Press the  button five times, and then press the  button five times. These ten presses must be completed within 15 seconds.

Within three seconds after pressing the  button for the last time, you must then use the  button to select Child lock On (the figure **3** appears in the display) or Off (the figure **0** appears in the display).

Start a programme with the button locked:

To start the machine, you must hold the  button down for three seconds.

4 PARTS OF THE WASHER

- 1. DETERGENT COMPARTMENT

- 2. MAIN POWER SWITCH

- 3. PROGRAMME PANEL


- 4. DATA PLATE

- 5. COVER - DRAIN PUMP

- 6. DRAIN PUMP (BEHIND THE COVER)

- 7. WASHER DOOR

- 8. OUTER DOOR (NOT ALL MODELS)

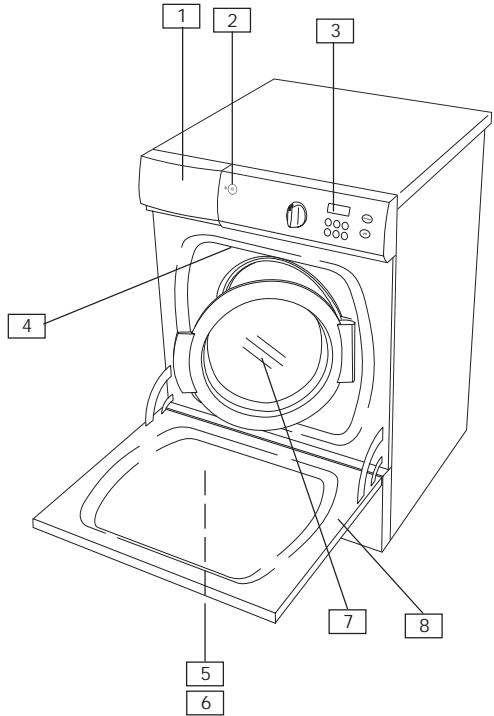


5 DETERGENT COMPARTMENT


- 1. DETERGENT COMPARTMENT - PRE-WASH

- 2. DETERGENT COMPARTMENT - MAIN WASH

- 3. CONDITIONER COMPARTMENT

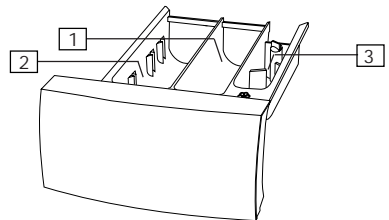

6 PANEL

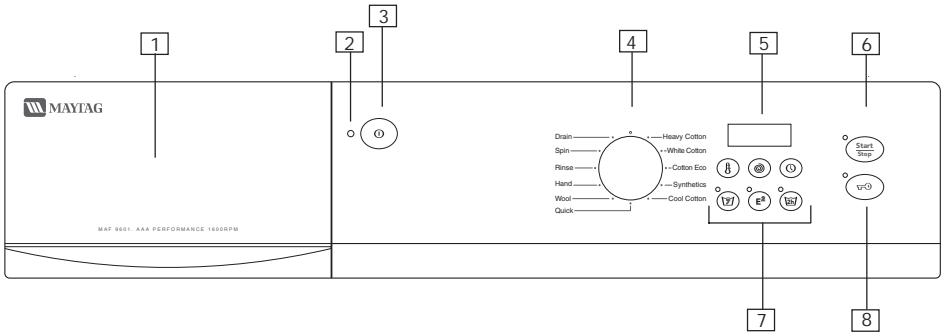

- 1. DETERGENT COMPARTMENT

- 2. INDICATOR LAMP ON/OFF

- 3. MAIN POWER SWITCH

- 4. PROGRAMME SELECTOR KNOB

- THE PROGRAMMES ARE DESCRIBED IN CHAPTER 9, WASHING.


- 5. DISPLAY

- 6. START/STOP BUTTON WITH LED TO INDICATE PROGRAMME STARTED

- 7. SETTING AND OPTION BUTTONS

- 8. DOOR OPENING BUTTON WITH LED TO INDICATE DOOR OPEN

7 OPTION BUTTONS

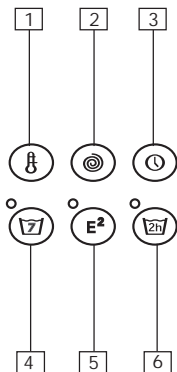

- 1. BUTTON FOR TEMPERATURE SELECTION

- 2. BUTTON FOR SPIN SPEED SELECTION

- 3. BUTTON FOR DELAYED START SELECTION

- 4. BUTTON FOR SUPER RINSE SELECTION

- 5. BUTTON FOR E2 ECO/EFFICIENCY SELECTION

- 6. BUTTON FOR PRE-SOAK SELECTION

The LEDs indicate that the associated choice has been activated.

8 BEFORE WASHING

Before you start washing, here is some advice that can be useful.


SORTING THE WASHING

Sort garments in relation to:

- How soiled they are
- Colour
- Material

GARMENTS

- Close zip-fasteners so that they do not chafe against other items.
- New coloured garments can have surplus dye and should therefore be washed separately the first time.
- Turn garments inside out. This reduces the risk of burling and dye creases.
- Empty pockets and suitably let them wash turned inside out.

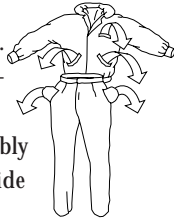

RECOMMENDED WASHING MARKING

Check the recommended washing marking on garments. The table below gives useful information on suitable washing programmes for different materials and amounts of washing.

COLOURED COTTON

Coloured cotton garments marked with a recommendation for 60°C should be washed the first time at 60°C to get rid of any surplus dye. If this advice is ignored there is a risk that colours will run. Use a detergent without bleach to safeguard the colours.








DELICATE WASHING

Unbleached linen

Unbleached linen should be washed at 60°C using a detergent without bleach or optical whitening agent. Severely soiled linen can occasionally be washed at a higher temperature, but not too often because heat can destroy the lustre and strength of linen.

Symbols in washing instructions

WASHING

LABEL	MATERIAL	PROGRAMME	LOAD
	Cotton, linen, white and light colours	Heavy 60°C to 95°C	1/1 drum
	Cotton, linen. Darker colours	White Cotton 60°C	1/1 drum
	Polyester, cotton/polyester, nylon. Whites	Synthetics 60°C	1/2 drum
	Rayon, acetates, acrylics. Sensitive colours	Synthetics 40°C	1/2 drum
	Polyesters, cotton/polyester, nylon. Colours	Synthetics 40°C	1/2 drum
	Silk and very delicate items	Synthetics 30°C	1/3 drum
	Items marked IVS and Superwash	Wool/Hand 30°C	1/3 drum





Wool and silk

Wool and silk are sometimes marked machine wash, and sometimes hand wash. The Wool and Hand programmes of the machine are at least as gentle as washing by hand.

Wool is particularly sensitive to mechanical processing. If you wish to avoid spin drying, you can press out the water instead using terry towelling. In this case, you should select No Spin. See Chapter 9, Washing for details of how to select this setting.

Most garments will tolerate a short spin, however. The Wool and Hand programmes always include a short spin.

Man-made fibres and synthetic fibres

These materials require a lot of space if they are not to crease. Fill the drum only to half load when washing man-made/synthetic fibres. Select a short spin by selecting a spin speed of 800 revolutions/minute or lower.

NOTE

Viscose and acetate are brittle when wet.

MINIMIZING ALLERGY RISKS

This washing machine offers a Super rinse function (17). You should use this to take account of persons with a sensitive skin, for example persons with allergies and infants.

PRE-SOAKING

The Pre-soaking option (25) means that your washing will be soaked for two hours before the programme starts. This is useful for highly soiled washing.

The drum will rotate on two occasions every tenth minute.

SAVE TIME

Use the White/Coloured programme to save time. This programme has a shorter main wash than "Normal", but it is often sufficient for normally soiled washing.

ECONOMY AND EFFICIENCY

You can save a lot of energy by not using a stronger programme than necessary.

- Without increasing the temperature, the washing effect can be increased by selecting the (E) option. You will then save energy without losing any washing effect.
- Select a fast spin speed to reduce the energy consumption for subsequent drying in a tumble dryer or a drying cabinet.
- Select Quick if you simply need to freshen up shirts or training kit, etc. You will save both water and energy.

DETERGENTS

Overdosing detergent will not give better results, it only increases the burden on the environment.

Try using less detergent, and increase the dose only if you are displeased with the washing results.

TEXTILE DYEING

If you want to dye fabrics in the machine, select Normal with the Super rinse option, (17).

Choose a temperature according to recommendations from the dye maker. If the fabrics to be dyed are mixtures such as cotton/polyester, you should select a spin speed of 800 revolutions/minute.

NOTE

Bleaches or stain removers that contain the chemical $\text{Na}_2\text{S}_2\text{O}_4$, known as sodium dithionite or sodium hyposulphite, must not be used in this washing machine. If these substances are used they could cause corrosion and discoloration.

NOTE

Put the dye directly in the drum - not in the detergent compartment. After dyeing, the empty machine should be run using the same programme. Use a normal amount of detergent.

9 WASHING

The following step-by-step instructions are provided to help you to achieve the best possible washing result.

1 SORT THE WASHING

For tips and advice, see Chapter 8 – Before washing.


NOTE

Empty the pockets. Coins, nails and similar items can cause damage to the machine and textiles.

2 TURN ON THE MAIN POWER SWITCH



3 OPEN THE DOOR AND PUT IN THE WASHING.

Press the  button once, and the LED next to the button will light. The door will open after three seconds. Put in the washing.


The table above the washing programme indicates how much washing you can put in for each programme.

4 PUTTING IN THE DETERGENT AND CONDITIONER

Follow the recommendations on the detergent packet for how much detergent should be used. The capacity of the machine is for 5.0 kg washing. If you put a smaller amount in the machine, you can reduce the amount of detergent accordingly.

Powder detergent

Pour in the powder for main wash (2) and any pre-wash (1).

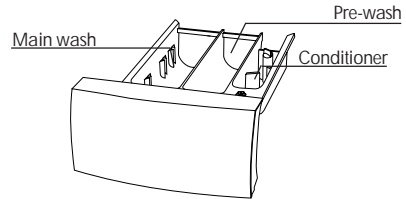


Liquid detergent

When using liquid detergent, follow the detergent manufacturer's recommendations.

Detergent ball or dosing bag

If you are using a detergent ball or dosing bag, put it in with the washing and select a programme without pre-wash.

Conditioner

Pour conditioner in the compartment marked . Follow the maker's instructions regarding the amount.

NOTE

Do not exceed the maximum dose level of the container, the conditioner will otherwise flow in too soon and deteriorate the washing effect.

TABLE OF AVAILABLE PROGRAMMES

Programme information				Programme content						Miscellaneous				
Programme No.	Programme	Max. quantity of washing	Temperature °C (A)	Max. spin speed rev/min	Pre-wash	Main wash	Spin	Rinses (B)	Spin	Rinses (B)	Spin	Rinses (B)	Spin	
1	Heavy Cotton	●	C,30-95	1600	■	■	⊙	■	⊙	■	⊙	■	⊙	
2	White Cotton	●	C,30-95	1600		■	⊙	■	⊙	■	⊙	■	⊙	
3	Cotton Eco	●	C,30-95	1600		■	⊙	■	⊙	■	⊙	■	⊙	Shorter main wash than for Normal
4	Synthetics	◐	C,30-95	800		■	⊙	■	⊙	■	⊙	■	⊙	
5	Cool Cotton	●	C,30-95	1600		■	⊙	■	⊙	■	⊙	■	⊙	
6	Quick	◐	C,30-95	1600		■	⊙	■	⊙	■	⊙	■	⊙	
7	Wool (C)	◐	C,30-40	800		■	⊙	■	⊙	■	⊙	■	⊙	
8	Hand (C)	◐	C,30-40	800		■	⊙	■	⊙	■	⊙	■	⊙	Slightly more gentle than Wool
9	Rinse	●		1600				■					⊙	
10	Spin	●		1600									⊙	
11	Drain	●												Pumping only

- 1/1 (6,0 kg)
- ◐ 1/2 (3,0 kg)
- ◑ 1/3 (2,0 kg)



⊙ Short spin (max. 800 rev./min)

⊙ (A) C in the display denotes the temperature of the incoming water.

(B) With Super rinse On option selected:

For progr 1-3: four rinses are added at the same time as one spin is eliminated.

For progr 4-8: two extra rinses are added before the final ordinary rinse.

(C) Delicate programme - high water level

WM505566-3



5 SELECT A PROGRAMME

Select the programme that you wish to use with the programme selector knob.


See the table of programmes for more information about the various available programmes.


6 SELECTING SETTINGS AND OPTIONS


You can obtain a washing programme to suit your particular wash by changing the settings and options.

The machine will remember the settings and options that you make for each programme and will start with these (with a few exceptions – temperatures above 60°C and Delayed start) the next time you select the programme concerned. Of course, you can then make a further change if you wish.

Temperature


Set the temperature by indexing forward with the  button. The selected temperature is indicated in the display as you index forward.

You can select temperatures between 30°C and 95°C or  (°F if set for Fahrenheit).



 denotes that the wash temperature will be the same as that of the incoming water.

For certain programmes, it is not possible to select a temperature higher than 40°C; see the table.

Spin speed/No Spin/No Drain


Select the spin speed by indexing forward with the  button. The selected speed is indicated in the display as you index forward.


You can select speeds from 400-1600 revolu-

tions/minute, No Spin () or No Spin/No Drain ()


For certain programmes, it is not possible to select a spin speed higher than 800 revolutions/minute; see the table.

Spinning at 400-800 revolutions/minute always means a short spin. Spinning at 1000 revolutions/minute or higher always means a long spin.

No Spin () means that the programme will be executed without spins and will end with draining.


No Spin/No Drain () means that the programme will be executed without spins and will end with the final rinsing water remaining in the machine. The wash will then remain floating in the final rinsing water and will not become creased. Once the programme is complete, you can then select one or other of the Spin or Drain programmes or press the door opening button to empty the rinsing water from the machine.

Delayed start

Select the number of hours by which the start will be delayed by indexing forward with the  button. The selected time is indicated in the display as you index forward.

A delay of 5 hours thus means that the machine will start the programme 5 hours after pressing the start button.

You can select a delay of between 1 and 24 hours.

 denotes that the option is disconnected and that the programme will start immediately as usual.


Super rinse

Super rinse is switched on or off by pressing the  button.

The LED next to the button will light when Super rinse is switched on.

Super rinse means that extra rinses will be added to the programme; see the Table.

E2 Eco/Efficiency

E2 is switched on or off by pressing the  button.

The LED next to the button will light when E2 is switched on.

This option means that the main wash will be extended by about 22 minutes.

 
E2 can only be used with Heavy, Normal and White/Coloured.

For more information about E2 Eco/Efficiency, see Chapter 8 – Before washing.

Pre-soak

Pre-soak is switched on or off by pressing the  button.

The LED next to the button will light when Pre-soak is switched on.

The Pre-soaking option  means that your washing will be soaked for two hours before the programme starts. This is useful for highly soiled washing.

The drum will rotate on two occasions every tenth minute.

7 CLOSE THE DOOR AND START THE PROGRAMME WITH THE BUTTON

The LED next to the button indicates that the programme has started.

NOTE

If the child lock is on, the button must be held down for 3 seconds.

Remaining time

The remaining time (hours and minutes) is shown in the display while the programme is operating. **2h35** indicates 2 hours and 35 minutes, for example.


Once a programme has started, an estimated running time for the programme is displayed. This time may vary to some extent from time to time due to the temperature of the incoming water and the size of the load.

The remaining time is recalculated before the final rinse and may then be increased or reduced to some extent.




DURING THE PROGRAMME

If you wish to interrupt or change the programme

Hold down the  button for three seconds. An extinguished LED next to the button indicates that the programme has been interrupted.

Add more detergent, if necessary, before selecting a new programme.

Putting in or taking out washing

If you wish to put in or take out washing after you have started the machine, you must hold down the  button for three seconds, when the LED next to the button will light. Any water will be pumped out, and the door can then be opened. Put in more washing, add more detergent, if necessary, and close the door. The washing programme will restart automatically from the point at which it was interrupted.

Changing settings after starting

It is possible for you to alter certain settings and options after you have started the washing programme.

Hold down the button for the setting or the option for three seconds. The temperature is shown in the display.

Within 15 seconds of releasing the button, you must index forward to the new desired setting.

In order to make an alteration, however, the part of the programme that you wish to alter must not have been activated yet.

- Programme – If the programme selector knob is moved when the programme is running, this

will not affect the programme. You should interrupt the programme instead.

- Temperature – can be altered before the main wash has started.

- Spin speed – can be altered before the water is pumped out after the main wash.

- Delayed start – cannot be altered. You should instead interrupt the programme, change the settings and restart the machine.


- Super rinse – can be altered before the water is pumped out after the main wash.

- E2 – can be altered before the start of the main wash.


-The Pre-soak option means that the washing is left to soak for two hours before the programme starts.

8 PROGRAMME COMPLETED

The text *End* in the display indicates that the programme is completed.

Press the  button once, and the LED next to the button will light. The door will open after three seconds.

9 WHEN WASHING IS FINISHED

Turn off the main power switch .

Close the washer door to prevent small children from crawling into the machine.

This page has been left blank for technical printing reasons.

10 CONSUMPTION VALUES

The following conditions apply for the consumption values indicated below:

Temperature of incoming water: 15°C. Element power: 2000 W. Options: None

PROGRAMME	MATERIAL/WASHING TEMPERATURE(1)	LOAD (2)	WATER CONSUMPTION (approx. litre)	POWER CONSUMPTION (approx. kWh)	PROGRAMME TIME (approx. minutes)
Heavy Cotton	Cotton, linen, 60°C	6,0 kg	57	1,20	145
White Cotton	Cotton, linen, 60°C	6,0 kg	54	1,14	130
Cotton Eco	Cotton, linen, 60°C	6,0 kg	54	1,05	90
Synthetics	Polyester, cotton / polyester, nylon, 40 C	3,0 kg	30	0,30	65
Cool Cotton	Cotton, linen, 60°C	6,0 kg	35	1,00	65
Quick	Polyester, cotton / polyester, nylon, 30 C	3,0 kg	22	0,30	35
Wool	Wool/Hand, IWS, Superwash, 30°C	2,0 kg	54	0,30	40
Hand	Wool/Hand, IWS Superwash, 30°C	2,0 kg	54	0,30	40
Rinse	Cotton, linen	6,0 kg	9	0,05	20
Spin	Cotton, linen	6,0 kg	----	0,05	15
Drain	Cotton, linen	6,0 kg	----	----	1

(1) All programmes are set to the highest available spin speed.

(2) The machine can handle a maximum load of 6,0 kg.


11 CARE AND CLEANING

CLEANING THE COIN TRAP AND THE DRAIN PUMP


The washing machine has a trap in which coins, hairpins and similar items fasten. Clean the coin trap and the drain pump as follows:

1. Ensure that the machine is drained and the main power switch is turned OFF.


2. Open the drain pump cover. Use the partition piece from the detergent compartment, as illustrated.

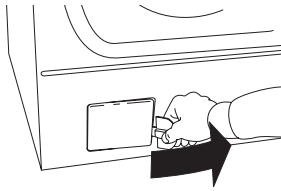

 
3. Drain off the water, eg, in a bowl, by pulling loose the drain hose from its connection on the inside of the cover.



 
4. Open the pump by turning its cover anticlockwise. Lift off the cover together with the coin trap.



 5. Clean out any objects and foreign matter from the pump housing. Ensure that the pump blade, at the rear, can be rotated.




6. Screw on the cover together with the coin trap, put the drain hose back on its connection and close the cover.

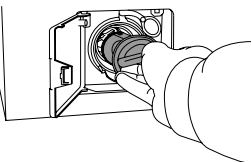


CLEANING THE DETERGENT COMPARTMENT

Pull out the detergent compartment as far as it goes.

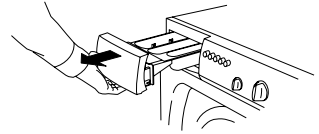

Then pull upwards and outwards as illustrated.

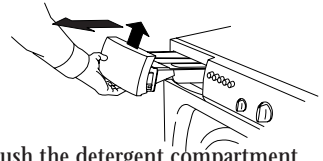

Flush and brush the detergent compartment. Put the detergent compartment back in.

NOTE

Do not wash the detergent compartment in a dishwasher.

CLEANING THE OUTSIDE OF THE MACHINE

Use a mild detergent to clean the outside of the machine. Do not use any solvents, they can damage the machine.

NOTE

Do not spray the machine with water.

CLEANING THE INSIDE OF THE MACHINE TO PREVENT PROBLEMS WITH ODOUR

Today's modern detergents mean that washing at low temperatures is often sufficient. However, this can result in small deposits forming inside the machine. These can eventually lead to odour problems.

To avoid these problems, we recommend running a 95° programme on a few occasions each year. You should use a small quantity of detergent at the same time. It is not necessary to fill the machine with washing.


CLEANING HOLES UNDER THE RIDGES

If you suspect that objects, eg. nails, paperclips, pins and so on, have fallen through the washing drum you should check the space underneath the ridges. Such items can corrode and cause rust stains on your washing. Nails and other sharp objects can tear fabrics.


Proceed as follows:

1. Use a screwdriver or similar tool.

2. Insert the screwdriver in the middle hole in the ridge and carefully push the screwdriver handle to the left.

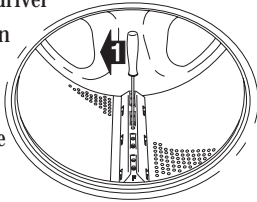

3. Grip the ridge with your other hand and pull it towards you as illustrated.

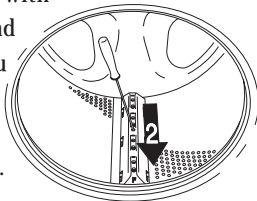

4. Lift up the ridge.

5. Remove any objects.


6. Position the ridge in the fixing holes with the F-mark facing you. Ensure that the ridge lugs fit firmly in their holes in the drum. Slide away from you until it stops.

HARD WATER

If you live in an area that has hard water, the washer drum may become coated with a grey-white deposit. To get rid of the deposit, pour a packet of citric acid, about 20 gram, in the drum and run the Normal programme at 95°C. You will find citric acid on the spice shelf in your grocer's store.

12 TROUBLE SHOOTING


MACHINE WILL NOT START

1. Is the door properly closed? Press it shut firmly.
2. Check whether the Delayed start option is switched on. The time remaining to start will then be indicated in the display in whole hours, e.g. **24h**. To change: interrupt the programme, change the setting, and restart.
3. Is power cut off? Check the fuses.
4. Is the child lock switched on? If it is switched on, hold down the  button for three seconds; see Chapter 3, Child safety.

DOOR WILL NOT CLOSE

If the door opens again immediately when you try to close it, check to make sure that you have made correct programme settings. If this does not help then there is probably a safety fault. Phone service.


DOOR WILL NOT OPEN

1. Check that the main power switch is On.
2. Is the power supply cut off? Check the fuses. The door cannot be opened using the  button if the power supply is broken.
3. If the door cannot be opened in the normal manner, proceed as follows to make an emergency opening:


- Check first that there is no water left in the machine. If there is, drain the machine as explained under the heading, Cleaning the coin trap and drain pump, in Chapter 11, Care and cleaning.

- Make certain that the main power switch is OFF.


- Open the drain pump cover, down to the left. Use the partition piece from the detergent compartment, as illustrated.

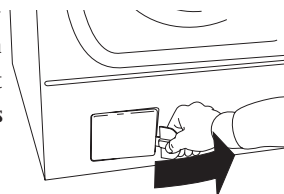

- Unscrew the screw holding the red plastic handle in place.

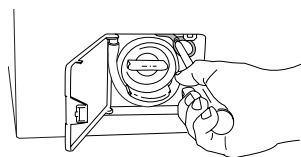

- Pull the handle and the door will open.

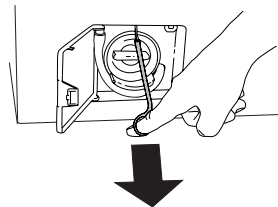

- Put the handle into its slot and screw it into place. Close the drain pump cover.


If the door still cannot be opened in the normal way after this, phone for service.


FAULT INDICATIONS ON THE DISPLAY

If a fault or a failure occurs during the programme, an indication will be given on the display.

The table below shows the various fault codes.

NOTE

The main power switch  must be turned off in order to reset the fault message.

Display shows	Explanation	Suggested remedy
F1	Over flow	Call service.
F2	Wash motor fault	Call service.
F3	Water outlet fault	Pumping fault; check: - that no object is trapped in the outlet from the drain hose. - that the drain pump is not blocked by foreign bodies. Clean the pump; see Chapter 11, Care and Cleaning. - that the drain hose is free from kinks. After performing the remedy, run the Drain programme. If this does not help, call service.
F4	Water inlet fault	Water supply fault; check: - that the tap in the water pipe is open. - that the strainer in the water inlet to the machine is not obstructed. 1. Close the water tap. 2. Unscrew the hose. 3. Clean the strainer in the inlet valve to the machine. 4. Screw back the hose. 5. Open the water tap. 6. Run the programme again to check that the fault has been remedied.
F5	Thermistor fault	Call service.
F6	Temperature stop fault	Call service.
F7	Foaming (this function is not available on all machines)	Run the Rinse programme once. Check the detergent metering. Use a low-lather detergent.
F8	Door lock fault	Call service.
0000 Flashing	Machine fails to spin.	1. The machine has a built-in unbalance sensor, which causes the spin speed to be reduced or spinning to be bypassed if there is great unbalance in the load. Turn off the main power switch, and turn it on again. Open the door and redistribute the washing. 2. After performing the remedy, run the Spin programme.
 Flashing	You have tried to start a programme with the door open.	Close the door and try again.



NORMAL INDICATIONS ON THE DISPLAY

Display shows	Explanation	
00	No programme selected.	
24h	One or two digits, followed by an h. Delayed start is selected, and the programme has started. The display shows the number of hours remaining to start of the programme.	
2h35 18	One digit, one H followed by two digits or only 1-2 digits, indicates that a programme is running. The display shows the remaining programme time in hours and minutes.	
95C 205F CC CF	Displayed when selecting temperature. The temperature can be displayed either in degrees Celsius (C) or Fahrenheit (F). CC and CF indicate that the machine is set for the temperature of the incoming water. To change the display, see the section Wash temperature – Celsius or Fahrenheit in this Chapter.	
End	Programme complete. Take out the washing.	
no d	Can be displayed when selecting spin speed. Indicates No spin/No drain. The programme will then be run without spins and will be completed with the final rinse water still in the machine.	
0	Can be displayed when selecting spin speed. Indicates No spin. The programme will then be run without spins.	
--	Displayed instead of temperature and spin speed where these settings are not relevant. E.g. it is not possible to select a temperature for the Rinse programme.	


WASHING TEMPERATURE – CELSIUS OR FAHRENHEIT



The temperature is shown in the display either in degrees Celsius (**95C**) or in degrees Fahrenheit (**205F**).



You can alter the temperature indication from Celsius to Fahrenheit, and vice versa.

Proceed as follows to alter the washing temperature display:

Set the programme selector knob to the position in which it points directly upwards.

Turn off the main power switch () and then turn it on again so that the machine is in stand-by mode.

Press the () button five times, and then press the () button five times. These ten presses must be completed within 15 seconds.

Within three seconds after pressing the () button for the last time, you must then use the () button to select whether you want the temperatures to be displayed either in degrees Celsius (**C**) or in degrees Fahrenheit (**F**).

This page has been left blank for technical printing reasons.

13 TECHNICAL INFORMATION

TECHNICAL DATA

Height:	850 mm.
Width:	595 mm.
Depth:	585 mm.
Weight:	73 kg/78 kg (with outer door).
Drum volume:	50 litre.
Max. washing capacity	6.0 kg.
Spin speed, r/min:	400 - 1600 rpm.
Rated power, connection:	See data plate.
Rated power, element:	See data plate.
Water pressure:	0.1 - 1 MPa. 1 - 10 kp/cm ² . 10 - 100 N/cm ² .
Material: Washing drum and fluid container	Stainless steel.
Material: Outer cover	Powder-lacquered and hot-galvanized steel sheet or stainless steel.
Positioning:	Stationary on four adjustable, rubber-coated feet.
Water connection:	1.5 m PEX tube.
Drain:	1.7 polypropylene hose.

STANDARD TESTS

Europe:	EN 60 456 Ed. 4
Washing programme:	Programme 2 - White Cotton, 60°C, 6.0 kg cotton.
Connection:	Cold water 15°C.
Test procedure, acoustic measurement:	IEC 60 704-2-4.

This page has been left blank for technical printing reasons.

14 SERVICE AND GUARANTEE

SERVICE

Before calling for service, check to see whether the faults is due to something that you can put right yourself. See chapter 12, Trouble shooting.

If you do require service, telephone your local MAYTAG retailer or the MAYTAG representative for your country. See guarantee card for address and telephone number.



GUARANTEE

For guarantee details, see the guarantee card.

BEFORE CONTACTING THE SERVICE DEPARTMENT



Before contacting the Service Department, make a note of the model designation, type designation and serial number.

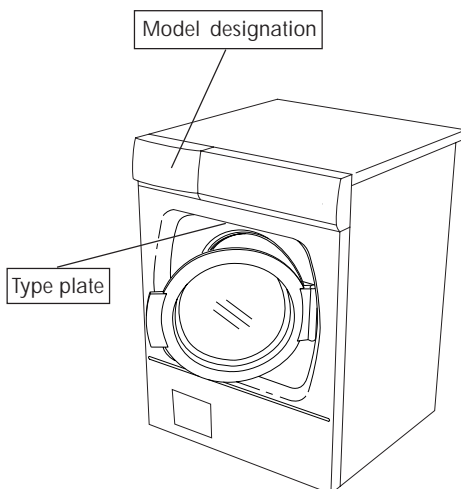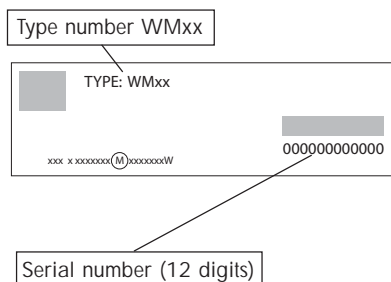The model designation is on the detergent compartment. The type designation and the serial number are on the type plate located above the washer door.




15 QUICK GUIDE

1. SORT THE WASHING

2. PRESS THE MAIN POWER SWITCH , **OPEN THE DOOR**  **AND PUT IN THE WASHING**


3. FILL WITH DETERGENT AND CONDITIONER AS REQUIRED

Detergent (main wash) to the left (**2**), detergent if required (pre-wash) in the middle section (**1**) and conditioner to the right (). If a liquid detergent is used, the partition piece, which can be found underneath the detergent compartment, should be inserted in the inner slot in the detergent compartment.


4. SELECT A PROGRAMME, AND ADJUST THE TEMPERATURE, SPIN SPEED AND OPTIONS AS REQUIRED

5. CLOSE THE DOOR AND START THE PROGRAMME WITH THE  **BUTTON**

6. WASHING PROGRAMME COMPLETED

Open the door with the  button.

7. WHEN WASHING IS COMPLETED

Turn off the main power switch  and close the washer door.

	Programme	Temperature (°C)	Options	Spin speed	Amount of washing
Items marked IWS. Superwash or Hand wash.	7-8 Wool/hand	30-40		400-800	1/3
Washing that only needs a quick freshener, eg. shirts, tracksuits.	6 Quick	30-40		400-1600	1/2
Polyester, cotton/polyester, nylon. White garments.	4 Synthetics	60		400-800	1/2
Slightly soiled cotton or linen.	5 Cool Cotton	40		400-1600	1/2
Colton, linen. Darker coloured garments. Economy programme.	2 White Cotton	40	E ²	400-1600	1/1
Colton, linen. Darker coloured garments. Economy programme.	2 White Cotton	40-60		400-1600	1/1
Colton, linen. White and light coloured garments. Super efficiency programme.	2 White Cotton	40	E ²	400-1600	1/1
Colton, linen, white and light coloured garments. Super efficiency programme.	2 White Cotton	60	E ²	400-1600	1/1
Colton, linen, white and light coloured garments. Super efficiency programme.	2 White Cotton	60-95		400-1600	1/1
Severely soiled washing, eg. working clothes.	1 Heavy Cotton	60-95		400-1600	1/1

↑
WASHING

16 INDEX

	Chapter		Chapter		Chapter
Acetate	8	Guarantee	14	Safety instructions	2
Acrylate	8			Select programme	9, 15
Allergic	8, 9	Hand	8, 9, 15	Service	14
Alter settings after starting	9	Hard water	11	Short spin	8, 9
		Heavy	9, 15	Silk	8
Bleach	8	Height	13	Sort washing	8
Burling	8			Spin speed	9, 13
Buttons	7	Installation; see Installation instructions		Spinning	8, 9, 12, 13, 15
		Interrupting the programme	2	Start	9
Care	11	Light	9, 15	Stop	9
Celsius	12	Linen	8, 15	Strainer	11
Child safety	3	Liquid detergent	9	Super rinse	9
Cleaning	11	Main power switch	9, 15	Synthetic fibre	8
Clean-out recess	11	Man-made fibre	8	Synthetics	8, 9, 15
Coin trap	11	Material	8, 15		
Colour	8	No drain	9	Technical data	13
Conditioner	5, 9, 15	No spin	9	Temperature	8, 15
Consumption values	10	Normal	8, 9, 15	Terry	8
Cotton	8, 15	Nylon	8	Time taken	10
				Transport support	1
Delayed start	9	Odour	11	Transport	2
Delicate garments	8	Option knobs	7	Trouble shooting	12
Delicate washing	8	Options	9	Type plate	4
Depth	13	Overfill protection	2		
Detergent container	5, 9	Packing materials		Unbalance	12
Detergent	8, 9	Panel	6, 7		
Display texts	11	Pockets	8	Wash	9, 15
Disposal	2	Polyester	8	Washer door	2, 4, 12
Door – drain pump	4, 11, 12	Powder detergent	9	Washing ball	9
Door opening; see washer door		Pre-soak	9	Washing capacity	9, 13
Door; see washer door		Pre-wash detergent	5, 9, 15	Washing instructions	8
Dosage bag	9	Pre-wash	9	Washing machine parts	4
Dosage	9	Programme selector knob	6	Washing mark	11
Drain hose	11	Programme; see Wash programme		Washing programme	9, 15
Drain pump	11	Quantity of washing	8, 15	Water hardness	1
Draining	9	Quick guide	15	Weight	13
Dyeing; see fabric dyeing		Quick	9, 15	White/Coloured	8, 9
				White wash	8, 15
E2	8, 9			Width	13
Emergency stop; see Interrupting the programme				Winter storage	2
Energy consumption	10			Viscose	8
				Wool	8, 9, 15
Fabric dyeing	8				
Fahrenheit	12	Rayon	8	Zip fasteners	8
Fault indication	12	Rinse programme	9		



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>