
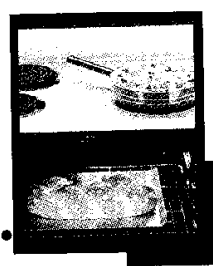
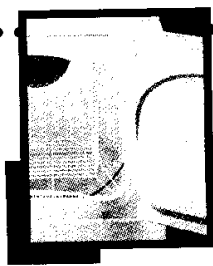


# USER'S GUIDE

- Welcome ..... 1
- Safety Instructions..... 2
- Dryer Exhaust Tips ..... 3
- Operating Tips ..... 4
- Controls At A Glance ..... 5-6
- Care and Cleaning ..... 7
- Replacing Drum Light..... 7
- Reversing the Door ..... 7
- Drying Rack Installation Inst. .... 8
- Special Laundry Tips..... 9
- Before You Call..... 10
- Warranty..... Back Page

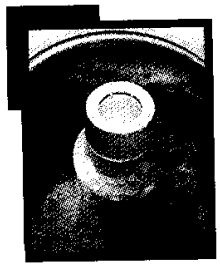

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

And Download.



## Welcome.....




Welcome and congratulations on your purchase of a Maytag dryer! Your complete satisfaction is very important to us. For best results, we suggest reading this material to help acquaint you with proper operating and maintenance procedures.

Should you need assistance, it is helpful to:

1) Have complete model and serial number identification of your dryer. This is located on a data plate in the lower center of the door opening.


Model Number

Serial Number

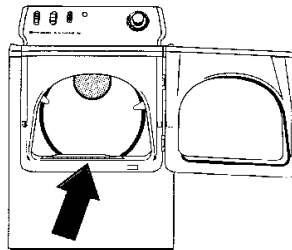

2) Have proof of original date of purchase.

Please attach your sales receipt here.

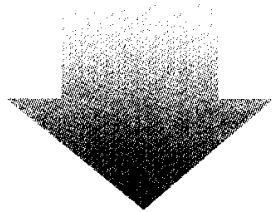

For additional questions, please contact us:

Maytag Consumer Information  
One Dependability Square  
Newton, Iowa 50208  
(515) 791-8911  
(Mon.-Fri., 8am-5pm Central Time)  
Internet: <http://www.maytag.com>

*NOTE: In our continuing effort to improve the quality of our appliances, it may be necessary to make changes to the dryer without revising this guide.*

## Important Safety Notice & Warning.....

The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of substances known to the State of California to cause cancer, reproductive harm, and requires businesses to warn consumers of potential exposures to such substances.

Users of this appliance are hereby warned that the burning of gas can result in low-level exposure to some of the listed substances, including benzene, formaldehyde, and soot, due primarily to the incomplete combustion of natural gas or liquid petroleum (LP) fuels. Exhaust ducts should be kept free of obstructions and properly exhausted dryers will minimize exposure.

**⚠ WARNING** — For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
  - Do not try to light any appliance.
  - Do not touch any electrical switches, do not use any phone in your building.
  - Clear the room, building or area of all occupants.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

# Important Safety Instructions .....


**⚠ WARNING — To reduce the risk of fire, electric shock or injury to persons when using your appliance, follow basic precautions, including the following:**

1. Read all instructions before using the appliance.
2. To avoid the possibility of fire or explosion:
  - a. Do not dry items that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable or explosive substances as they give off vapors that could ignite or explode. Any material on which you have used a cleaning solvent, or which is saturated with flammable liquids or solids, should not be placed in the dryer, until all traces of these flammable liquids or solids and their fumes have been removed. There are many highly flammable items used in homes, such as: acetone, denatured alcohol, gasoline, kerosene, some liquid household cleaners, some spot removers, turpentine, waxes and wax removers.
  - b. Items containing foam rubber (may be labeled latex foam) or similarly textured rubber-like materials must not be dried on a heat setting. Foam rubber materials when heated, can under certain circumstances produce fire by spontaneous combustion.
3. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
4. Before the appliance is removed from service or discarded, remove the door to the drying compartment.
5. Do not reach into the appliance if the drum is moving.
6. Do not install or store this appliance where it will be exposed to the weather.
7. Do not tamper with controls.
8. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in published user-repair instructions that you understand and have the skills to carry out.
9. Do not use fabric softeners or products to eliminate static unless recommended for dryer use by the manufacturer of the fabric softener or product.
10. Clean the lint screen before or after each load.
11. Keep the area around the exhaust opening and surrounding areas free from lint accumulation, dust and dirt.
12. The interior of the dryer and exhaust duct should be cleaned periodically by qualified service personnel.
13. This appliance must be properly grounded. Never plug the appliance cord into a receptacle which is not grounded adequately and in accordance with local and national codes. See installation instructions for grounding this appliance.
14. Do not sit on top of the clothes dryer.

**⚠ WARNING — Do not place into your dryer items that have been spotted or soaked with vegetable oil or cooking oil. Even after being washed, these items may contain significant amounts of these oils. The remaining oil can ignite spontaneously. The potential for spontaneous ignition increases when the items containing vegetable oil or cooking oil are exposed to heat. Heat sources, such as your clothes dryer, can warm these items, allowing an oxidation reaction in the oil to occur. Oxidation creates heat. If this heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing these kinds of items may prevent heat from escaping and can create a fire hazard.**

**All washed and unwashed fabrics that contain vegetable oil or cooking oil can be dangerous. Washing these items in hot water with extra detergent will reduce, but will not eliminate, the hazard. Always use the "cool down" cycle for these items to reduce the items' temperature. Never remove these items from the clothes dryer hot or interrupt the drying cycle until the items have run through the "cool down" cycle. Never pile or stack these items when they are hot.**

## Save These Instructions

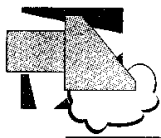

# Dryer Exhaust Tips .....


**⚠ WARNING** — Plastic or nonmetal flexible duct presents a potential fire hazard.

## Do

Read the installation instructions and the user's guide.


## Do

Let your dryer exhaust the air easily.

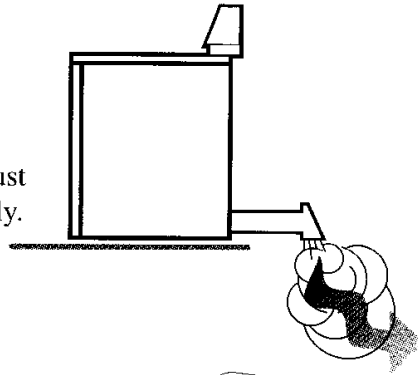


## Do

Use 4 inch diameter rigid metal duct. Tape all joints. Never use lint-trapping screws.

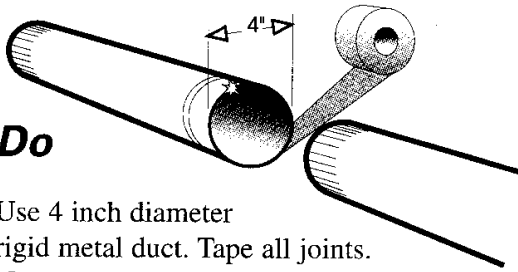


## Do

Keep duct runs as straight as possible.

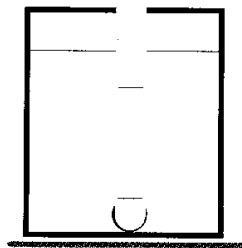


## Do

Clean all old ducts before installing your new dryer. Be sure vent flap opens and closes freely.

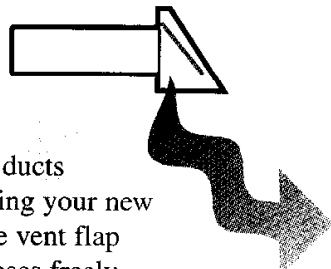

## Don't

Let a poor exhaust system cause slow drying.

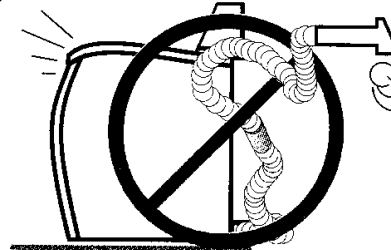


## Don't

Restrict your dryer with a poor exhaust system.


## Don't

Use plastic, thin foil, or non-metal flexible duct.

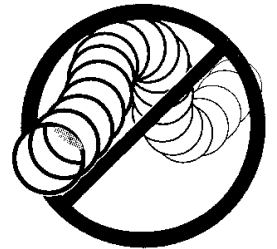


## Don't


Use longer than necessary duct runs with many elbows.

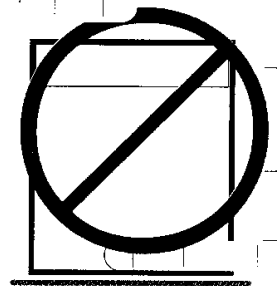

## Don't

Allow crushed or clogged ducts and vent.

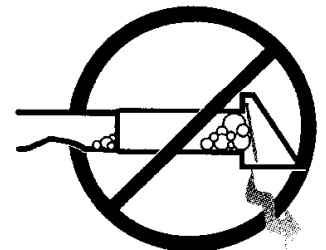


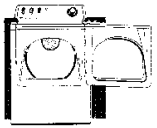

## Operating Tips .....

### **Clean the Lint Filter...**


- after each load.
- to shorten drying time.
- to operate more energy efficiently.

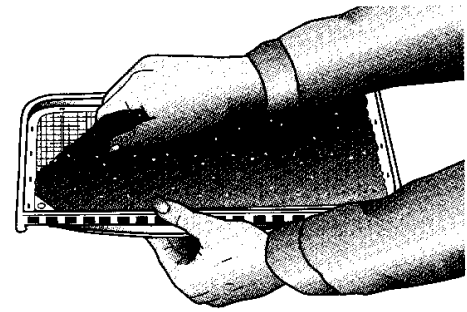

**NOTE:** Do not operate the dryer without the lint filter in place.

### **Load the Dryer Properly...**

- by placing only one wash load in the dryer at a time.
- avoid very small loads or mixing heavyweight and lightweight clothes.
- when only one or two articles need drying, add a few similar items to improve tumbling and drying efficiency.

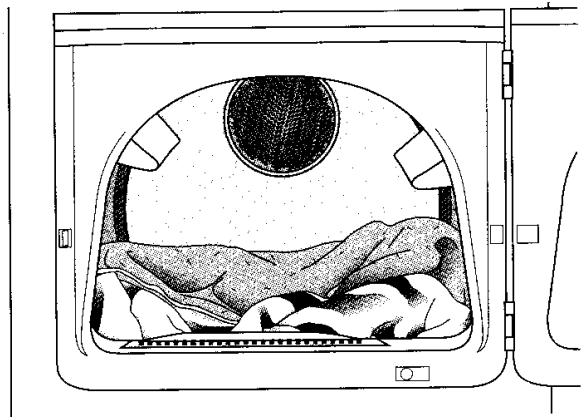

### **Add A Fabric Softener Sheet...**

**(If So Desired)**

- after loading the dryer.
- to control static cling.
- before the load becomes warm. This helps prevent greasy-looking softener stains.
- and remove any used softener sheets from the dryer to prevent greasy-looking softener stains.



# Controls At A Glance .....


Features may vary according to model.

## Step 1 Select Cycle

**Auto Dry EASY CARE/PERMANENT PRESS with Press Care** is designed for permanent press or man-made fabrics such as acrylic, nylon, polyester or blends. It minimizes wrinkling by providing an extended cool down period by tumbling the load in unheated air at the end of the cycle. Simply set the control to the desired dryness level (more dry – less dry). The triangle symbol, ▲, is the initial preferred setting for the majority of loads.

2

TEMPERATURE

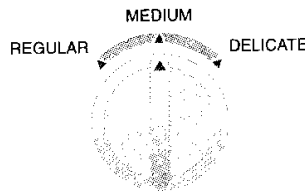

3

START



**MAYTAG** DEPENDABLE CARE / QUIET PACK / HEAVY DUTY / AUTO DRY CONTROL / 6 CYCLES

## Step 2 Select Temperature

**REGULAR** – for sturdy cottons or those labeled “Tumble Dry”.

**MEDIUM** (select models) – for permanent press, synthetics, lightweight cottons or items labeled “Tumble Dry Medium”.

**DELICATE** – for heat sensitive items labeled “Tumble Dry Low” or “Tumble Dry Warm”.

**AIR FLUFF** (select models) – tumbles without heat. Used for sensitive loads or items needing freshening.

## Step 3 Press Start


Push this button to start the dryer. The door must be shut for the dryer to operate. If the door is opened during the cycle, the button must be pushed again to resume the cycle once the door is closed.

### END OF CYCLE SIGNAL

Shortly before the cycle is complete, an audible signal will sound. During the cool down of the Easy Care/Permanent Press cycle, the audible signal will sound intermittently.

*Note: The dial can be turned in either direction to select a cycle. Once started, the dial will not advance at a specific rate during the Auto Dry cycles. At first the dial may not advance at all. Toward the end of the cycle (when the load begins to dry) the dial will advance at a more regular rate and much more quickly. This is normal operation.*

**Auto Dry REGULAR** is designed for loads such as towels, underwear, t-shirts, jeans, etc. Set the control to the desired dryness level (more dry – less dry). The triangle symbol, ▲, is the initial preferred setting for the majority of loads.

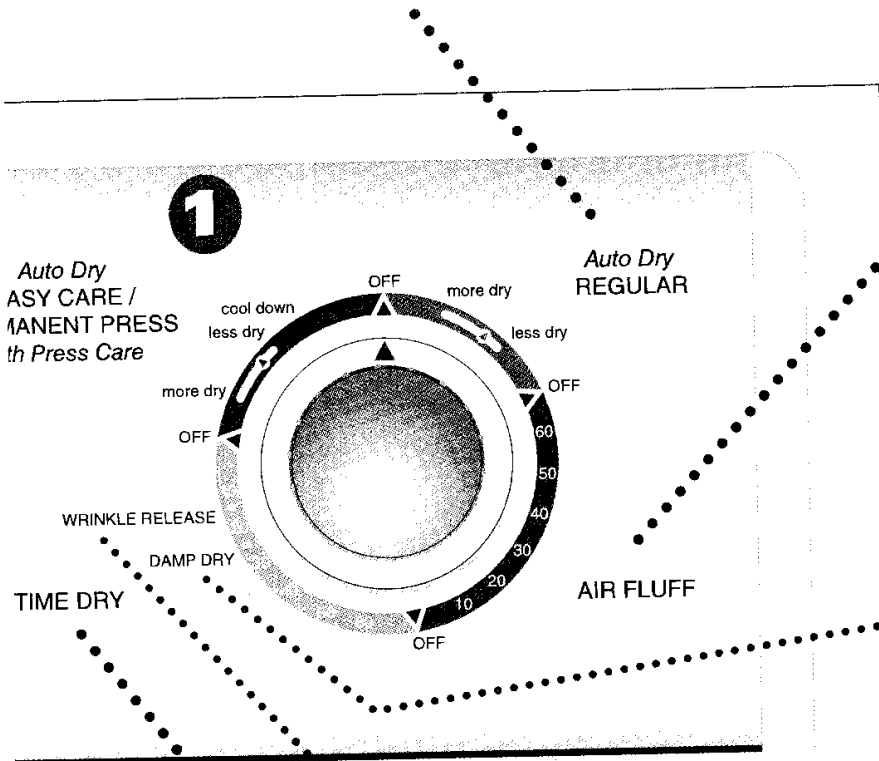

**AIR FLUFF** provides tumbling without heat for sensitive loads or items needing freshening. As example: certain sweaters, shower curtains, camping gear, pillows, etc. Set the control to the desired number of minutes.

**DAMP DRY** is designed to “partially” dry items. It provides approximately 20 minutes of heated tumbling and 5 minutes of cool down tumbling without heat.

**WRINKLE RELEASE** will release wrinkles from items that are clean and dry but slightly wrinkled, such as from a crowded closet, packed suitcase or from sitting in the dryer too long after the end of the cycle. It provides 10 minutes of heated tumbling and 5 minutes of cool down tumbling without heat.

**TIME DRY** may be selected for any load if the *Auto Dry* sensor system is not desired. Set the control to the desired number of minutes and choose the appropriate drying temperature for the load.



## Care and Cleaning .....

**Control Panel** – clean with a soft, damp cloth. Do not use abrasive substances.

**Tumbler** – remove any stains (such as crayon, ink pen or fabric dye) with an all purpose cleaner. Then tumble old towels or rags to remove any excess stain or cleaning substance.

**Cabinet** – wipe off any marks with soap and water. Use an appliance wax once a year if desired.

**Dryer Exhaust System** – should be inspected and cleaned once a year to maintain optimum performance. The outside exhaust hood should be cleaned more frequently to ensure proper operation. (Refer to the Installation Instructions for more information.)



## Replacing Drum Light .....

*(Select Models)*

Instructions for replacing the bulb:


- 1) Unplug or disconnect the dryer from the electrical power supply.
- 2) Open the door and use a Phillips screwdriver to remove the screw attaching the lens to the tumbler front.
- 3) Remove lens cover by pulling cover toward center of tumbler.
- 4) Rotate bulb counter-clockwise to remove from socket.
- 5) Replace the bulb with a **120 volt, 10 watt maximum** candelabra base light bulb.
- 6) Turn the light bulb clockwise into socket.
- 7) Replace lens cover by hooking plastic tabs into tumbler front below the light housing.
- 8) Reinstall the screw into the lens cover screw hole.
- 9) Reconnect dryer to power supply.




## Reversing the Door.....

Directions for reversing the dryer door.

- 1) Remove the hinge hole covers and screws. Move the door catch cover to the opposite side.
- 2) While supporting the door, remove 2 screws in the hinges that secure the hinges to the cabinet.
- 3) Remove door by lifting **slightly** at the hinges and pulling the hinge tabs out of the hinge slots.
- 4) Move the following parts to the opposite side of the door: 2 hinges and 4 hinge screws, 4 door screws, door strike and screw, inner door cover plate and screw.
- 5) Attach the door to the opposite side of the cabinet using the 2 counter sunk hinge screws. (See below). Screw the lower hinge screw in first. This will help to align the door and hinges.
- 6) Replace the hinge hole covers to the opposite side.

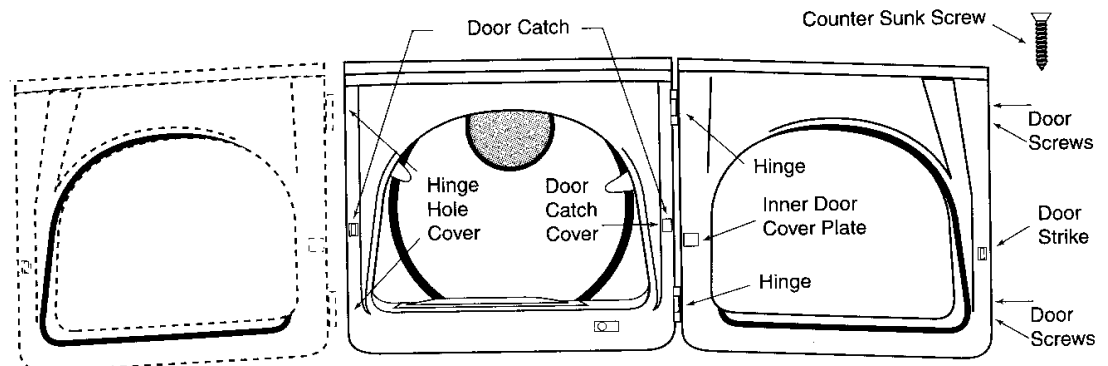



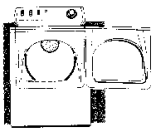

# Drying Rack Installation Instructions.....


(Found in select models or purchased separately from your dealer using part # MAL1000AXX.)

The drying rack allows you to dry items that you don't want to tumble dry; for example, sneakers, washable sweaters, stuffed toys or pillows, etc.

The rack remains stationary, but the drum rotates.  
**(Make sure nothing hangs over the edges of the rack.)**

## To Use Rack:

1. Open dryer door.
2. Position drying rack in tumbler with the two extension wires toward you. These wires will brace the rack against the front surface of the tumbler. Legs will rest on front ledge and at back of drum.
3. Place wet items on the rack, leaving space between them so air can reach all surfaces.
4. Close dryer door.
5. Use the Timed Dry cycle if available or use Auto Dry Regular Fabrics cycle. Select time according to moisture and weight of item. Push the start button. It may be necessary to reset the timer if a longer drying time is needed.

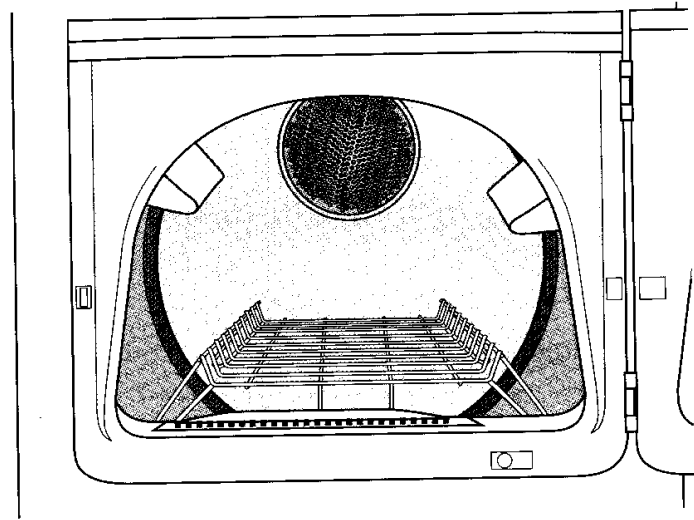

## To Remove Rack:

1. Open dryer door.
2. Lift rack straight up and out.

SUGGESTED ITEMS	SUGGESTED TEMP. SETTINGS
Washable sweaters (block to shape and lay flat on rack)	Heat
Stuffed toys or pillows (cotton or polyester fiber filled)	Heat
Stuffed toys* (foam or rubber filled)	Air Fluff
Foam rubber pillows*	Air Fluff
Sneakers	Air Fluff or Heat

**\*Warning: When drying foam rubber, plastic, or rubber with heat, it is possible they will suffer damage and could lead to a fire hazard.**



# Special Laundry Tips.....

Please follow the care label or manufacturer's instructions for drying special items. If care label instructions are not available, use the following information as a guide.

ITEM	LAUNDERING TIPS
<b>Bedspreads &amp; Comforters</b>	<ul style="list-style-type: none"> <li>• Follow the care label instructions or dry on the Regular cycle.</li> <li>• Be sure it is thoroughly dry before using or storing.</li> </ul>
<b>Blankets</b>	<ul style="list-style-type: none"> <li>• Dry only one blanket at a time for best tumbling action.</li> <li>• Be sure it is thoroughly dry before using or storing.</li> </ul>
<b>Curtains &amp; Draperies</b>	<ul style="list-style-type: none"> <li>• Use the Permanent Press cycle to help minimize wrinkling.</li> <li>• Dry these in small loads for best results and remove as soon as possible.</li> </ul>
<b>Cloth Diapers</b>	<ul style="list-style-type: none"> <li>• Use the Regular cycle to make diapers come out soft and fluffy.</li> </ul>
<b>Down-filled Items</b> (jackets, sleeping bags, comforters, etc.)	<ul style="list-style-type: none"> <li>• Use the Regular cycle and a delicate temperature setting.</li> <li>• Place a clean pair of sneakers in the dryer with the item to fluff the down comforters, etc. Adding a couple of dry towels shortens dry time and absorbs moisture.</li> </ul>
<b>Foam Rubber</b> (rug backs, stuffed toys, certain shoulder pads, etc.)	<ul style="list-style-type: none"> <li>• DO NOT dry on a heat setting. Use the Time Dry/Air Fluff (no-heat) cycle.</li> <li>• <b>⚠ WARNING</b> – Drying a rubber item with heat may damage it or be a fire hazard.</li> </ul>
<b>Pillows</b>	<ul style="list-style-type: none"> <li>• DO NOT dryer-dry kapok or foam pillows.</li> <li>• Use the Regular cycle.</li> <li>• Add a couple of dry towels and a pair of clean sneakers to help the tumbling action and to fluff the item.</li> </ul>
<b>Plastics</b> (shower curtains, outdoor furniture covers, etc.)	<ul style="list-style-type: none"> <li>• Use the Time Dry/Air Fluff cycle on a Delicate or Air Fluff temperature depending on the care label instructions.</li> </ul>

### *Avoid Dryer Drying...*

- *Fiberglass Items (curtains, draperies, etc.)*
- *Woolens, unless recommended on the label.*
- *Vegetable or cooking oil soaked items. (See pg.2)*



# Before You Call.....

## Check these points if your clothes dryer...

### Doesn't Run

- Be sure the door is latched shut.
- Be sure the power cord is plugged into a live electrical outlet.
- Check the home's circuit breaker and fuses.
- Press the START button again if the door is opened during the cycle.

### Doesn't Heat

- Check the home's circuit breaker and fuses.
- Select a heat setting, not air-fluff.
- On a gas dryer, check that the gas supply is on.
- Clean the lint filter and exhaust duct.

### Doesn't Dry

- Check all of the above, plus...
- Be sure the exhaust hood at the outside of the home can open and close freely.
- Use 4" rigid metal exhaust duct.
- Do not overload. 1 Wash load = 1 Dryer load.
- Sort heavy items from lightweight items.
- Check that the washer is draining properly to extract adequate water from the load.

### Is Noisy

- Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly.
- Be sure the dryer is leveled properly as outlined in the installation manual.
- Be sure the rubber feet are installed on the leveling legs.

### Control Knob Advances Slowly

- This is normal operation for an Auto Dry cycle, especially at the beginning of cycle. Once the load begins to dry, the control knob will start to advance. The rate of advancement will be slow at the beginning of the cycle because there is more moisture in the load. As the load becomes more dry, the control knob will advance more quickly.

*For further assistance, call Maytag Customer Assistance: U.S. 1-800-688-9900 or Canada 1-800-688-2002.*

*U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2080.*



# Clothes Dryer Warranty.....

## Full One Year Warranty

For one (1) year from the date of original retail purchase, any part which fails in normal home use will be repaired or replaced free of charge.

## Limited Warranty

After the first year from date of original retail purchase, through the time periods listed below, the parts designated below which fail in normal home use will be repaired or replaced free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

**Second Year** – All parts.

**Third Through Fifth Year** – Dryer tumbler.

## Additional Limited Warranty Against Rust-Through

Should an exterior cabinet, including the door, rust through during the one year period starting from the date of retail purchase, repair or replacement will be made free of charge. After the first and through the tenth year, repair or replacement will be made free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

**Please Note:** This full warranty and the limited warranties apply when the dryer is located in the United States or Canada. Dryers located elsewhere are covered by the limited warranties only, including parts which fail during the first two years.

## Canadian Residents

This warranty covers only those dryers installed in Canada that have been listed with Canadian Standards Association unless the dryers are brought into Canada due to transfer of residence from the United States to Canada.

The specific warranties expressed above are the **ONLY** warranties provided by the manufacturer. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

## To Receive Warranty Service

To locate an authorized service company in your area, contact the Maytag dealer from whom your appliance was purchased or call Maytag Customer Service. Should you not receive satisfactory warranty service, please call or write:

Maytag Customer Assistance  
c/o Maytag Customer Service  
P.O. Box 2370

Cleveland, TN 37320-2370

**U.S. 1-800-688-9900**

**CANADA 1-800-688-2002**

**U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2080.**

When contacting Maytag Customer Service be sure to provide the model and serial numbers of your appliance, the name and address of the dealer from whom you purchased the appliance and the date of purchase.

**This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**

**Should you still have a problem,** write to: Major Appliance Consumer Action Program (MACAP), 20 North Wacker Drive, Chicago, Illinois 60606, MACAP is an industry sponsored but independent group of consumer experts who receive and act on complaints from appliance owners.

**NOTE:** When writing about an unsolved service problem, please include the following information:

- (a) Your name, address and telephone number;
- (b) Model number and serial number (found on lower center of door opening) of your appliance;
- (c) Name and address of your dealer and date the appliance was bought;
- (d) A clear description of the problem you are having with the appliance.

**MAYTAG • One Dependability Square • Newton, Iowa 50208**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>