

# READ AND SAVE THESE INSTRUCTIONS

**WARNING:** A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

## Espresso/Cappuccino Maker

**USE AND CARE GUIDE FOR  
MODELS MEXKITB, MEX1B  
AND MEX1BCAN**



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all instructions before using appliance.
- Do not touch hot surfaces. Use handles or knobs.
- When in use, the appliance is under pressure and should never be left unattended.
- Do not immerse cord, plug or appliance in water or other liquid. See instructions for cleaning.
- This appliance is not for use by children.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use. Unplug and allow to cool before putting on or taking off parts and before cleaning.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized Service Center for examination, repair or adjustment.
- Use attachments only if recommended by the manufacturer.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Prior to connecting or disconnecting plug from wall outlet, turn function knob to **“OFF.”**
- Never use the appliance without water.
- Only use appliance as indicated in these instructions.
- Keep steam-jet control knob in closed position when not being used.
- Be certain lids are securely in place before operating appliance.
- Do not unscrew or remove safety lid while the appliance is in operation as scalding may occur. Wait until brewing cycle is completed and all water and steam has been used up.
- **CAUTION:** Relieve pressure through steam tube before removing cup or brew basket.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with abrasive cleansers, steel wool pads, or other abrasive material.

- **WARNING:** Do not remove bottom cover. No user serviceable parts inside. Repair must be done by authorized service personnel only.

# SAVE THESE INSTRUCTIONS

## THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY


**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drop over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

**POLARIZED PLUG:** This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug, If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**ELECTRIC POWER:** If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be

## Getting to Know Your Espresso/Capuccino Maker


 
Before using your machine for the first time, you must become familiar with all of the parts. Read all instructions and cautions carefully.

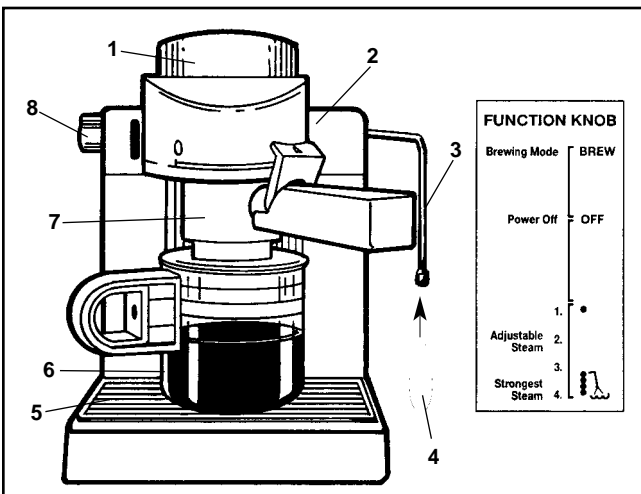


1. Safety lid
2. Water reservoir
3. Steam jet
4. Froth booster tip
5. Drip plate
6. Carafe with lid
7. Filter basket and holder
8. Function knob

**Before making your first carafe of espresso**, we suggest that you let the water brew through the machine two times without coffee, following the instructions. This will thoroughly clean the unit.


# Making Espresso Coffee

1. Make sure the **function knob** is in the “**OFF**” position. Plug the espresso/cappuccino maker into a 120V AC electrical outlet.
2. Remove the safety lid by turning it counter-clockwise and remove from the appliance.
3. For espresso fill carafe to two or four cups of cold water, using the markings on the carafe for reference. For cappuccino, fill the carafe  to  for 2 cups or to the bottom of the metal band for 4 cups. Pour water into the water reservoir.
4. Close the safety lid tightly by turning clockwise.
5. Remove the filter basket and holder from the espresso/cappuccino maker by turning clockwise. With the measuring spoon, measure espresso coffee and place into the filter basket. (Do not compress/tap the coffee.)

 
**NOTE:** Be sure to use coffee which is **MEDIUM TO FINE GROUND**.

6. Place the filter basket into the filter holder.
7. Pull back the tab and insert the filter holder into the brewing head lock aligning the arrow on the filter holder with the  on the machine. Push the filter holder upward so it will be aligned with the matching slots. Turn handle counter-clockwise until securely locked. Place the cover on the carafe and return the carafe to the drip plate. Align hole in lid under filter.
8. Switch the **function knob** to “**BREW**.”
9. After approximately four minutes, espresso coffee will flow into the carafe.


**NOTE:** For cappuccino, refer immediately to the Making Cappuccino section.

10. Do not open the safety lid or remove the filter holder during the brewing process – scalding may occur.
11. When the coffee has stopped flowing into the carafe, turn the **function knob** to the “**OFF**” position.
12. **BEFORE REMOVING THE FILTER HOLDER OR THE SAFETY LID, TURN THE FUNCTION KNOB TO  AND WAIT UNTIL NO FURTHER STEAM EMERGES FROM THE STEAM JET.** Then turn the function knob back to the “**OFF**” position.

# Making Cappuccino

1. Cappuccino is a mixture of espresso coffee, milk and frothed milk. Fill a deep, narrow metal pitcher 1/2 full with fresh, cold milk and set next to the espresso/cappuccino maker.
2. Place the frothing booster tip up over the end of the steam jet. Follow Steps 1 through 9 on page 4 for making espresso.
3. When the coffee starts to flow into the carafe, hold the pitcher by the handle and bring up to the steam jet. Insert froth booster tip *just under the surface of the milk*. Turn the **function knob** gradually to  and froth the milk. Move the pitcher in a slightly circular motion.

**REMINDER: Before frothing milk, make sure the tip of the froth boother tip is just under the surface of the milk. Otherwise, splattering may occur.**

4. After frothing, turn the **function knob** to “**BREW**,” to allow the appliance to complete the espresso making process.
5. Remove the pitcher from the steam jet.
6. When the coffee has stopped flowing into the carafe, turn the **function knob** to the “**OFF**” position.
7. **BEFORE REMOVING THE FILTER HOLDER OR THE SAFETY LID, TURN THE FUNCTION KNOB TO  AND WAIT UNTIL NO FURTHER STEAM EMERGES FROM THE STEAM JET.**  
This will allow any extra steam to be released and will clean the steam jet of any excess milk. Then turn the function knob back to the “**OFF**” position.
8. Serve the hot, frothy milk by spooning it on top of your cup of espresso. The froth will not readily pour from the container, since it separates from the heated milk.

The best frothed milk is obtained when fresh, cold, skim milk is used. When frothing milk, the volume of milk will double.

The top half will be frothed, the bottom half will be milk. Fill a cappuccino cup 1/3 full of freshly brewed espresso coffee. Pour in an equal amount of warm milk and top with frothed milk.

# User Maintenance Instructions


1. Unplug the espresso/cappuccino maker from the electrical outlet and allow to cool **completely** before cleaning.
2. The coffee filter basket and holder should be emptied and rinsed thoroughly with warm water after every use. Dry thoroughly.
3. Clean the carafe and carafe lid with warm, soapy water. **Handle with extreme care, as glass will become slippery when wet.**
4. The carafe drip plate can be removed and washed in warm water.
5. Wipe the outside of your espresso/cappuccino maker with a damp cloth. **NEVER IMMERSER THE APPLIANCE IN WATER OR ANY OTHER LIQUID.**
6. This appliance is for **HOUSEHOLD USE ONLY!**

## Descaling

If you live in a hard-water area, minerals and calcium found in the water will accumulate and affect the operation of your machine. Approximately every six months (this can vary depending on water conditions and frequency of use), your espresso/cappuccino maker should be cleaned with distilled vinegar in the following manner in order to remove the mineral deposits, also referred to as scale.

1. Before cleaning your espresso/cappuccino maker, make sure the **function knob** is in the “**OFF**” position and the appliance has been disconnected from the wall outlet.
2. Fill the carafe with distilled vinegar and pour into the reservoir as you would with water.
3. Securely fasten the safety lid.
4. Attach empty coffee filter basket and holder.
5. Place carafe onto drip plate.
6. Plug the espresso/cappuccino maker into 120V AC electrical outlet.
7. Turn **function knob** to “**BREW.**” In a few minutes, the hot vinegar will start to flow through the coffee basket into the carafe.

# Descaling (Continued)

8. Place steam jet into a tall glass or mug. Move **function knob** to  position during the flowing process only for a few seconds. This will clean any residue left in the tube from the milk steaming process.
9. Turn **function knob** back to “BREW,” permitting the hot vinegar to continue to flow in the carafe.
10. When the flow has stopped, turn **function knob** to “OFF” position and allow to cool completely. Then remove basket, filter, carafe and rinse with hot water.
11. Repeat above steps using cold water to rinse away any residual vinegar. Repeat twice.
12. Turn the **function knob** to the “OFF” position and unplug the espresso/cappuccino maker from the wall outlet.

**Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.**

## IMPORTANT NOTICE

*If any parts are missing or defective,  
**DO NOT** return this product.*

*Please call our Customer Service Department for assistance.*

**800-233-9054** Monday - Friday 9:00 am - 5:00 pm CST

*Thank You*

# ONE-YEAR LIMITED WARRANTY

This Maxim-Toastmaster, Inc. product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished by Maxim-Toastmaster, Inc., or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for Maxim-Toastmaster, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at Maxim-Toastmaster, Inc. option) when the product is returned to the Maxim-Toastmaster, Inc. facility within the warranty period and an additional one-month period. No charge will be made for such repair or replacement.

**Service and Repair:** Should the appliance malfunction, you should first call toll-free 1-800-233-9054 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CUSTOMER SERVICE stating that you are a consumer with a problem.

**In-Warranty Service (USA)** for an appliance covered under the warranty period, no charge is made for service or postage.

**In-Warranty Service (Canada)** for an appliance covered under the warranty period, no charge is made for service or postage. Please return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the address listed below. Customs duty/brokerage fee, if any, must be paid by the consumer.

**Out-of-Warranty Service:** A flat rate charge by model is made for out-of-warranty service. Include \$15.00 (U.S.) for return shipping and handling.

Maxim-Toastmaster, Inc. cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem; your full return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Return the appliance to:

ATTN: Repair Department, Maxim-Toastmaster, Inc.  
550 Business Center Drive  
Mt. Prospect, IL 60056  
Consumer Service: 1-800-233-9054  
Consumer Parts: 1-800-947-3745  
Hours: 9:00 a.m. - 5:00 p.m. CST

**For more information on Maxim-Toastmaster, Inc. products:**

visit our website: URL <http://www.salton-maxim.com> or  
E-mail us at [SALTON550@aol.com](mailto:SALTON550@aol.com)

This Melitta product is distributed and serviced by Salton, Inc.

Printed in Switzerland

©2004 Maxim-Toastmaster, Inc.

®Reg. T.M. of a company of the Melitta Group

Part No. 60493



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>