


# DMX-50

M I C R O S Y S T E M

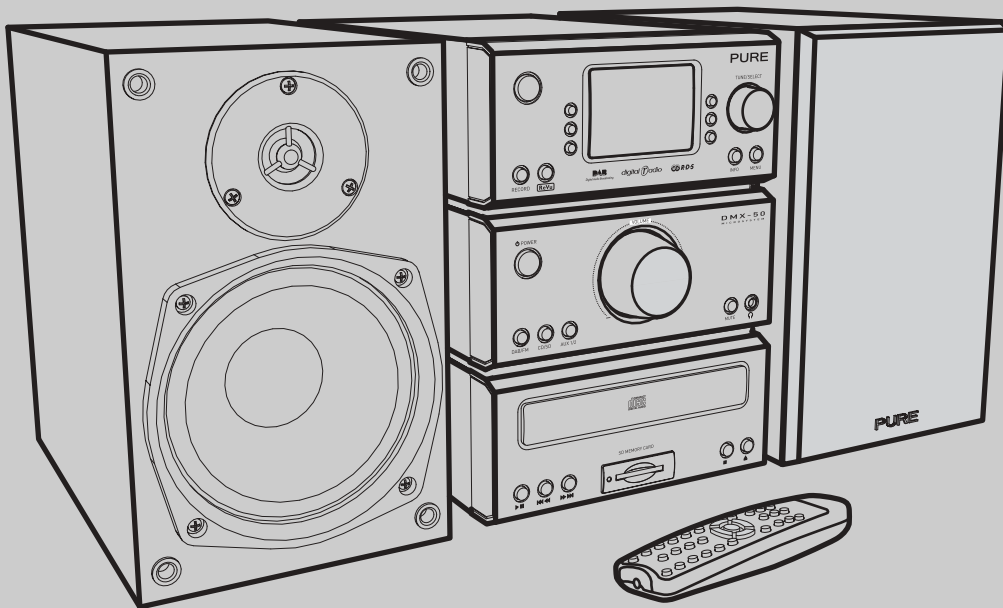

# PURE



## Safety instructions

Keep the unit away from heat sources such as radiators, heaters or other appliances that produce heat.

Ensure that the unit is not placed in such a way as to interfere with proper ventilation. For example the unit should not be placed on soft furnishings that may block ventilation openings or placed in an enclosed unit such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Do not expose the unit to direct sunlight.

Do not use the unit near water.

Avoid objects or liquids getting into the unit.

Do not remove screws from or open the unit casing.



## Care instructions

DMX-50 speaker casings have a wood veneer covering. As with other wood products care must be taken when handling and cleaning to protect the wood from damage.

Do not expose the casings to detergents, solvents or abrasive materials

Do not expose the casings to sources of direct heat such as hot drinks.

Wipe over gently with a soft cloth to clean the casings.

Occasional use of light furniture polish (applied via a soft cloth) will help protect the surface.

## Copyright

Copyright 2005 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

## Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

## Trademarks

DMX-50, the DMX-50 logo, ReVu, the ReVu logo, PURE, the PURE logo, PURE Digital, the PURE Digital logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. All other product names are trademarks of their respective companies.

## Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please register your product on our website at [www.pure.com/register](http://www.pure.com/register) or by filling in and returning your warranty card. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual.

## Credits

This manual was written by Bruce Murray. It is a product of PURE Digital, Imagination Technologies Ltd., Imagination House, Home Park Estate, Kings Langley, Herts, WD4 8LZ, UK.

Version 1    October 2005

# Contents


<b>Getting started</b> .....	<b>2</b>
Overview diagrams .....	2
Connecting speakers .....	4
Switch on and off.....	4
Changing the volume .....	4
Navigating menus .....	4
<b>Listening to DAB radio</b> .....	<b>5</b>
Selecting a station .....	5
Changing the information displayed .....	5
ReVu™ - Pausing and rewinding radio .....	5
Storing and recalling presets .....	6
Changing DAB options.....	6
<b>Playing a CD</b> .....	<b>8</b>
Selecting a track .....	8
Changing the information displayed .....	8
Changing CD options .....	8
<b>Playing an MP3 CD</b> .....	<b>10</b>
Changing the information displayed .....	10
Changing MP3 options.....	10
<b>Listening to FM radio</b> .....	<b>11</b>
Selecting a station .....	11
Changing the information displayed .....	11
Storing and recalling presets .....	11
Changing FM options.....	12
<b>Using an SD memory card</b> .....	<b>13</b>
Inserting and removing a card .....	13
Recording DAB radio.....	13
Playing files from SD card .....	14
Changing the information displayed .....	14
Changing SD card options .....	14
<b>Listening to a connected device</b> .....	<b>16</b>
Adjusting the volume of your connected device .....	16
<b>General setup options</b> .....	<b>17</b>
Audio.....	17
Screen.....	17
Alarm .....	17
Sleep timer .....	17
S/W version .....	17
<b>Hints and tips</b> .....	<b>18</b>
<b>Technical specifications</b> .....	<b>19</b>

# Getting started


## Overview diagrams

These diagrams show the function of controls, the connectors on the rear panel, the remote control and screen icons.


### Front panel

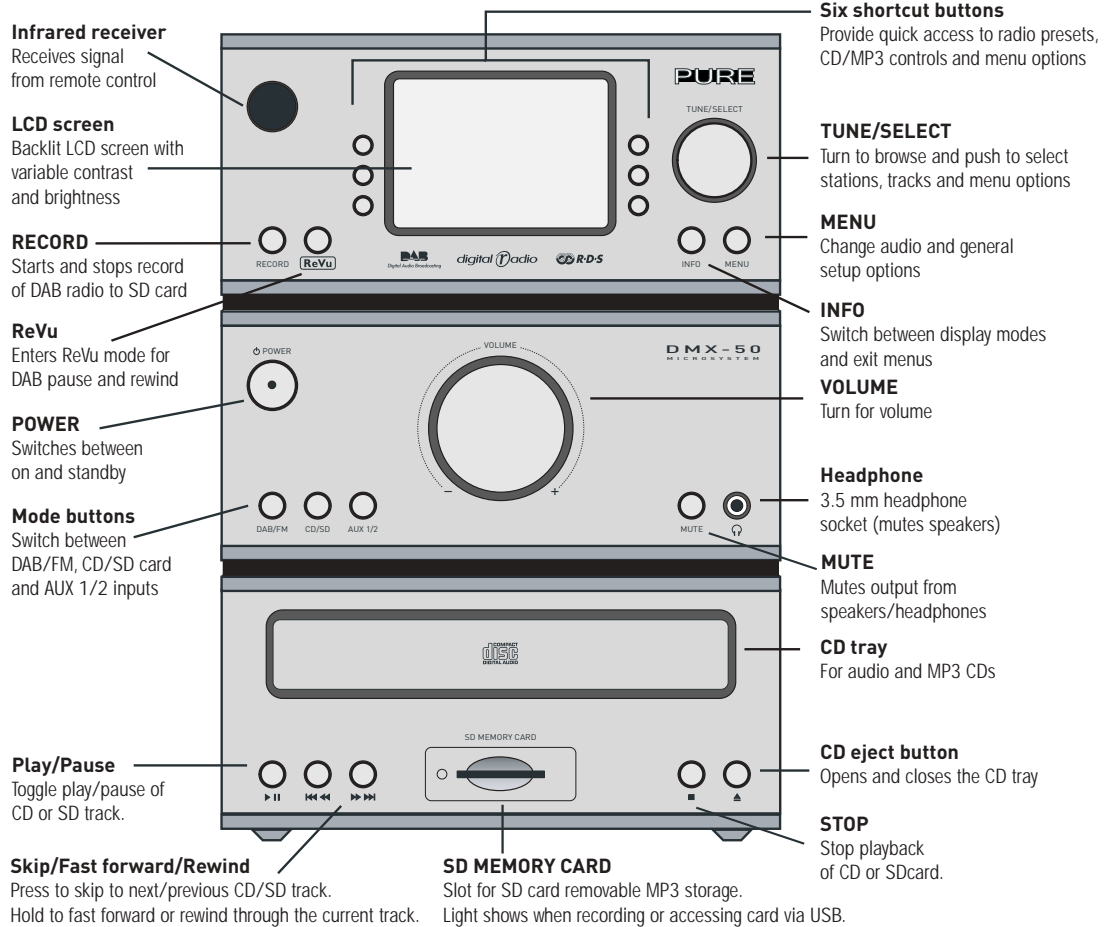


### Rear panel

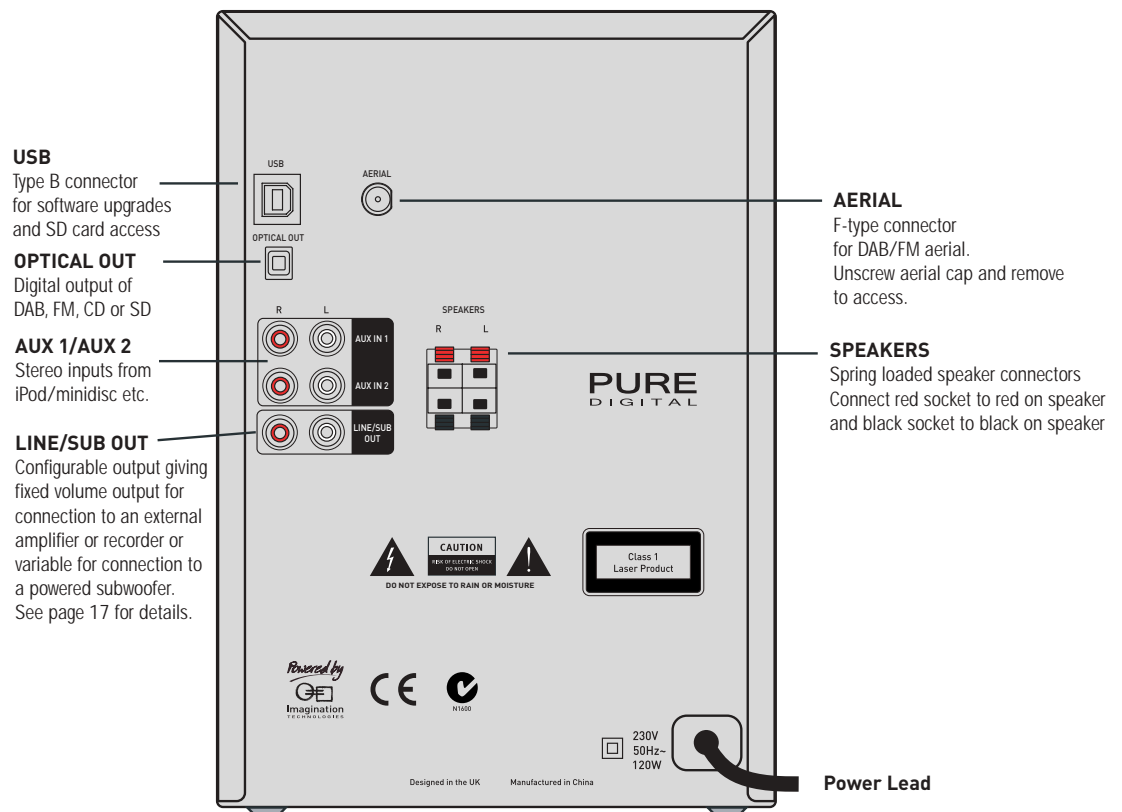


## Remote control

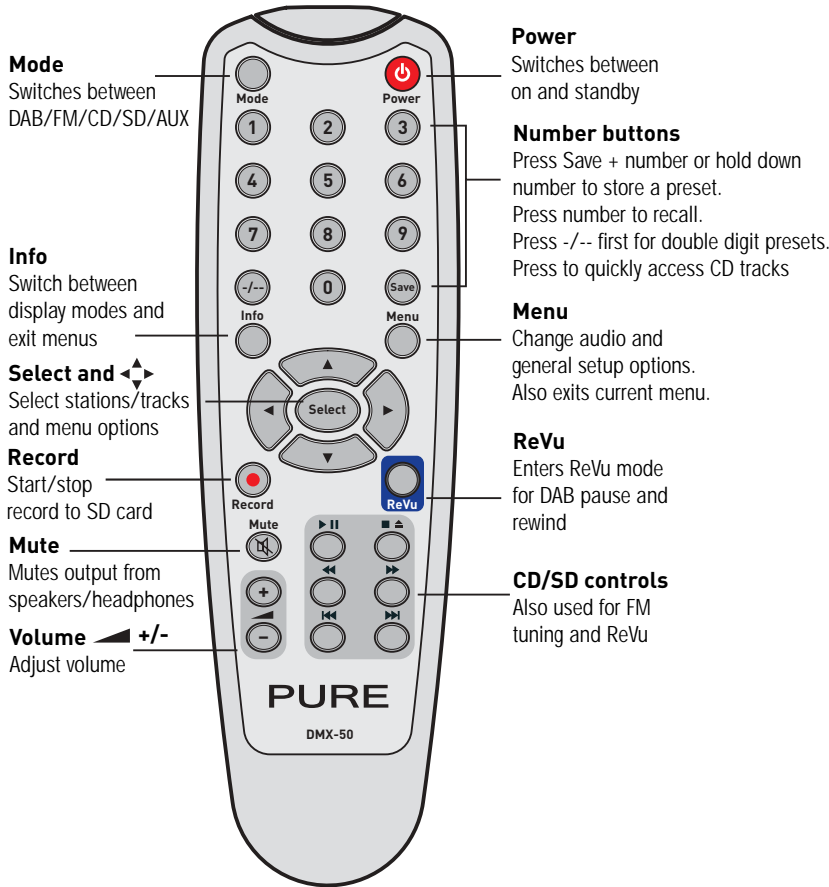


## DAB screen

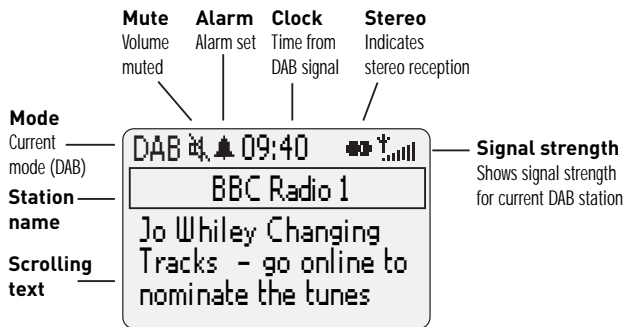


## FM screen

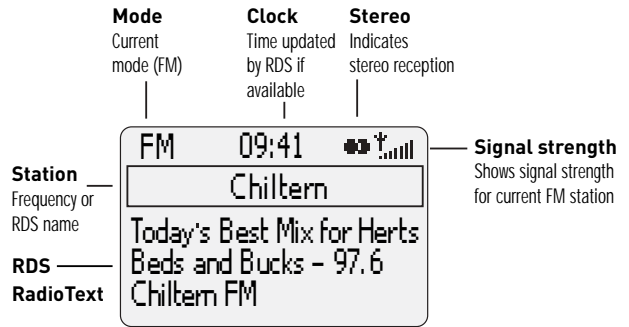


## CD screen

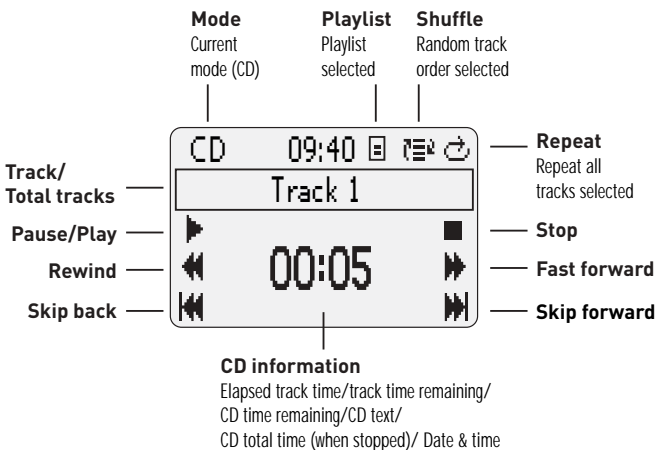


## SD screen

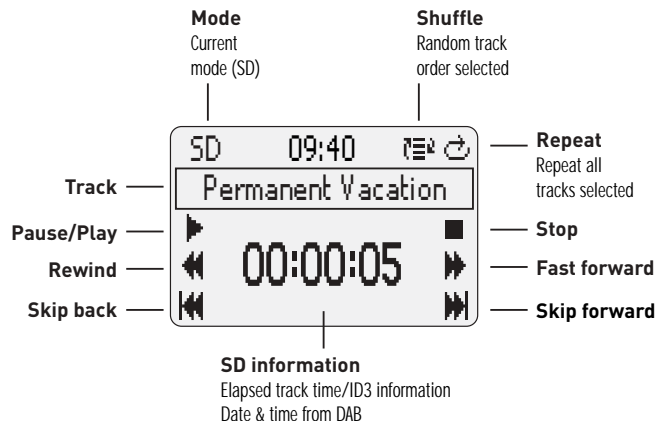


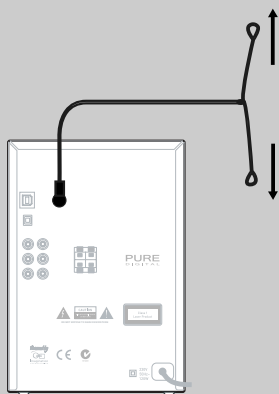


Extending the aerial

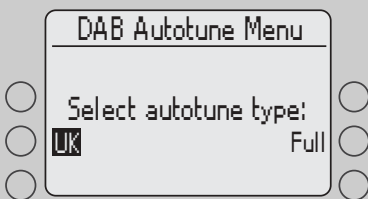

Initial startup screen

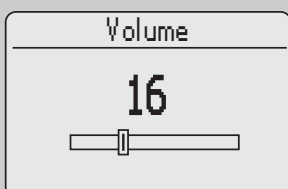

Adjusting volume

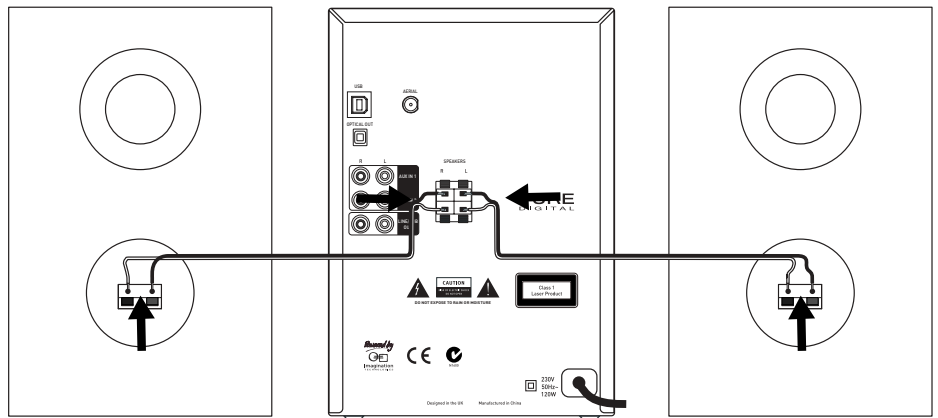

## Connecting speakers

When connecting speakers connect the red (positive) terminals on DMX-50 to the red terminals on the speaker and black (negative) to black. The speaker cable has a darker tint on one strand to aid connection.


Ensure that the bared ends of the wires are securely gripped by the spring clips. Note that the sound from new speakers should improve over the course of a few days as they are 'run-in'.

## Switch on and off

Before switching on for the first time - ensure the aerial is uncoiled and mounted as high as possible.

When you first plug in your DMX-50 it switches to DAB mode and asks you if you want to perform a UK (UK Band III only) or Full autotune (full Band III) to find all DAB stations available in your area. These stations are stored in a station list and ordered alphanumerically.

The first station on the station list is selected.





To switch your unit off (standby) - press the POWER button on the unit or remote control. You see the standby symbol  and clock on the screen. Push the INFO button to change between a small clock, large clock and day/time /date display in standby.

To switch your DMX-50 back on press the POWER button again. Your unit starts in whatever mode you were in when you switched off.

## Changing the volume

Use the large Volume dial on the main unit or volume buttons on the remote control to adjust the volume. When you adjust the volume you temporarily see the volume scale on screen indicating the current level. You can also Mute the volume using the MUTE button on the main unit or remote control.

## Navigating menus

You turn the TUNE/SELECT dial to scroll through menu options or station or track lists and push the dial to select options. In most menus if you do not select anything you return to the previous screen. Alternatively use the equivalent (    + Select) remote control buttons. You can also press a shortcut button to select the option shown on screen next to that button.

# Listening to DAB radio

To listen to DAB radio press the DAB/FM button on the main unit or Mode button on the remote until you see DAB in the top left of the screen.

When you first switch on your DMX-50 it automatically enters DAB mode, autotunes to find all DAB stations available in your area and lists them in alphanumeric order.

## Selecting a station

To change stations, turn the TUNE/SELECT dial to scroll through the station list, then push the dial to tune to the highlighted station. Alternatively use the (▲▼ + Select) remote control buttons.

The currently selected station is shown in the box at the top of the screen.

## Changing the information displayed

To change what you see on screen while you listen to DAB radio press the INFO button. Choose between the following options:

- Text** Scrolling text broadcast by most stations.
- Reception info** DAB channel and frequency of the station you are listening to, signal strength meter and signal quality reading. As a guide, values from 85 to 100 indicate good reception, 70 to 84 average reception and 0 to 69 poor reception.
- Broadcast info** Name of the multiplex the current station belongs to. Multiplexes are groups of stations broadcast by a single operator. Description of the content broadcast by the station, Stereo or Mono indicator and data rate at which the station is being transmitted. This rate is set by the stations to suit the type of material being transmitted. High rates generally mean higher quality.
- Presets** DAB presets for quick access to your favourite stations using the six shortcut buttons.
- Date and time** Date and time broadcast by the multiplex.

## ReVu™ - Pausing and rewinding radio

ReVu mode lets you pause and rewind live DAB digital radio.


DMX-50 constantly stores audio and text from the station you are tuned to in its memory. The amount stored depends on how long you have been listening to that station and the data rate of the broadcast. You can access this stored audio and pause or rewind live radio over short periods (approximately 10 to 20 minutes depending on data rate).

Once the memory is full, ReVu keeps adding to the memory but starts to overwrite the oldest stored audio and text.

You can enter ReVu mode in two ways:

**Paused** - press and release the ReVu button or pause button on the remote


**Fast forward/rewind** - press and hold the ReVu button for three seconds or press the fast forward/rewind or skip forward/back buttons on the remote

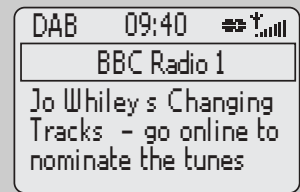

Default DAB screen



Selecting a station

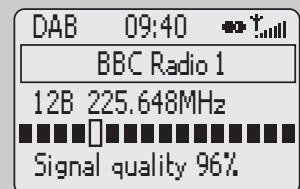


Information modes - Reception info



Information modes - Broadcast info



Information modes - Date and time

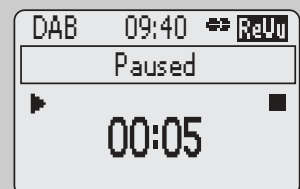


ReVu mode - paused



ReVu mode - playing



Presets 1 to 4

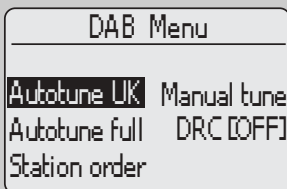

DAB options

When you enter ReVu mode you see the ReVu icon on the screen and a timer shows how many minutes and seconds behind the live broadcast you are.

Once in ReVu mode you can toggle between paused and playing by pushing the ReVu button again or pressing the pause/play (||/▶) button. To exit ReVu mode and return to the live broadcast press the stop button (■) or press TUNE/SELECT or press the skip forward (▶▶) button to catch up with the live broadcast but remain in ReVu mode.

### To pause and replay live radio

Press the ReVu button. The screen shows 'Paused' and the timer shows how far behind the live broadcast you are.

Press the ReVu button again to start replaying the stored audio and text from where you left off. The timer stops counting, showing that you are now listening that many minutes and seconds behind real time. You can listen in this way for as long as you like, or press the fast forward, skip forward, stop button or press TUNE/SELECT to catch up to real time.

### To rewind radio

Press the ReVu button twice. Use the Rewind (◀◀) button to move back in the recorded audio or the skip back (◀◀) button to return to the start.

## Storing and recalling presets

You can store up to 99 of your favourite stations as presets which you can then access quickly using the shortcut buttons or remote control. You can store and access presets while using ReVu but changing station will exit ReVu.

Press any shortcut button or ◀/▶ buttons on the remote or set the Information mode to show the presets as described on page 5. This shows the first page of presets on the screen. Flick through the other pages of presets using the left (◀) and right (▶) shortcut buttons, ◀/▶ on the remote or skip buttons on the remote.

**To store a preset** - Hold down the shortcut button or numbered button on the remote you want to store the current station to until the station name appears or press the Save button and numbered buttons on the remote. The preset is stored.

**To recall a preset** - Press the shortcut button next to the preset you want to listen to or press the number buttons on the remote.

## Changing DAB options

To customise the way your DMX-50 works in DAB mode press the Menu button, select DAB and choose from the following:

### Autotune UK

Scans all UK frequencies for DAB stations and adds any new ones to the station list.

### Autotune full

Scans the full range of digital frequencies in Band III. This option is for use outside the UK where other Band III stations may be available.



## Station order

Change the order of stations on your station list using this option. The current order is shown at the top of the screen. Choose from the following:

- Alphanumeric** Displays all stations in alphanumeric order.
- Favourite** Displays your eight most listened to stations at the top of the station list and the others below. Your favourite stations are selected by how long you listen to each station and indicated by a heart next to the name in the station list.
- Active** Displays active stations at the top of the station list and inactive ones at the bottom, in alphanumeric order. Inactive stations are those on your station list but not currently available, marked with a '?'.
- Multiplex** Lists stations in groups according to their multiplex. Multiplexes are groups of stations owned and broadcast by a multiplex operator.
- Trim stn list** Removes inactive stations from the station list.
- Favs → presets** Available only when Favourite station order (above) has been selected. Transfers your eight favourite stations to presets.

## Manual tune

Find new stations or fine tune your reception using this option.


You see a list of channels and frequencies. Each multiplex has a different channel and frequency (E.g., BBC is channel 12B and Digital One is 11D).

1. Select the channel you want from the list.  
You see a signal strength display. The marker indicates the minimum required level for reception and the filled blocks indicate the current level.
2. Move your aerial and try to raise the current level to the marker or beyond. You see the multiplex name at the top of the screen if a good signal is received and the stations in that multiplex are listed below and added to the station list.
3. Select a station or press INFO or MENU to exit manual tuning.


## DRC

Make the quieter sounds in a broadcast easier to hear at low volume or in a noisy environment using this option. The DRC (Dynamic Range Control) level of a broadcast is set by the station and sent with the signal. At the time of writing only stations such as BBC Radio 3 and 4 regularly broadcast a DRC level. Check with the broadcasters to find out if they use DRC on their stations. Select one of the following options:

- DRC OFF** DRC is switched off. Any DRC level broadcast is ignored. This is the default setting.
- DRC HALF** DRC level is set to half that sent with the broadcast.
- DRC FULL** Applies the DRC level as sent with the broadcast.

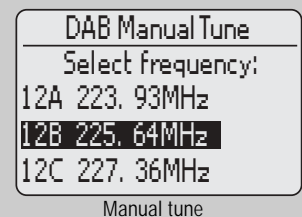


# Playing a CD

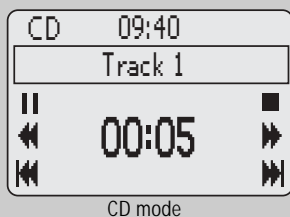


CD mode




Selecting a track

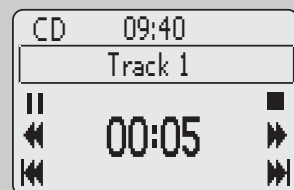

CD time into track

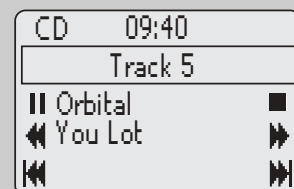

CD text

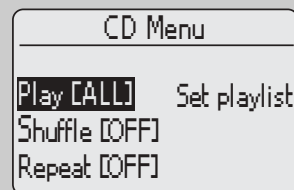

CD options

To listen to a CD press the CD/SD button or press the Mode button on the remote until you see CD in the top left of the screen.

Press the eject button (▲) and place your CD label side up in the CD tray. Press the eject button again to load the CD. DMX-50 checks the CD type and loads a track list. If you insert a CD with MP3 files on it DMX-50 enters MP3 mode, see page 10.

If you close the CD tray by pushing the tray or pressing play the CD automatically starts playing. You see the standard CD controls, track title and time into track on the screen.

## Selecting a track

To change tracks on a CD, either:

- turn the TUNE/SELECT dial to scroll through the track list, then push the dial to play the highlighted track or use the (▲▼ + Select) buttons on remote.
- use the skip forward or skip back buttons, shortcut buttons on screen or skip buttons on remote
- select a track number using the numbered buttons on the remote

## Changing the information displayed

To change what you see on screen while you listen to a CD push the INFO button. Choose from the following options:

- |                        |   |
|------------------------|---|
| <b>Track elapsed</b>   | Time the current track has been playing, or if stopped total time and number of tracks on the CD. |
| <b>Track remaining</b> | Time remaining of the current track.  |
| <b>Disc remaining</b>  | Time remaining of current CD.   |
| <b>CD text</b>         | Displays album name, track information, artist, etc., if included on the CD.                      |
| <b>Date and time</b>   | Obtained from the DAB or FM (RDS) signal.   |

## Changing CD options

To customise the way DMX-50 works in CD mode press the Menu button, select CD and choose from the following:

### Play

Press Select to choose between playing all tracks on the CD [ALL] or just those on a playlist you have created [LIST]. See Set playlist below for details of creating a CD playlist. If you select LIST you see the playlist icon (☰).

### Shuffle

Press Select to choose between playing CD tracks in the order they appear on the disc [OFF] or in a random order [ON]. If you select ON you see the shuffle icon (🎲).

### Repeat

Press Select to choose between repeating the current track [TRACK] when it ends or the whole disc [ALL]. This loops continuously until you set it to [OFF]. If you select TRACK you see the repeat track icon (🔄), if you select ALL you see the repeat all icon (🔄).

## Set playlist

Create a playlist containing the order in which to play up to 20 tracks from the current CD. To create a playlist:

1. Turn the TUNE/SELECT dial and push to set the first track on your playlist.
2. Repeat until you have completed your playlist and select OK or press the bottom right shortcut button (OK) to set your playlist and exit. This automatically sets the Play mode to [LIST].


You see the playlist icon (  ).

Alternatively press the left middle shortcut button (Clear) to delete the current playlist order or bottom left shortcut button (Cancel) to exit the screen without saving any changes made

Your playlist is now set and if you play your CD it plays the tracks you specified in the order you specified.

The playlist remains available for as long as the CD inserted. If you eject the CD or change the CD the playlist you created is no longer available.

# Playing an MP3 CD

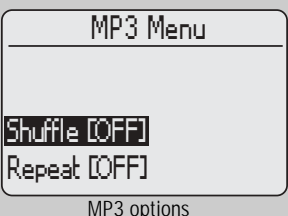

Press the CD/SD button or the Mode button on the remote until you see CD in the top left of the screen to listen to a CD with MP3 files stored on it. DMX-50 automatically detects if a CD has MP3 files on it and changes to MP3 mode.

MP3 files can be in folders on the CD if desired and MP3 playlist files are also supported. MP3 playlist files are simple text files (usually with a .M3U extension) specifying an order in which to play a selection of MP3 files on the CD.

The following icons on the track list help you identify tracks, folders and playlist files:

MP3 files Open folder   
Playlist file Closed folder

Push the eject button and place your MP3 CD label side up in the CD tray. Push the eject button again to load the CD. DMX-50 checks the CD type, changes the mode to MP3 and displays the normal CD controls.

If you close the CD tray by pushing the tray or pressing play the CD automatically starts playing. You see the standard CD controls, track title and time into track on the screen.

## Selecting a track, playlist or folder

To change tracks on an MP3 CD, either:

- turn the TUNE/SELECT dial to scroll through the track list, then push the dial to play the highlighted track or use the (▲▼ + Select) buttons on remote.
- use the skip forward or skip back buttons, shortcut buttons on screen or skip buttons on remote
- select a track number in the current folder using the numbered buttons on the remote. Tracks are numbered in the order they appear on the track list.

## Changing the information displayed

To change what you see on screen while you listen to an MP3 push the Display button. Choose from the following options:

**Time into track** Time the current track has been playing  
**ID3 text** Displays ID3 text – album name, track information artist etc., if included with file  
**Date and time** Obtained from the DAB or FM (RDS) signal.

## Changing MP3 options

To customise the way DMX-50 works in MP3 CD mode press the Menu button, select MP3 and choose from the following:

### Shuffle

Choose whether to play MP3 tracks in the order they appear on the disc, current selected folder or playlist [OFF], or in random order [ON]. If you select ON you see the shuffle icon ( ).

### Repeat

Choose to repeat the current track [TRACK] when it ends or the whole disc, currently selected folder or playlist [ALL]. This loops continuously until you set it to [OFF]. If you select TRACK you see the repeat track icon ( ), if you select ALL you see the repeat all icon ( ).



# Listening to FM radio

To listen to FM radio press the DAB/FM button or the Mode button on the remote until you see FM in the top left of the screen. The first time you enter FM mode DMX-50 asks you to select the FM tuning mode you want. Use the shortcut buttons or TUNE/SELECT dial to select one of the following:

- Autotune** Finds all the stations available in your area and lists them in alphanumerical order using RDS (Radio Data System) station names where available.
- Manual tuning** Lets you tune manually either in steps of 0.05 MHz or using a seek to find the next station.

## Selecting a station

You select a station in different ways depending on which tuning mode you have chosen:

- Autotune** To change stations, turn the TUNE/SELECT dial to scroll through the station list, then push the dial to tune to the highlighted station or use the shortcut buttons on screen.
- Manual Tune** To change stations, turn the TUNE/SELECT dial right or left to step up or down the frequency range or use the shortcut buttons on screen or remote to step  or scan  to the next station.
- If you scan, the scan stops when the next station is found. The frequency display changes to show the RDS station name if available.



## Changing the information displayed

To change what you see on screen while you listen to FM radio press the INFO button. Choose between the following options:


- RadioText** Dynamic text broadcast by some RDS stations.
- Broadcast info** Description of the content broadcast by the station (RDS stations only), frequency, stereo/mono and signal strength.
- Presets** FM presets for quick access to your favourite stations using the six shortcut buttons.
- Date and time** Date and time updated by RDS signal if available.

## Storing and recalling presets

You can store up to 99 of your favourite stations as presets which you can then access quickly using the shortcut buttons or remote control.

Push any shortcut button or set the information mode to show the presets as described above. This shows the first page of presets on the screen. Flick through the other pages of presets using the left () and right () shortcut buttons or skip buttons on the remote.


**To store a preset** - Hold down the shortcut button or numbered button on the remote you want to store the current station to until the station name or frequency appears or press the Save button and numbered buttons on the remote. The preset is stored.

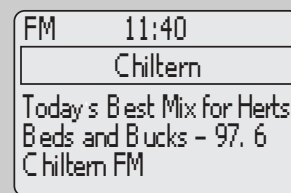

FM mode



FM station list

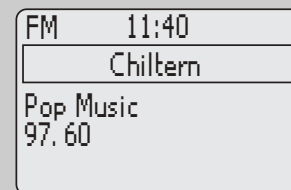

FM - Broadcast info



FM - Presets

## FM Menu

Tune [BYNAME] Autotune  
Station order  
Stereo mode

FM Setup options

**To recall a preset** - Press the shortcut button next to the preset you want to listen to or press the number buttons on the remote.

## Changing FM options

To customise the way your DMX-50 works in FM mode press the MENU button, select FM and choose from the following:

### Tune

Push the Tuning dial to choose between [BYNAME] which shows stations in a station list (similar to the DAB station list) using RDS station names or [MANUAL] to manually step through the FM frequencies in steps of 0.05 MHz or scan to next station.

### Station order

Change the order of stations on your FM station list using this option. The current order is highlighted on screen. Choose from the following:

**Alphanumeric** Displays named stations at the top of the station list and others below in numerical order

**Named stations** Displays stations with an RDS name only

### Stereo mode

Change the way stereo/mono signals are handled. Choose from:

**Auto** Uses stereo signal by default where available

**Mono** Uses mono signal only. This may provide clearer audio for stereo stations with poor reception.

### Autotune

Performs a scan to find all the stations available in your area and lists them in alphanumeric order using RDS station names where available.

# Using an SD memory card

You can use an SD card in your DMX-50 for recording\* and playing back DAB digital radio or playing MP2/MP3 files recorded elsewhere.

SD cards are readily available from PURE and other electronics retailers. As a rough guide – a 64 MB card will give you around an hour of recording time from a 128 kbps broadcast data rate.

There is an ever increasing range of brands, capacities and quality of SD cards available. We have tested DMX-50 with the most popular cards but cannot guarantee all cards will work. Check [www.pure.com/support](http://www.pure.com/support) for any known issues.

**Note** DMX-50 records files to SD cards in MP2 format. You may need to use a computer to convert these files to a different format if you wish to use them in another device that uses SD cards. Check [www.pure.com/support](http://www.pure.com/support) for information on software you can use to convert files.

## Inserting and removing a card


To insert an SD memory card in your DMX-50 push the card label side up into the slot on the front panel with the gold pins towards the rear of the unit until it clicks.

To remove a card push the card in slightly and it will pop out so you can remove it.


It is not recommended that you remove a card when the SD access light is lit.

## Recording DAB radio


You can record DAB radio\* to SD card. The amount you can record depends on the size of your card and the quality of the audio being broadcast.

1. Tune to the DAB radio station you want to record from.
2. Press the RECORD button to start recording. You see the record icon (  ) flashing on the screen.
3. Press the RECORD button again to stop recording. You see a message giving the time, date and filename that the recording has been saved under. The filename is made up of the month, date and time. e.g. 10141020.mp2 means that the recording was made on October the 14th, starting at 10:20 am. The recording also stores the station and multiplex name. DAB recordings are saved in a special TRACKS folder on your SD card so they can be found easily.

**Tip** If you have just missed the start of something you wanted to record try using ReVu to go back to where you want the recording to start then pressing RECORD. See pages 5 and 6 for more details on using ReVu.

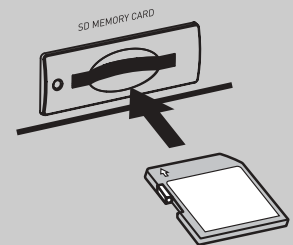


Inserting an SD card

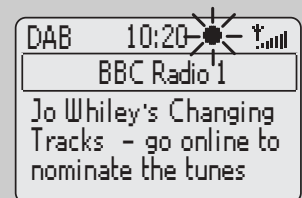

Recording in progress


\*Record function provided for personal use only

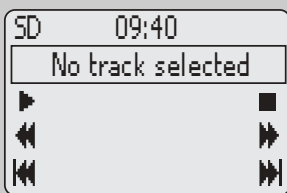

SD mode



MP3 track list

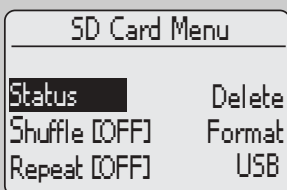

SD card options

## Playing files from SD card

To play MP2/MP3 files from an SD card press the CD/SD button or the Mode button on the remote until you see SD in the top left of the screen.

You see a list of the files (🎵) and folders (📁) on the SD card.

DMX-50 records MP2 files to a TRACKS folder when you record from DAB radio. DAB recordings will show recording date and time and show the station name and multiplex when played, MP3s will show track title and additional file information where available.

## Selecting a track, playlist or folder

To change tracks on an SD card, either:

- turn the TUNING/SELECT dial to scroll through the track list, then push the dial to play the highlighted track or playlist or open or close a folder or use the (▲ ▼ + Select) buttons on the remote
- while playing use the skip forward or skip back shortcut buttons on screen or remote
- select a track number in the current folder using the numbered buttons on the remote. Tracks are numbered in the order they appear on the track list.

## Changing the information displayed

To change what you see on screen while you listen to an MP2/MP3 from SD card press the INFO button. Choose from the following options:

- Time into track** Time the current track has been playing
- ID3 text** Displays ID3 text – album name, track information artist etc., if included with file
- Date and time** Obtained from the DAB or FM (RDS) signal.

## Changing SD card options

To change SD card settings, manage files and customise the way your DMX-50 works in SD mode press the MENU button, select SD Card and choose from the following:

### Status

Displays the total, used and available space on the SD card.

### Shuffle

Press SELECT to choose between playing MP3/MP2 tracks in the order they appear in the current folder [OFF] or in a random order [ON]. If you select ON you see the shuffle icon (🎲).

### Repeat

Press SELECT to choose between repeating the current track [TRACK] when it ends or all tracks in the current folder [ALL]. This loops continuously until you set it to [OFF]. If you select TRACK you see the repeat track icon (🔁), if you select ALL you see the repeat all icon (🔁).



## **Delete**

You see a list of the tracks and folders on the SD card.

Turn the TUNE/SELECT dial to browse the list and push the dial, or use the (◀▲▼▶ + Select) buttons on the remote to delete the highlighted track or open/close a folder. Use the bottom left shortcut button to delete a highlighted folder or track and bottom right shortcut button to open/close a folder.

Press the Menu button to exit.

## **Format**

Deletes all files (including any non-audio files) and clears the card. This may be a good idea if you have previously used the card in another device.


## **USB**

Enables access to an SD card inserted in your DMX-50 using a USB connection to your PC. This enables you to manage files on your SD card using Windows Explorer on your PC e.g. move files to and from the SD card, delete files etc.


While USB access is enabled using this option you cannot access the files on the SD card using DMX-50, only through your PC.

Press the TUNE/SELECT dial or the bottom right shortcut button to exit USB access mode.

# Listening to a connected device

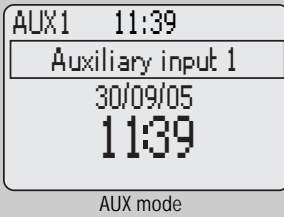

To listen to an audio source such as an iPod or MiniDisc player attached to the AUX 1 or AUX 2 inputs on your DMX-50 press the AUX1/2 button or press the Mode button on the remote until you see AUX 1/2 in the top left of the screen. The date and time obtained from the DAB or FM (RDS) signal are also displayed on screen when your DMX-50 is in Auxiliary mode.

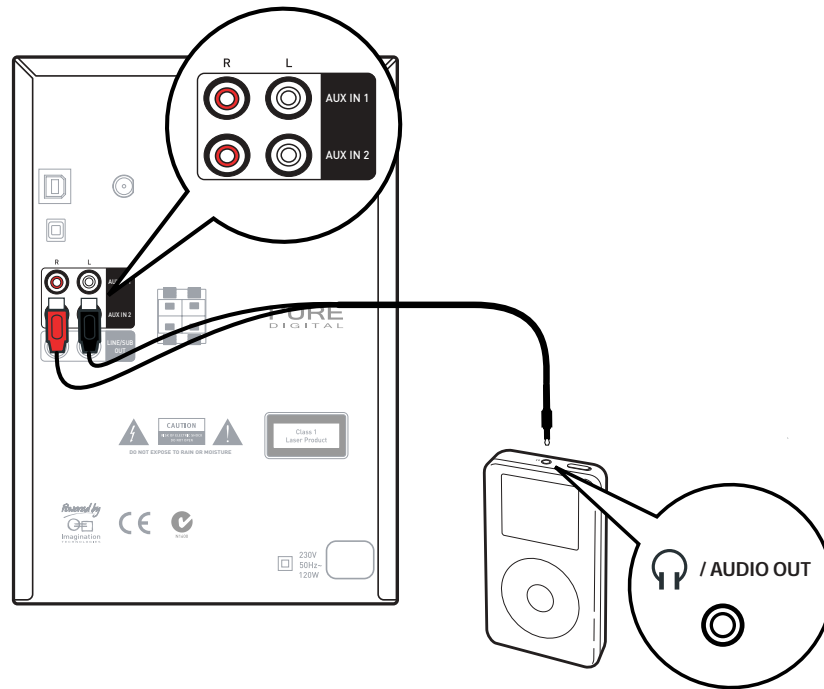

## Adjusting the volume of your connected device

It is recommended that you set the volume on your connected device quite high then use the volume control on your DMX-50 to control the volume through your speakers/headphones.

If you find that you need to turn your DMX-50 up quite loud you can alter the gain (amplification) applied to the auxiliary inputs using the AUX1 or AUX2 setup options.

To adjust the auxiliary input gain in AUX mode:

1. Press the MENU button, and select the AUX(1 or 2) menu option
2. Turn the TUNE/SELECT dial or use the ◀ / ▶ buttons on the remote to move the gain level between 0 and 12 dB (4 times as loud).
3. Press the TUNE/SELECT dial to select a value and exit.

# General setup options

Push the menu button to access general setup options, available at all times. Choose one of the following options:

## Audio

### Tone

Turn the TUNE/SELECT dial to set the Bass output level. Press the Tuning dial again to set the Treble level.

### Balance

Turn the TUNE/SELECT dial to adjust the audio balance between left and right.

### Subwoofer

Push the TUNE/SELECT dial to specify if you have an active subwoofer connected to your LINE/SUB OUT socket:

**YES** LINE/SUB OUT will be a variable level output and will mute if headphones are inserted.

**NO** LINE/SUB OUT will be a fixed line level output and will not mute if headphones are inserted.

## Screen

### Active settings

Turn the TUNE/SELECT dial to set the screen backlight brightness. Press the Tuning dial again to set the contrast.

### Standby settings

Turn the TUNE/SELECT dial to select the standby screen brightness level

**Note** if you set the backlight to its lowest setting (Screen off) in standby the blue power standby LED will not light up and you will not see the clock in standby. If you set it to the 2nd lowest (Backlight off) you will see the clock but no standby LED.

## Alarm

To set an alarm, which will switch the unit on (if in standby) and tune to a station or sound a tone:

Turn the TUNE/SELECT dial or use the +/- shortcut buttons to set an alarm time, Mode [DAB/FM/Tone] and set the Alarm [On]. Radio alarms tune to the station you were tuned to last in that mode and to the volume the radio was set to at the time the alarm went off. When the alarm is set you see the Alarm icon (🔔) on the screen. The alarm icon flashes when the alarm goes off. To cancel the alarm and leave the unit switched on press the TUNE/SELECT dial or press the POWER button to cancel the alarm and switch off.

## Sleep timer






Turn the Tuning dial or use the +/- shortcut keys to set a time after which you want your DMX-50 to switch off. Choose between 15, 30, 45, 1hr, 1hr 15 and 1hr 30 minutes. To switch a sleep timer off use the Clear shortcut button or set the time to zero.

## S/W version

Displays the current software version installed on your DMX-50, 16-digit unit serial number and gives access to the Software Upgrade option.

Register your product and include an e-mail address to receive notification of software updates or visit our website at [www.pure.com/support](http://www.pure.com/support).

To upgrade your software, press the S/W upgrade shortcut button and follow the instructions on screen.

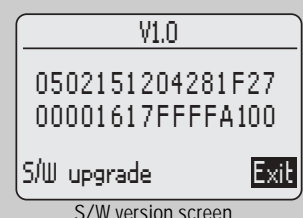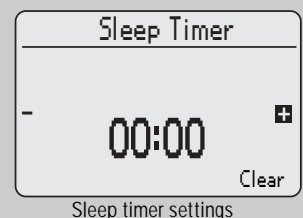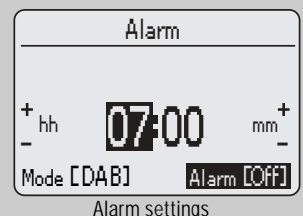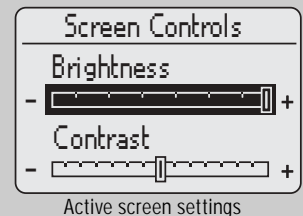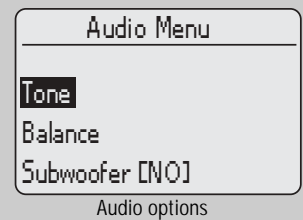

## (>>/<<) DAB Secondary services

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. At the time of writing not many secondary services are available. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name in the station list.

## (?) Inactive or unavailable DAB stations

Inactive or unavailable stations are those which appear on the station list but are not currently available because either you are outside the broadcast area, have lost reception or the station is not currently broadcasting. Unavailable stations have a '?' before their name on the station list. If you select a station which has this symbol, DMX-50 tries to tune to the station again and returns to the last station you were listening to if unsuccessful.

## I hear a 'burbling' sound on some DAB stations

Although DAB is excellent at providing quality audio from very little signal, the quality can suffer if the signal strength is too low. If that happens, a 'burbling' sound can sometimes be heard. To help reduce this, check that your aerial is fully extended. If the problem persists try moving your unit or repositioning your aerial using manual tuning.

## Screen says 'No stations available' in DAB mode

Check that your aerial is fully extended. Use Autotune to search for stations. Use manual tuning to adjust your aerial position.

## Clock shows the wrong time

This may happen if the last/current DAB multiplex or FM RDS station you tuned to broadcasts an incorrect time signal, try tuning to another station/different multiplex (DAB).

## Resetting your unit

Resetting your DMX-50 removes all presets, stored stations and favourite station settings and resets all options to defaults. To reset:

1. Press and hold the MENU button for three seconds. The screen shows 'Do you want to reset?'.  
2. Push the 'Yes' shortcut button or use the ◀▶▶▶ + Select button on the remote to confirm the reset or press no buttons to cancel the reset.

## My speakers don't sound good

Make sure that the red (positive) terminal on the speakers is connected to the red terminal on DMX-50 and black (negative) to black .

Ensure the connections are secure and bared ends of the cables are contacting the metal of the terminals.

Note that from new, the sound from your speakers should improve over the course of a few days as they are 'run-in'.

## My screen is too bright in standby

To set the brightness of your screen for when the unit is in standby press the MENU button, select Screen and choose Standby settings to alter the brightness or switch off the screen.

## Alarm bell icon has a cross through it

This happens if you set an alarm but no DAB or FM RDS time has been acquired yet. Check that your aerial is extended, return to DAB/FM or standby and wait for a short period and the normal icon should appear indicating that the time has been acquired.

## Screen says 'Time not available' or 'Waiting for time...'

This happens if time has not been acquired yet from a DAB signal or FM (RDS) signal. Check that your aerial is extended, switch to DAB, FM (RDS station) or standby mode, wait for a short period and the time should appear.

# Technical specifications

## Amplifier

40W RMS per channel power output (into 8 Ohms @10% THD+N, A-weighted)  
10 Hz to 40 kHz (-3dB) frequency response  
Bass and treble tone control

## CD player

CD-R and CD-RW playback compatible  
Support for CD Text and 20 track audio CD playlist  
Multiple playback modes (repeat, shuffle, etc.)  
MP3 playback, including support for ID3v2 tags and M3U playlists

## DAB

PURE ReVu™ enables pause and rewind of live DAB digital radio  
Full Band III (174 - 240 MHz) reception. Fully compliant with ETS 300 401 and capable of decoding all DAB transmission modes 1-4  
Fast autotune feature

## FM

Supports RDS and RadioText  
Tune by RDS station name  
87.5 - 108 MHz frequency range

## SD card

SD card slot for recording DAB radio to SD card\*  
Red SD access warning LED  
MP3 playback, including support for ID3v1 tags

## Speakers

8 Ohms (nominal) impedance  
40W RMS power handling  
Polypropylene mid-bass drivers  
2-way rear ported enclosure  
Custom-tuned 2nd order crossovers

## Connectors

3.5 mm headphone output on front panel  
RF F-connector 75 Ohms for combined DAB/FM aerial connection  
2 separate dual phono line level audio input for auxiliary device connection  
Dual phono for either stereo analogue line level output or variable output.  
Optical Toslink connector for digital S/PDIF output (IEC958 @ 48 kHz)  
USB connector for software upgrades and SD card access  
Stereo spring-clip terminals for speakers

## General

Fully featured remote control  
Compliant with the EMC and Low Voltage Directives (89/336/EEC and 73/23/EEC)  
Main unit dimensions (mm) (excl. controls/connectors) 166 (w) x 240 (h) x 252 (d)  
Speaker dimensions (mm) 150 (w) x 240 (h) x 255 (d)  
2 x 3m speaker cable supplied  
Integral mains cable with Euro/UK adapter  
Bootlace DAB/FM aerial supplied  
Two year warranty

\*Record function provided for personal use only

# www.pure.com



PURE Digital, Imagination Technologies Ltd., Imagination House, Home Park Estate, Kings Langley, Herts, WD4 8LZ, UK



+44 (0) 1923 277477 support  
+44 (0) 1923 277488 sales



+44 (0) 1923 270188



support@pure.com  
sales@pure.com



12M22

# PURE

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>