

READ THIS FIRST

We have designed your telephone to conform to federal regulations and you can connect it to most telephone lines. However, each device you connect to the phone line draws power from it. This power draw is the device's *Ringer Equivalence Number*, or REN. The REN is shown on the bottom of your phone.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (or three in rural areas) your phones might not ring. If ringer operation is impaired, remove one of the devices from the line.

If your phone causes problems on the phone line, the telephone company can disconnect your service. The phone company tries to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

The phone company can also make changes to its lines, equipment, operations, or procedures that could affect the phone's operation. The phone company notifies you in advance, so you can take the necessary steps to prevent interruption of your phone service.

FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. These numbers are shown on the bottom of your phone.

Note: You must not connect your telephone to:

- Coin-operated systems
- Party-line systems
- Most electronic key phone systems

CARE

- Keep the phone dry.
- Handle the phone carefully. Do not drop it.
- Do not use or store the phone in temperature extremes.
- Keep the phone away from dust and dirt.
- Do not modify or tamper with the phone's internal components. Doing so might invalidate the phone's warranty and void your FCC authorization to operate it. If the phone is not operating as it should, take it to your local RadioShack store for assistance. If the trouble is harming the phone lines, the phone company might ask you to disconnect the telephone until you fix the problem.

Limited One-Year Warranty

This product is warranted by Radio Shack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RADIO SHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIO SHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the Radio Shack sales receipt as proof of purchase date to any Radio Shack store. Radio Shack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Radio Shack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a Radio Shack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or re-installation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Radio Shack Customer Relations, Dept. W, 100 Throckmorton St.,
Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

Radio Shack

ET-293 Two-Line Amplified Trim-Fone

n Conference Calling

n Hold

n Tone or Pulse (Rotary) Dialing

n Adjustable Ringer

n Redial

n Hearing Aid Compatible

Radio Shack
A Division of Tandy Corporation
Fort Worth, Texas 76102

Owner's Manual

Cat. No. 43-622

MOUNTING THE PHONE

Desk Mounting

Wall Mounting (With or Without Wall Plate)

(Screws not supplied)

Handset Holder (Wall Mounting)

Note: The USOC number of the jack to be installed is RJ11C or RC14C (RJ11W for a wall jack).

USING THE PHONE

Adjust the handset's volume as desired.

Use a paper clip or other pointed object to lift the plastic cover off the number plate. Then write your phone number(s) on the number plate and replace the cover.

Note: Use a pencil in case the number changes.

Use **CONF** to make a conference call. See "Making a Conference Call."

The green indicator next to **LINE 1** or **LINE 2** lights to show which line is ringing.

Set the volume for each line's ringer. Set to **HI** in a noisy room or **LO** in a quiet room. To turn off the ringer, set it to **OFF**. You can still make calls with the ringer off, and you can also receive calls, if you hear another phone on the same line ring.

Set to **TONE** or **PULSE** to match the type of service you have.

If you have pulse (rotary) service, you can switch to **TONE** during a call to use tone services.

Plug the handset cord into the jacks on the base and handset.

Press **RESET** to end a call without hanging up the handset.

Press **REDIAL** to dial the last number dialed (up to 31 tone or 32 pulse digits).

Press **HOLD** to place a call on hold. When the line's red indicator lights, you can place the handset on the cradle. To return to the call, press that line's button or pick up any extension phone on that line.

MAKING A CONFERENCE CALL

1. Place a call to one of the parties.
2. Press **HOLD** to put the first call on hold.
3. On the other phone line, place a call to the other party.
4. After the second party answers, press **CONF** to connect all three parties.

To talk on only one line without disconnecting the other line, press **HOLD** to put both lines on hold. Then press the button for the line you want to talk on. To return to the three-way conversation, press **CONF**.

To disconnect one line and continue talking on the other, press the button for the line you want to talk on.



© 1997 Tandy Corporation. All Rights Reserved.
Radio Shack is a registered trademark used by Tandy Corporation.



This symbol is intended to inform you that parts inside the telephone present a risk of electric shock.



This symbol is intended to alert you to important operating and servicing instructions included in the papers with the telephone.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>