


RICOH



PJ S2130/PJ X2130/PJ WX2130

User's Manual

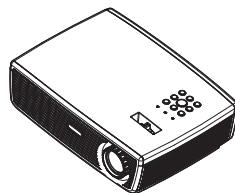

For safe and correct use, be sure to read the "Usage Notice" before using the projector.

Table of Contents

Table of Contents	1	<i>Default Settings 2</i>	<i>36</i>
Usage Notice.....	2	<i>Default Settings 2 3D Projection</i>	<i>38</i>
<i>Precautions</i>	<i>2</i>	<i>Display Status</i>	<i>39</i>
<i>Safety Labels of This Machine</i>	<i>6</i>	Appendices	40
<i>Regulation & Safety Notices</i>	<i>7</i>	<i>Troubleshooting</i>	<i>40</i>
<i>Other Information</i>	<i>11</i>	<i>Replacing the lamp</i>	<i>45</i>
Introduction.....	12	<i>Computer Compatibility</i>	<i>46</i>
<i>Product Features</i>	<i>12</i>	<i>Configurations of Terminals</i>	<i>49</i>
<i>Package Overview</i>	<i>13</i>	<i>Terminal : Analog RGB</i>	
<i>Product Overview</i>	<i>14</i>	<i>(Mini D-sub 15 pin)</i>	<i>49</i>
<i>Connection Ports.....</i>	<i>15</i>	<i>Specifications.....</i>	<i>50</i>
<i>Control Panel.....</i>	<i>16</i>	<i>Trademarks.....</i>	<i>51</i>
<i>Remote Control</i>	<i>17</i>		
<i>Remote Control Battery Installation.....</i>	<i>19</i>		
<i>Remote Control Operating Range.....</i>	<i>19</i>		
Installation.....	20		
<i>Connecting the Projector</i>	<i>20</i>		
<i>Connect to Computer/Notebook.....</i>	<i>20</i>		
<i>Connect to Video.....</i>	<i>21</i>		
<i>Powering On/Off the Projector</i>	<i>22</i>		
<i>Powering On the Projector</i>	<i>22</i>		
<i>Powering Off the Projector</i>	<i>23</i>		
<i>Warning Indicator</i>	<i>24</i>		
<i>Adjusting the Projected Image</i>	<i>25</i>		
<i>Adjusting the Height of Projector</i>			
<i>Image</i>	<i>25</i>		
<i>Adjusting the Projector Zoom and</i>			
<i>Focus.....</i>	<i>26</i>		
<i>Adjusting Projection Image Size.....</i>	<i>26</i>		
User Controls.....	28		
<i>On Screen Display (OSD).....</i>	<i>28</i>		
<i>How to operate</i>	<i>28</i>		
<i>Image Adjustment</i>	<i>29</i>		
<i>Image Adjustment Position.....</i>	<i>31</i>		
<i>Display Settings.....</i>	<i>32</i>		
<i>Default Settings 1</i>	<i>34</i>		

Usage Notice

Precautions



Follow all warnings, precautions and maintenance as recommended in this user's guide to maximize the life of your unit.

- Warning- This apparatus must be earthed.
- Warning- Do not look into the projector's lens when the lamp is on. The bright light may hurt your eyes.
- Warning- To reduce the risk of fire or electric shock, do not expose this projector to rain or moisture.
- Warning- Please do not open or disassemble the projector as this may cause electric shock.
- Warning- When replacing the lamp, please allow unit to cool down, and follow all replacement instructions..
- Warning- This projector will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- Warning- When switching the projector off, please ensure the cooling cycle has been completed before disconnecting power. Allow 60 seconds for the projector to cool down.
- Warning- Do not use lens cap when projector is powered on.
- Warning- Turn on the projector first and then the signal sources.
- Warning- When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Replacing the Lamp".
- Warning- Do not remove the cabinet cover, or you may be exposed to dangerous voltage. Refer servicing to qualified service personnel only.

Usage Notice

- Warning- This product should be operated only from the type of power source which does not exceed the voltage range specified on the rating label and the power cord. If you are not sure of the type of power supply to your home, consult your sales representative or local power company.
- Warning- Do not use the polarized plug with an extension cord, receptacle, or other outlet unless the blades can be inserted completely with three wire grounding type to prevent blade exposure. Failure to follow these instructions may result in fire or electric shock.
- Caution- Never operate this unit on AC power during a thunderstorm. If you see lightning or hear thunder, never touch the unit, cables and/or peripherals. An electric surge caused by the storm, may result in an electrical shock or damage to the unit.
- Caution- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Caution- Do not place or keep the projector within the reach of the children. It may fall or tip over, possibly causing serious injury.
- Caution- Do not stack other equipment on this product and do not place this product on other equipment. The top and bottom surface of this product increase in temperature during normal use and may damage the other unit.
- Caution- Do not use attachments not recommended by the product manufacturer. Use of an incompatible attachments could cause hazards or damage to the product.
- Caution- Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

Usage Notice

- Caution-

Unplug this product from the wall outlet and take the product to qualified service personnel if you encounter any of the following conditions:

 - a) The power supply cord or plug is damaged.
 - b) Liquid has been spilled, or objects have fallen into the product.
 - c) The product has been exposed to rain or water.
 - d) The product does not operate normally when following the operating instructions. Adjust only those controls that are covered by the operating instructions.
 - e) The product has been dropped or damaged in any way. (If the cabinet should break, please handle with care to avoid injury.)

- Caution-

This product incorporates glass components, including a lens and a lamp. If these should break, please handle with care to avoid injury and contact your sales representative for repair service. Avoid any broken pieces of glass since they may cause injury. In the unlikely event that the lamp ruptures, thoroughly clean the area around the projector and discard any edible items placed in that area since they may be contaminated.

- Caution-

Do not place anything in front of the lens while the projector is operating. Things placed in front of the lens may overheat and burn or start a fire.

- Caution-

Unauthorized substitutions may result in fire, electric shock, or other hazards. (Only the replacement of the lamp should be made by users.)

- Caution-

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to verify that the product is in proper operating condition.

- Caution-

Do not leave thermal paper documents or easily deformed items on top of the unit or near the air exhaust for long periods of time.

- Caution-

The heat from the unit could erase the information on the thermal paper, or cause deformation or warping.

Usage Notice

- **Caution-** Do not use the product in a closed installation location. Do not place the product in a box or in any other closed installation location. Otherwise it may overheat, which could result in a risk of fire.

Do:

- After unpacking this product, read the manual carefully, and follow all the operating and other instructions.
- Turn off the product before cleaning.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

Do not:

- Block the slots and openings on the unit provided for ventilation.
- Use abrasive cleaners, waxes or solvents to clean the unit.
- Use under the following conditions:
 - Extremely heat, cold or humidity.
 - In areas susceptible to excessive dust and dirt.
 - Near any appliance generating a strong magnetic field.
 - In direct sunlight.

Important:




Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handing or operating this product.

Usage Notice

Safety Labels of This Machine

- 1 Do not block the air intake or exhaust. Doing so could cause a fire due to internal overheating. Do not place your hands, face, or other objects near the air exhaust, the lamp cover or the bottom of the unit. Doing so could result in injury and/or damage the object.
- 2 Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyesight.
- 3 Do not place anything in front of the lens while the projector is operating. Things placed in front of the lens may overheat and burn or start a fire. If you want to temporarily stop the projected image, use the AV mute on the remote control or the keypad.
- 4 To replace the lamp, unplug the power cord and then wait for 60 minutes.
- 5 Do not remove any screws except the lamp cover screws. Do not block or cover the vents.

4 / 5

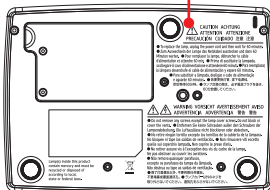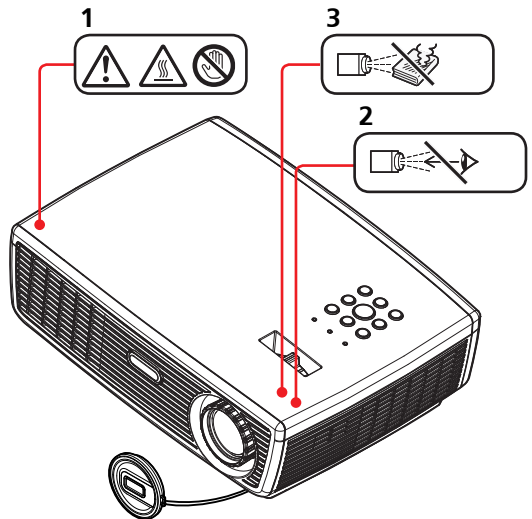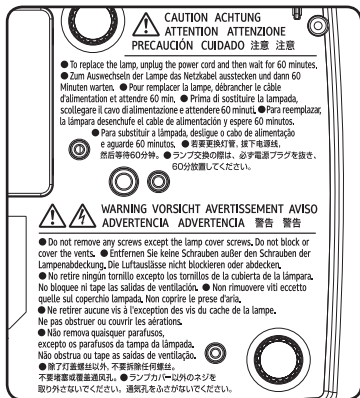

Usage Notice

Regulation & Safety Notices

This appendix lists the general notices of your Projector.

Notice: Users in the United States of America

FCC notice

MODEL NAME: PJ S2130 / PJ X2130 / PJ WX2130

TRADE NAME: PROJECTOR
MODEL NAME: PJ S2130 / PJ X2130 / PJ WX2130
FC Tested To Comply
With FCC Standards
FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.



Warning: this product contains a chemical known to the state of California to cause cancer, birth defects or other reproductive harm.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Usage Notice

RESPONSIBLE PARTY: Ricoh Americas Corporation
5 Dedrick Place, West Caldwell, NJ 07006
Phone: 973-882-2000

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC

Notice: Users in Turkey

EEE Yönetmeliğine Uygundur.

Bu sistem sarf malzemeleri ve yedek parçaları da dahil olmak üzere EEE Yönetmeliğine Uygundur.

Usage Notice

Disposal

This product contains substances which are harmful to humans and the environment.

- The lamp contains mercury.

Please dispose of this product or used lamps in accordance with local regulations.

Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



REMOTE CONTROL BATTERIES

Warning

- Never throw batteries into a fire.

Using the batteries improperly may cause them to explode or leak and may result in serious injury. If battery-leaking fluid contacts skin, wash the fluid off immediately with clean water and consult a doctor. If the fluid spills on an instrument, avoid contact and wipe it off using tissue paper. Then dispose of the used tissue paper as flammable garbage after moistening the tissue with water.

Notes

- Be sure to use AAA (R03) size batteries.
- Dispose of batteries in a designated disposal area.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not mix different battery types or combine used batteries with new ones.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace both batteries with new ones.
- If the batteries are dead or if you will not be using the remote control for a long time, remove the batteries to prevent battery acid from leaking into the battery compartment.

Usage Notice

Following information is only for EU-member states:

[Disposal of batteries and/or accumulators]

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.



Other Information

Copyrights to Images

When projecting images using the projector, be careful not to infringe the copyright of protected materials.

The following are examples that may infringe the copyright of protected materials.

- *Broadcasting images or movies for commercial purposes*
- *Modifying images or movies using functions such as freeze, magnify, or zoom to broadcast images for commercial purposes or public viewing*
- *Varying the aspect ratio of images or movies using a function that changes the screen size to broadcast images for commercial purposes or public viewing*

Product Features

Outstanding features include:

- True PJ S2130 - SVGA(800×600)/
PJ X2130 - XGA(1024×768)/
PJ WX2130 - WXGA(1280×800) addressable pixels
- Single chip DLP® technology
- NTSC3.58/NTSC4.43/PAL(B/D/G/H/I/M/N)/
SECAM (B/D/G/K/K1/L) and SDTV(480i/576i),
EDTV(480p/576p), HDTV(720p/1080i/1080p) compat-
ible
- Multi-Auto functions: Auto detection, Auto image and
Auto saving the adjustments
- Full function remote control
- User friendly multilingual on screen display
- Advanced digital keystone correction and high quality
full screen image re-scaling
- Built-in mono 2-Watt speaker.
- UXGA, WXGA, SXGA+, SXGA, XGA compression and
VGA re-sizing
- Macintosh compatible


Introduction

Package Overview

This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if anything is missing.

Note


❖ Due to the difference in applications for each country, some regions may have different accessories.

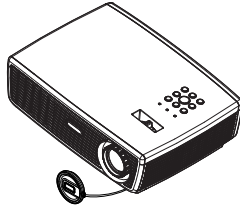


Projector with lens cap



 
Wireless Remote Control



Batteries for Remote Control (AAA/R03)

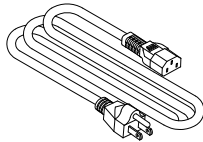

Power Cord

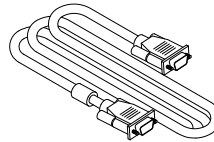

RGB Cable




Carrying Bag

Documentation:

- CD-ROM User's Manual
- User's Manual

Introduction


Product Overview

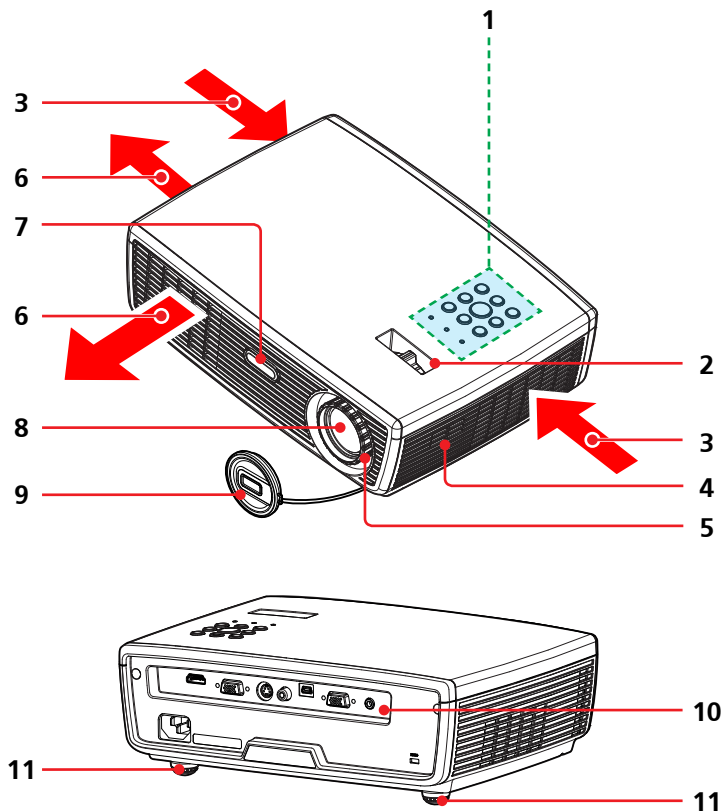

1. Control panel
2. Zoom lever
3. Ventilation (inlet)
4. Speaker
5. Focus ring
6. Ventilation (outlet)
7. Infrared remote sensor
8. Lens
9. Lens cap
10. Connection ports
11. Adjustable feet

Introduction


Connection Ports

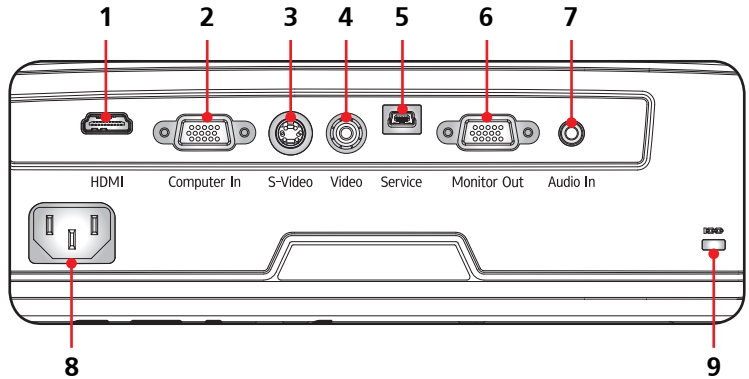

1. HDMI terminal
2. COMPUTER IN/COMPONENT IN terminal
3. S-VIDEO IN terminal
4. VIDEO IN terminal
5. SERVICE Port
6. MONITOR OUT terminal
7. AUDIO IN Jack
8. AC IN socket
9. Anti-theft lock hole

Introduction


Control Panel

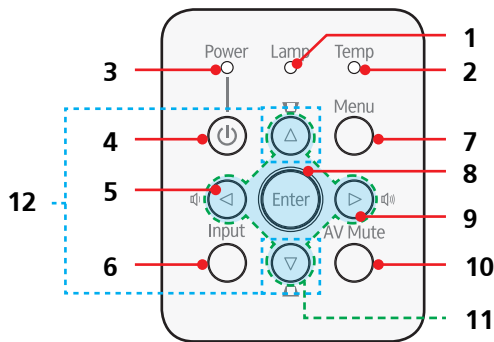

1	Lamp indicator	Indicate the projector's lamp status.
2	Temp indicator	Indicate the projector's temperature status.
3	Power indicator	Indicate the projector's status.
4	Power	Refer to the "Power On/Off the Projector" section. (See pages 22~23)
5	Volume -	Decrease speaker volume.
6	Input	Press "Input" to choose RGB, Component, S-Video, HDMI and Composite sources.
7	Menu	Press "Menu" to launch the Onscreen display (OSD), back to the top level of OSD for the OSD main menu operation
8	Enter	Confirm your section of items in sub menu operation.
9	Volume +	Increase speaker volume.
10	AV Mute	Momentarily turn off/on the audio and video.
11	Four Directional Select Keys	Use ▲ or ▼ or ◀ or ▶ to select items or make adjustments to your selection.
12	Keystone	Use ▲ or ▼ to adjust the image to compensate for distortion caused by tilting the projector.

Introduction

Remote Control

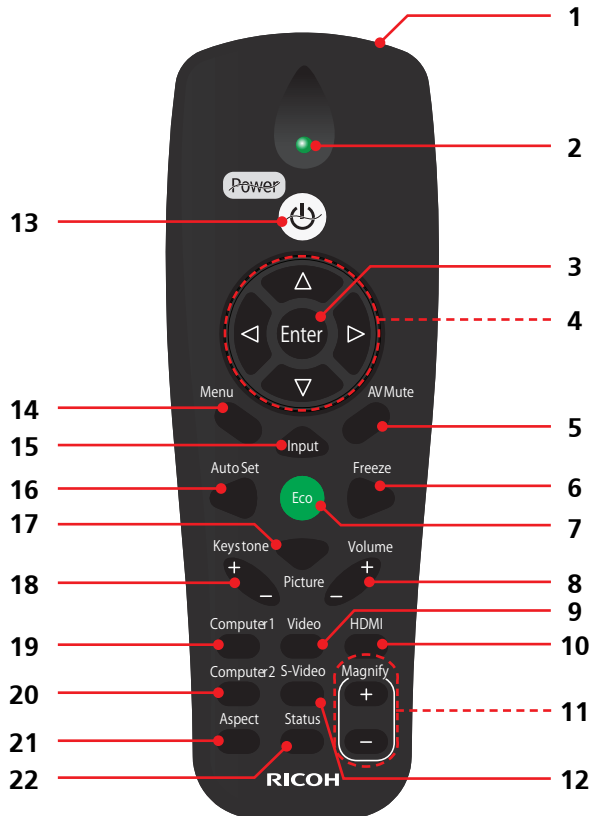

1	Infrared transmitter	Sends signals to the projector.
2	Indicator	
3	Enter	Confirm your selection in sub menu operation.
4	Four Directional Select Keys	Use ▲ or ▼ or ◀ or ▶ to select items or make adjustments to your selection.
5	AV Mute	Momentarily turn off/on the audio and video.
6	Freeze	Pause the screen image. Press again to resume the screen image.

Introduction


Note

❖ The “Magnify” function could not be operated, when “Aspect” is set to “Native”.

7	ECO	Dim the projector lamp which will lower power consumption and extend the lamp life.
8	Volume +/-	Increase/decrease speaker volume.
9	Video	Press “Video” to choose Video in terminal.
10	HDMI	Press “HDMI” to choose HDMI in terminal.
11	Magnify	Zoom in the projector display.
12	S-Video	Press “S-Video” to choose S-Video in terminal.
13	Power	Refer to the “Power On/Off the Projector” section. (See pages 22~23)
14	Menu	Press “Menu” to launch the On Screen Display (OSD), back to the top level of OSD for the OSD main menu operation. (See page 28)
15	Input	Press “Input” to choose RGB, Component, S-Video, HDMI and Composite sources.
16	Auto Set	Automatically synchronize the projector to the input source.
17	Picture	Select the Image mode from Bright, Standard and Natural.
18	Keystone +/-	Adjust the image to compensate for distortion caused by tilting the projector.
19	Computer1	Press “Computer1” to choose Computer in/Component in terminal.
20	Computer2	This key works same as “Computer 1” with this projector.
21	Aspect	Use this function to choose your desired aspect ratio.
22	Status	Shows the Status display menu. (See page 39)

Remote Control Battery Installation

- 1 Press firmly and slide the battery cover off.
- 2 Install new batteries (AAA/R03). Ensure that you have the batteries' polarity (+/-) aligned correctly.
- 3 Slip the cover back over the batteries until it snaps into place. Do not mix different types of batteries or new and old batteries.

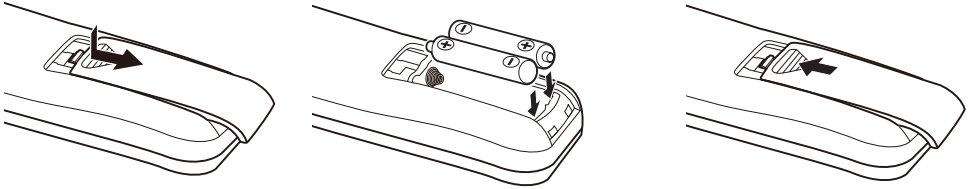


To ensure safe operation, please observe the following precautions :

- Use AAA/R03 type battery.
- Avoid contact with water or liquid.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the battery has leaked in the remote control, carefully wipe the case clean and install new battery.
- Risk of an explosion if battery is replaced by an incorrect type.
- Dispose of used battery according to the instructions.
- Remove batteries from remote control when not using for extended periods.
- The remote control may fail to operate if the infrared remote sensor is exposed to bright sunlight or fluorescent lighting.

Remote Control Operating Range

Point the remote control toward the projector (Infrared Remote Receiver) when pressing any button. Maximum operating range for the remote control is about 23.0' (7m) and $\pm 15^\circ$ in front of the projector.

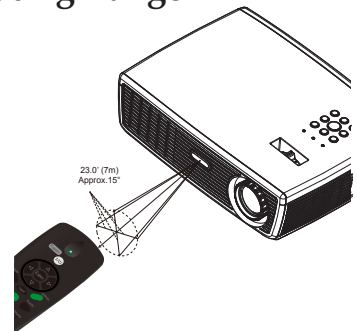

Installation

Connecting the Projector


Connect to Computer/Notebook

Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.

Note

- ❖ Due to the difference in applications for each country, some regions may have different accessories.

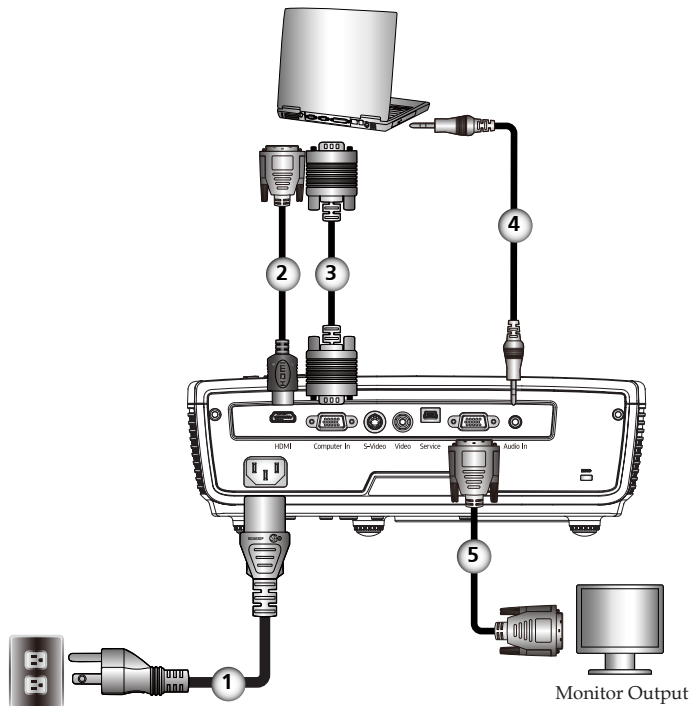


- | | |
|--------|-----------------------|
| 1..... | Power cord (supplied) |
| 2..... | HDMI/DVI cable |
| 3..... | RGB cable (supplied) |
| 4..... | Audio Cable |
| 5..... | Monitor out cable |

- ❖ To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with your projector. (See pages 46~48)
- ❖ Use the cables that come with the projector.

Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.

Connect to Video

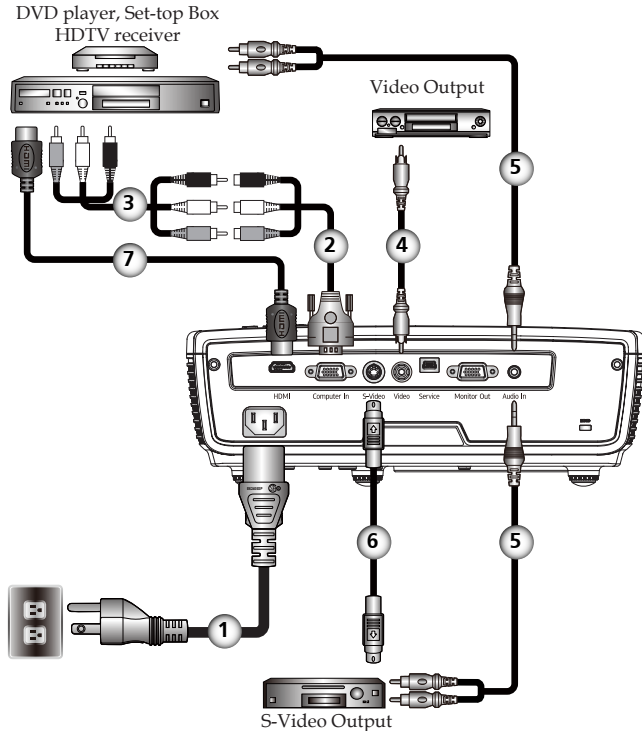

Note

- ❖ Due to the difference in applications for each country, some regions may have different accessories.

1.....	Power cord (supplied)
2.....	Component-RGB Cable
3.....	3 RCA Component Cable
4.....	Composite video cable
5.....	Audio Cable
6.....	S-Video cable
7.....	HDMI cable

- ❖ To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with your projector.

Installation

Powering On/Off the Projector

Powering On the Projector

1. Ensure that the power cord and signal cable are securely connected. The Power indicator will turn red.
2. Remove the lens cap. ❶
3. Turn on the lamp by pressing "Power" on the control panel or the remote control. ❷ The Power indicator will flash blue. The startup screen will display in approximately 5 seconds. After the screen disappears, the Power indicator will turn blue.
The first time you use the projector after purchase, the language menu is displayed after the startup screen. (See pages 34~35)
4. Turn on your source (computer, notebook, video player, etc.) The projector will detect your source automatically.

CAUTION:


- Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyesight.
- Do not block the air intake or exhaust. Doing so could cause a fire due to internal overheating.
- Do not place your hands, face, or other objects near the air exhaust, the lamp cover or the bottom of the unit. Doing so could result in injury and/or damage the object.
- Do not block the light from projection lens by anything when you want to stop projection. Doing so could cause a fire due to heating by strong light. Please use "AV Mute" function for this purpose.

Note

❖ If you connect multiple sources at the same time, use the "Input" on the remote control or use "Computer 1", "Video", "S-Video", "HDMI" on the remote control to switch inputs.


Note

❖ Turn on the projector first and then the signal sources.

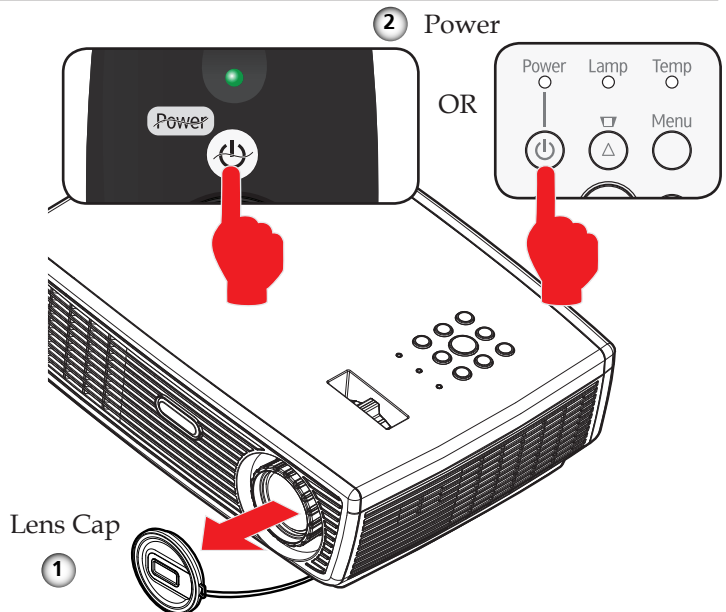

Powering Off the Projector

1. Press the “Power” to turn off the projector lamp, you will see a message as below on the on-screen display.

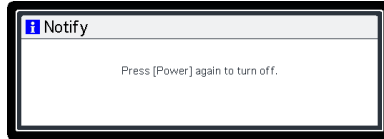

2. Press the “Power” again to confirm.
3. The cooling fan continues to operate for about 60 seconds for cooling cycle and the Power indicator will flash red. When the light stop flashing, the projector has entered standby mode.

If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press “Power” to restart the projector.


4. Disconnect the power cord from the electrical outlet and the projector.

Warning Indicator

- ❖ When the “Temp” indicator lights red, it indicates the projector has overheated. The projector will automatically shut itself down.



- ❖ When the “Lamp” indicator lights red, and you see the message below displays on-screen, the projector has detected that the lamp is approaching its end of life. Please change the lamp as soon as possible or contact your local dealer or our service center.

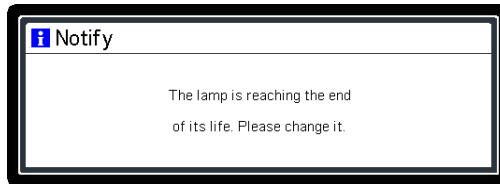

- ❖ When the “Temp” indicator flashes red (0.5 sec on, 0.5 secs off) and the message below displays on-screen, it indicates the fan failed. Stop using the projector and disconnect the power cord from the electrical outlet, then contact your local dealer or our service center.




Adjusting the Projected Image

Adjusting the Height of Projector Image

The projector is equipped with adjustable feet to raise and lower the image to fill the screen.

To raise/lower the image:

1. Use ❶ to fine-tune the display angle.

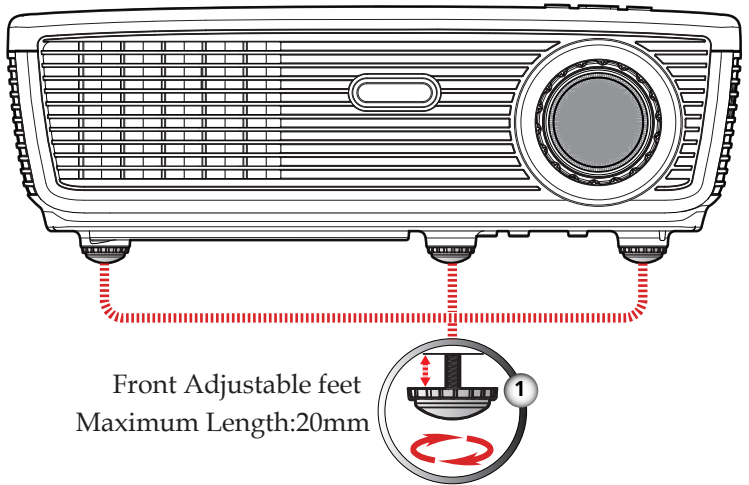

Note


❖ You can raise the projector front up to 8 degrees by rotating the adjustable feet.

Installation

Adjusting the Projector Zoom and Focus


You may turn the zoom lever to zoom in or out. To focus the image, rotate the focus ring until the image is clear.

- ▶ PJ S2130/PJ X2130 series: The projector will focus at distances from 3.93 to 42.98 feet (1.2 to 13.1 meters).
- ▶ PJ WX2130 series: The projector will focus at distances from 3.28 to 36.09 feet (1.0 to 11.0 meters).

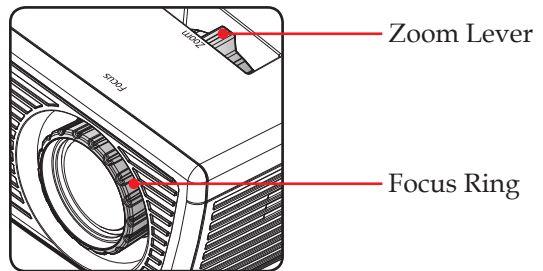

Adjusting Projection Image Size

- ▶ PJ S2130/PJ X2130: Projection Image Size from 30" to 300" (0.7 to 7.6 meters).
- ▶ PJ WX2130: Projection Image Size from 30" to 300" (0.7 to 7.6 meters)

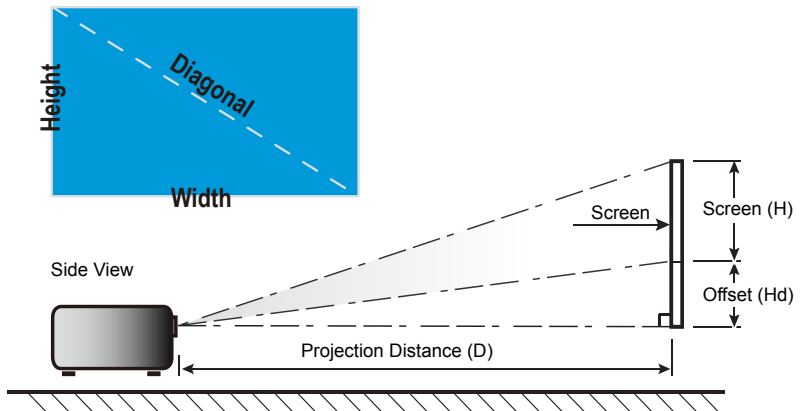

Installation

PJ S2130/PJ X2130

Diagonal length (inch) size of 4:3 Screen	Screen Size W x H				Projection Distance (D)				Offset (Hd)	
	(m)		(inch)		(m)		(feet)			
	Width	Height	Width	Height	wide	tele	wide	tele	(m)	(feet)
30	0.61	0.46	24.0	18.0	1.2	1.3	3.9	4.3	0.05	0.2
40	0.81	0.61	32.0	24.0	1.6	1.8	5.2	5.7	0.07	0.3
60	1.22	0.91	48.0	36.0	2.4	2.6	7.8	8.6	0.10	0.5
70	1.42	1.07	56.0	42.0	2.8	3.1	9.1	10.0	0.12	0.5
80	1.63	1.22	64.0	48.0	3.2	3.5	10.4	11.5	0.13	0.6
90	1.83	1.37	72.0	54.0	3.6	3.9	11.7	12.9	0.15	0.7
100	2.03	1.52	80.0	60.0	4.0	4.4	13.0	14.3	0.17	0.8
120	2.44	1.83	96.0	72.0	4.8	5.2	15.6	17.2	0.20	0.9
150	3.05	2.29	120.0	90.0	5.9	6.6	19.5	21.5	0.25	1.1
180	3.68	2.74	144.0	108.0	7.1	7.9	23.4	25.8	0.30	1.4
250	5.08	3.81	200.0	150.0	9.9	10.9	32.5	35.8	0.42	1.9
300	6.10	4.57	239.9	180.0	11.9	13.1	39.0	43.0	0.50	2.3

PJ WX2130

Diagonal length (inch) size of 16:10 Screen	Screen Size W x H				Projection Distance (D)				Offset (Hd)	
	(m)		(inch)		(m)		(feet)			
	Width	Height	Width	Height	wide	tele	wide	tele	(m)	(feet)
30	0.65	0.40	25.4	15.9	1.0	1.1	3.3	3.6	0.05	0.2
40	0.86	0.54	33.9	21.2	1.3	1.5	4.4	4.8	0.07	0.2
60	1.29	0.81	50.9	31.8	2.0	2.2	6.6	7.2	0.10	0.3
70	1.51	0.94	59.3	37.1	2.3	2.6	7.7	8.4	0.12	0.4
80	1.72	1.08	67.8	42.4	2.7	2.9	8.8	9.6	0.13	0.4
90	1.94	1.21	76.3	47.7	3.0	3.3	9.9	10.8	0.15	0.5
100	2.15	1.35	84.8	53.0	3.3	3.7	11.0	12.0	0.17	0.6
120	2.58	1.62	101.7	63.6	4.0	4.4	13.1	14.4	0.20	0.7
150	3.23	2.02	127.2	79.5	5.0	5.5	16.4	18.0	0.25	0.8
180	3.88	2.42	152.6	95.4	6.0	6.6	19.7	21.6	0.30	1.0
250	5.38	3.37	212.0	132.5	8.4	9.2	27.4	20.0	0.42	1.4
300	6.46	4.04	254.3	159.0	10.0	11.0	32.9	36.0	0.50	1.6

❖ This graph is for user's reference only.

On Screen Display (OSD)


The Projector has a multilingual On Screen Display that allows you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

How to operate

1. To open the OSD, press "Menu" on the Remote Control or the keypad.
2. When OSD is displayed, use ▲ ▼ keys to select any item in the main menu. While making a selection on a particular page, press ► key to enter sub menu.
3. Use ▲ ▼ keys to select the desired item in the sub menu and press "Enter" to adjust the settings by ◀▶ or ▲ ▼ key. To exit from adjusting the item, press "Enter" again.
4. If "to setting" word is shown in the setting, you can press "Enter" to enter another sub menu. Press "Menu" to close the sub menu after adjustment.
5. After adjusting the settings, press "Menu" to go back to the main menu.
6. To exit, press "Menu" again. The OSD will be closed and the projector will automatically save the new settings.

Note

❖ If no button operation is made for 10 seconds, the OSD will be closed automatically.

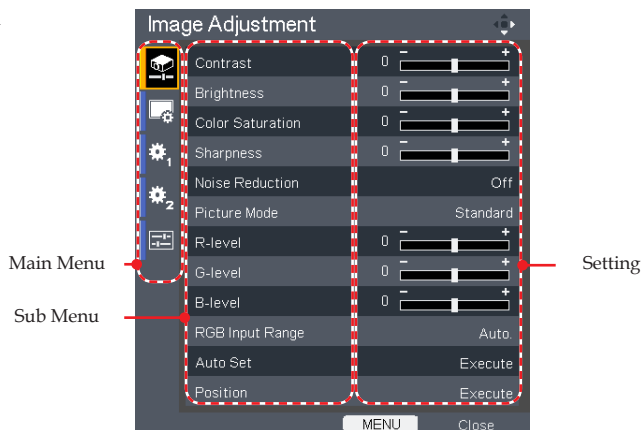

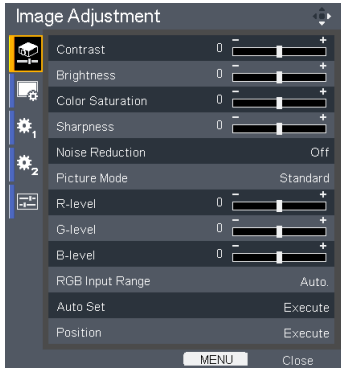


Image Adjustment

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

- ▶ Press the ◀ to decrease the contrast.
- ▶ Press the ▶ to increase the contrast.

Brightness

Adjust the brightness of the image.

- ▶ Press the ◀ to darken image.
- ▶ Press the ▶ to lighten the image.

Color Saturation

Adjust a video image from black and white to fully saturated color.

- ▶ Press the ◀ to decrease the amount of color in the image.
- ▶ Press the ▶ to increase the amount of color in the image.

Sharpness

Adjust the sharpness of the image.

- ▶ Press the ◀ to decrease the sharpness.
- ▶ Press the ▶ to increase the sharpness.

Noise Reduction

Adjust the screen noise reduction level.

Note

❖ “Sharpness” and “Color Saturation” functions are only supported under Video mode.

User Controls

Picture Mode

There are many factory presets optimized for various types of images. Use the ◀ or ▶ to select the item.

- ▶ Bright: The mode emphasizing brightness.
- ▶ Standard: The mode balancing brightness and color.
- ▶ Natural: The mode emphasizing color representation.

R-level

Use the ◀ or ▶ to adjust Red signal level.

G-level

Use the ◀ or ▶ to adjust Green signal level.

B-level

Use the ◀ or ▶ to adjust Blue signal level.

RGB Input Range

Adjust the range of the HDMI image data.

- ▶ Auto: Automatically detect RGB range.
- ▶ Standard: Process the input image as standard range data.
- ▶ Full: Select this when source is a computer or an instrument which output range is set to Full.

Auto Set

Automatically synchronize the projector to the input source.

Position

Refer to next page.

Note

❖ “RGB Input Range” is only supported under HDMI source.



Image Adjustment | Position

Phase

Eliminate flicker from the image displayed. Use the ◀ or ▶ to adjust the value.

Frequency

Adjust the number of total dots in one horizontal period. Use the ◀ or ▶ to adjust number to match your PC image.

H-position (Horizontal Position)

- ▶ Press the ◀ to move the image left.
- ▶ Press the ▶ to move the image right.


V-position (Vertical Position)

- ▶ Press the ◀ to move the image down.
- ▶ Press the ▶ to move the image up.

Note

❖ "Position" is only supported in Analog VGA (RGB) signal.

User Controls

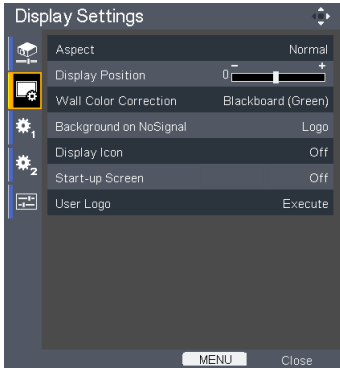

Display Settings

Aspect

Use this function to choose your desired aspect ratio.

- ▶ Normal: Enlarge an input image to fit the screen without changing the aspect ratio of video signals.
- ▶ Full: Displays an input image in PJ S2130(800 × 600)/PJ X2130(1024 × 768)/PJ WX2130(1280 × 800) dot resolution by enlarging it to fill the entire screen.
- ▶ 16:9: Displays an input image in the center of the screen with a 16:9 aspect ratio.
- ▶ Zoom: Zoom is available only for Video, S-Video and Y/PB/PR(480/576) input.
 - PJ S2130/PJ X2130: Display 4:3 center area of 16:9 signal. (If input signal is 4:3 signal, displayed picture is stretched horizontally.)
 - PJ WX2130: Display 16:9 center area of 4:3 signal. (for letter box signal. If input signal is 16:9 signal, displayed picture is stretched vertically.)
- ▶ Native: Displays an input image in the native resolution of the video signals. Native display is not available for Y/PB/PR, Video and S-Video input images.



Display Position

Lets the projected images shift vertically when the screen size setting is "16:9" display (PJ S2130/PJ X2130).

User Controls

Wall Color Correction

Use this function to choose a wall color from "Off", "Whiteboard", "Beige", "Blackboard(Green)" and "Gray".

Background on NoSignal

Use this feature to display a "Logo", "Blue" or "None", screen when no signal is available.

Display Icon

Choose "On" to display icons as function guides. Choose "Off" to hide icons.


Start-up Screen

Use this function to set the desired startup screen. If changes are made they will take effect the next time the projector is powered on.

- ▶ On: Display the startup screen.
- ▶ Off: No logo is displayed.

User Logo

Press "Enter" to capture an image of the picture currently displayed on screen.

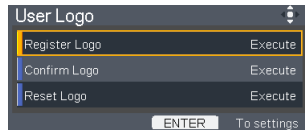


Note

❖ It takes up to 90 seconds to capture the picture.

This may vary by resolution of the input signal.

User Controls

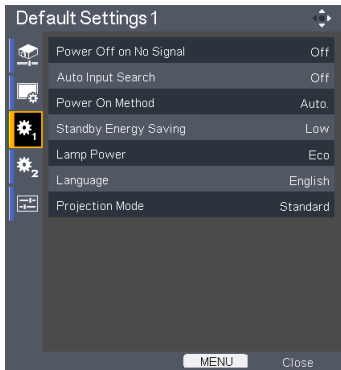

Default Settings 1

Power Off on No Signal

Sets the countdown timer interval. The countdown timer will start, when there is no signal being sent to the projector. The projector will automatically power off when the countdown has finished.

Auto Input Search

When this function is turned "On", the projector will search for other signals if the current input signal is lost. When this function is turned "Off", it will only search a specified connection port.

Power On Method

Sets whether to turn on the power when the ON/STANDBY button is pressed (Manual), or when the main power switch is turned on (Auto).

Standby Energy Saving

- ▶ High: Choose "High" to save standby power (less than 0.5W). Monitor Out port will be disabled.
- ▶ Low: Choose "Low" to return to normal standby mode and the Monitor Out port will be enabled.

Lamp Power

- ▶ Eco: Choose "Eco" to dim the projector lamp which will lower power consumption and extend the lamp life.
- ▶ Std: Standard mode.


Language

Choose the multilingual OSD. Press ▼ into the sub menu and then use the ▲ or ▼ or ◀ or ▶ key to select your preferred language. Press "ENTER" to finalize the selection.

Note

❖ If [Power on Method] is set to [Auto], then if the power is supplied when restored after a power outage, the projector will come on.

User Controls

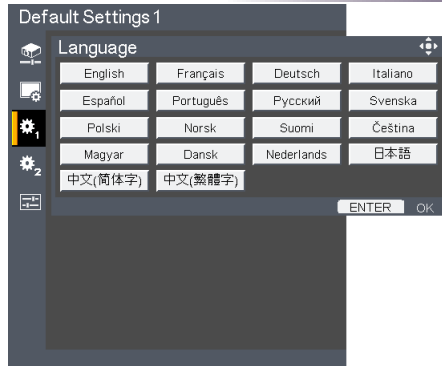

Projection Mode

▶ Stnd. (Standard)

The factory default setting. The image is projected straight on the screen.

▶ Rear

When you select this, the projector reverses the image so you can project behind a translucent screen.


▶ Ceiling

When you select this, the projector turns the image upside down for ceiling-mounted projection.

▶ Rr-Ceil. (Rear Ceiling)

When you select this, the projector reverses and turns the image upside down at same time. You can project from behind a translucent screen with ceiling mounted projection.

User Controls

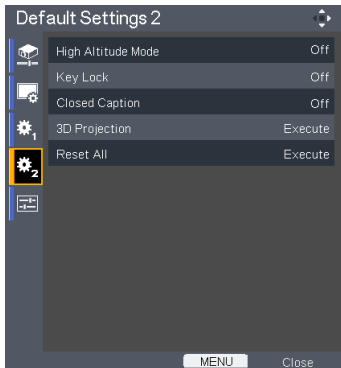

Default Settings 2

High Altitude Mode

When "On" is selected, the fans will spin faster. Set High Altitude mode to "On" when the projector is used over 2500ft (750m) elevation.

Key Lock

When the keypad lock function is "On", the control panel will be locked other than "Power" key. However, the projector can be operated by the remote control. By selecting "Off", you will be able to reuse the control panel.

Closed Caption

This projector supports a special feature called closed captioning which allows subtitles to be displayed at the bottom of the picture.

This is pursuant to the Regulations set forth by the US Federal Communications Commission (FCC).

- ▶ Off: Select "Off" to turn off the closed captioning feature.
- ▶ CC-1: CC-1 language including American English.
- ▶ CC-2: CC-2 language including Spanish, French, Portuguese, German and Danish. (depending on the TV channel of the user)

Due to the different broadcasting or signaling system, it may not operate correctly in other regions or countries where TV programs do not support closed captioning. Closed Caption may not appear correctly depending on the signal conditions or the recording conditions of videotapes. When you switch channels of broadcasting programs or play a videotape using "trick play" functions such as rewind or fast-forward, the operations in the connected device may cause the Caption to remain on the screen for a while. Closed Caption is available for Video and S-Video input images.

User Controls


3D Projection

Refer to next page.

Reset All

Return the adjustments and settings to the factory default values.

User Controls

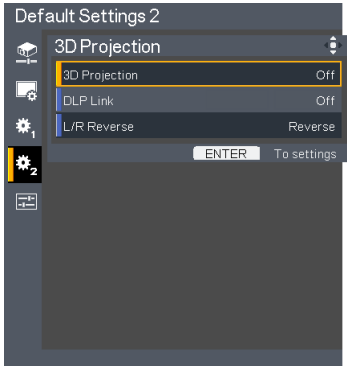

Default Settings 2 | 3D Projection

3D Projection

- ▶ Off: Choose "Off" to display normal (2D) picture.
- ▶ On: Choose "On" to display 3D format.

DLP Link

Select "On" to display 3D image viewing with DLP Link 3D glasses. Optional sold 3D glasses uses DLP link system to synchronize with the product. Set DLP Link "On" when the optional 3D glasses are used.

L/R Reverse

- ▶ Normal: Choose "Normal" for default frame contents.
- ▶ Reverse: Choose "Reverse" to invert left and right frame contents. Choose "Reverse" if viewing image is not natural or felt 3D incorrect.




❖ Compatible 3D source, 3D content and active shutter glasses are required for 3D viewing.

❖ "L/R Reverse" is only available when 3D is enabled and this mode 3D is for DLP link glass only.

❖ This setting may need to change when re-start running 3D movie.

❖ HDMI input of the projector does not support 3D image transmission in HDMI standard. 3D image can't be displayed when a 3D Blu-ray disc player is directly connected to the HDMI terminal.

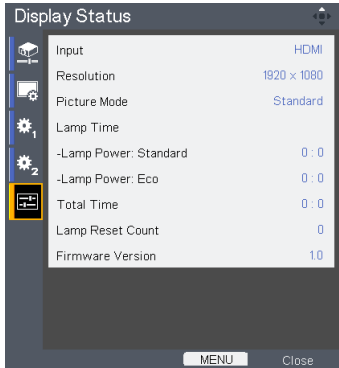

Display Status

Input

Input source name.

Resolution

Resolution (in dots).

Picture Mode

Display the setting of Picture mode.

Lamp Time

Time of lamp use.

Total Time

Total Time, including Eco mode and Standard mode.

Lamp Reset Count

Display the number of projector replacement lamps.

Firmware Version

Display Firmware version.

Troubleshooting

If you experience trouble with the projector, refer to the following information. If the problem persists, please contact your local dealer or service center.

Problem: No image appears on screen

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure the pins of terminals are not crooked or broken.
- ▶ Check if the projection lamp has been securely installed. Please refer to the “Replacing the lamp” section.
- ▶ Make sure you have removed the lens cap and the projector is switched on.
- ▶ Ensure that the “AV Mute” feature is not turned on.

Problem: Partial, scrolling or incorrectly displayed image

- ▶ Press “Auto Set” on the remote control.
- ▶ If you are using a Notebook:
 1. First, follow the steps above to adjust resolution of the computer.
 2. Press the toggle output settings. example: [Fn]+[F3]

PANASONIC, NEC => Fn+F3
HP, SHARP, TOSHIBA => Fn+F5
IBM, SONY => Fn+F7
DELL, EPSON => Fn+F8
FUJITSU => Fn+F10
APPLE => F7

- ▶ If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

Problem: The screen of the Notebook or PowerBook computer is not displaying a presentation

▶ If you are using a Notebook PC:

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's documentation for detailed information.

Problem: Image is unstable or flickering

- ▶ Adjust the "Phase" or "Frequency" to correct it. Refer to the "Image Adjustment | Position" section for more information.
- ▶ Change the monitor setting from your computer.
- ▶ Check and reconfigure the display mode of your graphic card to make it compatible with the product.

Problem: Image is out of focus

- ▶ Adjust the Focus Ring on the projector lens.
- ▶ Make sure the projection screen is between the required distance. (refer to pages 26~27)

Problem: The image is stretched when displaying 16:9 DVD

Change "Aspect" by pressing the key on remote control or OSD menu to show image with proper aspect ratio.

Problem: Image is too small or too large

- ▶ Adjust the Zoom lever on the top of the projector.
- ▶ Move the projector closer to or further from the screen.
- ▶ Press "Aspect" button on the remote control or press "Menu" button on the projector panel, go to "Display Settings --> Aspect" and try the different settings.

Problem: Image is reversed































- ▶ Select "Default Settings 1-->Projection Mode" from the OSD and adjust the projection direction.

Problem: Lamp burns out or makes a popping sound

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp".


Appendices

Problem: Indicator lighting message

Message	POWER indicator	TEMP indicator	LAMP indicator
	(Red/Blue)	(Red)	(Red)
Standby (Input power cord)	 (Red)		
Normal (Power on)	 (Blue)		
Powering up (Warming up)	Flashing Blue (0.5 sec)		
Power off (Cooling Down)	Flashing Red (0.5 sec)		
Error (Over temp. On Event)	 (Blue)		
Error (Over temp. On Standby)	 (Red)		
Error (Lamp failed On Event)	 (Blue)		
Error (Lamp failed On Standby)	 (Red)		
Error (Fan failed On Event)	 (Blue)	Flashing	
Error (Fan failed On Standby)	 (Red)	Flashing	
Error (Color Wheel fail / Striking Lamp Fail On Event)	 (Blue)		Flashing
Error (Color Wheel fail / Striking Lamp Fail On Standby)	 (Red)		Flashing

Note

Steady light => 


No light => 

Problem: Message Reminders

- ▶ Over temperature - the projector has exceeded its recommended operating temperature and must be allowed to cool down before it may be used.



- ▶ Replacing the lamp - the lamp is about to reach its maximum life-time. Prepare to replace it soon.

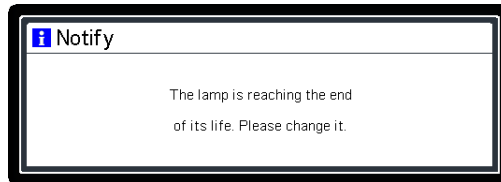


- ▶ Fan failed - the system fan is not working.



Replacing the lamp

The projector will detect the lamp life itself. It will show you a warning message

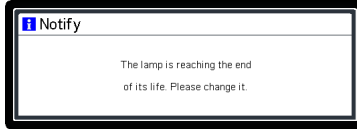

Warning: To avoid burns, allow the projector to cool for at least 60 minutes before you replace the lamp!


When you see this message, change the lamp as soon as possible. Make sure the projector has been cooled down for at least 60 minutes before changing the lamp.



Warning: To avoid the risk of personal injury, do not drop the lamp module or touch the glass parts. The glass parts may shatter and cause injury if it is dropped.

Warning: For continued safety replace with a lamp of the same type.

Caution: If the lamp should break, handle with care to avoid injury due to broken pieces and contact your sales representative for repair service.

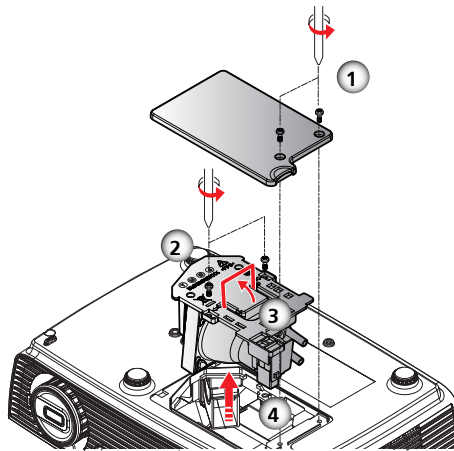

Lamp Replacing Procedure:

1. Switch off the power to the projector by pressing the "Power".
2. Allow the projector to cool down at least 60 minutes.
3. Disconnect the power cord.
4. Use a screwdriver to remove the 2 screws from the cover. ❶
5. Push up and remove the lamp cover.
6. Loosen the 2 screws from the lamp module ❷ and pull up the lamp bar. ❸
7. Pull out the lamp module by force. ❹
8. Install the new lamp module by reversing the previous steps. See the lamp's manual for instructions on resetting the lamp time.

Used Lamps

This projector's lamp contains trace amounts of environmentally harmful inorganic mercury. Be careful not to break used lamps, and dispose of them in accordance with local regulations or contact your sales representative.

Computer Compatibility

A. VGA Analog				
(1) VGA Analog - PC Signal				
Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)	Clock (MHz)
VGA	640 x 480	60	31.47	25.18
	640 x 480	72	37.86	31.50
	640 x 480	75	37.50	31.50
	640 x 480	85	43.27	36.00
	800 x 600	56	35.20	36.00
SVGA	800 x 600	60	37.88	40.00
	800 x 600	72	48.08	50.00
	800 x 600	75	46.88	49.50
	800 x 600	85	53.67	56.25
	800 x 600	119.85	77.20	-
XGA	1024 x 768	60	48.36	65.00
	1024 x 768	70	56.48	75.00
	1024 x 768	75	60.02	78.75
	1024 x 768	85	68.67	94.50
	1024 x 768	119.804	98.80	-
SXGA	1152 x 864	70	63.80	94.50
	1152 x 864	75	67.50	108.00
	1152 x 864	85	77.10	121.50
	1280 x 1024	60	63.98	108.00
	1280 x 1024	72	77.90	134.60
QuadVGA	1280 x 1024	75	79.98	135.00
	1280 x 1024	85	91.15	157.50
	1280 x 960	60	60.00	108.00
SXGA+	1280 x 960	75	75.00	126.00
	1400 x 1050	60	65.32	121.75
UXGA	1600 x 1200	60	75.00	162.00
PowerBook G4	640 x 480	60	31.50	25.17
PowerBook G4	640 x 480	66.6(67)	35.00	30.24
PowerBook G4	800 x 600	60	37.88	40.00
PowerBook G4	1024 x 768	60	48.36	65.00
PowerBook G4	1152 x 870	75	68.68	100.00
PowerBook G4	1280 x 960	75	75.20	126.00
i Mac (G3)	1024 x 768	75	60.30	80.00

Appendices

A. VGA Analog

(2) VGA Analog - Extended Wide

Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)	Clock (MHz)
WXGA	1280 x 768	60	47.78	79.50
	1280 x 768	75	60.29	102.25
	1280 x 768	85	68.63	117.50
	1280 x 720	60	44.80	74.25
	1280 x 800	60	49.60	83.50
	1440 x 900	60	55.90	106.50
	1680 x 1050	60	65.30	146.25
	1366 x 768	60	47.74	85.50
	1920 x 1080-RB	60	66.60	138.50
	1024 x 600	60	37.30	50.40

(3) VGA Analog - Component Signal

480i	720 x 480	59.94 (29.97)	27.00	-
480p	720 x 480	59.94	31.47	-
576i	720 x 576	50 (25)	27.00	-
576p	720 x 576	50	31.25	-
720p	1280 x 720	60	45.00	-
720p	1280 x 720	50	37.50	-
1080i	1920 x 1080	60 (30)	33.75	-
1080i	1920 x 1080	50 (25)	33.75	-
1080p	1920 x 1080	60	67.50	-
1080p	1920 x 1080	50	56.25	-

B. HDMI Digital

(1) HDMI - PC Signal (Same as DVI)

Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)	Clock (MHz)
VGA	640 x 480	60	31.47	25.18
	640 x 480	72	37.86	31.50
	640 x 480	75	37.50	31.50
	640 x 480	85	43.27	36.00
	800 x 600	56	35.20	36.00
SVGA	800 x 600	60	37.88	40.00
	800 x 600	72	48.08	50.00
	800 x 600	75	46.88	49.50
	800 x 600	85	53.67	56.25
	800 x 600	119.85	77.20	-
	1024 x 768	60	48.36	65.00
XGA	1024 x 768	70	56.48	75.00
	1024 x 768	75	60.02	78.75
	1024 x 768	119.804	98.80	-
	1024 x 768	119.804	98.80	-


Appendices

B. HDMI Digital				
(1) HDMI -PC Signal (Same as DVI)				
SXGA	1152 x 864	75	67.50	108.00
	1152 x 864	85	77.10	121.50
	1280 x 1024	60	63.98	108.00
	1280 x 1024	72	77.90	134.60
	1280 x 1024	75	79.98	135.00
	1280 x 1024	85	91.15	157.50
QuadVGA	1280 x 960	75	75.00	126.00
PowerBook G4	640 x 480	60	31.50	25.17
PowerBook G4	640 x 480	66.6(67)	35.00	30.24
PowerBook G4	800 x 600	60	37.88	40.00
PowerBook G4	1024 x 768	60	48.36	65.00
PowerBook G4	1152 x 870	75	68.68	100.00
PowerBook G4	1280 x 960	75	75.20	126.00
i Mac (G3)	1024 x 768	75	60.30	80.00

B. HDMI Digital				
(2) HDMI Analog - Extended Wide				
Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)	Clock (MHz)
WXGA	1280 x 768	60	47.78	79.50
	1280 x 768	75	60.29	102.25
	1280 x 768	85	68.63	117.50
	1280 x 720	60	44.80	74.25
	1280 x 800	60	49.60	83.50
	1440 x 900	60	55.90	106.50
	1680 x 1050	60	65.30	146.25
	1366 x 768	60	47.74	85.50
	1920 x 1080-RB	60	66.60	138.50
	1920 x 1080-EIA	60	66.60	148.50
	1024 x 600	60	37.30	50.40
(3) HDMI Analog - Video Signal				
480i	720 x 480 (1440 x 480)	59.94 (29.97)	27.00	-
480p	720 x 480	59.94	31.47	-
576i	720 x 576 (1440 x 576)	50 (25)	27.00	-
576p	720 x 576	50	31.25	-
720p	1280 x 720	60	45.00	-
720p	1280 x 720	50	37.50	-
1080i	1920 x 1080	60 (30)	33.75	-
1080i	1920 x 1080	50 (25)	33.75	-
1080p	1920 x 1080	60	67.50	-
1080p	1920 x 1080	50	56.25	-
1080p	1920 x 1080	24/23.98	27.00	-

Configurations of Terminals

Terminal : Analog RGB (Mini D-sub 15 pin)

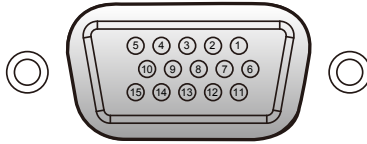

1	Red (R/Cr) Input/R Output	9	DDC 5V / NC
2	Green (G/Y) Input/G Output	10	Ground (Ver. sync.)
3	Blue (B/Cb) Input/B Output	11	ICP download
4	ICP download / NC	12	DDC Data / NC
5	Ground (Horiz.sync.)	13	Horiz. sync. Input / Output (Composite H/V sync. Input)
6	Ground (Red)		
7	Ground (Green)	14	Vert. sync. Input / Output
8	Ground (Blue)	15	DDC CLK / NC

Appendices

Specifications

■ List of general specifications

Item	Specification	
Consumption Power	225W (ECO mode) / 280W (Full mode)	
Weight	5.5 lbs (2.5 Kg)	
Dimensions (WxHxD)	286x100x208 mm (include protruding parts)	
Environmental Considerations	Operational Temperatures : 41° to 95°F (5° to 35°C), 20% to 80% humidity (non-condensing) Storage Temperatures : -4° to 140°F (-20° to 60°C), 20% to 80% humidity (non-condensing)	
Projection System	PJ S2130/PJ X2130: Single DLP® 0.55" chip PJ WX2130: Single DLP® 0.65" chip	
Resolution	PJ S2130: 800 × 600 pixels (SVGA) PJ X2130: 1024 × 768 pixels (XGA) PJ WX2130: 1280 × 800 pixels (WXGA)	
Lens	PJ S2130/PJ X2130: F# 2.41 ~ 2.55, f=21.79 ~ 23.99 mm, 1.1X Zoom Lens PJ WX2130: F# 2.50 ~ 2.67, f=21.86 mm ~ 24 mm, 1.1X Zoom Lens	
Lamp	High-pressure mercury lamp (200W)	
Lamp Life	3000 hours typical (Full Mode) 4000 hours typical (ECO Mode)	
Projection screen size	30 ~ 300 inch	
Projection distance	PJ S2130/PJ X2130: 1.2 ~ 13.1m (Focus range) PJ WX2130: 1.0 ~ 11.0m (Focus range)	
Speaker	2W (Mono)	
Connection terminal	Computer In terminal	Mini D sub 15 pin RGB / Y/P _B / P _R (dual use)
	Monitor Out terminal	Mini D sub 15 pin
	HDMI terminal	HDMI type A connector
	S-Video terminal	Mini DIN 4 pin
	Video terminal	RCA Pin Jack
	Audio In terminal	3.5 mm diameter mini-jack for COMPUTER IN/VIDEO/S-VIDEO (multiple use)

Note

- This model complies with the above specifications.
- Designs and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.


■ Separately sold product

PJ Replacement Lamp Type 2

Trademarks

- DLP is trademarks of Texas Instruments.
- IBM is a trademark or registered trademark of International Business Machines Corporation.
- Macintosh, Mac OS X, iMac, and PowerBook are trademarks of Apple Inc., registered in the U.S. and other countries.
- Microsoft, Windows, Windows Vista, Internet Explorer and PowerPoint are either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- MicroSaver is a registered trademark of Kensington Computer Products Group, a division of ACCO Brands.
- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Other product and company names mentioned in this user's manual may be the trademarks or registered trademarks of their respective holders.

PJ S2130/PJ X2130/PJ WX2130

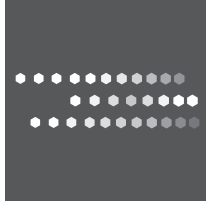

User's Manual

Printed in China

EN (GB) Y0206220

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>