

SHARP®

Quick Start Guide

MODEL
GX-BT7

If you require any advice or assistance regarding your Sharp product, please visit our web-site www.sharp.co.uk/support
Customers without internet access may telephone 0845 880 0512 during office hours (or (01) 676 0648 if telephoning from Ireland).

 
WIRELESS BLUETOOTH® SPEAKER SYSTEM

This Quick Start Guide will help you to correctly install and operate your system.

1 Accessories




Remote control x 1

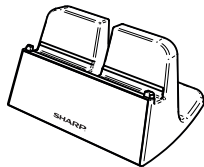


Stand for iPad x 1



 NFC tag x 2

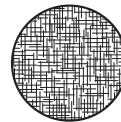


Velcro tape
(hook type) x 2

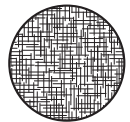 

Velcro tape
(loop type) x 3


2 Power source

 Wall socket
AC 100 - 240 V ~
50/60 Hz

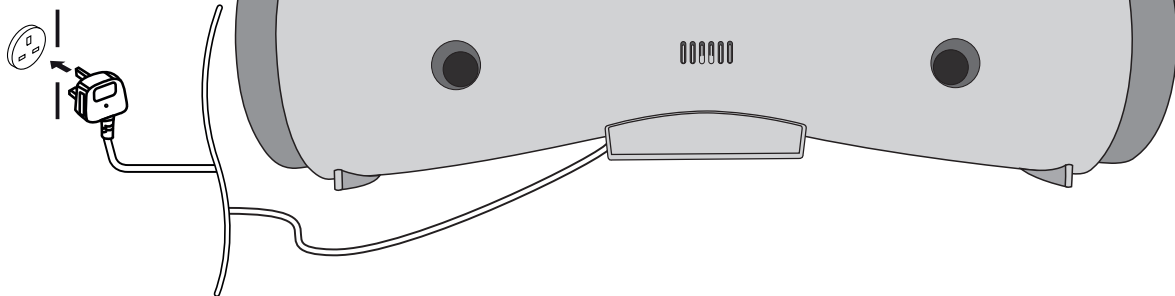


3 Before using remote control

 Before using the remote control, remove the plastic shield from the battery holder.

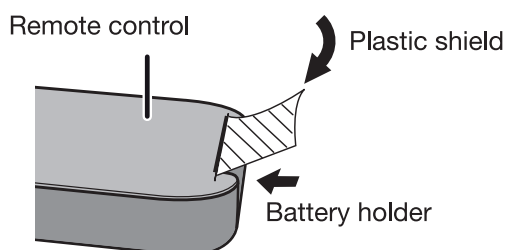

4 Turn on your system

 Press the ON/STAND-BY button to turn the power on.

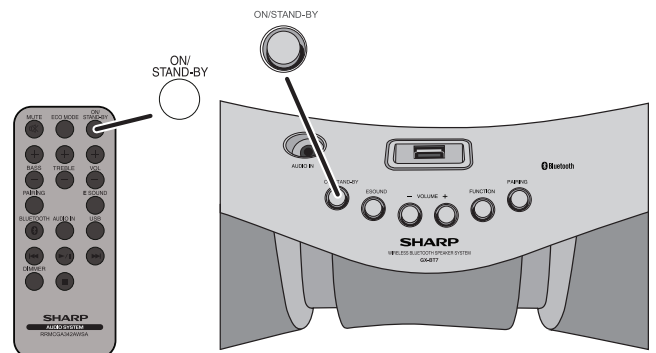

TINSE478AWZZ

5 Bluetooth one touch connection via NFC

Note for Android device

This audio system supports NFC-enabled device with Android 4.1, Jelly Bean and higher.

NFC tag set up

 
The NFC tags can be placed anywhere convenient to you. The velcro tapes supplied will help to secure the tags onto the desired location.

Caution:


- Make sure that the NFC tag is placed on a flat and level surface.
- If you choose not to use the velcro tape, do not place the NFC tag near metal surface to avoid connection interference during tagging.

Keep all small parts away from children as they may be accidentally swallowed.

- 1 Peel the separator off the velcro tape (loop type) and stick it on a desired surface.

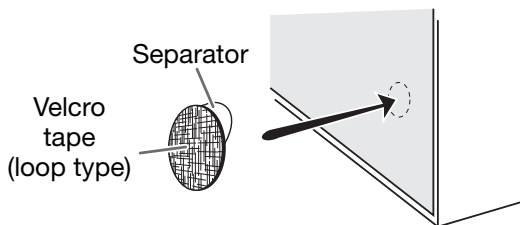

 
- 2 Peel the separator off the velcro tape (hook type) and stick it to the rear of the NFC tag. Then place the tag onto the desired location.

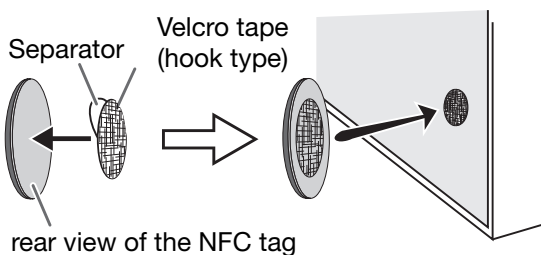

NFC connection for audio playback

Check that:

 - Your device (smartphone/tablet) has an NFC function.
 - NFC function on your device is enabled.
 - Screen lock function of the device is off.
 - This unit is not in Eco mode.
 - Your device must be within 10 metres from the unit.
- 1 Touch your device to the supplied NFC tag.

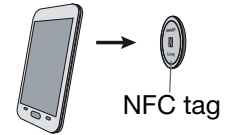

- 2 A pop-up window asking whether to proceed with the *Bluetooth* connection appears on the device. Select <YES>.
 - 3 Playback will start automatically, otherwise press play (on remote control or source device).
- The 'connected' message appears when the connection is complete.
 - Sound will be heard from the speakers of this unit via audio streaming.
 - Your device must be within 10 metres from the unit.

Various Bluetooth operation buttons (remote control only)


	Press the button to play or pause.
	Press the button to skip up. Press and hold to fast forward.
	Press the button to skip down. Press and hold to fast reverse.

Notes:

- To disconnect, simply touch your device to the tag again.
- Regardless of which tag you used to establish *Bluetooth* connection with this product, tapping your device to any of the NFC tags again, will disconnect the *Bluetooth* connection.
- To listen to audio via *Bluetooth* connectivity without NFC tag - refer "**Pairing with other Bluetooth source devices**" on page 7 of the operation manual.
- It takes about 6-8 seconds for a *Bluetooth* enabled device (eg. smartphone) to establish *Bluetooth* connection with this unit via NFC or manual connection.

6 Listening on Android™ devices

 Android device connection (USB)

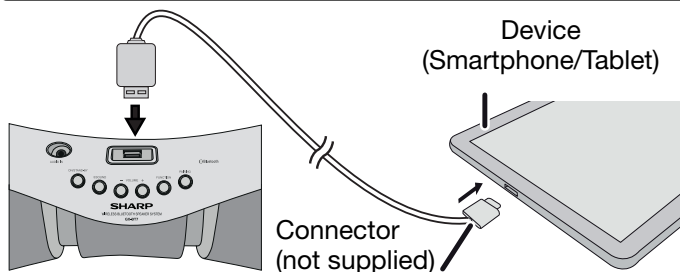

Android device playback

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the USB button (remote control) or FUNCTION button repeatedly (main unit) to select USB function.
- 3 Connect the device (Smartphone/Tablet) to the unit.
- 4 Press play (on remote control or source device).

Notes:

- If the source device has an extra bass or equalizer function, set them to off. If these functions are on, sound may be distorted.
- Incoming calls will pause the playback/application.

- Once the calls are answered, the conversation can only be heard through the built-in speaker of the device. Turn on the device speaker or disconnect the device to start conversation.

To unplug the Android device

- 1 Pause the playback or quit the application (app).
- 2 Unplug the device from the USB terminal.

Various functions

Function	Remote control	Operation
Track up/down		Press in the playback or stop mode. If you press the button in the stop mode, press the button to start the desired track.
Fast forward/reverse		Press and hold down in the playback mode. Release the button to resume playback.

Notes:

- Controls (play/pause/skip up/skip down) will function based on actual application (app) controls used on Android devices.

Android is a trademark of Google Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>