 


R-959M & R-98STM-A QUICK START GUIDE

⚠ WARNINGS:
Before starting, read carefully all the warnings given in the full operation manual for the safe use of your oven.

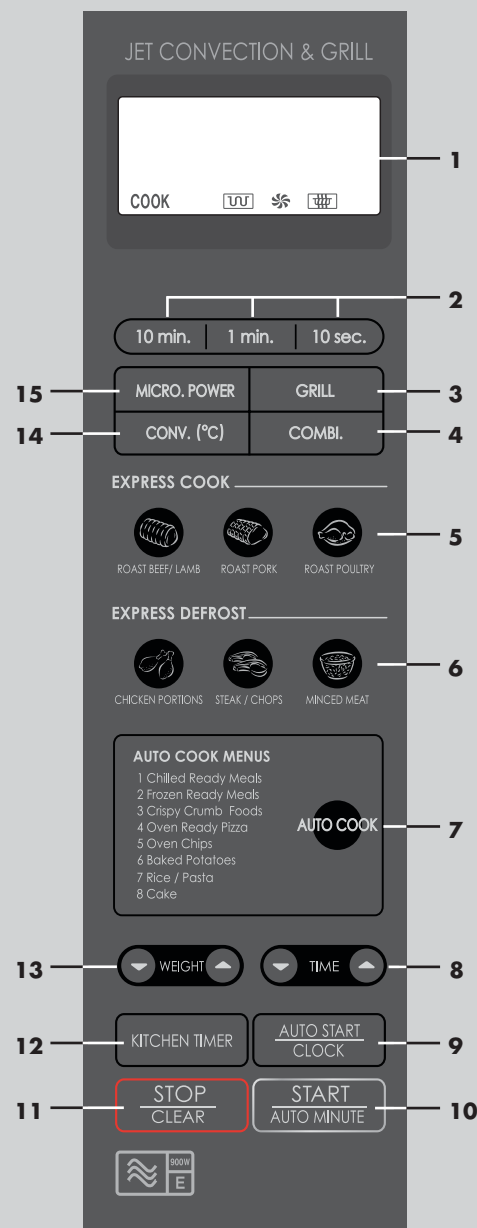

R-98STM-A*

- | | |
|-------------------------|---------------------------|
| 1. DIGITAL DISPLAY | 9. AUTO START/CLOCK key |
| 2. TIME keys | 10. START/AUTO MINUTE key |
| 3. GRILL key | 11. STOP/CLEAR key |
| 4. COMBI.key | 12. KITCHEN TIMER key |
| 5. EXPRESS COOK keys | 13. WEIGHT keys |
| 6. EXPRESS DEFROST keys | 14. CONV. (°C) key |
| 7. AUTO COOK key | 15. MICRO. POWER key |
| 8. LESS/MORE keys | |

 
*:For R-959M the Digital Display and Operating Keys are the same.

SHARP
TINS-A704WRRZ-K61

1


INSTALLATION

1. Remove all packaging and accessories from the oven, including the feature sticker if fixed to the outside of the door and the wrapping shown in the diagram. **DO NOT REMOVE THE WAVEGUIDE COVER**, this can be found on the right hand side wall, inside your microwave.

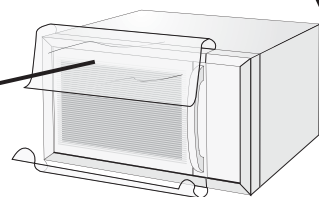

2. Ensure there is at least 13cm of free space above the oven.

 
3. Ensure the turntable parts are assembled as shown in the diagrams opposite.

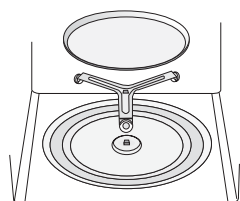

Other Accessories

The racks can be used with "Grill", "Convection" and "Dual Cooking" modes.

 The shelves can only be used with "Convection" mode.

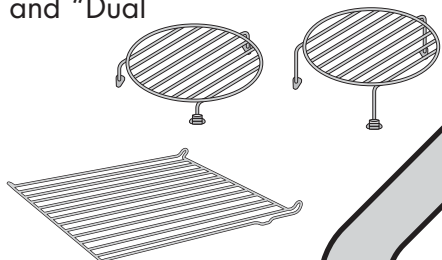

MICROWAVING

To cook for 2 minutes 30 seconds on 70% microwave power.

1. Enter the cooking time by pressing the **1 MIN.** key twice and the **10 SEC.** key three times.

1 min. x2

10 sec. x3



2. Select the power by pressing the **MICRO. POWER** key twice.

MICRO. POWER x2



3. Press the **START/AUTO MINUTE** key once to start cooking.

START/AUTO MINUTE x1



4

4. The display will count down through cooking time.

GETTING STARTED

2

Plug in the oven. Nothing will appear in the display at this time.

Open the door, the display will flash the message shown opposite.

Close the door. The display will show ".0".

The oven is now ready for use.

To set the clock follow the instructions "SETTING THE CLOCK" below.

ENERGY

SAVE MODE

TO CANCEL

ENERGY

SAVE MODE

SET THE CLOCK

IMPORTANT

The oven has an Energy Save mode, for details refer to page 8 of your Operation Manual.

- The oven will default to Energy Save Mode after 3 minutes if not used. Whilst in Energy Save Mode the display is blank and the oven cannot be used.
- To remove Energy Save Mode, open and then close the door, ".0" will be displayed and the oven is ready for use.
- To remove Energy Save Mode permanently, set the clock.

If you require any advice or assistance regarding your Sharp product, please visit our Website or call our Help Line.

Website:
www.sharp.co.uk/customersupport

Help Line:
08705 274277 (U.K.)
(01) 676 0648 (Ireland)
(office hours)

SETTING THE CLOCK

Your oven is fitted with a 12 hour clock.

To set the time of day, ensure the door is closed and follow the guidelines given below:

1. Press the **AUTO START/CLOCK** key once.

AUTO START/CLOCK x1

2. Enter the hours by pressing the **TIME** keys.

10 min. 1 min.

3. Press the **AUTO START/CLOCK** key again and enter the minutes by pressing the **TIME** keys.

AUTO START/CLOCK x1

10 min. 1 min.

4. Press the **AUTO START/CLOCK** key again to start the clock.

AUTO START/CLOCK x1

3

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>