

LIST OF PARTS



MACHINES

Nos. 114-22 to 114-24

THE SINGER MANUFACTURING COMPANY

COPYRIGHT, U. S. A.,
1916, 1917, 1920, 1921, 1922 AND 1923,
BY
THE SINGER MANUFACTURING COMPANY
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INDEX

| | PAGE |
|--|------|
| ATTACHMENTS AND ACCESSORIES | 41 |
| MACHINE No. 114-22 | 7 |
| “ “ 114-23 | 18 |
| “ “ 114-24 | 29 |
| NUMERICAL LIST OF PARTS | 47 |
| OBSOLETE PARTS | 45 |
| PROTECTOR | 41 |
| STAND | 42 |
| STARTING LEVER AND FOOT LIFTER PARTS | 42 |
| TABLE BELT GUIDE | 43 |
| THREAD UNWINDER | 44 |
| TRIMMINGS FOR TABLE 5380 | 44 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part NUMBER in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued.
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.
- R. Parkerized.

These letters **MUST BE USED** when they appear in the list, and **AFTER** the number as in the list.


In this series

- 1 to 1500 and 50001 to 51500 are Screw Numbers
- 1501 to 1800 are Nut Numbers.
- 1801 to 2000 are Roller Numbers.
- 2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

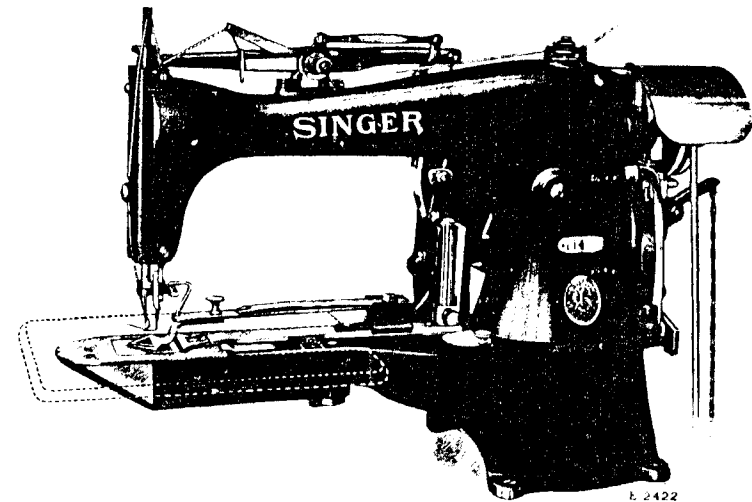

MACHINE No. 114-22

FOR TACKING PAPER TICKETS ON CLOTHING TO DISTINGUISH LOT, COLOR, SIZE, ETC., WHILE IN PROCESS OF MANUFACTURE. MAKES A TRIANGULAR SHAPED TACK CONSISTING OF FOURTEEN STITCHES $\frac{5}{8}$ INCH ACROSS THE BASE AND $\frac{3}{8}$ INCH FROM THE APEX TO THE BASE. THE LONG STITCH IN THE CENTRE OF THE BASE OF THE TRIANGLE INDICATES THE PLACE AT WHICH TO START TO UNRAVEL THE THREAD FOR DETACHING THE TICKET. SUPERSEDES 114-20 MACHINE.

OBSOLETE

| NO. | PLATE | NAME |
|--------|-------|---------------------------------------|
| *59701 | — | Arm with 4449, 59767 and two 164E... |
| 16532 | 6976 | " Dowel Pin..... |
| 4448 | 6976 | " Oil Tube for intermediate bearing . |
| 56015 | 6976 | " " " " oiling 59705 and 59706 |
| 880E | 6998 | " Screw..... |
| 59702 | 6975 | " Shaft (horizontal)..... |
| 17703 | 6981 | " " " " Bushing (back) . |
| 50333c | 6998 | " " " " " " |
| | | Adjusting Screw..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 1520E | 6994 | Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut..... |
| *1449 | — | Arm Shaft (horizontal) Bushing (front). |
| 59703 | 6976 | " " " Gear with two 1036c..... |
| 1036c | 6976 | Arm Shaft (horizontal) Gear Set Screw. |
| 59704 | 6976 | " " (upright)..... |
| 59705 | 6976 | " " " Bushing (lower)... |
| 448c | 6992 | " " " " " Set Screw..... |
| 59706 | 6976 | Arm Shaft (upright) Bushing (upper)... |
| 448c | 6992 | " " " " " Set Screw..... |
| 59707 | 6976 | Arm Shaft (upright) Gear (lower) with two 1253c..... |
| 1253c | 6976 | Arm Shaft (upright) Gear (lower) Set Screw..... |
| 59708 | 6976 | Arm Shaft (upright) Gear (upper) with two 1253c..... |
| 1253c | 6976 | Arm Shaft (upright) Gear (upper) Set Screw..... |
| 124674 | 7020 | Arm Side Cover..... |
| 190D | 6990 | " " " Screw..... |
| 18498 | 6975 | Belt Cover..... |
| 59795 | 6977 | " " Bracket with 184E and 59796. |
| 184E | 6998 | " " " Screw Stud..... |
| 59796 | 7019 | " " " Stud..... |
| 217D | 6998 | " " Screw..... |
| 39222 | 6977 | " Shifter..... |
| 39223 | 6976 | " " Clamp..... |
| 1255D | 6976 | " " " Screw..... |
| 62174 | 7026 | Clamp with 1220E and 17928..... |
| 62258 | 7026 | " Arm with 17714..... |
| 62259 | — | " " 62258 with 62260 and two 201D..... |
| 17710 | 7026 | Clamp Arm Hinge Plate..... |
| 1176J | 7026 | " " " " Screw..... |
| 62260 | 7026 | " " Hook..... |
| 201D | 7026 | " " " Screw..... |
| 59710 | 6979 | " Lifter..... |
| 176D | 7009 | " " Screw..... |
| 17928 | 7000 | " Position Stud..... |
| 17712 | 7001 | " Pressure Spring..... |
| 17713 | 7026 | " " " Bracket..... |
| 1177D | 7026 | " " " " Screw.. |
| 17714 | 7026 | " " " Guide Block.... |
| 1178J | 7026 | " " " Screw..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 1220E | 7000 | Clamp Screw Stud..... |
| 1656J | 7000 | " Thumb Nut..... |
| 62262 | — | Clamp complete, Nos. 1656J, 62174 and 62259..... |
| *62101 | — | Cloth Plate..... |
| 62102 | 6980 | " " Guide Block (left)..... |
| 742F | 6980 | " " " " " Screw... |
| 1547D | 6980 | " " " " " S c r e w Nut..... |
| 62103 | 6980 | Cloth Plate Guide Block (right)..... |
| 3021 | 6980 | " " " " " R i v e t |
| 190D | 6990 | " " Screw..... |
| 62104 | 6980 | " " Stop..... |
| 26770 | 6980 | " " " Rivet..... |
| 62105 | 6975 | Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021.. |
| *62178 | — | Cylinder..... |
| 62189 | 7032 | " Bottom Cover..... |
| 62108 | 6981 | " End Cover..... |
| 62190 | — | " " " 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D..... |
| 62185 | 6980 | Cylinder End Cover Bracket..... |
| 62111 | 6980 | " " " " Hinge Pin.. |
| 1477D | 6980 | " " " " Screw..... |
| 62112 | 6980 | " " " Hinge..... |
| 1477D | 6980 | " " " " Screw..... |
| 62113 | 6980 | " " " Spring..... |
| 1034D | 6980 | " " " " Screw..... |
| 62114 | 6980 | " Top Cover..... |
| 286D | 6980 | " " " Thumb Screw..... |
| 59711 | 6981 | Face Plate..... |
| 59712 | — | Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543..... |
| 164D | 6990 | Face Plate Screw..... |
| 2107 | 6980 | " " Thread Guard..... |
| 229D | 7027 | " " " " Screw..... |
| 9543 | 6980 | " " " Nipper Disc..... |
| 9544 | 6980 | " " " " " Cover.. |
| 208D | 6980 | " " " " " " Screw..... |
| 9545 | 6980 | Face Plate Thread Nipper Disc Spring.. |
| 62115 | 6982 | Feed Across Connection Adjusting Stud |
| 1649C | 6982 | " " " " " Nut (left hand thread)..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 1650c | 6982 | Feed Across Connection Adjusting Stud Nut (right hand thread)..... |
| 63940 | --- | Feed Across Connecting (lever end) with 42076 and two 896E..... |
| 63941 | 7027 | Feed Across Connection (lever end) 63940 with 55381..... |
| 55381 | 7027 | Feed Across Connecting (lever end) Ball Stud..... |
| 1185c | 6982 | Feed Across Connection (lever end) Ball Stud Set Screw..... |
| 63942 | --- | Feed Across Connection (regulator end) with 42076 and two 896E..... |
| 63943 | 7027 | Feed Across Connection (regulator end) 63942 with 63944..... |
| 63944 | 7027 | Feed Across Connection (regulator end) Ball Stud..... |
| *42076 | --- | Feed Across Connection Cap..... |
| 896E | 7027 | " " " " Screw..... |
| 62147 | 7002 | " " Lever with 1185c and 1952..... |
| 17737 | 7004 | " " " Hinge Stud..... |
| 160D | 6998 | " " " " Clamping Screw..... |
| 62149 | 7001 | Feed Across Lever Plate with 62153..... |
| 62150 | 7001 | " " " " Cover..... |
| 1094F | 6985 | " " " " Screw..... |
| 55300 | 6985 | " " " " Steady Pin..... |
| 1952 | 7027 | " " " Roller and Stud..... |
| 62151 | 7002 | " " Regulator..... |
| 50599D | 7027 | " " " Adjusting Screw Stud..... |
| 1676c | 6982 | Feed Across Regulator Adjusting Screw Stud Nut..... |
| 46244 | 7027 | Feed Across Regulator Adjusting Screw Stud Nut Washer (fibre)..... |
| 17738 | 6982 | Feed Across Regulator Adjusting Screw Stud Nut Washer (steel)..... |
| 1188D | 6998 | Feed Across Regulator Hinge Screw..... |
| 62152 | 7001 | " " " Link..... |
| 1189E | 7001 | " " " " Screw Stud..... |
| 62153 | 7001 | " " " " Stud..... |
| 62284 | 7030 | " Cam with two 1192c and three each 190D, 208D, 227D, 17874 and 62138..... |
| 18415 | 6987 | Feed Cam Driving Worm with 1441c and 1442c..... |
| 1442c | 6987 | Feed Cam Driving Worm Position Screw..... |
| 1441c | 6987 | " " " " Set Screw..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 17797 | 6977 | Feed Cam Driving Worm Wheel with 453c..... |
| 3012 | 7019 | Feed Cam Driving Worm Wheel Pin..... |
| 453c | 6987 | " " " " " Set Screw..... |
| 18384 | 7019 | Feed Cam Pin..... |
| 1192c | 6987 | " " Set Screw..... |
| 62155 | 7002 | " " Shaft..... |
| 1653c | 6999 | " " " Nut..... |
| 39358 | 7004 | " Plate..... |
| *18445 | 6989 | " " Carrier Bar..... |
| 62156 | --- | " " " " 18445 with 934J, 1094F, 1195E, 17743, 18368, 62149, 62150, two 55300 and four 17806..... |
| 59730 | 6987 | Feed Plate Carrier Bar Pivot Block..... |
| 50306c | 6987 | " " " " " " Screw..... |
| 18368 | 6987 | " " " " Plate..... |
| 934J | 6987 | " " " " " Screw..... |
| 1654c | 7027 | " " Nut..... |
| 17806 | 7027 | " " Position Stud..... |
| 1195E | 7027 | " " Screw Stud..... |
| 62157 | 7002 | " Regulator with 1953..... |
| 62148 | 7002 | " " Bracket with 39310 and three 160D..... |
| *39310 | --- | Feed Regulator Bracket Cap..... |
| 160D | 6998 | " " " " Screw..... |
| 8589 | 7019 | " " " Dowel Pin..... |
| 1177D | 7026 | " " " Screw..... |
| 17744 | 6987 | " " Hinge Stud..... |
| 17743 | 6987 | " " Post..... |
| 1953 | 7019 | " " Roller and Screw Stud with 1655c and 14017..... |
| 1655c | 6985 | Feed Regulator Roller and Screw Stud Nut..... |
| 14017 | 6985 | Feed Regulator Roller and Screw Stud Nut Washer..... |
| 1190c | 6987 | Feed Regulator Stop Screw..... |
| 39313 | 7004 | " " Swivel..... |
| 1191D | 6987 | " " Thumb Screw..... |
| 59731 | 6990 | Knife..... |
| 62124 | 6975 | " Bar with 62130 and two 3021..... |
| 62125 | 6990 | " " Cap..... |
| 164D | 6990 | " " " Screw..... |
| 62126 | 6990 | Knife Bar Connection with 17917..... |
| 190D | 6990 | " " " Screw..... |
| 17915 | 6990 | " " " Slide Block..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 17917 | — | Knife Bar Connection Slide Block 17915 with 17916..... |
| 17916 | 6990 | Knife Bar Connection Slide Block Stud. |
| 59734 | 6990 | " " Driving Lever with 223F and 59735..... |
| 1382F | 6998 | Knife Bar Driving Lever Hinge Screw |
| 1681c | 6999 | " " " " " " |
| | | Nut..... |
| 59735 | 6990 | Knife Bar Driving Lever Lock Stud |
| 223F | 6990 | " " " " " " |
| | | Screw..... |
| 62127 | 6990 | Knife Bar Guide..... |
| 1235F | 6990 | " " " Screw..... |
| 8734 | 7015 | " " Retaining Spring..... |
| 62192 | 7015 | " " " " Bracket.... |
| 62128 | 6990 | " Holder with 59739..... |
| 62129 | 6990 | " " Cap with 59739..... |
| 691F | 6990 | " " " Screw..... |
| 59739 | 6990 | " " " Stud..... |
| 62130 | 6990 | " " Connection..... |
| 3021 | 6980 | " " " Rivet..... |
| 59739 | 6990 | " " Stud..... |
| 236F | 6990 | " Screw..... |
| 62179 | 7015 | Looper with 34418..... |
| *59742 | — | " Collar..... |
| 59743 | 6991 | " Driving Shaft..... |
| 62131 | 6991 | " " " Bushing..... |
| 52045 | 6992 | " " " " Packing (cotton)..... |
| 1148c | 7015 | Looper Driving Shaft Bushing Set Screw |
| 59745 | 6991 | " " " Collar with two 465c..... |
| 465c | 6991 | Looper Driving Shaft Collar Set Screw . |
| 59746 | 6991 | " " " Coupling with two 50150c..... |
| 50150c | 6991 | Looper Driving Shaft Coupling Set Screw |
| 59707 | 6976 | " " " Gear with two 1253c..... |
| 59747 | 6992 | Looper Driving Shaft Gear Cover..... |
| 190D | 6990 | " " " " " Screw . |
| 1253c | 6976 | " " " " Set Screw.... |
| 59748 | 6991 | " " " Universal Joint.... |
| 50150c | 6991 | " Set Screw..... |
| 62158 | 7002 | " Shaft with 50150c and 59742.... |
| 59745 | 6991 | " " Collar with two 465c..... |
| 465c | 6991 | " " " Set Screw..... |
| 59746 | 6991 | " " Coupling with two 50150c. |

| NO. | PLATE | NAME |
|--------|-------|---|
| 50150c | 6991 | Looper Shaft Coupling Set Screw..... |
| 59750 | 6991 | " " Eccentric with two 624c... |
| 62132 | 6991 | " " " Connection with 59752 and two 171E..... |
| *59752 | — | Looper Shaft Eccentric Connection Cap. |
| 171E | 6991 | " " " " " " |
| | | Screw..... |
| 62133 | 6991 | Looper Shaft Eccentric Connection Stud (eccentric)..... |
| 1095F | 6991 | Looper Shaft Eccentric Connection Stud Cap Screw..... |
| 1259c | 6991 | Looper Shaft Eccentric Connection Stud Set Screw..... |
| 624c | 6991 | Looper Shaft Eccentric Set Screw..... |
| 62134 | 6991 | " " Slide Block..... |
| 62135 | 6991 | " " " " Cap..... |
| 1186c | 6991 | " " " " " Screw.... |
| 34418 | 6991 | " Washer..... |
| 59756 | 6989 | Needle Bar with 1072F..... |
| *39203 | 6992 | " " Connecting Link..... |
| 62283 | — | " " " " 39203 with 377c, 1518E and 2052..... |
| 377c | 6992 | Needle Bar Connecting Link Hinge Screw |
| 1518E | 6992 | " " " " " " |
| | | Nut..... |
| 2052 | 6992 | Needle Bar Connecting Stud with 155c. |
| 155c | 6992 | " " " " Set Screw. |
| 59757 | 6992 | " " Crank Wheel with 448c and 1293c..... |
| 1293c | 6992 | Needle Bar Crank Wheel Position Screw |
| 448c | 6992 | " " " " Set Screw..... |
| 59758 | 6993 | " Guard..... |
| 59759 | 6993 | " " Cam with two 465c..... |
| 465c | 6991 | " " " Set Screw..... |
| 2273 | 7027 | " " Pin..... |
| 59760 | 6989 | " " Shaft..... |
| 59761 | 6993 | " " " Collar with two 465c |
| 465c | 6991 | " " " " Set Screw.. |
| 59762 | 6993 | " " " Crank with 51812 and two 465c..... |
| 51812 | 6993 | Needle Guard Shaft Crank Roller and Stud..... |
| 465c | 6991 | Needle Guard Shaft Crank Set Screw... |
| 59763 | 6993 | " " " E n d B e a r i n g |
| 59764 | 6989 | " " " " " " |
| | | Bracket..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 2022 | 7027 | Needle Guard Shaft End Bearing Bracket Dowel Pin..... |
| 965D | 6993 | Needle Guard Shaft End Bearing Bracket Screw..... |
| 1480H | 6993 | Needle Guard Shaft End Bearing Cap Screw..... |
| 59765 | 6993 | Needle Guard Shaft Spring..... |
| 59766 | 6993 | " " " " Collar with 624c..... |
| 624c | 6991 | Needle Guard Shaft Spring Collar Set Screw..... |
| 233D | 6995 | Needle Guard Shaft Spring Screw..... |
| 1072F | 6993 | " Set Screw..... |
| 2058 | 6989 | Presser Bar..... |
| 17841 | 6992 | " " Collar with two 196e..... |
| 196F | 6992 | " " " Set Screw..... |
| 17842 | 6992 | " " Guide Bracket with 453c... |
| 453C | 6987 | " " " " Set Screw.. |
| 17843 | 6981 | " " Lifting Lever..... |
| 59767 | 6996 | " " " " Bracket..... |
| 164E | 6990 | " " " " " Screw |
| 1201D | 7006 | " " " " Hinge Screw.. |
| 17845 | 7032 | " " " " Rod..... |
| 17846 | — | " " " " " Chain... |
| 8414 | 6989 | " " Spring..... |
| 17941 | 6977 | Pulley (loose) 2 $\frac{7}{8}$ in. diam..... |
| 17848 | 6977 | " " Bushing..... |
| 2269 | 6994 | " " " Position Pin.... |
| 1202D | 6998 | " " Cap Screw..... |
| 17942 | 6977 | " (tight) 2 $\frac{7}{8}$ in. diam., with 2269.. |
| 2022 | 7027 | " " Pin..... |
| 17955 | — | Pulleys complete, Nos. 1202b, 1206c, 17848, 17854, 17941 and 17942..... |
| 17853 | 6994 | Starting Lever..... |
| 1262C | 6998 | " " Hinge Screw..... |
| 1662C | 6999 | " " " " Nut..... |
| 17886 | 7032 | " " Pitman..... |
| 17854 | 6994 | Stop Cam..... |
| 17855 | 6994 | " " Interlocking Rod..... |
| 124697 | — | " " " " Case..... |
| 62136 | 6977 | " " " " " 124697 with 59771 and two 193D..... |
| 62159 | — | Stop Cam Interlocking Rod Case 62136 with 1318D, 17855, 17863, 17864, 39222, 39223 and two 1255D..... |
| 59769 | 6977 | Stop Cam Interlocking Rod Case Bracket |

| NO. | PLATE | NAME |
|--------|-------|---|
| 62186 | — | Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196C, 1204E, 1254C, 1262C, 1508E, 1662C, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898D..... |
| 62137 | — | Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186D |
| 21828 | 6976 | Stop Cam Interlocking Rod Case Bracket Dowel Pin..... |
| 50372D | 7015 | Stop Cam Interlocking Rod Case Bracket Screw..... |
| 1204E | 6998 | Stop Cam Interlocking Rod Case Hinge Screw..... |
| 17859 | 6977 | Stop Cam Interlocking Rod Case Socket Joint..... |
| 898D | 6998 | Stop Cam Interlocking Rod Case Socket Joint Cap Screw..... |
| 39343 | 6981 | Stop Cam Interlocking Rod Case Spring (flat)..... |
| 430C | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw..... |
| 1520E | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut..... |
| 39344 | 6994 | Stop Cam Interlocking Rod Case Spring Bracket with 430C and 1520E..... |
| 1186D | 6991 | Stop Cam Interlocking Rod Case Spring Bracket Screw..... |
| 17861 | 6994 | Stop Cam Interlocking Rod Case Stop Stud..... |
| 1254C | 6998 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing..... |
| 1508E | 6999 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut..... |
| 17862 | 6994 | Stop Cam Interlocking Rod Case Stop Stud Spring..... |
| 59771 | 6994 | Stop Cam Interlocking Rod Case Wearing Block..... |
| 193D | 7027 | Stop Cam Interlocking Rod Case Wearing Block Screw..... |
| 17863 | 6994 | Stop Cam Interlocking Rod Spring..... |
| 17864 | 6994 | " " " " Stop..... |
| 1318D | 6994 | " " " " " Screw. |
| 3012 | 7019 | " " Pin..... |
| 1206C | 6994 | " " Screw..... |
| 2102 | 6995 | Tension Disc..... |
| 1560C | 6995 | " Regulating Thumb Nut..... |
| 50148C | 6995 | " Screw Stud..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 42336 | 6995 | Tension Spring..... |
| 13915 | 6995 | “ “ Bushing..... |
| 10145 | 6995 | “ Thread Guide..... |
| 59772 | 6995 | Thread Eyelet (head of arm)..... |
| 233D | 6995 | “ “ “ “ “ Set Screw..... |
| 1743D | 6979 | “ Nipper Adjusting Thumb Nut.. |
| 59773 | 6995 | “ “ Body..... |
| 624C | 6991 | “ “ “ Set Screw..... |
| 59774 | 6995 | “ “ Cam with two 50150c.... |
| 50150C | 6991 | “ “ “ Set Screw..... |
| 2921 | 6995 | “ “ Disc..... |
| 12162 | 6995 | “ “ “ Guide Pin..... |
| 62169 | 6979 | “ “ “ Spring..... |
| 59775 | 6995 | “ “ Eyelet..... |
| 1527D | 6995 | “ “ Lock Nut..... |
| 59776 | 6995 | “ “ Stud with 13538..... |
| 13538 | 6995 | “ “ “ Position Pin..... |
| 13539 | 6995 | “ “ “ Roller..... |
| 13540 | 6995 | “ “ “ “ Pin..... |
| 2026 | 6995 | “ “ “ Spring..... |
| 59777 | — | Thread Nipper Stud complete, Nos. 13539, 13540 and 59776..... |
| 59778 | — | Thread Nipper complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921..... |
| 62138 | 6987 | Thread Pull-off Cam..... |
| 208D | 6980 | “ “ “ Screw (long)..... |
| 227D | 7015 | “ “ “ “ (short)..... |
| 59780 | 6996 | “ “ Driving Lever..... |
| 1196C | 6998 | “ “ “ “ H i n g e Screw..... |
| 59781 | 6996 | Thread Pull-off Driving Lever Spring... |
| 59782 | 6996 | “ “ Lever..... |
| 59783 | 6996 | “ “ “ Bushing..... |
| 1445H | 6996 | Thread Pull-off Lever Bushing Screw... |
| 59784 | 6996 | “ “ “ Connection..... |
| 50116D | 6996 | “ “ “ “ Hinge Screw (driving lever end)..... |
| 50111D | 6996 | Thread Pull-off Lever Connection Hinge Screw (lever end)..... |
| 59785 | 6996 | Thread Pull-off Regulator..... |
| 62170 | — | “ Take-up Body with 62172..... |
| 42808 | 6979 | “ “ Roller..... |
| 62171 | 6979 | “ “ “ Cap..... |
| 337D | 6979 | “ “ “ “ Screw..... |
| 62172 | 6979 | “ “ “ Pin..... |

| NO. | PLATE | NAME |
|-------|-------|--|
| 62173 | 6979 | Thread Take-up complete, Nos. 337D, 42808, 62170 and 62171..... |
| 691F | 6990 | Thread Take-up Screw..... |
| 39452 | 6979 | “ Wiper Body..... |
| 39453 | 6979 | “ “ “ Finger..... |
| 330D | 6979 | “ “ “ “ Screw..... |
| 1207D | 6979 | “ “ “ Hinge Screw..... |
| 59787 | 6979 | “ “ “ Support..... |
| 641C | 6979 | “ “ “ “ Set Screw..... |
| 39455 | 6979 | “ “ “ Wire..... |
| 39456 | 6979 | “ “ “ “ Clamp..... |
| 1302D | 6979 | “ “ “ “ “ Screw..... |
| 62139 | 6997 | Throat Plate..... |
| 59799 | 6997 | “ “ Needle Guard..... |
| 208E | 6980 | “ “ “ “ Screw..... |
| 691F | 6990 | “ “ Screw..... |
| 59790 | 6997 | “ “ Thread Retainer..... |
| 206E | 7024 | “ “ “ “ Screw... |
| 17872 | 6994 | Trip Lever..... |
| 1196C | 6998 | “ “ Hinge Screw..... |
| 17873 | 6994 | “ “ Spring..... |
| 1182E | 7027 | “ “ “ “ Screw..... |
| 17874 | 6987 | Tripping Point..... |
| 190D | 6990 | “ “ “ “ Screw..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 17928 | 7000 | Clamp Position Stud..... |
| 17712 | 7001 | " Pressure Spring..... |
| 17713 | 7026 | " " " Bracket..... |
| 1177D | 7026 | " " " " Screw.. |
| 17714 | 7026 | " " " Guide Block.... |
| 1178J | 7026 | " " " Screw..... |
| 1220E | 7000 | " Screw Stud..... |
| 1656J | 7000 | " Thumb Nut..... |
| 124647 | ----- | Clamp complete, Nos. 1656J, 17927 and 124646..... |
| *62101 | ----- | Cloth Plate..... |
| 62102 | 6980 | " " Guide Block (left)..... |
| 742F | 6980 | " " " " " S c r e w |
| 1547D | 6980 | " " " " " " " |
| | | Nut..... |
| 62103 | 6980 | Cloth Plate Guide Block (right)..... |
| 3021 | 6980 | " " " " " Rivet.. |
| 190D | 6990 | " " Screw..... |
| 62104 | 6980 | " " Stop..... |
| 26770 | 6980 | " " Rivet..... |
| 62105 | 6975 | Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021. |
| *62177 | ----- | Cylinder..... |
| 62189 | 7032 | " Bottom Cover..... |
| 62108 | 6981 | " End Cover..... |
| 62190 | ----- | " " " 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D..... |
| 62185 | 6980 | Cylinder End Cover Bracket..... |
| 62111 | 6980 | " " " " Hinge Pin. |
| 1477D | 6980 | " " " " Screw..... |
| 62112 | 6980 | " " " Hinge..... |
| 1477D | 6980 | " " " " Screw..... |
| 62113 | 6980 | " " " Spring..... |
| 1034D | 6980 | " " " " Screw..... |
| 62114 | 6980 | " Top Cover..... |
| 286D | 6980 | " " " Thumb Screw..... |
| 59711 | 6981 | Face Plate..... |
| 59712 | ----- | Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543..... |
| 164D | 6990 | Face Plate Screw..... |
| 2107 | 6980 | " " Thread Guard..... |
| 229D | 7027 | " " " " Screw..... |
| 9543 | 6980 | " " " Nipper Disc..... |
| 9544 | 6980 | " " " " " Cover.. |

| NO. | PLATE | NAME |
|--------|-------|--|
| 208D | 6980 | Face Plate Thread Nipper Disc Cover Screw..... |
| 9545 | 6980 | Face Plate Thread Nipper Disc Spring . |
| 124648 | 7031 | Feed Cam with two 1192c, six each 190D, 17874, 124652 and twelve 335J..... |
| 18415 | 6987 | Feed Cam Driving Worm with 1441c and 1442c..... |
| 1442c | 6987 | Feed Cam Driving Worm Position Screw |
| 1441c | 6987 | " " " " Set Screw.... |
| 17797 | 6977 | " " " " Wheel with 453c..... |
| 3012 | 7019 | Feed Cam Driving Worm Wheel Pin |
| 453c | 6987 | " " " " " Set Screw..... |
| 18384 | 7019 | Feed Cam Pin..... |
| 1192c | 6987 | " " Set Screw..... |
| 59728 | 6989 | " " Shaft..... |
| 1653c | 6999 | " " " Nut..... |
| 124649 | 7029 | " Plate..... |
| *18445 | 6989 | Feed Plate Carrier Bar..... |
| 62123 | ----- | " " " " 18445 with 934J, 1094F, 1195E, 17743, 18368, 62118, 62119, two 55300 and four 17806..... |
| 124650 | 7032 | Feed Plate Carrier Bar Guide..... |
| 190J | 6990 | " " " " " Screw.... |
| 59730 | 6987 | " " " " Pivot Block |
| 50306c | 6987 | " " " " " " Screw..... |
| 18368 | 6987 | Feed Plate Carrier Bar Plate..... |
| 934J | 6987 | " " " " " Screw.... |
| 62118 | 6985 | " " " " Position Plate with 17741..... |
| 62119 | 6985 | Feed Plate Carrier Bar Position Plate Cover..... |
| 1094F | 6985 | Feed Plate Carrier Bar Position Plate Screw..... |
| 55300 | 6985 | Feed Plate Carrier Bar Position Plate Steady Pin..... |
| 17741 | 6985 | Feed Plate Carrier Bar Position Plate Stud..... |
| 1654c | 7027 | Feed Plate Nut..... |
| 17806 | 7027 | " " Position Stud..... |
| 1195E | 7027 | " " Screw Stud..... |
| 17742 | 7032 | " Regulator with 1953..... |
| 124651 | 7032 | " " Bracket with 17732 and two 160D..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| *17732 | — | Feed Regulator Bracket Cap..... |
| 160D | 6998 | “ “ “ “ Screw..... |
| 8589 | 7019 | “ “ “ Dowel Pin..... |
| 1177D | 7026 | “ “ “ Screw..... |
| 17744 | 6987 | “ “ Hinge Stud..... |
| 17743 | 6987 | “ “ Post..... |
| 1953 | 7019 | “ “ Roller and Screw Stud with 1655c and 14017..... |
| 1655c | 6985 | Feed Regulator Roller and Screw Stud Nut..... |
| 14017 | 6985 | Feed Regulator Roller and Screw Stud Nut Washer..... |
| 1190c | 6987 | Feed Regulator Stop Screw..... |
| 17745 | 6987 | “ “ Swivel..... |
| 1191D | 6987 | “ “ Thumb Screw..... |
| 59731 | 6990 | Knife..... |
| 62124 | 6975 | “ Bar with 62130 and two 3021.... |
| 62125 | 6990 | “ “ Cap..... |
| 164D | 6990 | “ “ “ Screw..... |
| 62126 | 6990 | “ “ Connection with 17917..... |
| 190D | 6990 | “ “ “ Screw..... |
| 17915 | 6990 | “ “ “ Slide Block..... |
| 17917 | — | “ “ “ “ “ 17915 with 17916..... |
| 17916 | 6990 | Knife Bar Connection Slide Block Stud. |
| 59734 | 6990 | “ “ Driving Lever with 223F and 59735..... |
| 1382F | 6998 | Knife Bar Driving Lever Hinge Screw |
| 1681c | 6999 | “ “ “ “ “ “ Nut..... |
| 59735 | 6990 | Knife Bar Driving Lever Lock Stud |
| 223F | 6990 | “ “ “ “ “ “ Screw..... |
| 62127 | 6990 | Knife Bar Guide..... |
| 1235F | 6990 | “ “ “ Screw..... |
| 8734 | 7015 | “ “ Retaining Spring..... |
| 62192 | 7015 | “ “ “ Bracket..... |
| 62128 | 6990 | “ Holder with 59739..... |
| 62129 | 6990 | “ “ Cap with 59739..... |
| 691F | 6990 | “ “ “ Screw..... |
| 59739 | 6990 | “ “ “ Stud..... |
| 62130 | 6990 | “ “ Connection..... |
| 3021 | 6980 | “ “ “ Rivet..... |
| 59739 | 6990 | “ “ Stud..... |
| 236F | 6990 | “ Screw..... |
| 62298 | 7027 | Looper with 34418..... |
| *59742 | — | “ Collar..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 59743 | 6991 | Looper Driving Shaft..... |
| 62131 | 6991 | “ “ “ Bushing..... |
| 52045 | 6992 | “ “ “ Packing (cotton)..... |
| 1148c | 7015 | Looper Driving Shaft Bushing Set Screw |
| 59745 | 6991 | “ “ “ Collar with two 465c..... |
| 465c | 6991 | Looper Driving Shaft Collar Set Screw.. |
| 59746 | 6991 | “ “ “ Coupling with two 50150c..... |
| 50150c | 6991 | Looper Driving Shaft Coupling Set Screw |
| 59707 | 6976 | “ “ “ Gear with two 1253c..... |
| 59747 | 6992 | Looper Driving Shaft Gear Cover..... |
| 190D | 6990 | “ “ “ “ “ Screw. |
| 1253c | 6976 | “ “ “ “ Set Screw... |
| 59748 | 6991 | “ “ “ Universal Joint... |
| 50150c | 6991 | “ Set Screw..... |
| 59749 | 6989 | “ Shaft with 50150c and 59742... |
| 62197 | 7015 | “ “ Ball with two 624c..... |
| 62132 | 6991 | “ “ “ Connection with 59752 and two 171E..... |
| *59752 | — | Looper Shaft Ball Connection Cap |
| 171E | 6991 | “ “ “ “ “ “ Screw..... |
| 62133 | 6991 | Looper Shaft Ball Connection Stud (eccentric)..... |
| 1095F | 6991 | Looper Shaft Ball Connection Stud Cap Screw..... |
| 1259c | 6991 | Looper Shaft Ball Connection Stud Set Screw..... |
| 624c | 6991 | Looper Shaft Ball Set Screw..... |
| 59745 | 6991 | “ “ Collar with two 465c..... |
| 465c | 6991 | “ “ “ Set Screw..... |
| 59746 | 6991 | “ “ Coupling with two 50150c. |
| 50150c | 6991 | “ “ “ Set Screw..... |
| 62134 | 6991 | “ “ Slide Block..... |
| 62135 | 6991 | “ “ “ “ Cap..... |
| 1186c | 6991 | “ “ “ “ “ Screw.... |
| 34418 | 6991 | “ Washer..... |
| 62299 | 7020 | Needle Bar with 1072F..... |
| *39203 | 6992 | “ “ Connecting Link..... |
| 62283 | — | “ “ “ “ 39203 with 377c, 1518E and 2052..... |
| 377c | 6992 | Needle Bar Connecting Link Hinge Screw..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 1518E | 6992 | Needle Bar Connecting Link Hinge Screw Nut..... |
| 2052 | 6992 | Needle Bar Connecting Stud with 155c. |
| 155c | 6992 | “ “ “ “ Set Screw. |
| 59757 | 6992 | “ “ Crank Wheel with 448c and 1293c..... |
| 1293c | 6992 | Needle Bar Crank Wheel Position Screw |
| 448c | 6992 | “ “ “ “ Set Screw..... |
| 124603 | 7019 | “ “ Thread Retainer Bracket with 460c..... |
| 460c | 7019 | Needle Bar Thread Retainer Bracket Set Screw..... |
| 42348 | 7019 | Needle Bar Thread Retainer Disc (inside)..... |
| 10106 | 7019 | Needle Bar Thread Retainer Disc (outside)..... |
| 10107 | 7019 | Needle Bar Thread Retainer Disc Spring |
| 93c | 7019 | “ “ “ “ “ “ “ “ Screw..... |
| 124604 | 7019 | Needle Bar Thread Retainer Thread Guide..... |
| 124605 | — | Needle Bar Thread Retainer complete, Nos. 93c, 10106, 10107, 42348, 124603 and 124604..... |
| 62300 | 7019 | Needle Guard..... |
| 124601 | 7019 | “ “ Cam with two 465c..... |
| 465c | 6991 | “ “ “ Set Screw..... |
| 2273 | 7027 | “ “ Pin..... |
| 59760 | 6989 | “ “ Shaft..... |
| 59761 | 6993 | “ “ “ Collar with two 465c |
| 465c | 6991 | “ “ “ “ Set Screw... |
| 124602 | 7019 | “ “ “ Crank with 51812 and two 465c..... |
| 51812 | 6993 | Needle Guard Shaft Crank Roller and Stud..... |
| 465c | 6991 | Needle Guard Shaft Crank Set Screw... |
| 59763 | 6993 | “ “ “ End Bearing |
| 59764 | 6989 | “ “ “ “ “ “ “ “ Bracket..... |
| 2022 | 7027 | Needle Guard Shaft End Bearing Bracket Dowel Pin..... |
| 965D | 6993 | Needle Guard Shaft End Bearing Bracket Screw..... |
| 1480H | 6993 | Needle Guard Shaft End Bearing Cap Screw..... |
| 59765 | 6993 | Needle Guard Shaft Spring..... |


| NO. | PLATE | NAME |
|--------|-------|---|
| 59766 | 6993 | Needle Guard Shaft Spring Collar with 624c..... |
| 624c | 6991 | Needle Guard Shaft Spring Collar Set Screw..... |
| 233D | 6995 | Needle Guard Shaft Spring Screw..... |
| 1072F | 6993 | “ Set Screw..... |
| 2058 | 6989 | Presser Bar..... |
| 17841 | 6992 | “ “ Collar with two 196F..... |
| 196F | 6992 | “ “ “ Set Screw..... |
| 17842 | 6992 | “ “ Guide Bracket with 453c... |
| 453c | 6987 | “ “ “ Set Screw... |
| 124681 | 7020 | “ “ Lifting Lever..... |
| 124606 | 7020 | “ “ “ “ Bracket..... |
| 164E | 6990 | “ “ “ “ “ Screw |
| 1201D | 7006 | “ “ “ “ Hinge Screw.. |
| 17845 | 7032 | “ “ “ “ Rod..... |
| 17846 | — | “ “ “ “ “ Chain... |
| 8414 | 6989 | “ “ Spring..... |
| 17941 | 6977 | Pulley (loose) 2 $\frac{3}{8}$ in. diam..... |
| 17848 | 6977 | “ “ Bushing..... |
| 2269 | 6994 | “ “ “ Position Pin.... |
| 1202D | 6998 | “ “ Cap Screw..... |
| 17942 | 6977 | “ (tight) 2 $\frac{3}{8}$ in. diam, with 2269.. |
| 2022 | 7027 | “ “ Pin..... |
| 17955 | — | Pulleys complete, Nos. 1202D, 1206c, 17848, 17854, 17941 and 17942..... |
| 17853 | 6994 | Starting Lever..... |
| 1262c | 6998 | “ “ Hinge Screw..... |
| 1662c | 6999 | “ “ “ “ Nut..... |
| 17886 | 7032 | “ “ Pitman..... |
| 17854 | 6994 | Stop Cam..... |
| 17855 | 6994 | “ “ Interlocking Rod...* |
| 124697 | — | “ “ “ “ Case..... |
| 62136 | 6977 | “ “ “ “ “ 124697 with 59771 and two 193D,..... |
| 62159 | — | Stop Cam Interlocking Rod Case 62136 with 1318D, 17855, 17863, 17864, 39222, 39223 and two 1255D..... |
| 59769 | 6977 | Stop Cam Interlocking Rod Case Bracket |
| 62186 | — | Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898D..... |
| 62137 | — | Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186D |

| NO. | PLATE | NAME |
|--------|-------|--|
| 21828 | 6976 | Stop Cam Interlocking Rod Case Bracket Dowel Pin..... |
| 50372D | 7015 | Stop Cam Interlocking Rod Case Bracket Screw..... |
| 1204E | 6998 | Stop Cam Interlocking Rod Case Hinge Screw..... |
| 17859 | 6977 | Stop Cam Interlocking Rod Case Socket Joint..... |
| 898D | 6998 | Stop Cam Interlocking Rod Case Socket Joint Cap Screw..... |
| 39343 | 6981 | Stop Cam Interlocking Rod Case Spring (flat)..... |
| 430C | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw..... |
| 1520E | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut..... |
| 39344 | 6994 | Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E..... |
| 1186D | 6991 | Stop Cam Interlocking Rod Case Spring Bracket Screw..... |
| 17861 | 6994 | Stop Cam Interlocking Rod Case Stop Stud..... |
| 1254C | 6998 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing..... |
| 1508E | 6999 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut..... |
| 17862 | 6994 | Stop Cam Interlocking Rod Case Stop Stud Spring..... |
| 59771 | 6994 | Stop Cam Interlocking Rod Case Wearing Block..... |
| 193D | 7027 | Stop Cam Interlocking Rod Case Wearing Block Screw..... |
| 17863 | 6994 | Stop Cam Interlocking Rod Spring..... |
| 17864 | 6994 | " " " " Stop..... |
| 1318D | 6994 | " " " " " Screw..... |
| 3012 | 7019 | " " Pin..... |
| 1206C | 6994 | " " Screw..... |
| 2102 | 6995 | Tension Disc..... |
| 1560C | 6995 | " Regulating Thumb Nut..... |
| 50148C | 6995 | " Screw Stud..... |
| 42336 | 6995 | " Spring..... |
| 13915 | 6995 | " " Bushing..... |
| 10145 | 6995 | " Thread Guide..... |
| 124609 | 7027 | Thread Controller Sleeve..... |
| 124607 | 7027 | " " Spring..... |
| 124608 | 7027 | " " " Collar with 1477F..... |

| NO. | PLATE | NAME |
|---------|-------|--|
| 1477F | 6980 | Thread Controller Spring Collar Set Screw..... |
| 124610 | 7027 | Thread Controller Stud with 56549 and 124631..... |
| *124631 | — | Thread Controller Stud Collar..... |
| 56549 | — | " " " " Pin..... |
| 457C | 7027 | " " " Set Screw..... |
| 124611 | — | Thread Controller complete, Nos. 124607 to 124610..... |
| *124612 | — | Thread Nipper (lower) Blade..... |
| *124613 | — | " " " " Carrier with 124619..... |
| 124614 | 7028 | Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037..... |
| 665J | 7028 | Thread Nipper (lower) Blade Carrier Cap Screw..... |
| 124615 | 7028 | Thread Nipper (lower) Blade Carrier Hinge Stud..... |
| 6037 | 7028 | Thread Nipper (lower) Blade Rivet..... |
| 124652 | 7032 | " " " Cam..... |
| 335J | 7027 | " " " " Screw..... |
| 124653 | 7020 | " " " Connection..... |
| 124618 | 7028 | " " " " Ex-tension..... |
| 99K | 7028 | Thread Nipper (lower) Connection Ex-tension Hinge Screw..... |
| 206J | 7024 | Thread Nipper (lower) Connection Ex-tension Screw..... |
| 124619 | 7028 | Thread Nipper (lower) Connection Hinge Stud..... |
| 124620 | 7020 | Thread Nipper (lower) Driving Arm..... |
| 8554 | 7019 | " " " " " Pin..... |
| 124621 | 7020 | " " " Lever with 237K..... |
| 8554 | 7019 | " " " " Pin..... |
| 237K | 7009 | " " " " Set Screw..... |
| 124623 | 7020 | " " " " Shaft..... |
| *124682 | 7020 | " " " " " Bracket..... |
| 1177J | 7026 | " " " " " " Screw..... |
| 1743D | 6979 | Thread Nipper (upper) Adjusting Thumb Nut..... |
| 59773 | 6995 | Thread Nipper (upper) Body..... |
| 624C | 6991 | " " " " Set Screw..... |
| 59774 | 6995 | " " " Cam with two 50150c..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 50150c | 6991 | Thread Nipper (upper) Cam Set Screw.. |
| 2921 | 6995 | " " " Disc..... |
| 12162 | 6995 | " " " " Guide Pin.. |
| 62169 | 6979 | " " " " Spring.... |
| 59775 | 6995 | " " " " Eyelet..... |
| 1527D | 6995 | " " " " Lock Nut..... |
| 59776 | 6995 | " " " " Stud with 13538. |
| 13538 | 6995 | " " " " Position Pin |
| 13539 | 6995 | " " " " Roller..... |
| 13540 | 6995 | " " " " " Pin.. |
| 2026 | 6995 | " " " " Spring..... |
| 59777 | — | Thread Nipper (upper) Stud complete, Nos. 13539, 13540 and 59776..... |
| 59778 | — | Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921..... |
| 124625 | — | Thread Take-up Body with 62172..... |
| 42808 | 6979 | " " " Roller..... |
| 62171 | 6979 | " " " Cap..... |
| 337D | 6979 | " " " " Screw..... |
| 62172 | 6979 | " " " " Pin..... |
| 124626 | 7019 | Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625..... |
| 691F | 6990 | Thread Take-up Screw..... |
| 39452 | 6979 | " Wiper Body..... |
| 39453 | 6979 | " " " Finger..... |
| 330D | 6979 | " " " " Screw..... |
| 1207D | 6979 | " " " Hinge Screw..... |
| 59787 | 6979 | " " " Support..... |
| 641C | 6979 | " " " " Set Screw. |
| 39455 | 6979 | " " " Wire..... |
| 39456 | 6979 | " " " " Clamp..... |
| 1302D | 6979 | " " " " " Screw. |
| 124627 | 7024 | Throat Plate with 124615..... |
| 124628 | 7024 | " " Needle Guard..... |
| 208E | 6980 | " " " " Screw..... |
| 691F | 6990 | " " " Screw..... |
| 17872 | 6994 | Trip Lever..... |
| 1196C | 6998 | " " Hinge Screw..... |
| 17873 | 6994 | " " Spring..... |
| 1182E | 7027 | " " " " Screw..... |
| 17874 | 6987 | Tripping Point..... |
| 190D | 6990 | " " " " Screw..... |

LIST OF PARTS COMPLETE FOR

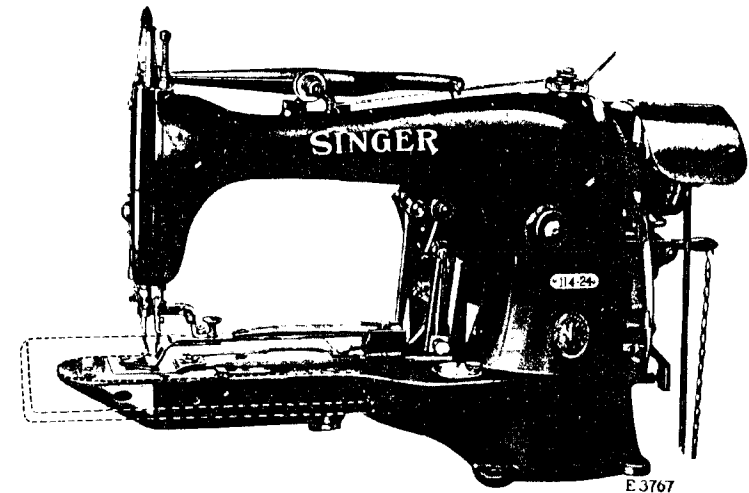

MACHINE No. 114-24

FOR TACKING PAPER TICKETS ON CLOTHING TO DISTINGUISH LOT, COLOR, SIZE, ETC., WHILE IN THE PROCESS OF MANUFACTURE. MAKES A TRIANGULAR SHAPE TACK, CONSISTING OF THIRTEEN STITCHES, $\frac{5}{8}$ IN. ACROSS THE BASE AND $\frac{3}{8}$ IN. FROM THE APEX TO THE BASE. FITTED WITH IMPROVED THREAD CONTROLLING MECHANISM AND THREAD NIPPING DEVICE TO HOLD THE END OF THE THREAD UNTIL THE FIRST STITCH IS MADE; ALSO AN IMPROVED THREAD CUTTER THAT LEAVES A LONG END TO UNRAVEL THE THREAD IN DETACHING THE TICKET. SUPERSEDES 114-22 MACHINE.

| NO. | PLATE | NAME |
|--------|-------|---------------------------------------|
| *62295 | — | Arm with 4449, 124606 and two 164E... |
| 16532 | 6976 | " Dowel Pin..... |
| 4448 | 6976 | " Oil Tube for intermediate bearing . |
| 56015 | 6976 | " " " " oiling 59705 and 59706 |
| 880E | 6998 | " Screw..... |
| 59702 | 6975 | " Shaft (horizontal)..... |
| 17703 | 6981 | " " " Bushing (back) |

| NO. | PLATE | NAME |
|--------|-------|---|
| 50333c | 6998 | Arm Shaft (horizontal) Bushing (back) Adjusting Screw |
| 1520E | 6994 | Arm Shaft (horizontal) Bushing (back) Adjusting Screw Nut |
| *4449 | — | Arm Shaft (horizontal) Bushing (front) |
| 59703 | 6976 | " " " Gear with two 1036c |
| 1036c | 6976 | Arm Shaft (horizontal) Gear Set Screw |
| 59704 | 6976 | " " (upright) |
| 59705 | 6976 | " " " Bushing (lower) |
| 448c | 6992 | " " " " " Set Screw |
| 59706 | 6976 | Arm Shaft (upright) Bushing (upper) |
| 448c | 6992 | " " " " " Set Screw |
| 59707 | 6976 | Arm Shaft (upright) Gear (lower) with two 1253c |
| 1253c | 6976 | Arm Shaft (upright) Gear (lower) Set Screw |
| 59708 | 6976 | Arm Shaft (upright) Gear (upper) with two 1253c |
| 1253c | 6976 | Arm Shaft (upright) Gear (upper) Set Screw |
| 124674 | 7020 | Arm Side Cover |
| 190D | 6990 | " " " Screw |
| 18498 | 6975 | Belt Cover |
| 59795 | 6977 | " " Bracket with 184E and 59796 |
| 184E | 6998 | " " " Screw Stud |
| 59796 | 7019 | " " " Stud |
| 217D | 6998 | " " " Screw |
| 39222 | 6977 | " Shifter |
| 39223 | 6976 | " " Clamp |
| 1255D | 6976 | " " " Screw |
| 62174 | 7026 | Clamp with 1220E and 17928 |
| 62258 | 7026 | " Arm with 17714 |
| 62259 | — | Clamp Arm 62258 with 62260 and two 201D |
| 17710 | 7026 | Clamp Arm Hinge Plate |
| 1176J | 7026 | " " " " Screw |
| 62260 | 7026 | " " Hook |
| 201D | 7026 | " " " Screw |
| 62261 | 7026 | " Lifter |
| 176D | 7009 | " " Screw |
| 124677 | 7019 | " Locking Device Latch with 704J |
| 704J | 7019 | " " " " Clamping Screw |

| NO. | PLATE | NAME |
|--------|-------|--|
| 124678 | 7020 | Clamp Locking Device Latch Shaft |
| 124679 | 7019 | " " " " " " |
| | | Crank |
| 124680 | 7019 | Clamp Locking Device Latch Shaft Crank Connection |
| 1282c | 7019 | Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (lower) |
| 1282c | 7019 | Clamp Locking Device Latch Shaft Crank Connection Hinge Screw (upper) |
| 2269 | 6994 | Clamp Locking Device Latch Shaft Crank Pin |
| 17928 | 7000 | Clamp Position Stud |
| 17712 | 7001 | " Pressure Spring |
| 17713 | 7026 | " " " Bracket |
| 1177D | 7026 | " " " " Screw |
| 17714 | 7026 | " " " Guide Block |
| 1178J | 7026 | " " " Screw |
| 1220E | 7000 | " Screw Stud |
| 1656J | 7000 | " Thumb Nut |
| 62262 | — | Clamp complete, Nos. 1656J, 62174 and 62259 |
| *62101 | — | Cloth Plate |
| 62102 | 6980 | " " Guide Block (left) |
| 742F | 6980 | " " " " " S c r e w |
| 1547D | 6980 | " " " " " " |
| | | Nut |
| 62103 | 6980 | Cloth Plate Guide Block (right) |
| 3021 | 6980 | " " " " " Rivet |
| 190D | 6990 | " " Screw |
| 62104 | 6980 | " " Stop |
| 26770 | 6980 | " " " Rivet |
| 62105 | 6975 | Cloth Plate complete, Nos. 742F, 1547D, 26770, 62101 to 62104 and two 3021 |
| *62178 | — | Cylinder |
| 62189 | 7032 | " Bottom Cover |
| 62108 | 6981 | " End Cover |
| 62190 | — | " " " 62108 with 1034D, 62111 to 62113, 62185, 62189 and four 1477D |
| 62185 | 6980 | Cylinder End Cover Bracket |
| 62111 | 6980 | " " " " Hinge Pin |
| 1477D | 6980 | " " " " Screw |
| 62112 | 6980 | " " " Hinge |
| 1477D | 6980 | " " " " Screw |
| 62113 | 6980 | " " " Spring |
| 1034D | 6980 | " " " " Screw |
| 62114 | 6980 | " Top Cover |

| NO. | PLATE | NAME |
|--------|-------|--|
| 286D | 6980 | Cylinder Top Cover Thumb Screw |
| 59711 | 6981 | Face Plate |
| 59712 | — | Face Plate complete, Nos. 208D, 9544, 9545, 59711 and two each 229D, 2107 and 9543 |
| 164D | 6990 | Face Plate Screw |
| 2107 | 6980 | “ “ Thread Guard |
| 229D | 7027 | “ “ “ “ Screw |
| 9543 | 6980 | “ “ “ Nipper Disc |
| 9544 | 6980 | “ “ “ “ Cover |
| 208D | 6980 | Face Plate Thread Nipper Disc Cover Screw |
| 9545 | 6980 | Face Plate Thread Nipper Disc Spring . . |
| 62115 | 6982 | Feed Across Connection Adjusting Stud. |
| 1649c | 6982 | “ “ “ “ “ Nut (left hand thread) |
| 1650c | 6982 | Feed Across Connection Adjusting Stud Nut (right hand thread) |
| 63940 | — | Feed Across Connection (lever end) with 42076 and two 896E |
| 63941 | 7027 | Feed Across Connection (lever end) 63940 with 55381 |
| 55381 | 7027 | Feed Across Connection (lever end) Ball Stud |
| 1185c | 6982 | Feed Across Connection (lever end) Ball Stud Set Screw |
| 63942 | — | Feed Across Connection (regulator end) with 42076 and two 896E |
| 63943 | 7027 | Feed Across Connection (regulator end) 63942 with 63944 |
| 63944 | 7027 | Feed Across Connection (regulator end) Ball Stud |
| *42076 | — | Feed Across Connection Cap |
| 896E | 7027 | “ “ “ “ Screw |
| 62147 | 7002 | “ “ Lever with 1185c and 1952. |
| 17737 | 7004 | “ “ “ Hinge Stud |
| 160D | 6998 | “ “ “ “ “ Clamping Screw |
| 62149 | 7001 | Feed Across Lever Plate with 62153 |
| 124660 | 7028 | “ “ “ “ Cover |
| 1094F | 6985 | “ “ “ “ Screw |
| 55300 | 6985 | “ “ “ “ Steady Pin |
| 1952 | 7027 | “ “ “ Roller and Stud |
| 62151 | 7002 | “ “ Regulator |
| 50599D | 7027 | “ “ “ Adjusting Screw Stud |

| NO. | PLATE | NAME |
|--------|-------|--|
| 1676c | 6982 | Feed Across Regulator Adjusting Screw Stud Nut |
| 46244 | 7027 | Feed Across Regulator Adjusting Screw Stud Nut Washer (fibre) |
| 17738 | 6982 | Feed Across Regulator Adjusting Screw Stud Nut Washer (steel) |
| 1188D | 6998 | Feed Across Regulator Hinge Screw |
| 62152 | 7001 | “ “ “ Link |
| 1189E | 7001 | “ “ “ “ Screw Stud. |
| 62153 | 7001 | “ “ “ “ Stud |
| 124661 | 7031 | “ Cam with two 1192c, three each 190D, 17874, 124616, 124622 and twelve 335J |
| 18415 | 6987 | Feed Cam Driving Worm with 1441c and 1442c |
| 1442c | 6987 | Feed Cam Driving Worm Position Screw |
| 1441c | 6987 | “ “ “ “ Set Screw |
| 17797 | 6977 | “ “ “ “ Wheel with 453c |
| 3012 | 7019 | Feed Cam Driving Worm Wheel Pin |
| 453c | 6987 | “ “ “ “ “ Set Screw |
| 18384 | 7019 | Feed Cam Pin |
| 1192c | 6987 | “ “ Set Screw |
| 62155 | 7002 | “ “ Shaft |
| 1653c | 6999 | “ “ “ Nut |
| 62176 | 7028 | “ Plate |
| *18445 | 6989 | “ “ Carrier Bar |
| 124662 | — | “ “ “ “ 18445 with 934J, 1094F, 1195E, 17743, 18368, 62149, 124660, two 55300 and four 17806 |
| 59730 | 6987 | Feed Plate Carrier Bar Pivot Block |
| 50306c | 6987 | “ “ “ “ “ “ Screw |
| 18368 | 6987 | Feed Plate Carrier Bar Plate |
| 934J | 6987 | “ “ “ “ “ Screw |
| 1654c | 7027 | “ “ Nut |
| 17806 | 7027 | “ “ Position Stud |
| 1195E | 7027 | “ “ Screw Stud |
| 62157 | 7002 | “ Regulator with 1953 |
| 62148 | 7002 | “ “ Bracket with 39310 and three 160D |
| *39310 | — | Feed Regulator Bracket Cap |
| 160D | 6998 | “ “ “ “ “ Screw |
| 8589 | 7019 | “ “ “ Dowel Pin |
| 1177D | 7026 | “ “ “ Screw |
| 17744 | 6987 | “ “ Hinge Stud |

| NO. | PLATE | NAME |
|--------|-------|---|
| 59762 | 6993 | Needle Guard Shaft Crank with 51812 and two 465c..... |
| 51812 | 6993 | Needle Guard Shaft Crank Roller and Stud..... |
| 465c | 6991 | Needle Guard Shaft Crank Set Screw... |
| 59763 | 6993 | " " " End Bearing |
| 59764 | 6989 | " " " " " " " Bracket..... |
| 2022 | 7027 | Needle Guard Shaft End Bearing Bracket Dowel Pin..... |
| 965D | 6993 | Needle Guard Shaft End Bearing Bracket Screw..... |
| 1480H | 6993 | Needle Guard Shaft End Bearing Cap Screw..... |
| 59765 | 6993 | Needle Guard Shaft Spring..... |
| 59766 | 6993 | " " " " Collar with 624c..... |
| 624c | 6991 | Needle Guard Shaft Spring Collar Set Screw..... |
| 233D | 6995 | Needle Guard Shaft Spring Screw..... |
| 1072F | 6993 | " Set Screw..... |
| 2058 | 6989 | Presser Bar..... |
| 17841 | 6992 | " " Collar with two 196F..... |
| 196F | 6992 | " " " Set Screw..... |
| 17842 | 6992 | " " Guide Bracket with 453c... |
| 453c | 6987 | " " " " Set Screw... |
| 124681 | 7020 | " " Lifting Lever..... |
| 124606 | 7020 | " " " " Bracket..... |
| 164E | 6990 | " " " " " Screw |
| 1201D | 7006 | " " " " Hinge Screw.. |
| 17845 | 7032 | " " " " Rod..... |
| 17846 | — | " " " " " Chain... |
| 8414 | 6989 | " " Spring..... |
| 17941 | 6977 | Pulley (loose) 2 7/8 in. diam..... |
| 17848 | 6977 | " " Bushing..... |
| 2269 | 6994 | " " " Position Pin.... |
| 1202D | 6998 | " " Cap Screw..... |
| 17942 | 6977 | " (tight) 2 7/8 in. diam., with 2269. |
| 2022 | 7027 | " " Pin..... |
| 17955 | — | Pulleys complete, Nos. 1202D, 1206c, 17848, 17854, 17941 and 17942..... |
| 17853 | 6994 | Starting Lever..... |
| 1262c | 6998 | " " Hinge Screw..... |
| 1662c | 6999 | " " " Nut..... |
| 17886 | 7032 | " " Pitman..... |
| 17854 | 6994 | Stop Cam..... |
| 17855 | 6994 | " " Interlocking Rod..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 124697 | — | Stop Cam Interlocking Rod Case..... |
| 62136 | 6977 | " " " " " 124697 with 59771 and two 193D..... |
| 62159 | — | Stop Cam Interlocking Rod Case 62136 with 1318D, 17855, 17863, 17864, 39222, 39223 and two 1255D..... |
| 59769 | 6977 | Stop Cam Interlocking Rod Case Bracket |
| 62186 | — | Stop Cam Interlocking Rod Case Bracket complete, Nos. 1182E, 1196c, 1204E, 1254c, 1262c, 1508E, 1662c, 17853, 17859, 17861, 17862, 17872, 17873, 59769, 62159 and two 898D..... |
| 62137 | — | Stop Cam Interlocking Rod Case Bracket 62186 with 39343, 39344 and two 1186D |
| 21828 | 6976 | Stop Cam Interlocking Rod Case Bracket Dowel Pin..... |
| 50372D | 7015 | Stop Cam Interlocking Rod Case Bracket Screw..... |
| 1204E | 6998 | Stop Cam Interlocking Rod Case Hinge Screw..... |
| 17859 | 6977 | Stop Cam Interlocking Rod Case Socket Joint..... |
| 898D | 6998 | Stop Cam Interlocking Rod Case Socket Joint Cap Screw..... |
| 39343 | 6981 | Stop Cam Interlocking Rod Case Spring (flat)..... |
| 430c | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw..... |
| 1520E | 6994 | Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut..... |
| 39344 | 6994 | Stop Cam Interlocking Rod Case Spring Bracket with 430c and 1520E..... |
| 1186D | 6991 | Stop Cam Interlocking Rod Case Spring Bracket Screw..... |
| 17861 | 6994 | Stop Cam Interlocking Rod Case Stop Stud..... |
| 1254c | 6998 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing..... |
| 1508E | 6999 | Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut..... |
| 17862 | 6994 | Stop Cam Interlocking Rod Case Stop Stud Spring..... |
| 59771 | 6994 | Stop Cam Interlocking Rod Case Wearing Block..... |
| 193D | 7027 | Stop Cam Interlocking Rod Case Wearing Block Screw..... |

| NO. | PLATE | NAME |
|---------|-------|--|
| 17863 | 6994 | Stop Cam Interlocking Rod Spring |
| 17864 | 6994 | " " " " Stop |
| 1318D | 6994 | " " " " " Screw |
| 3012 | 7019 | " " Pin |
| 1206c | 6994 | " " Screw |
| 2102 | 6995 | Tension Disc |
| 1560c | 6995 | " Regulating Thumb Nut |
| 50148c | 6995 | " Screw Stud |
| 42336 | 6995 | " Spring |
| 13915 | 6995 | " " Bushing |
| 10145 | 6995 | " Thread Guide |
| 124609 | 7027 | Thread Controller Sleeve |
| 124607 | 7027 | " " Spring |
| 124608 | 7027 | " " " Collar with 1477F |
| 1477F | 6980 | Thread Controller Spring Collar Set Screw |
| 124610 | 7027 | Thread Controller Stud with 56549 and 124631 |
| *124631 | ----- | Thread Controller Stud Collar |
| 56549 | ----- | " " " " Pin |
| 457c | 7027 | " " " Set Screw |
| 124611 | ----- | Thread Controller complete, Nos. 124607 to 124610 |
| *124612 | ----- | Thread Nipper (lower) Blade |
| *124613 | ----- | " " " Carrier with 124619 |
| 124614 | 7028 | Thread Nipper (lower) Blade Carrier 124613 with 124612 and two 6037 |
| 665j | 7028 | Thread Nipper (lower) Blade Carrier Cap Screw |
| 124615 | 7028 | Thread Nipper (lower) Blade Carrier Hinge Stud |
| 6037 | 7028 | Thread Nipper (lower) Blade Rivet |
| 124616 | 7020 | " " " Cam |
| 335j | 7027 | " " " " Screw |
| 124653 | 7020 | " " " Connection |
| 124618 | 7028 | " " " " Ex- tension |
| 99k | 7028 | Thread Nipper (lower) Connection Ex- tension Hinge Screw |
| 206j | 7024 | Thread Nipper (lower) Connection Ex- tension Screw |
| 124619 | 7028 | Thread Nipper (lower) Connection Hinge Stud |
| 124620 | 7020 | Thread Nipper (lower) Driving Arm |
| 8554 | 7019 | " " " " " Pin |

| NO. | PLATE | NAME |
|---------|-------|--|
| 124621 | 7020 | Thread Nipper (lower) Lever with 237k |
| 124622 | 7020 | " " " " Guide |
| 335j | 7027 | " " " " " Screw |
| 8554 | 7019 | " " " " Pin |
| 237k | 7009 | " " " " Set Screw |
| 124623 | 7020 | " " " " Shaft |
| *124682 | 7020 | " " " " " Bracket 1177j 7026 " " " " " " |
| 1743D | 6979 | Screw Thread Nipper (upper) Adjusting Thumb Nut |
| 59773 | 6995 | Thread Nipper (upper) Body |
| 624c | 6991 | " " " " Set Screw |
| 59774 | 6995 | " " " Cam with two 50150c |
| 50150c | 6991 | Thread Nipper (upper) Cam Set Screw |
| 2921 | 6995 | " " " Disc |
| 12162 | 6995 | " " " " Guide Pin |
| 62169 | 6979 | " " " " Spring |
| 59775 | 6995 | " " " Eyelet |
| 1527D | 6995 | " " " Lock Nut |
| 59776 | 6995 | " " " Stud with 13538 |
| 13538 | 6995 | " " " " Position Pin |
| 13539 | 6995 | " " " " Roller |
| 13540 | 6995 | " " " " " Pin |
| 2026 | 6995 | " " " " Spring |
| 59777 | ----- | Thread Nipper (upper) Stud complete, Nos. 13539, 13540 and 59776 |
| 59778 | ----- | Thread Nipper (upper) complete, Nos. 1527D, 1743D, 2026, 59773, 59775, 59777, 62169 and two 2921 |
| 124685 | 7028 | Thread Pull-off |
| 62124 | 6975 | " " Bar with 62130 and two 3021 |
| 62125 | 6990 | Thread Pull-off Bar Cap |
| 164D | 6990 | " " " " Screw |
| 62126 | 6990 | " " " Connection with 17917 |
| 190D | 6990 | Thread Pull-off Bar Connection Screw |
| 17915 | 6990 | " " " " Slide Block |
| 17917 | ----- | Thread Pull-off Bar Connection Slide Block 17915 with 17916 |
| 17916 | 6990 | Thread Pull-off Bar Connection Slide Block Stud |
| 59734 | 6990 | Thread Pull-off Bar Driving Lever with 223F and 59735 |

| NO. | PLATE | NAME |
|--------|-------|--|
| 1382F | 6998 | Thread Pull-off Bar Driving Lever Hinge Screw..... |
| 1681c | 6999 | Thread Pull-off Bar Driving Lever Hinge Screw Nut..... |
| 59735 | 6990 | Thread Pull-off Bar Driving Lever Lock Stud..... |
| 223F | 6990 | Thread Pull-off Bar Driving Lever Lock Stud Screw..... |
| 124686 | 7028 | Thread Pull-off Bar Guide and Knife Holder..... |
| 1235F | 6990 | Thread Pull-off Bar Guide Screw..... |
| 8734 | 7015 | " " " Retaining Spring |
| 62192 | 7015 | " " " " " |
| | | Bracket..... |
| 62128 | 6990 | Thread Pull-off Holder with 59739..... |
| 62129 | 6990 | " " " Cap with 59739. |
| 691F | 6990 | " " " " Screw..... |
| 59739 | 6990 | " " " " Stud..... |
| 62130 | 6990 | " " " " Connection..... |
| 3021 | 6980 | " " " " Rivet |
| 59739 | 6990 | " " " " Stud..... |
| 236F | 6990 | " " " Screw..... |
| 124625 | --- | Take-up Body with 62172..... |
| 42808 | 6979 | " " " Roller..... |
| 62171 | 6979 | " " " Cap..... |
| 337D | 6979 | " " " " Screw..... |
| 62172 | 6979 | " " " " Pin..... |
| 124626 | 7019 | Thread Take-up complete, Nos. 337D, 42808, 62171 and 124625..... |
| 691F | 6990 | Thread Take-up Screw..... |
| 39452 | 6979 | " Wiper Body..... |
| 39453 | 6979 | " " " Finger..... |
| 330D | 6979 | " " " " Screw..... |
| 1207D | 6979 | " " " Hinge Screw..... |
| 59787 | 6979 | " " " Support..... |
| 641c | 6979 | " " " " Set Screw. |
| 39455 | 6979 | " " " Wire..... |
| 39456 | 6979 | " " " " Clamp..... |
| 1302D | 6979 | " " " " " Screw. |
| 124627 | 7024 | Throat Plate with 124615..... |
| 59799 | 7024 | " " " Needle Guard..... |
| 208E | 6980 | " " " " Screw..... |
| 691F | 6990 | " " " Screw..... |
| 59790 | 7024 | " " " Thread Retainer..... |
| 206E | 7024 | " " " " Screw... |
| 17872 | 6994 | Trip Lever..... |
| 1196c | 6998 | " " Hinge Screw..... |

| NO. | PLATE | NAME |
|-------|-------|------------------------|
| 17873 | 6994 | Trip Lever Spring..... |
| 1182E | 7027 | " " " Screw..... |
| 17874 | 6987 | Tripping Point..... |
| 190D | 6990 | " " " Screw..... |

ATTACHMENTS AND ACCESSORIES

| NO. | PLATE | NAME |
|--------|-------|--|
| 18419 | --- | Cylinder Base Plate with two 453c..... |
| 18420 | 7006 | " " " Hinge Connection |
| 18423 | 7006 | " " " " " |
| | | Hinge Pin..... |
| 453c | 6987 | Cylinder Base Plate Hinge Connection Hinge Pin Set Screw..... |
| 18424 | 7005 | Cylinder Base Plate (hinged) complete, Nos. 18419, two each 18420, 18423, three wood screws 1¼ in. No. 12 and four 134D..... |
| 134D | 7006 | Cylinder Base Plate Screw..... |
| 120346 | 7007 | Oiler (copper plated) with 120347..... |
| 120347 | 7007 | " Spout, 9 in. long..... |
| 11831 | 7007 | Screw Driver (large)..... |
| 26026 | 7007 | " " (small)..... |
| 4822 | 7007 | Wrench for 1547..... |
| 10875 | 7007 | " " 1518, 1520 and 1662..... |
| 17905 | 7007 | " " 1176, 1178, 1654, 1655 and 1681..... |
| 25200 | 7007 | Wrench for 1527..... |
| 27662 | 7007 | " " 1254 and 1508..... |

PROTECTOR

| NO. | PLATE | NAME |
|--------|-------|--|
| 39489 | 7008 | Arm with 39490..... |
| 160c | 7009 | " Clamping Screw..... |
| 39490 | --- | Blade..... |
| 39491 | 7008 | Bracket with two each 426c and 448c... |
| 426c | 7009 | " Adjusting Screw..... |
| 50351D | 7009 | " Screw..... |
| 39492 | 7009 | Crank with 160c..... |
| 39493 | 7009 | " Bracket with 1120c and two 454c |
| 454c | 7009 | " " Set Screw..... |
| 52598 | 7009 | " Hinge Stud..... |
| 1120c | 7009 | " " " Set Screw..... |
| 39494 | 7008 | Rod..... |
| 15261 | 7009 | " Collar with 237F..... |

PROTECTOR

| NO. | PLATE | NAME |
|-------|------------|---|
| | 237F 7009 | Rod Collar Set Screw..... |
| 39495 | 7009 | “ Connection..... |
| | 176D 7009 | “ “ Screw..... |
| | 1099F 7009 | “ Screw Stud..... |
| 39496 | 7008 | “ Sleeve..... |
| | 448C 7009 | “ “ Set Screw..... |
| 39497 | 7009 | “ Spring..... |
| 15261 | 7009 | “ “ Collar with 237F..... |
| | 237F 7009 | “ “ “ Set Screw..... |
| 63753 | — | Protector (front of needle) Nos. 1099F, 39489, 39491 to 39494, 39496, 39497, 52598 and two 15261..... |
| 39498 | — | Protector (front of needle) complete, Nos. 39495, 63753 and two each 176D and 50351D..... |

STARTING LEVER AND FOOT LIFTER PARTS

| NO. | PLATE | NAME |
|-------|-----------|--|
| 17876 | 7005 | Treadle with 443C..... |
| 17877 | 7005 | “ Pitman Rod (lower)..... |
| 17878 | 7005 | “ “ “ (upper)..... |
| 17879 | 7005 | “ “ “ Clamp with two 161D..... |
| | 161D 6998 | Treadle Pitman Rod Clamp Screw..... |
| 17880 | 7005 | Treadle Pitman complete, Nos. 17877 to 17879..... |
| 17881 | 7006 | Treadle Shaft..... |
| | 443C 7015 | “ “ Set Screw..... |
| 17882 | 7006 | “ Spring..... |
| 17883 | 7005 | “ Stand..... |
| 17884 | — | Treadle complete, Nos. 17876, 17881 to 17883 and two wood screws 1 in. No. 10 |
| 17885 | — | Treadle and Pitman complete, Nos. 17880 and 17884..... |

STAND FOR ELECTRIC MOTOR

| NO. | PLATE | NAME |
|-------|-----------|--|
| 46645 | — | Belt, size $\frac{1}{4}$ in., length 45 $\frac{1}{2}$ in. with 25127..... |
| 25127 | 7006 | Belt Hook..... |
| 46667 | 7033 | Brace..... |
| | 748E 7006 | “ Screw..... |

STAND

| NO. | PLATE | NAME |
|-------|------------|---|
| 46522 | 7033 | Leg..... |
| 4881 | 7033 | Motor Treadle..... |
| 46614 | 7033 | “ “ Bracket (left)..... |
| | 1177E 7026 | “ “ “ “ Screw.... |
| 46615 | 7033 | “ “ “ (right)..... |
| | 1177E 7026 | “ “ “ “ Screw.... |
| 4879 | 7010 | “ “ Chain Connecting Link.. |
| 4882 | 7010 | “ “ Shaft..... |
| 4883 | 7010 | “ “ Spring..... |
| 46616 | 7033 | Motor Treadle complete, Nos. 4879, 4881 to 4883, 46614 and 46615..... |
| | 4881 7033 | Starting Treadle..... |
| 46614 | 7033 | “ “ Bracket (left)..... |
| | 1177E 7026 | “ “ “ “ Screw.... |
| 46615 | 7033 | “ “ “ (right)..... |
| | 1177E 7026 | “ “ “ “ Screw.... |
| 4879 | 7010 | “ “ Chain Connecting Link |
| 4882 | 7010 | “ “ Shaft..... |
| 4883 | 7010 | “ “ Spring..... |
| 46616 | 7033 | Starting Treadle complete, Nos. 4879, 4881 to 4883, 46614 and 46615..... |
| 46642 | 7033 | Treadle Support..... |
| 46643 | — | “ “ 46642 with two 46616 and four 1177E..... |
| | 780E 6998 | Treadle Support Bolt with 1600E..... |
| | 1600E 6999 | “ “ “ Nut..... |
| 25086 | 7033 | Wrench..... |
| 25286 | — | Stand (iron work) complete, Nos. 25086, 46643, 46667, two each 780E, 46522 and four 748E..... |

TABLE BELT GUIDE

| NO. | PLATE | NAME |
|-------|-----------|---|
| 39218 | 7005 | Belt Guide with two 168E..... |
| | 168E 6998 | “ “ Set Screw..... |
| 17892 | 7005 | Bracket with two 153E..... |
| 17893 | 7005 | Pulley..... |
| 39219 | 7005 | “ Shaft (long) with 17896..... |
| 39220 | 7005 | “ “ (short) with 17896..... |
| 17896 | 7006 | “ “ Plug..... |
| | 153E 6998 | “ “ Set Screw..... |
| 39221 | — | Table Belt Guide complete, Nos. 17892, 39219, 39220, two each 17893, 39218 and three wood screws $1\frac{1}{4}$ in. No. 12. |

TRIMMINGS FOR TABLE 5380

| NO. | PLATE | NAME |
|---|-------|--|
| 62281 | 7033 | Machine Base with wood screw 1¾ in. No. 14, two each 694E, 62164, three each 1385E, 27253 and four 134D..... |
| 1385E | 7011 | Machine Base Bolt with 1524E..... |
| 1524E | 7011 | " " " Nut..... |
| 27253 | 7011 | " " " Washer..... |
| 134D | 7006 | " " " Screw..... |
| 5670 | ----- | Presser Bar Lifting Lever Chain, length 26 in. to 35 in., with 56864 and 56865.. |
| 6439 | — — | Starting Lever Chain, length 36 in. to 45 in., with 56864 and 56865..... |
| NOTE: When ordering Nos. 5670 or 6439 give length required. | | |
| 56864 | 7007 | Chain Hook (large)..... |
| 56865 | 7006 | " " (small)..... |
| 62164 | 7011 | Starting Lever Chain Pulley..... |
| 694E | 7011 | " " " " " Screw..... |
| 46644 | 7033 | Table Support with three wood screws 1¾ in. No. 14..... |
| 62165 | 7033 | Table Work Clamp..... |
| 20093 | 7033 | " " " " Hanger with two wood screws 1 in. No. 10..... |
| 62166 | 7011 | Table Work Clamp Spring..... |
| 62167 | 7010 | " " " " " Arm with 361c..... |
| 361c | 7010 | Table Work Clamp Spring Arm Set Screw..... |
| 62168 | 7010 | Table Work Clamp Spring Bracket with two wood screws 1 in. No. 10..... |

THREAD UNWINDER

FOR ONE LARGE SPOOL OR ONE LARGE
CONE OF THREAD

| NO. | PLATE | NAME |
|-------|-------|-------------------------------------|
| 27623 | 2836 | Spool Pin..... |
| 155c | 6992 | " " Set Screw..... |
| 41526 | 2836 | " Rest..... |
| 60701 | ----- | " " 41526 with 155c and 1149c.. |
| 41527 | ----- | " " 60701 with 27623..... |
| 1149c | 6998 | " " Set Screw..... |
| 27940 | 2836 | " Stand with 453c..... |
| 41514 | 2836 | " Weight, 4 in. diam., with 41515.. |
| 41515 | 7006 | " " Centre Pin..... |

| NO. | PLACE | NAME |
|-------|-------|---|
| 27739 | 2836 | Thread Cone (wood)..... |
| 41630 | 2836 | " Guard with 208E and 41569.... |
| 41569 | 7006 | " " Eyelet..... |
| 41637 | 2836 | " " Rod (lower)..... |
| 41638 | 2836 | " " " (upper)..... |
| 41639 | 2836 | " " " Coupling with two 456c..... |
| 456c | 6998 | Thread Guard Rod Coupling Set Screw |
| 41640 | ----- | Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639..... |
| 453c | 6987 | Thread Guard Rod Set Screw..... |
| 208E | 6980 | " " " Screw..... |
| 41529 | 2836 | Thread Unwinder complete, Nos. 27739, 27940, 41514, 41527, 41630, 41640 and three wood screws 1 in. No. 12..... |
| 60771 | 7006 | Thread Guide..... |
| 60772 | ----- | " " 60771 with 41635..... |
| 41635 | 7006 | " " Bracket with 175D..... |
| 175D | 7006 | " " " Set Screw..... |
| 60773 | ----- | Thread Unwinder with Thread Guide complete, Nos. 41529 and 60772..... |

OBSOLETE PARTS

| NO. | PLATE | NAME |
|--------|-------|--|
| *62144 | ----- | Cylinder for 114-22 Machine..... |
| 62145 | 7002 | " Bottom Cover for 62146..... |
| 62183 | 7020 | " " " " 62184..... |
| 62146 | ----- | " End Cover 62108 with 1034D, 62110 to 62113, 62145 and two each 1345D and 1477D, for 114-22 Machine, use 62190..... |
| 62184 | ----- | Cylinder End Cover 62108 with 1034D, 62111 to 62113, 62183, 62185 and four 1477D, for 114-23 and 114-24 Machines, use 62190..... |
| 62110 | 6980 | Cylinder End Cover Bracket..... |
| 1345D | 7027 | " " " " " Screw..... |
| 62116 | 6982 | Feed Across Knuckle Joint..... |
| 17728 | 6982 | " " " " " Connection |
| 1184E | 6982 | " " " " " " " |
| | | " Hinge Screw..... |
| 17730 | 6982 | Feed Across Lever Ball Stud..... |
| 17733 | 6982 | " " " " Socket Bearing |
| 17734 | 6982 | " " " " " " " |
| | | Block (two pieces)..... |

OBSOLETE PARTS

| NO. | PLATE | NAME |
|--------|-------|--|
| 145F | 6982 | Feed Across Lever Socket Bearing Block Set Screw |
| 1528J | 6982 | Feed Across Lever Socket Bearing Block Set Screw Nut |
| 1187E | 6982 | Feed Across Regulator Adjusting Screw Stud |
| 17739 | 6982 | Feed Across Regulator Adjusting Screw Stud Sleeve |
| 124663 | 7028 | Knife for 114-24 Machine |
| 208D | 6980 | " Clamping Screw |
| 124664 | 7028 | " Holder with 208D, for 114-24 Ma- chine |
| 203D | 7027 | Knife Holder Screw for 124664 |
| 59741 | 6993 | Looper with 34418, for 114-22 Machine, use 62162 |
| 62162 | — | Looper with 34418, for 114-22 Machine, use 62179 |
| 124624 | 7032 | Thread Nipper (lower) Lever Shaft Bracket for 114-23 and 114-24 Ma- chines |
| 124667 | 7028 | Thread Pull-off for 114-24 Machine |
| 59789 | 6993 | Throat Plate Needle Guard, use 59799 |

PLATE 2836—ONE-FOURTH SIZE


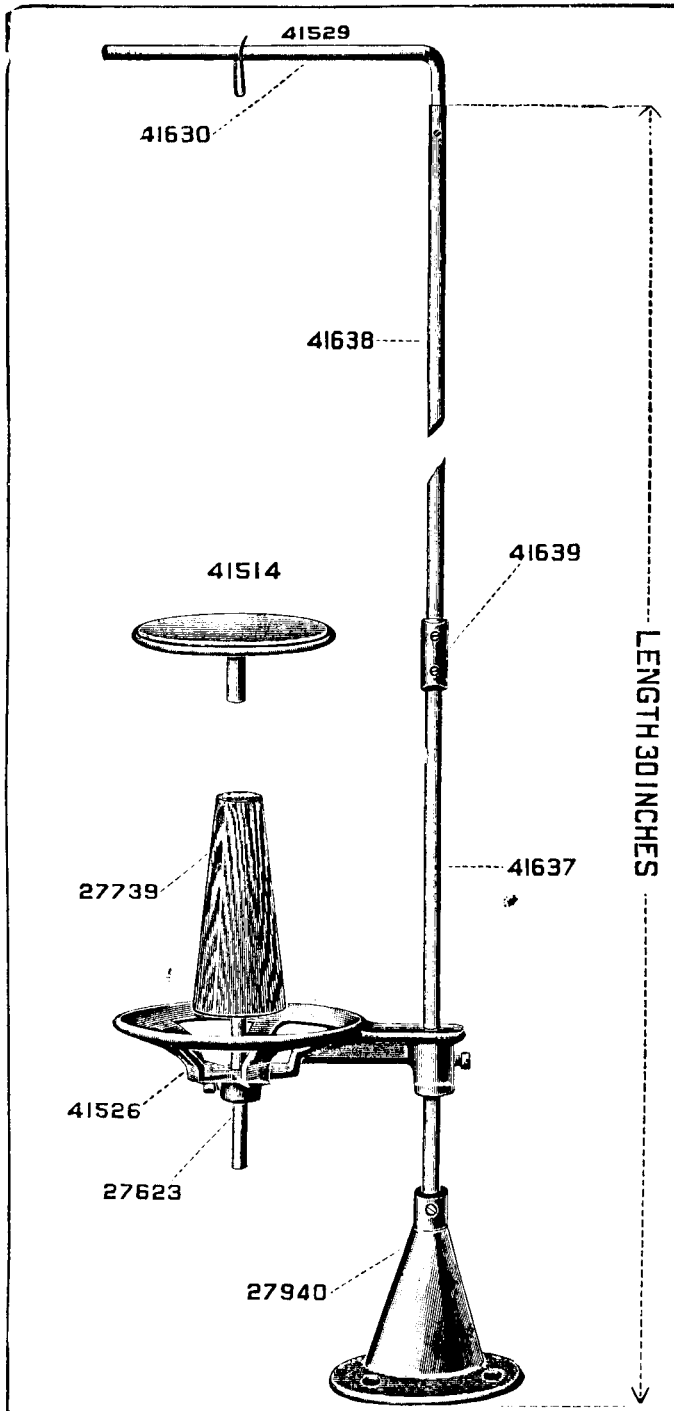


PLATE 6975—ONE-FOURTH SIZE

59702




18498

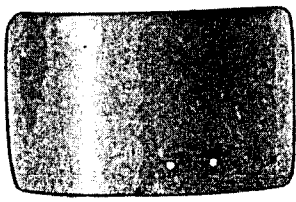

62124



62105

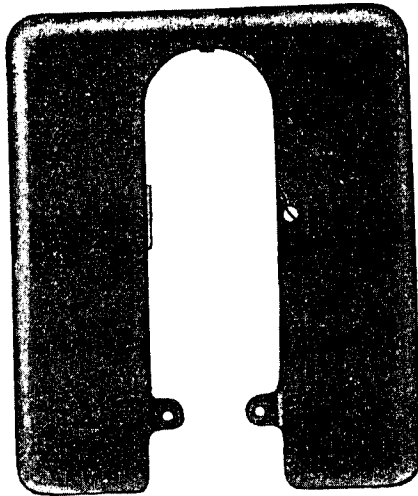

62182


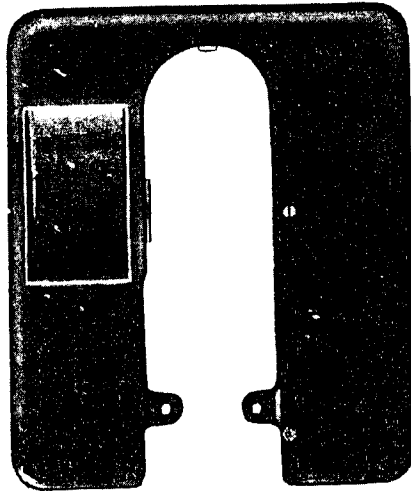


PLATE 6976—FULL SIZE

59704



59708

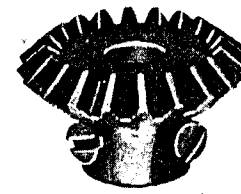

59703



59706



1036



39223



1253



4448



1255



59705



56015



59707



16532



21828



PLATE 6977—ONE-HALF SIZE

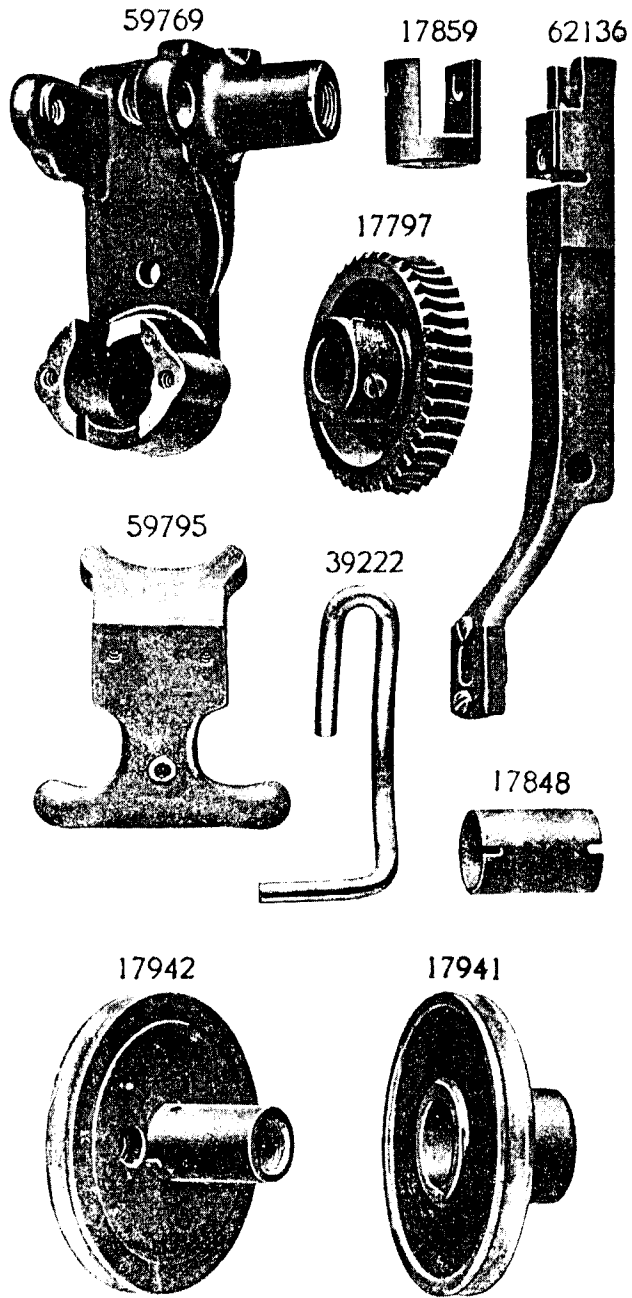


PLATE 6979—FULL SIZE

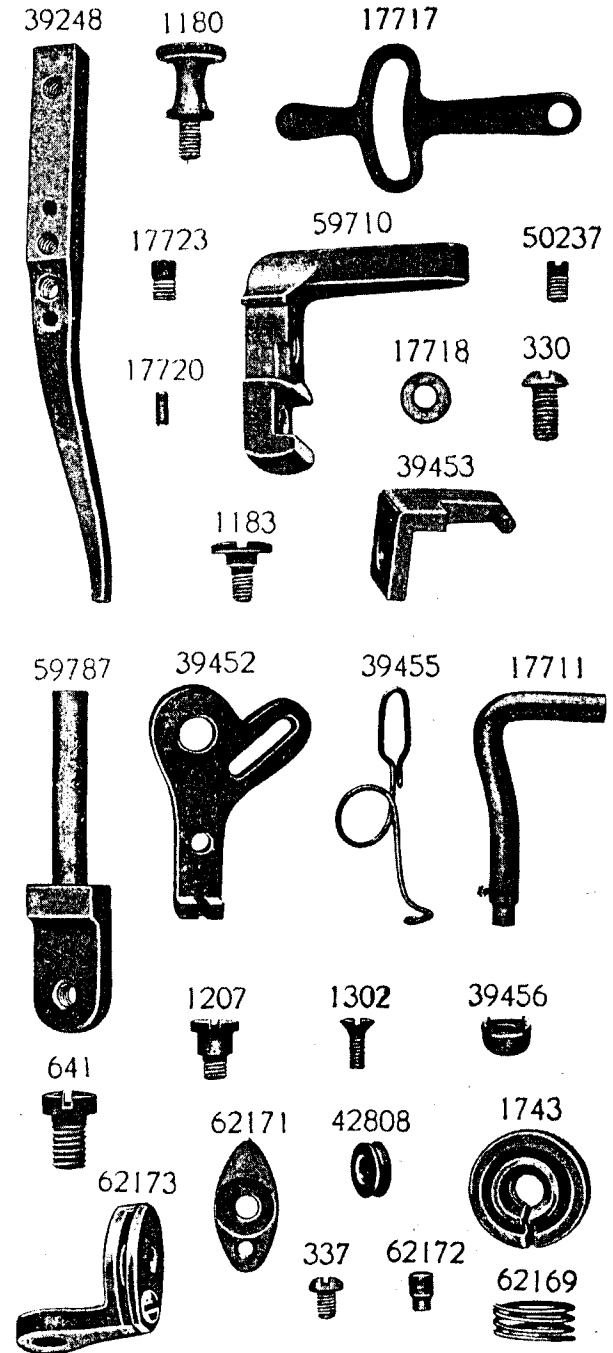


PLATE 6980—FULL SIZE

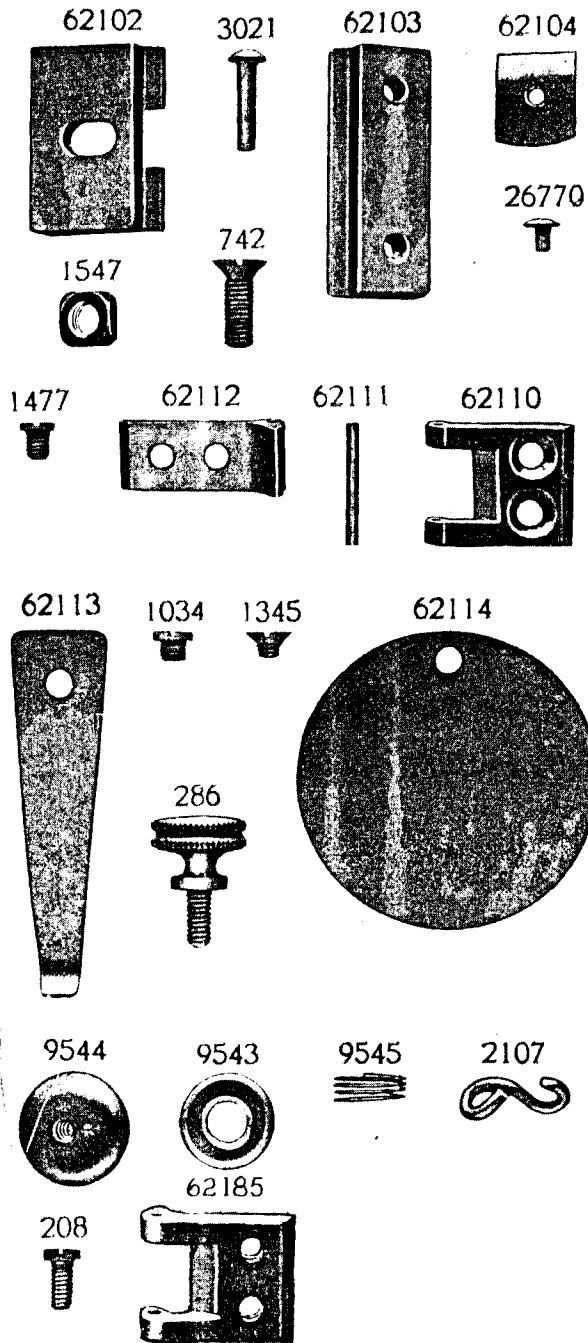


PLATE 6981—ONE-HALF SIZE

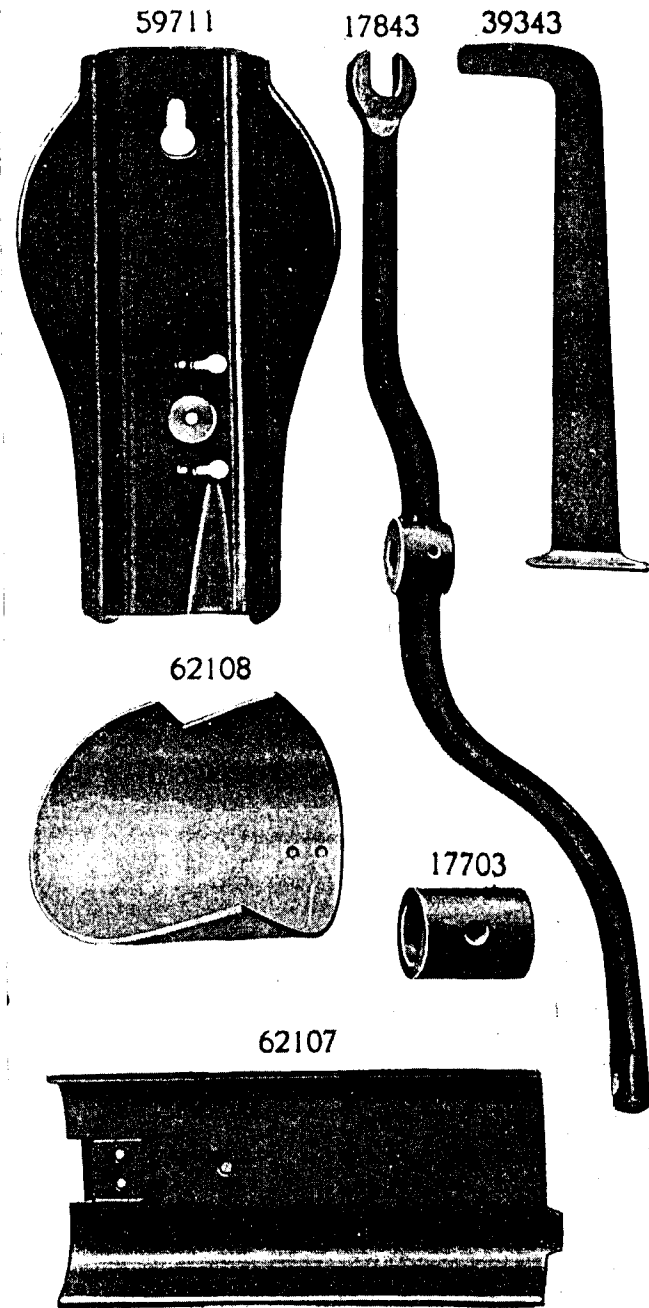


PLATE 6982—FULL SIZE

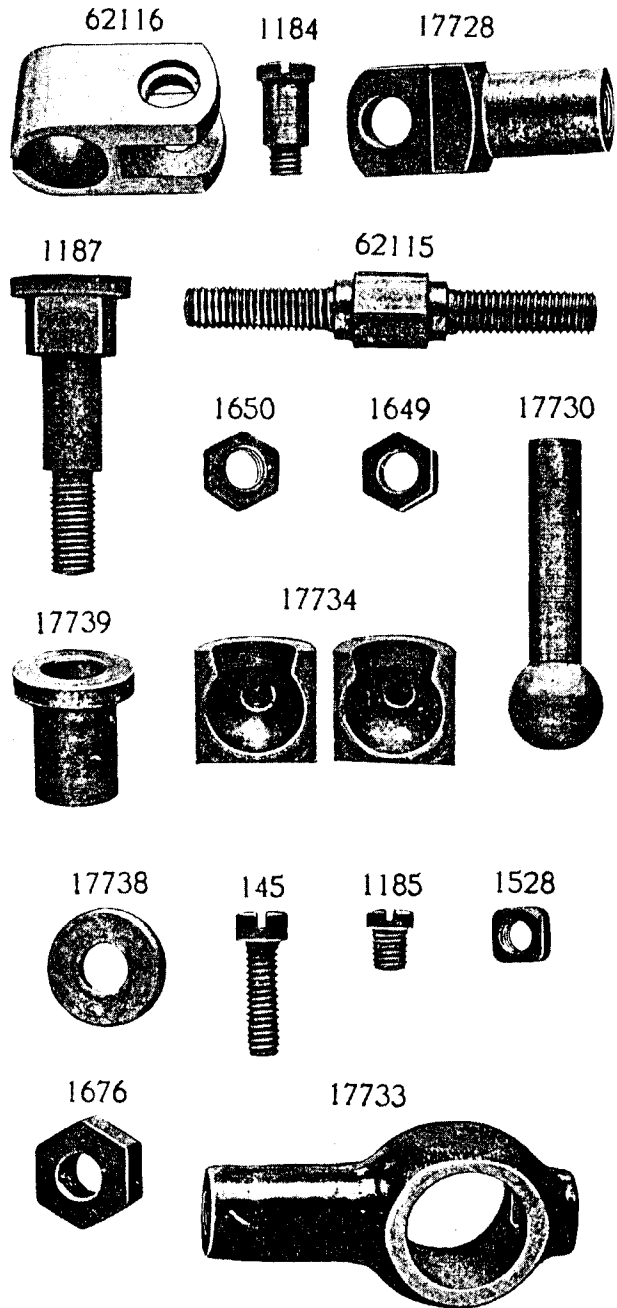


PLATE 6985—FULL SIZE

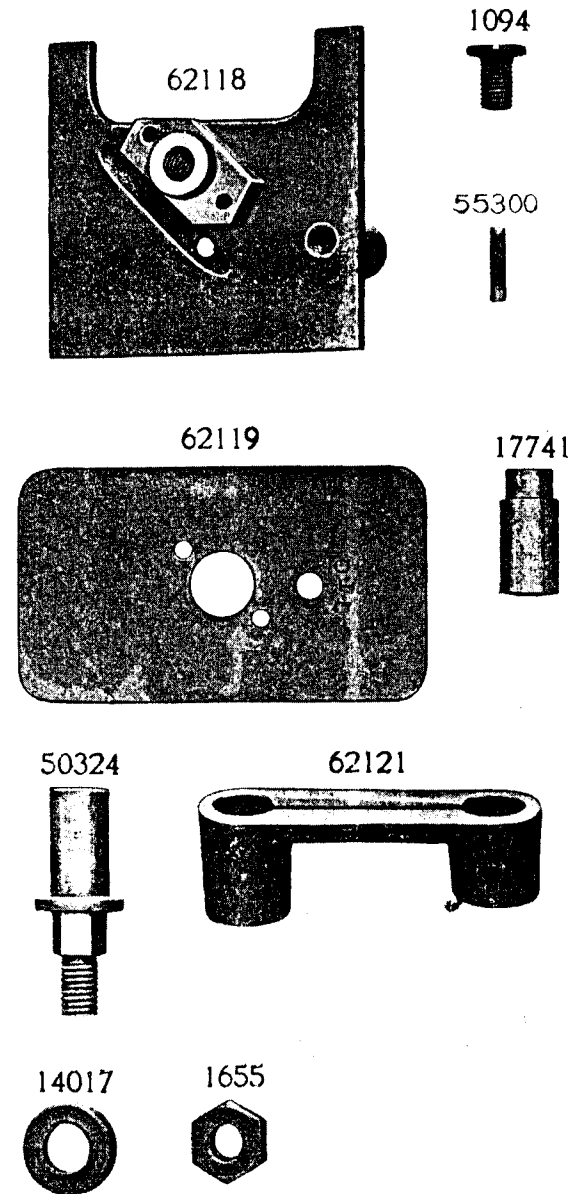


PLATE 6987—FULL SIZE

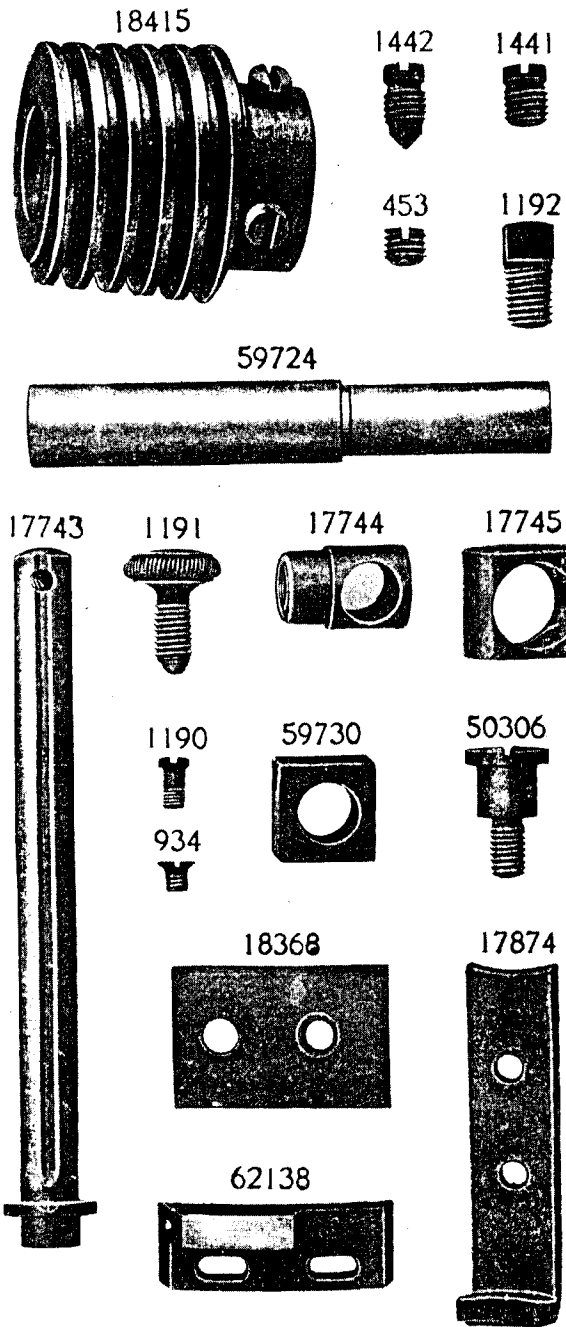


PLATE 6989—ONE-HALF SIZE

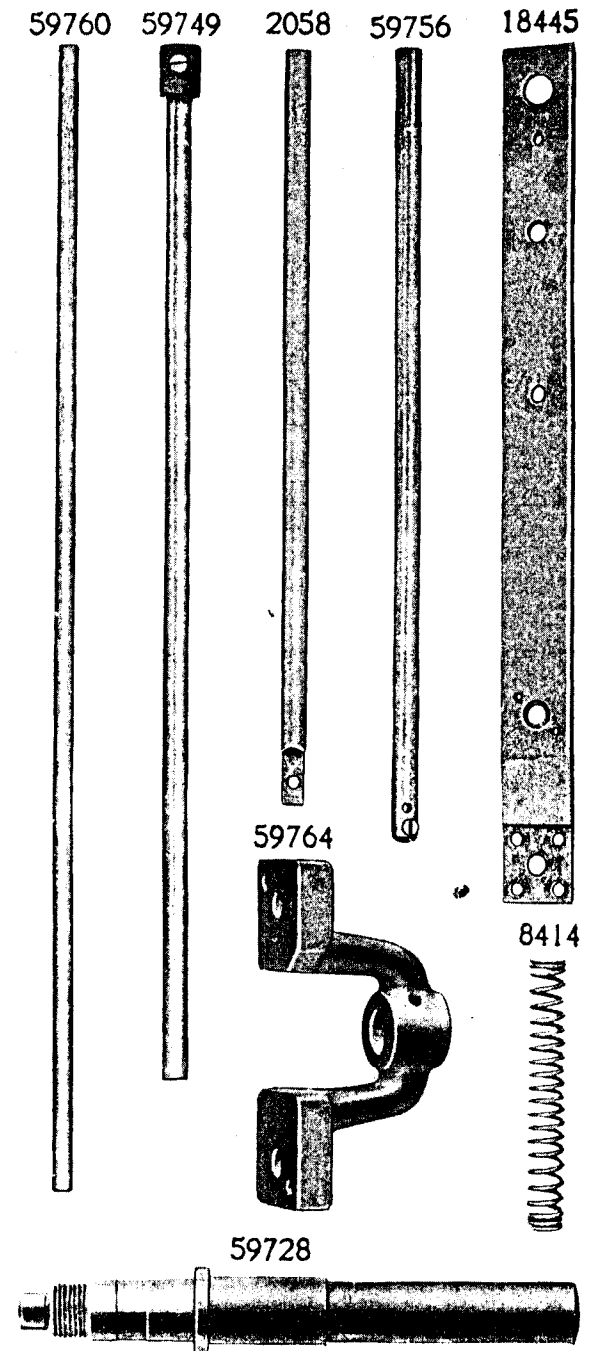


PLATE 6990—FULL SIZE

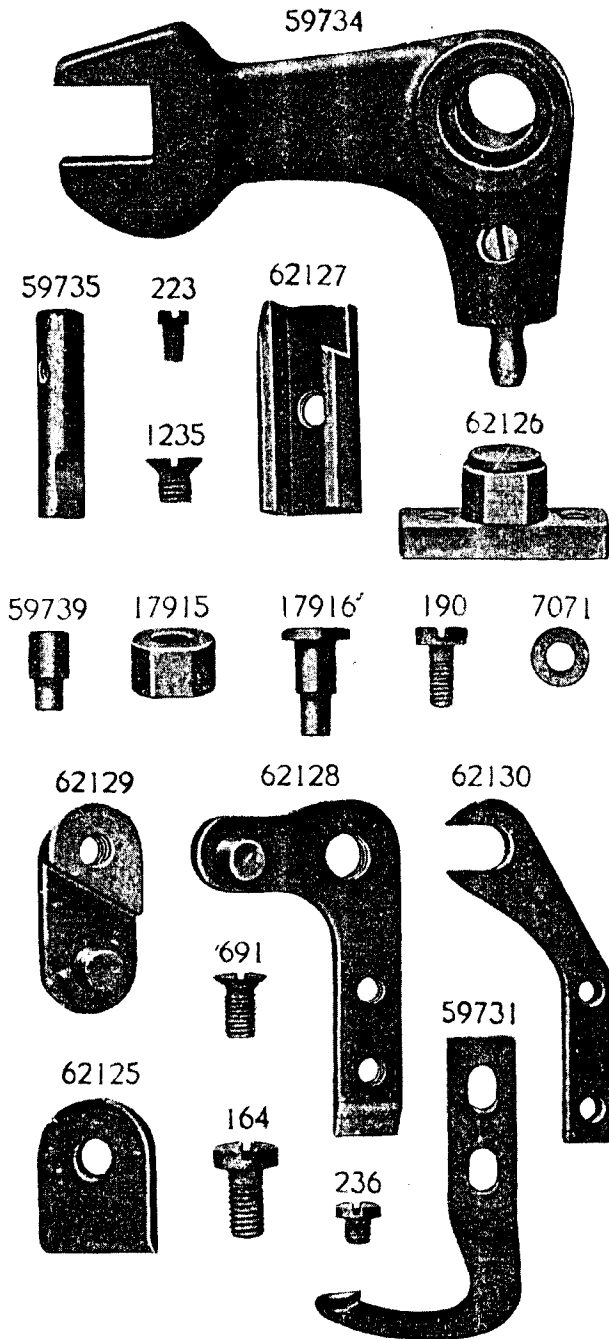


PLATE 6991—FULL SIZE

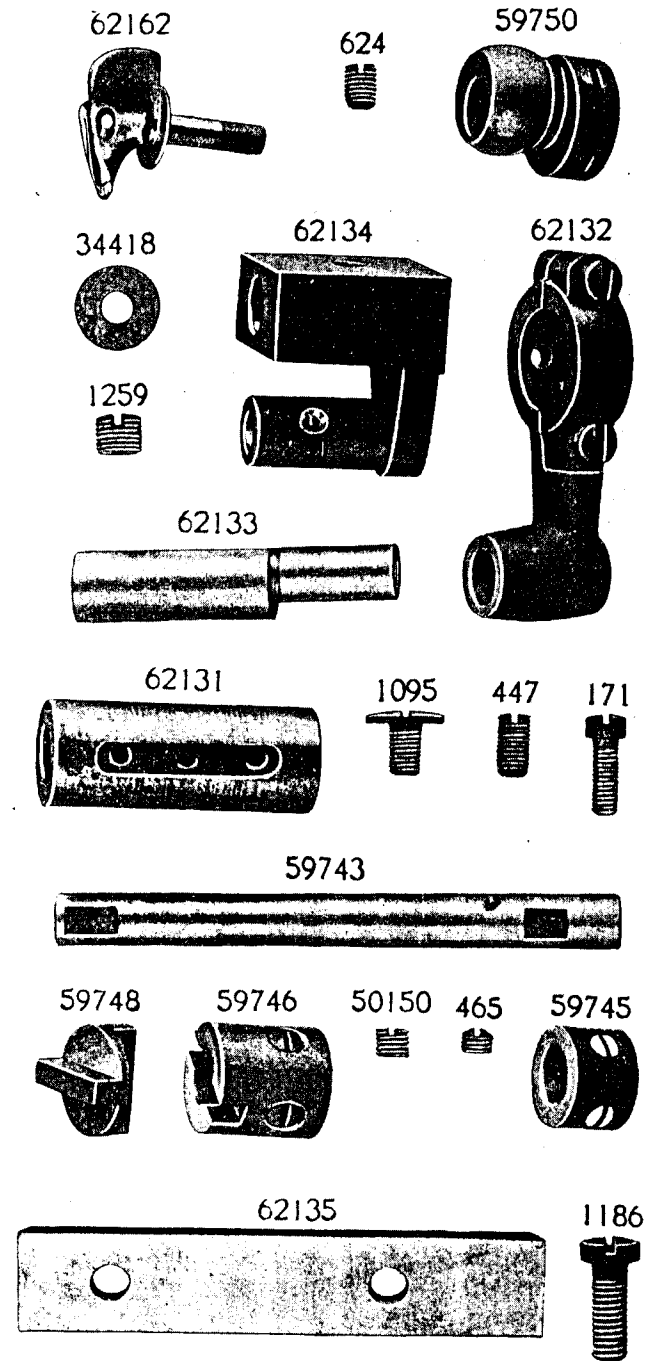


PLATE 6992—FULL SIZE

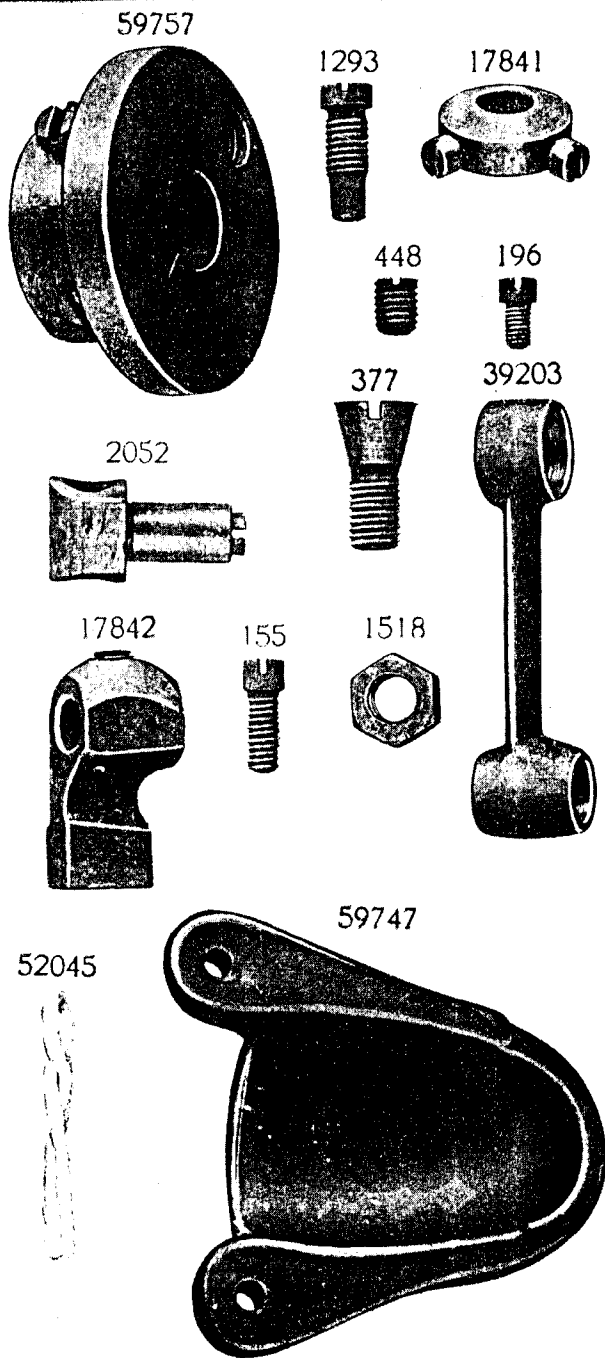


PLATE 6993—FULL SIZE

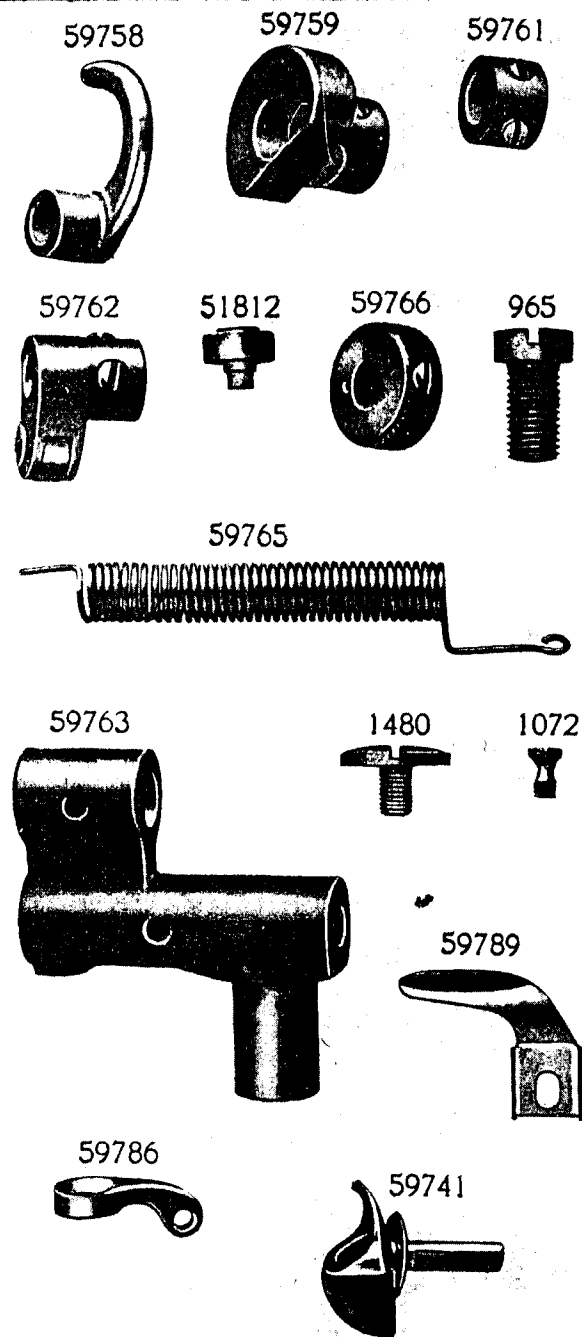


PLATE 6994—FULL SIZE

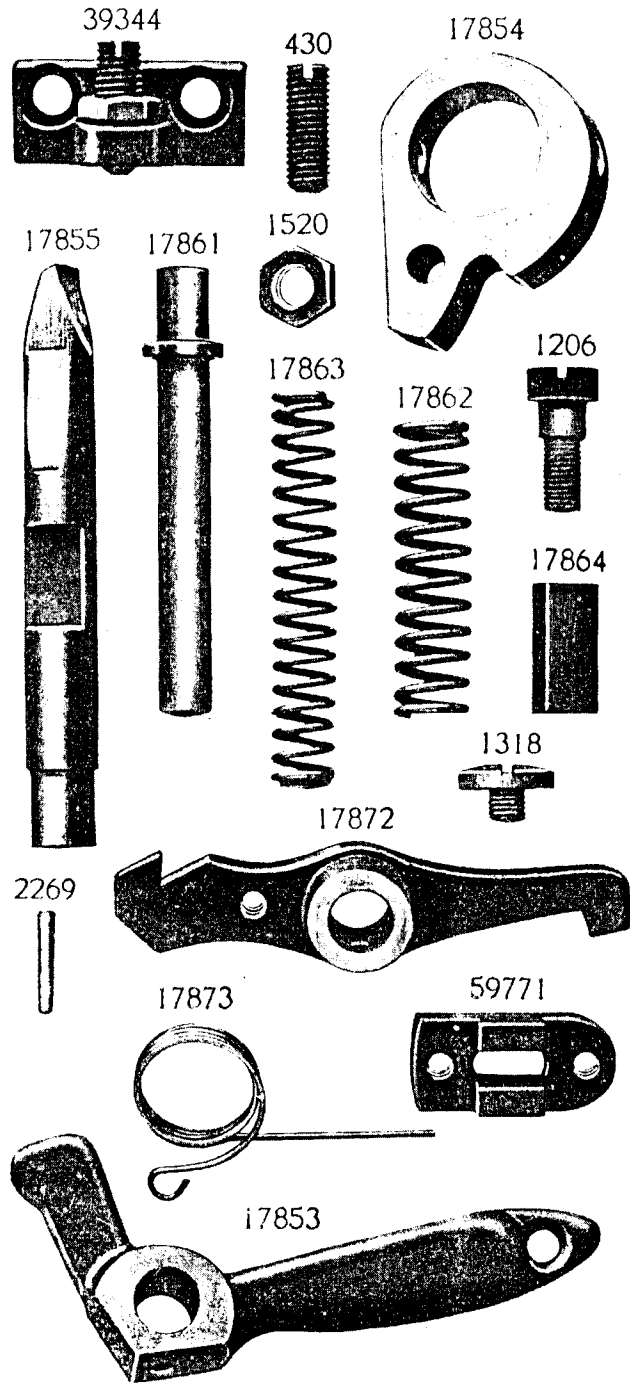


PLATE 6995—FULL SIZE

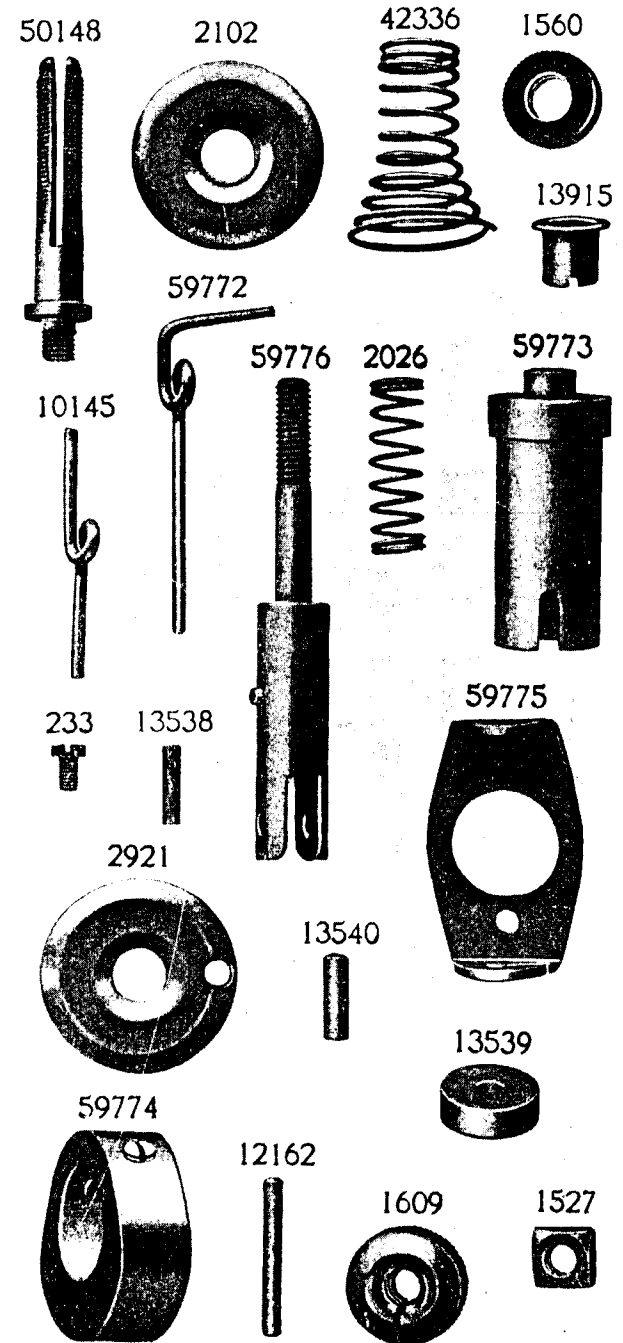


PLATE 6996—FULL SIZE

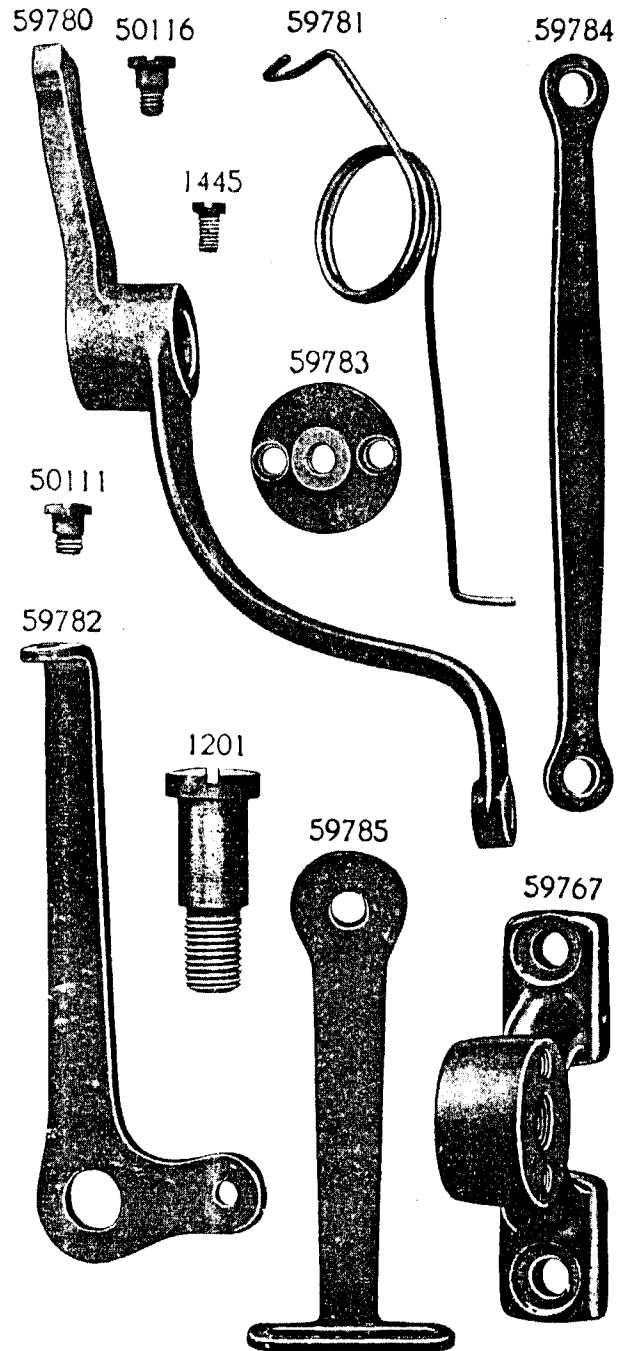


PLATE 6997—FULL SIZE

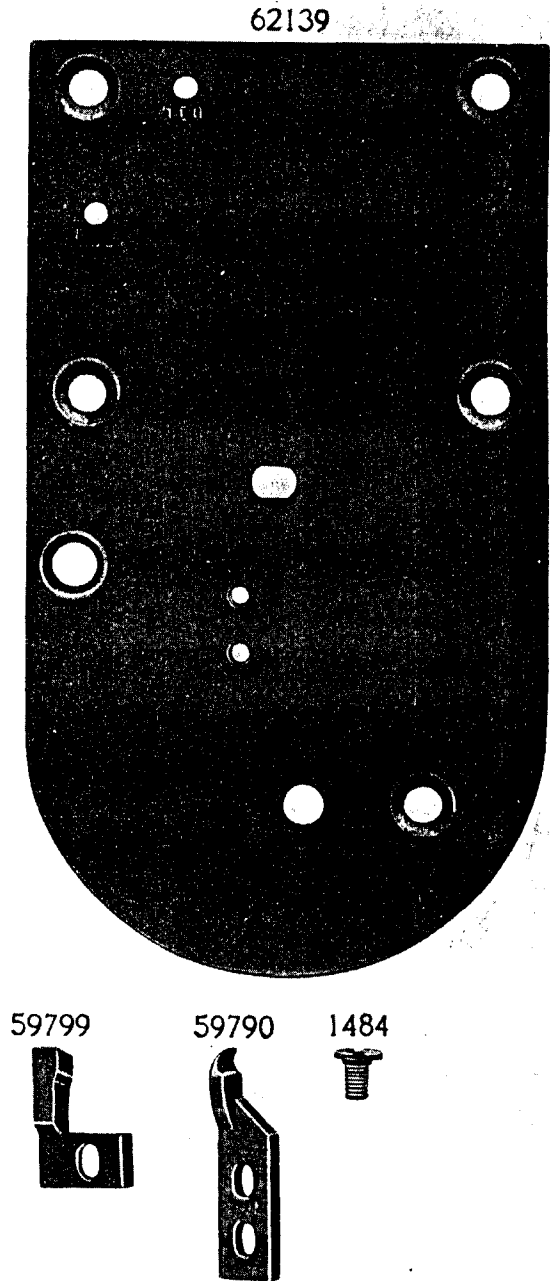


PLATE 6998—FULL SIZE

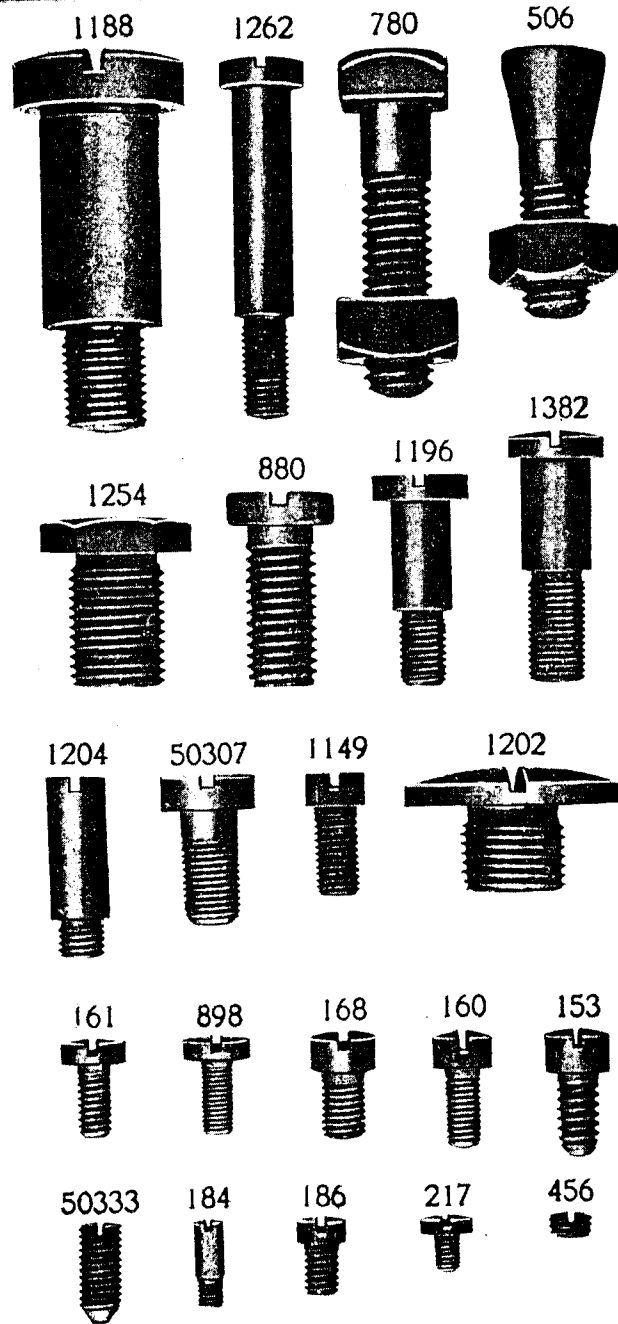


PLATE 6999—FULL SIZE

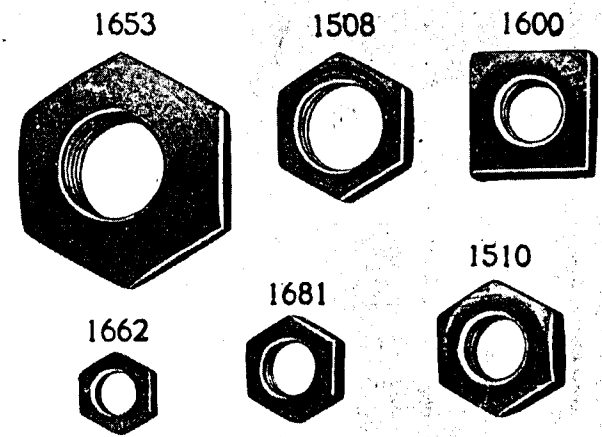


PLATE 7000—FULL SIZE


1220




1656




62141

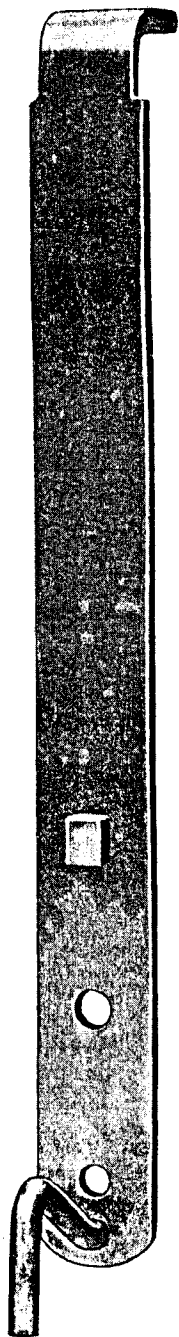

62140

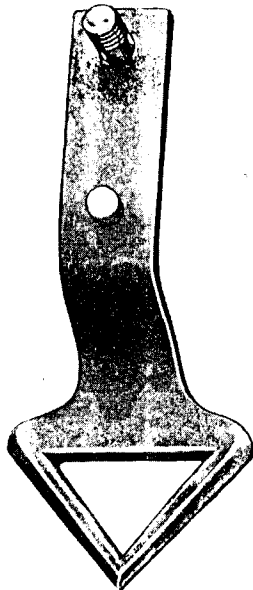

62142

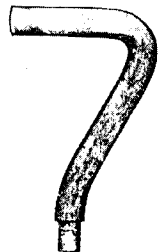

17928

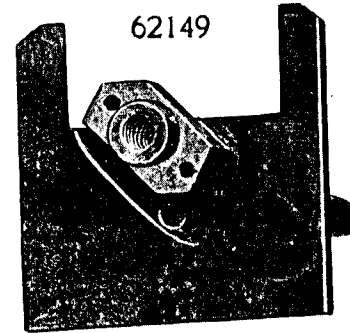


PLATE 7001—FULL SIZE

17712



62149




1189



62153



62152

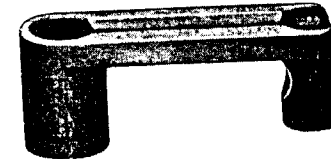

62150

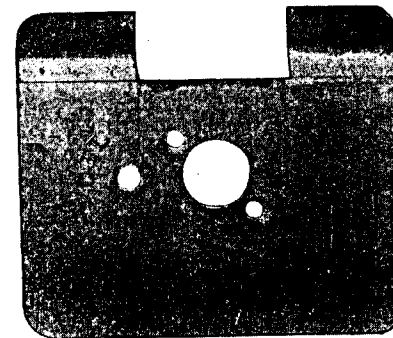


PLATE 7002—ONE-HALF SIZE

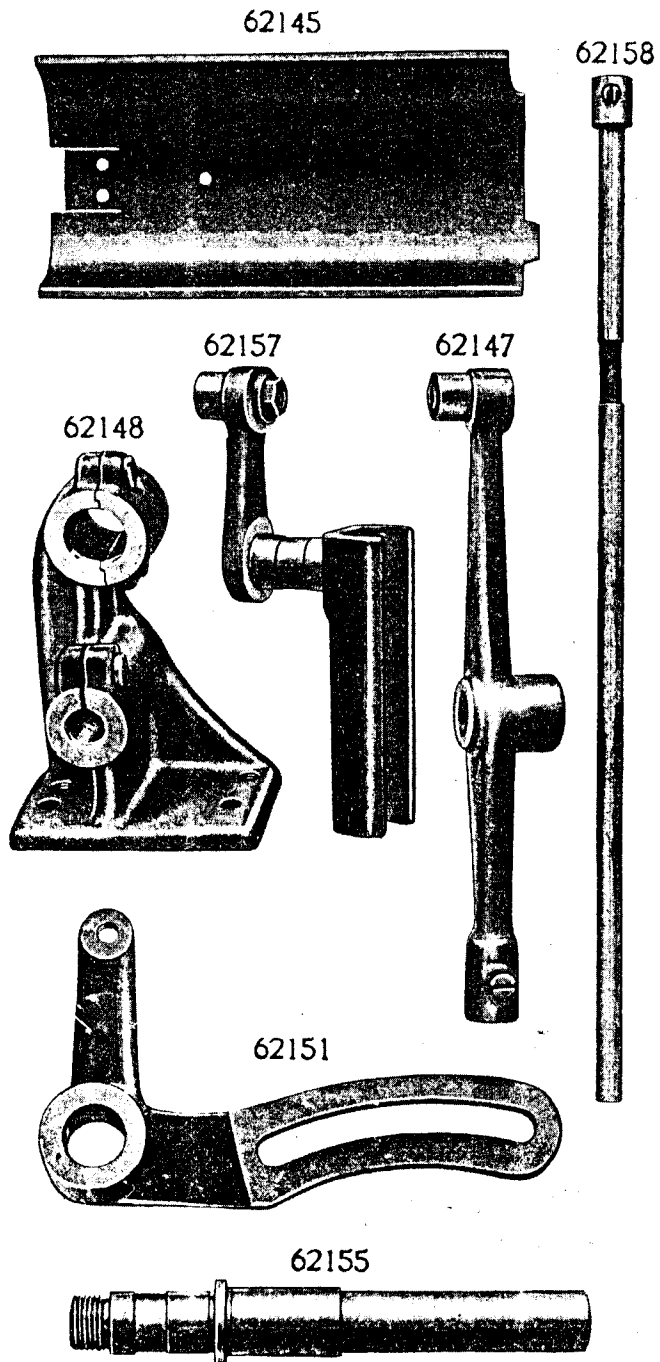


PLATE 7004—FULL SIZE

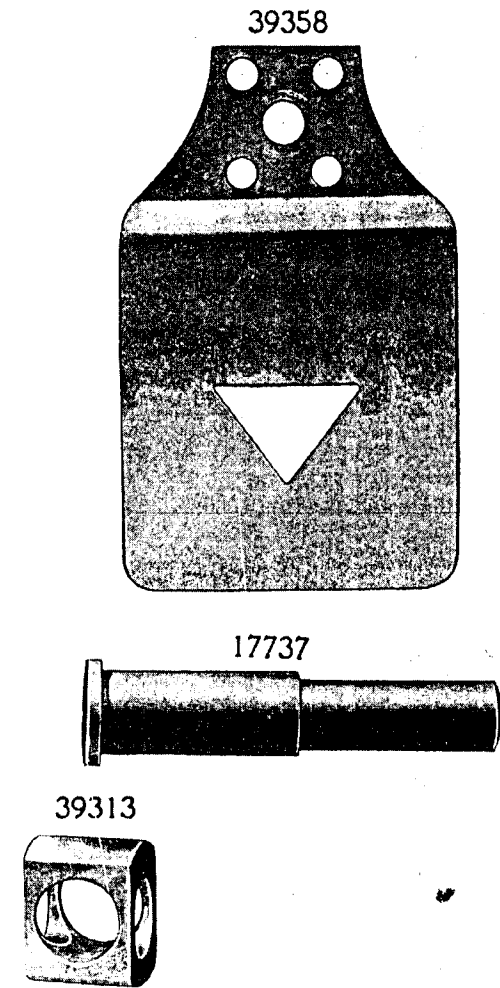


PLATE 7005—ONE-FOURTH SIZE

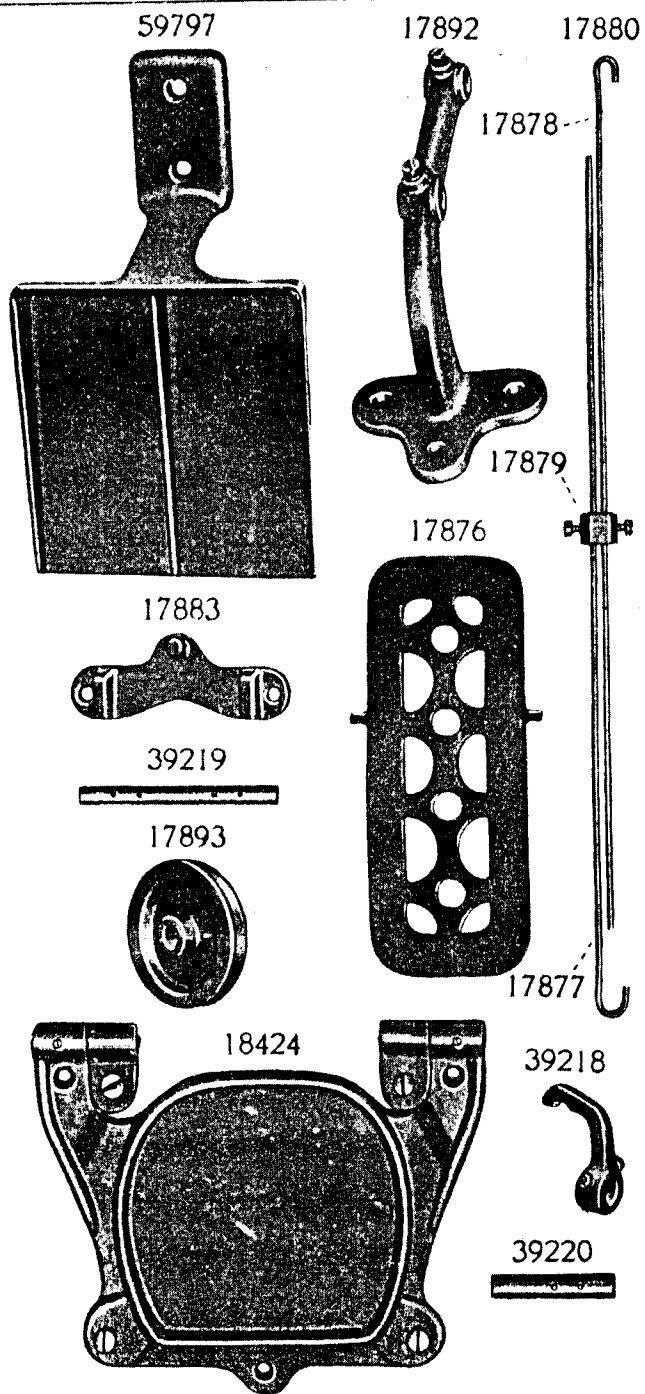


PLATE 7006—FULL SIZE

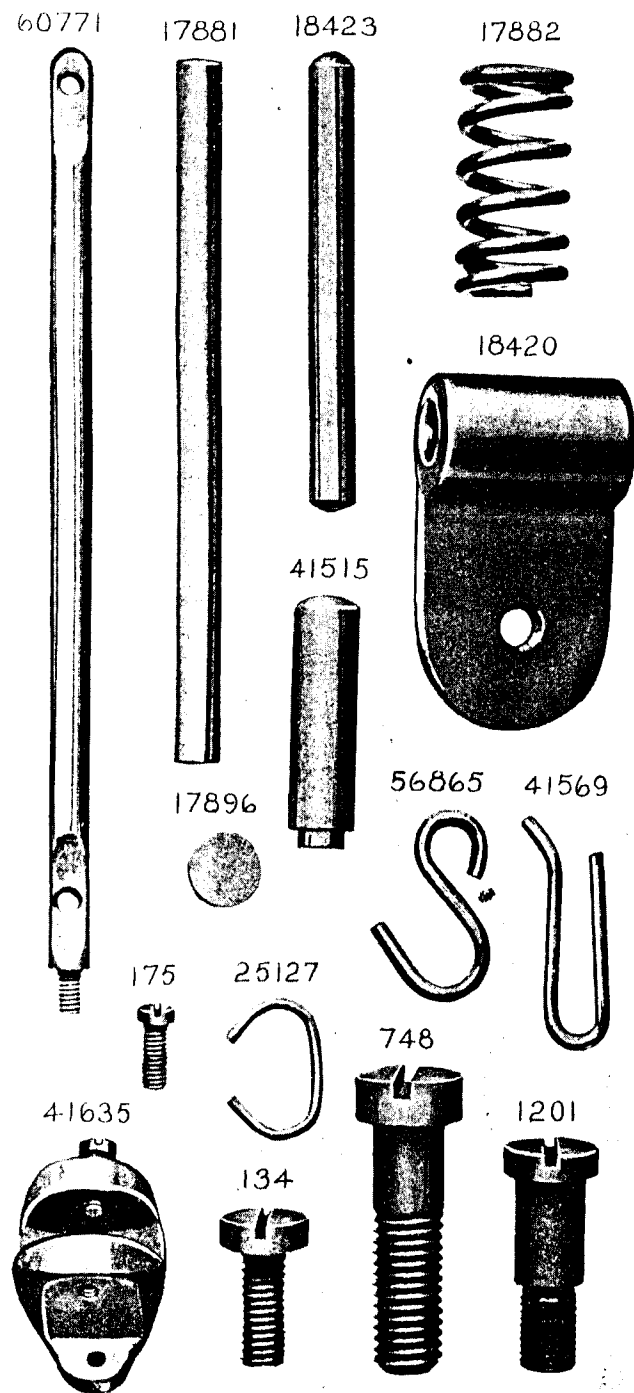


PLATE 7007—ONE-HALF SIZE

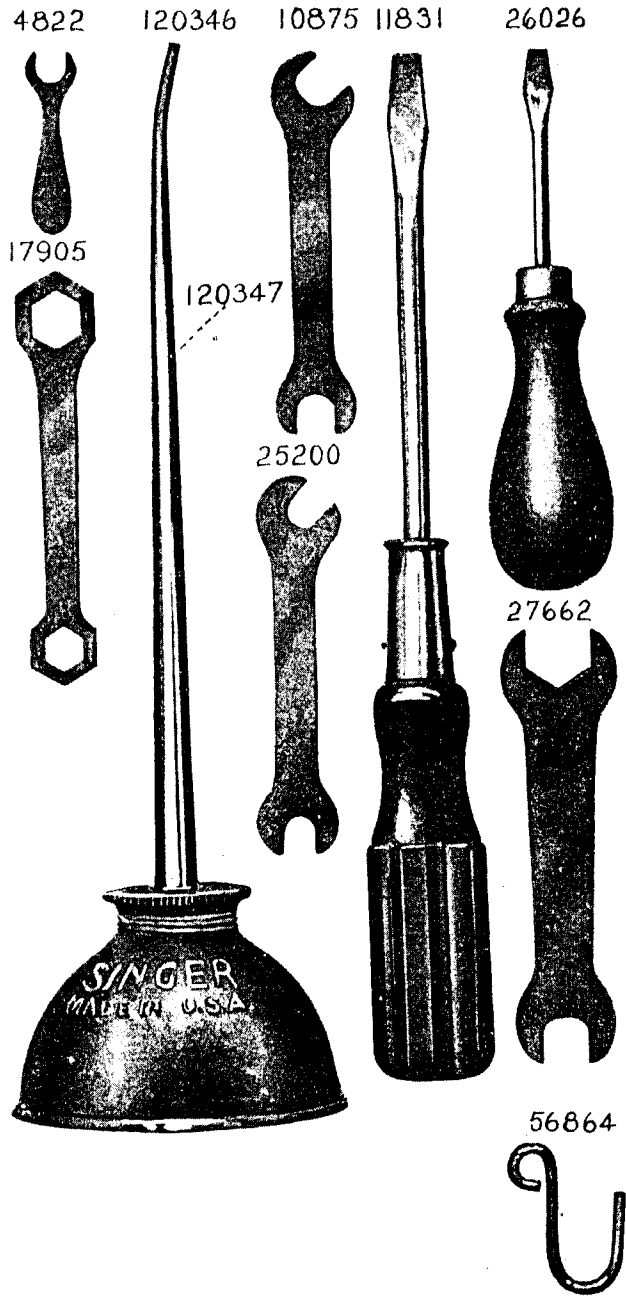


PLATE 7008—ONE-HALF SIZE

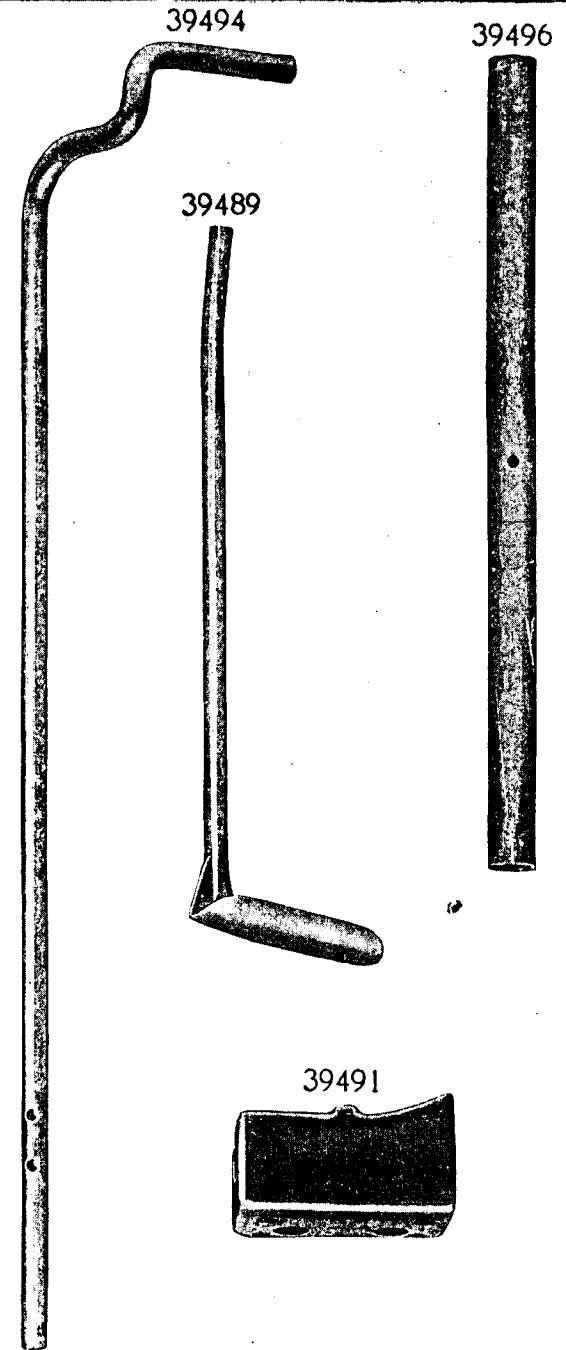


PLATE 7009--FULL SIZE

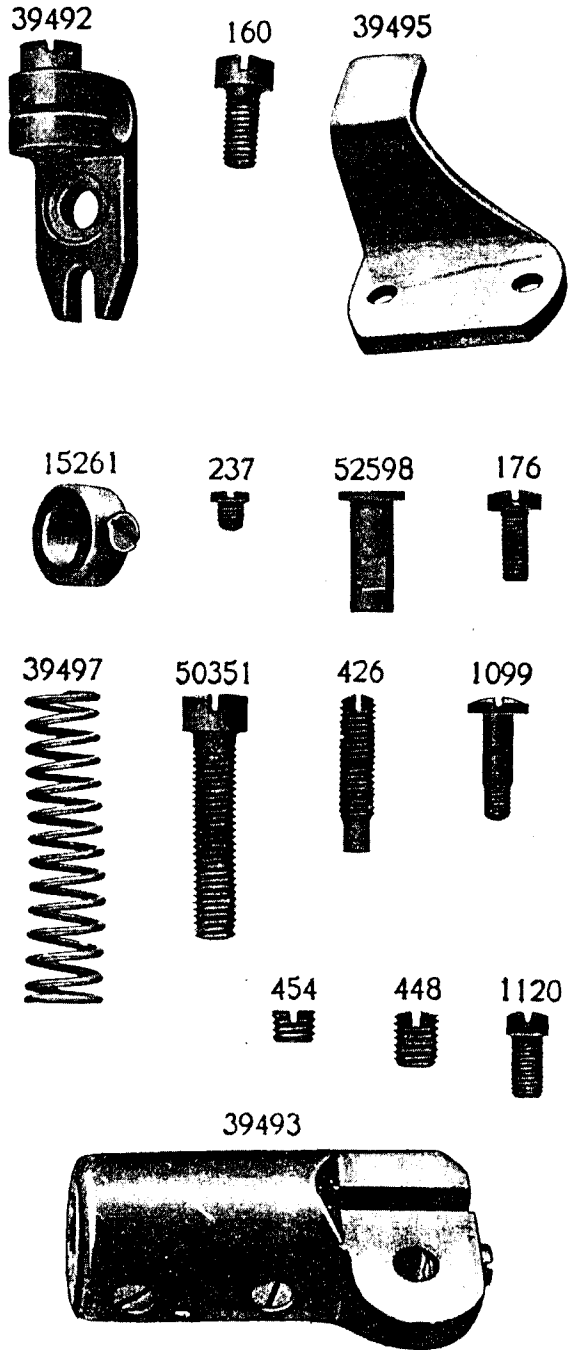


PLATE 7010--FULL SIZE

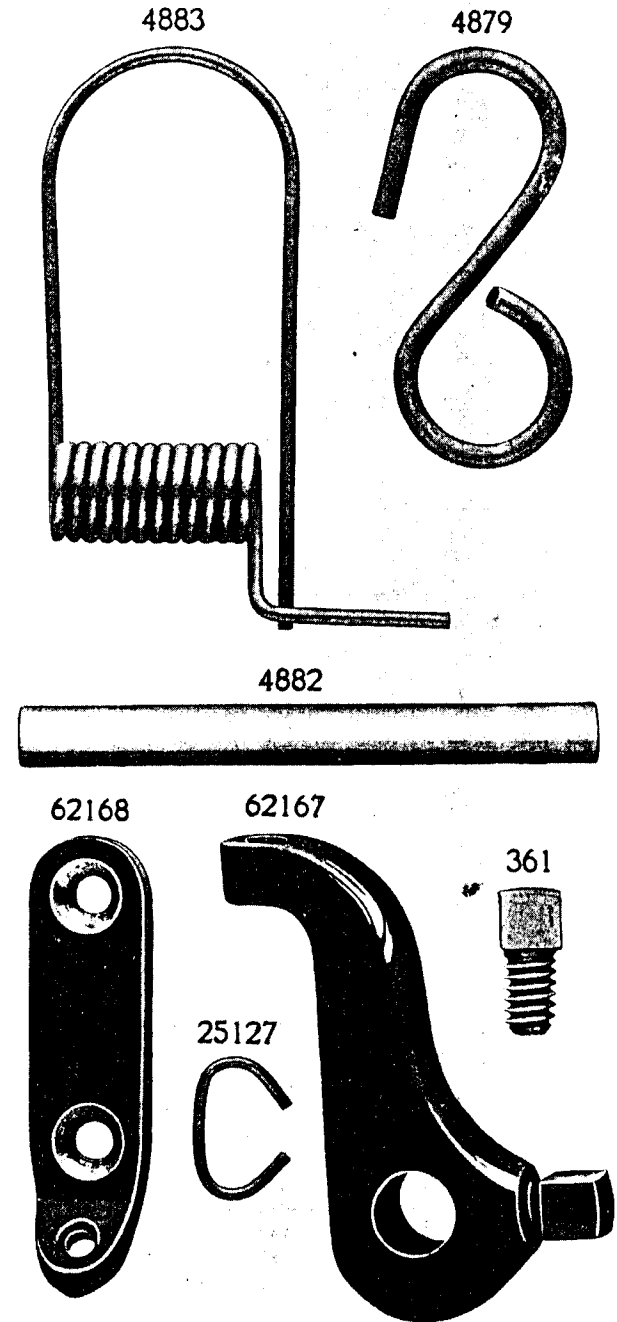


PLATE 7011—FULL SIZE


 
 






PLATE 7015—FULL SIZE

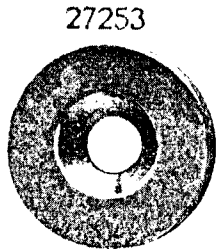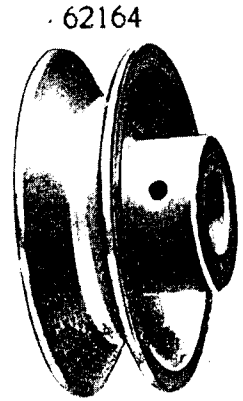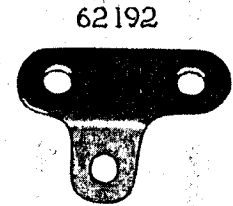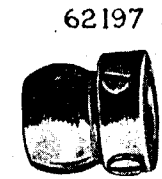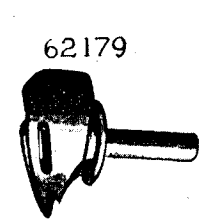

8734

63788

50372

1148

227



435

443

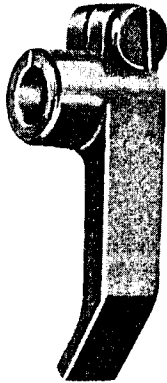


PLATE 7019—FULL SIZE

124680



124677



124679



17719



1282



1181



704



1953



59796



460



93



124603



10107



10106



42348




124604




62300



124601

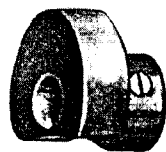

124602

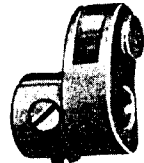

18384



3012



8589



8554



124626




PLATE 7020—ONE-HALF SIZE

124678 62299 124630 124681

62183



124653

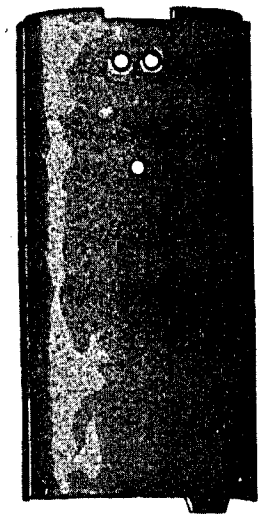

124606



124620



124616




124623



124621



124682

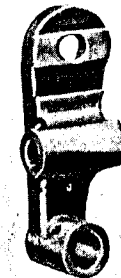

124622




124674



PLATE 7024—FULL SIZE

124627

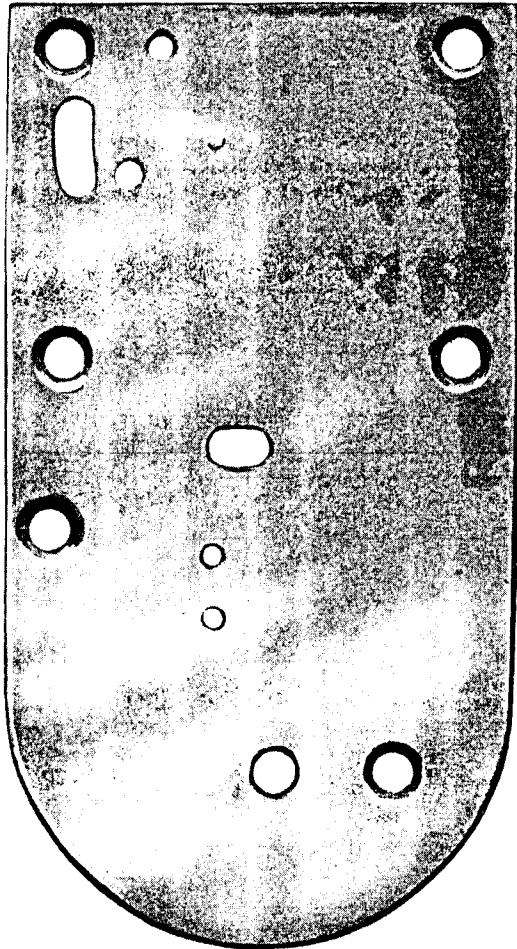

124628



59790



59799



206



PLATE 7026—FULL SIZE

1178




62174



17710



62258

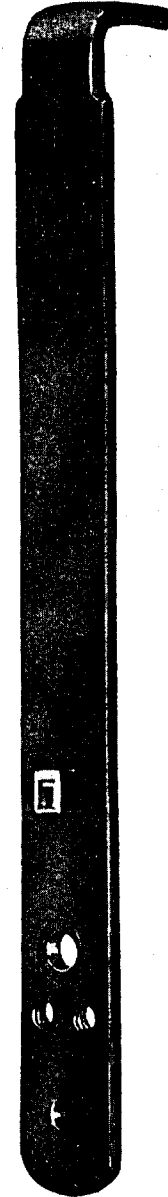

1176



17714



62261


1177



201



17713

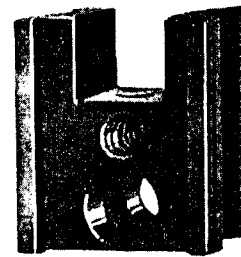

62260

 


PLATE 7027—FULL SIZE

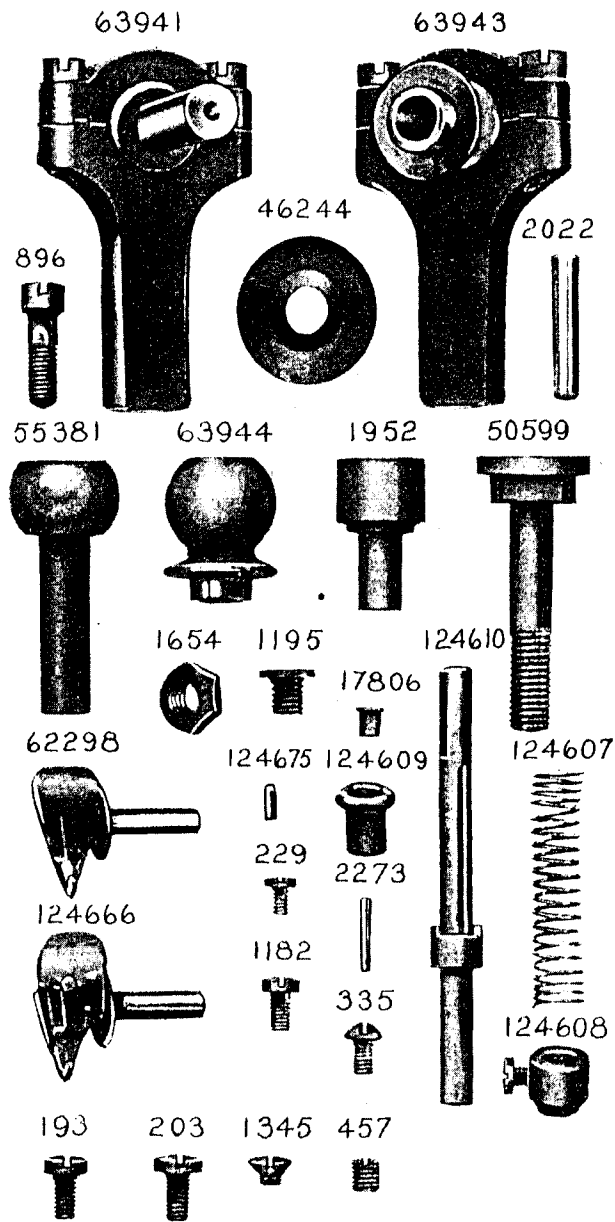


PLATE 7028—FULL SIZE



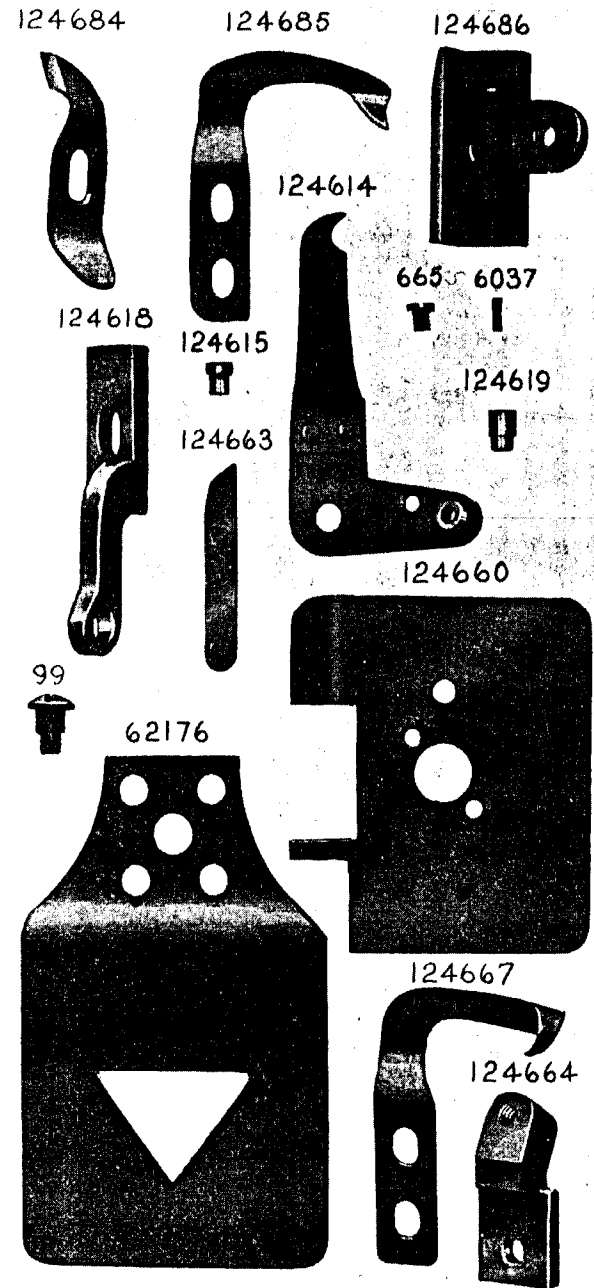


PLATE 7029—FULL SIZE

124646

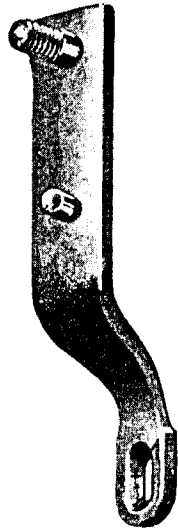

124783

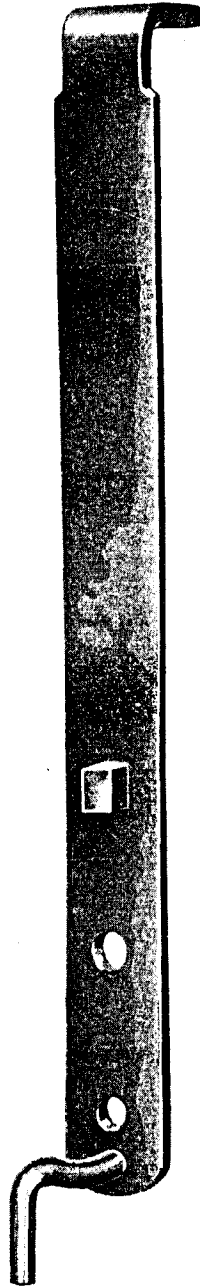

124649

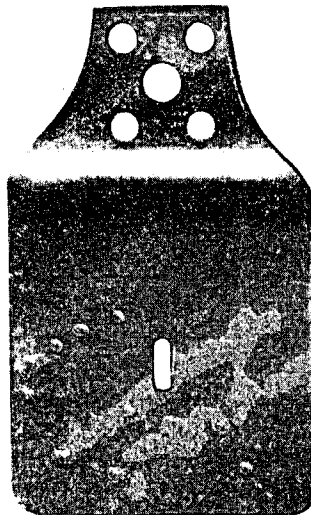


PLATE 7030—ONE-HALF SIZE

62284


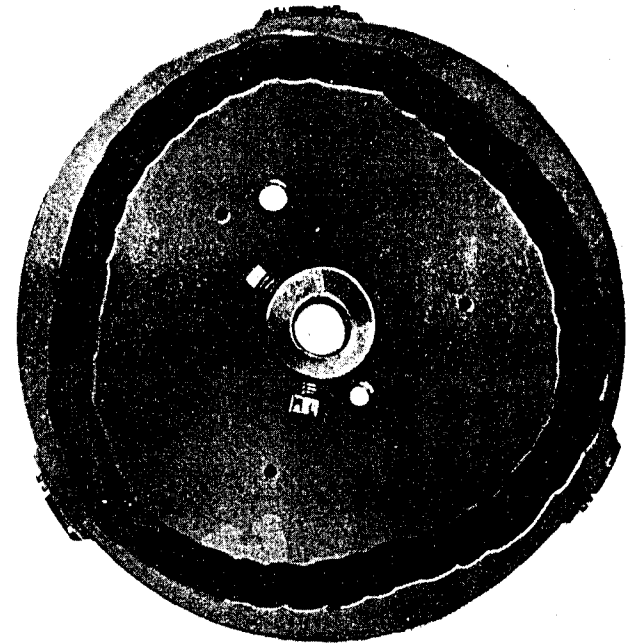


PLATE 7031—ONE-HALF SIZE

124648

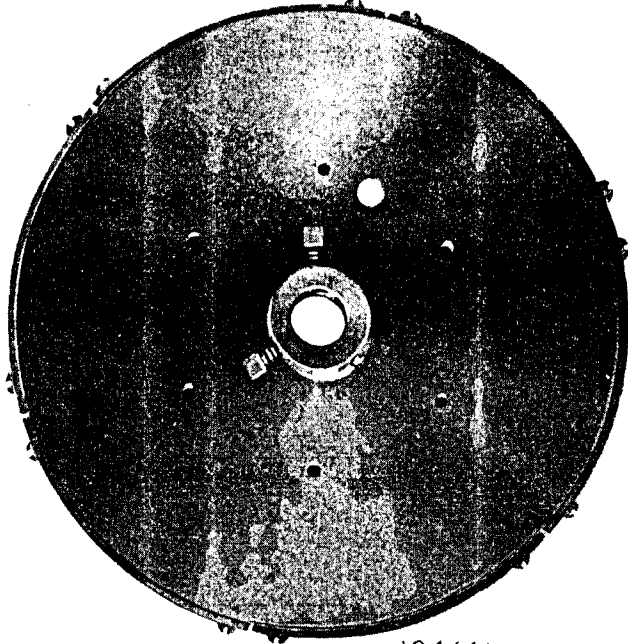

124661



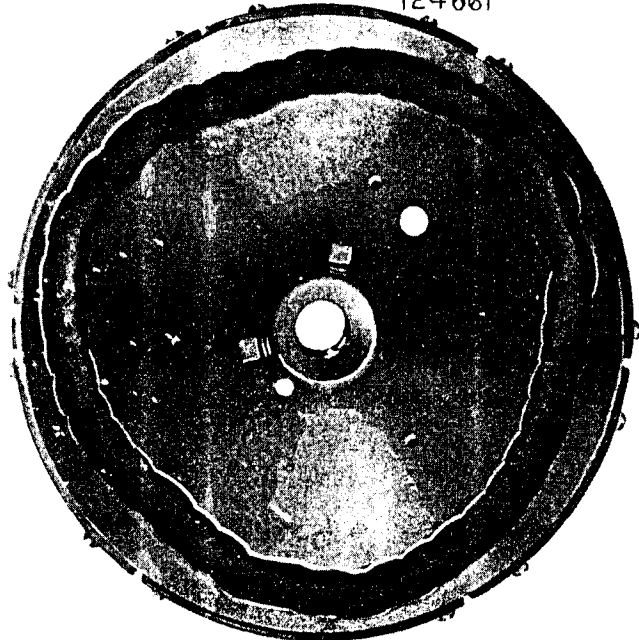


PLATE 7032—ONE-HALF SIZE

124651

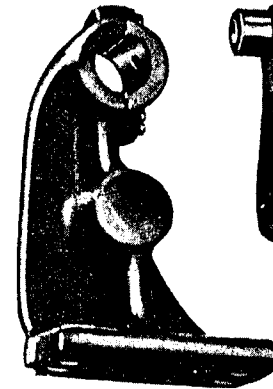

17742

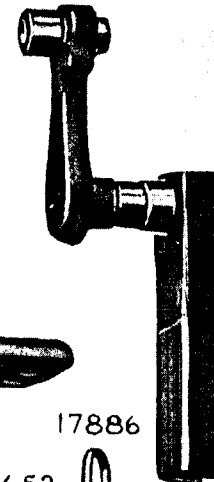

17845



17886



124650




124652



124624



62189

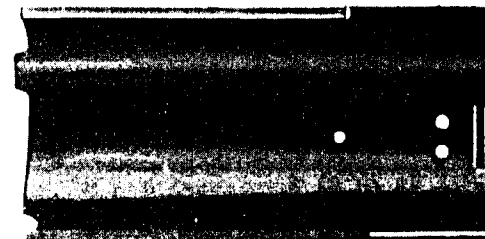

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>