


**Instructions for Freightmaster™ 400  
Electronic Scale**

**400 lb/180 kg Electronic Parcel Post Scale**


**Model 78625-00**

## Save these instructions and warranty information FEATURES OF MODEL 78625-00

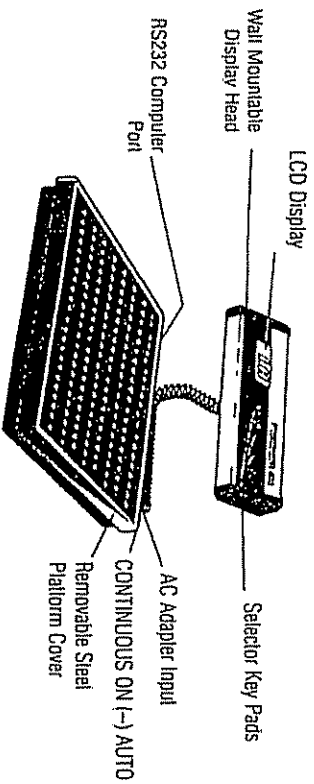

- Auto zero, no manual adjustment necessary.
- Bright easy to read LCD display.
- Capacity 400 lb./180KG. x 0.5 lb./0.2 KG., increments.
- Remote wall mountable display for easy reading (bracket incl.).
- Oversized Weighing Platform (12" x 12" x 2")
- **RS232** Communications Port for computer interface.
- **TARE** feature.
- Low battery indicator.
- One piece membrane keyboard.
- Operates with Sunbeam model 78803-01 adapter (included) or six "AA" volt alkaline batteries (not included).
- Overload protection prevents damage to scale in the event of accidental overloading in excess of 400 lb/180 kg capacity.
- One Year Limited Warranty.

### INSTRUCTIONS FOR USE

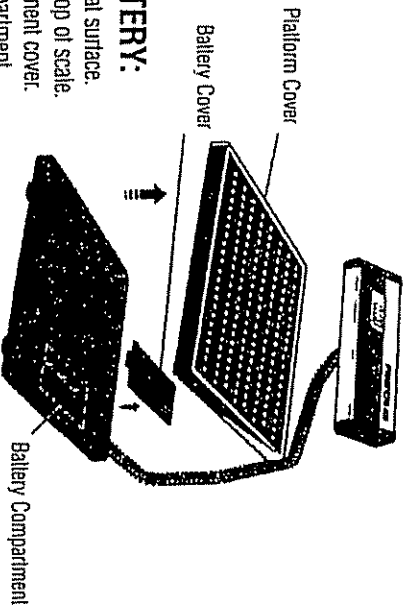

#### TO INSTALL BATTERY:

1. Place unit upright on a flat surface.
2. Lift platform cover from top of scale.
3. Remove battery compartment cover.
4. Insert batteries into compartment.
5. Replace battery compartment cover.
6. Replace platform cover onto scale.

*Note: Your scale will operate on six "AA" 1.5 volt alkaline batteries (not included).*

### HOW TO USE YOUR FREIGHTMASTER 400 SCALE

1. Place scale on a hard flat, level surface.
2. Press the "On/Reset" switch/pad, located on the face of the remote head, the display will show "0.0"
3. Select KG/LB switch/pad located on the face of the remote head.
4. Place item to be weighed in the center of the platform.
5. The weight of the item being weighed will be displayed in Metric or U.S. measurements whichever is selected. (see No. 3 above)
6. Select the **Continuous/On or Auto/Off** operation mode.
- Continuous/On** should only be used with the AC adapter. (Auto/Off shuts the scale off in 25 seconds).
7. **Caution** should be taken not to exceed the total capacity of the scale. Exceeding this amount could damage scale and will void warranty.

#### TARE WEIGHING

1. Complete steps 1-3 above.
2. When zero appears, place empty container on scale.
3. Press **Tare/Release** switch/pad to re-set and wait for display to show "0.0" again.



**Note:** Tare indicator lights up.

4. Fill container with items to be weighed.
5. The weight of the contents will be displayed within 3 seconds.
6. Press **Tare/Release** switch/pad again to cancel **Release** tare and display gross weight.
7. **Caution** should be taken not to exceed the total capacity of the scale. Exceeding this amount could damage scale and will void warranty.

#### LOW BATTERY

1. "LO" will display on LCD display when batteries are too weak to power the scale.
2. When LO is displayed, replace all batteries with new batteries or use the AC adapter.

#### SCALE COMPUTER PORT OPERATION

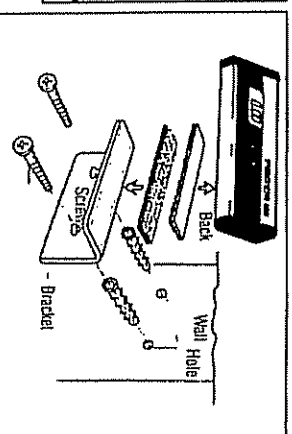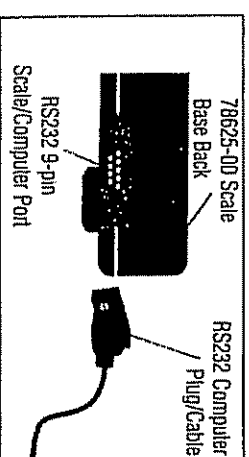


#### TO CONNECT RS232

1. Plug the RS232 plug/cable into the port on back of the scale base housing, as illustrated above.
2. Follow through by connecting the other plug into the port on computer. Screw bracket to desired wall, apply one self adhesive velcro strip to the bracket and the other velcro strip to the bottom of the readout display (between the rubber feet).

\* For computer compatible software and protocol information, call (800) 927 4276.


**Note: Make sure scale and computer are both switched OFF before any connections are made.**

## Save these instructions and warranty information FEATURES OF MODEL 78625-00

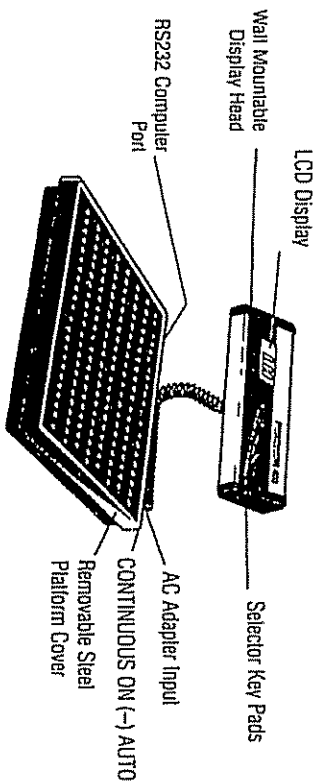

- Auto zero, no manual adjustment necessary.
- Bright easy to read LCD display.
- Capacity 400 lb./180KG. x 0.5 lb./0.2 KG., increments.
- Remote wall mountable display for easy reading (bracket incl.).
- Oversized Weighing Platform (12" x 12" x 2")
- RS232 Communications Port for computer interface.
- TARE feature.
- Low battery indicator.
- One piece membrane keyboard.
- Operates with Sunbeam model 78803-01 adapter (included) or six "AA" volt alkaline batteries (not included).
- Overload protection prevents damage to scale in the event of accidental overloading in excess of 400 lb/180 kg capacity.
- One Year Limited Warranty.

### INSTRUCTIONS FOR USE

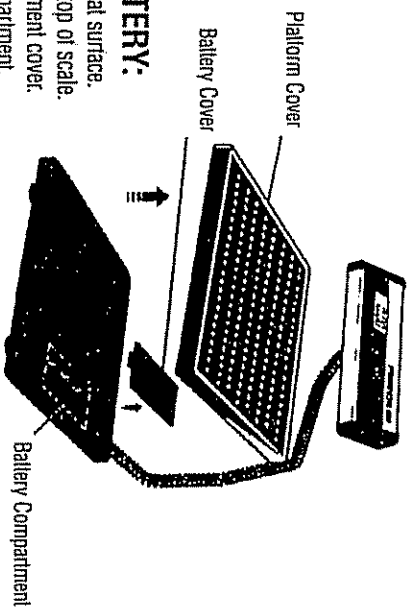

#### TO INSTALL BATTERY:

1. Place unit upright on a flat surface.
2. Lift platform cover from top of scale.
3. Remove battery compartment cover.
4. Insert batteries into compartment.
5. Replace battery compartment cover.
6. Replace platform cover onto scale.

*Note: Your scale will operate on six "AA" 1.5 volt alkaline batteries (not included).*

1. Plug the tip of the AC adapter into the receptacle on back of the scale base housing. The scale may be powered by the Sunbeam model 78803-01 adapter, and can be left plugged in when not in use.
2. Your scale is ready to be used.

**Note:** *Always insert the adapter tip into scale before plugging adapter into electrical outlet. Also, disconnect from outlet before pulling tip of adapter from back of scale.*

### **Customer Service Help Line**

We want to be sure you are completely satisfied with your new purchase. If you have any questions or experience any problems, please call our help line, Sunbeam Consumer Affairs (in the United States), at 1-800-597-5978 between 8:00-5:00 CST - Monday through Friday. In Canada, call 1-800-66-SUNBEAM.

### **FULL ONE YEAR WARRANTY**

Sunbeam-Oster Household Products warrants this product to be free from defects in materials and workmanship for a period of one year from the date of original retail purchase. If the product fails during the warranty period, return it postage-prepaid with a short description of the problem and proof of purchase to one of the following addresses (depending on place of purchase) for repair or replacement at our option. Please do not return this product to the place of purchase; doing so may delay the processing of your claim and the repair of your product. If we cannot repair the defects, you may elect to receive a replacement or refund. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**In the U.S., please send to: Sunbeam Service Station, 160 Commerce Drive,  
P.O. Box 508, Bay Springs, MS 39422.**

**In Canada, please send to: Sunbeam Service Station, 5975 Falbourne St.  
Mississauga, Ontario L5R 3V8**

**In Mexico, please send to: Sunbeam Mexicana S.A. de C.V., via Dr. Gustavo Baz  
No. 180, Tlalhepantla, Edo. de Mexico, C.P. 540940**

This warranty gives you specific legal rights, and you may have other rights which vary from state to state or province to province.

# **SAVE THESE INSTRUCTIONS**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>