

LapCool 5

NOTEBOOK COOLER



Rubber Feet 70 mm FANs Rubber Feet



USB mini-B USB Hub

Package Contents

LapCool 5
USB mini-B Cable
USB 5V Power Cable

Using the LapCool 5

Place the LapCool 5 on a stable, flat surface. Place the rear of notebook on the LapCool 5 and position it so that it sits stably.

Powering the LapCool 5

The LapCool 5 can be powered by either the USB mini-B cable or the USB 5V Power Cable. Connect either cable to the LapCool 5 and then connect the USB-A end to your computer. If the fans do not start spinning, make sure the fan control knob is not in the OFF position.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>