

Xerox DocuColor 2060 NPS/IPS

Master Index

**721P90601
Version 8.0
October 2002**

Xerox Corporation
701 S. Aviation Boulevard
El Segundo, CA 90245

©2002 by Xerox Corporation. All rights reserved.

Copyright protection claimed includes all forms and matters of copyrightable material and information now allowed by statutory or judicial law or hereinafter granted, including without limitation, material generated from the software programs which are displayed on the screen, such as icons, screen displays, looks, etc.

Printed in the United States of America.

Publication number: 721P90600

Xerox® and all Xerox products mentioned in this publication are trademarks of Xerox Corporation. Products and trademarks of other companies are also acknowledged.

Changes are periodically made to this document. Changes, technical inaccuracies, and typographic errors will be corrected in subsequent editions.

Symbols

#copies operator PD 1-9
%%DocumentMedia command, example PJ 4-3
%%XEROX-XIPP command PJ 6-7
%stdin PD 1-31
() (parentheses)
 DOS xcat DC 6-15
 SunOS/Solaris formmerge DC 6-19
.pfb extension PD 1-6
/var/db/forms directory DC 4-3, DC 6-3
/var/spool/data directory PJ 6-3
 File of Files default DC 6-5
 generating PostScript files DC 6-3
 storing files DC C-1
 Xcat jobs default DC 6-12

Numerics

10Mb/sec twisted pair standard IP 4-15
4 mm cartridge tape drive IP 5-6
4mm cartridge tape drive, cleaning RM 6-2

A

access level
 Cancel Documents command PJ 3-4
 Change Document Attributes PJ 1-29
 Change Virtual Printer PJ 2-3–PJ 2-4
 Copy Virtual Printer PJ 2-4
 Create Virtual Printer PJ 2-2
 Delete Virtual Printer PJ 2-4
 EndOfRun command PJ 5-4–PJ 5-7
 EndOfSet command PJ 5-6–PJ 5-7
 Forward Document command PJ 3-5
 Hold Documents PJ 3-6
 List Documents PJ 3-7–PJ 3-10
 List Virtual Printers PJ 2-5
 Promote Document PJ 3-11
 Release Documents PJ 3-11
 Set Virtual Printer Flags PJ 2-8
 Show Document Attributes PJ 1-30

 Show Scheduling Policy PJ 3-12
 Staple command PJ 5-7
 Start PJ 3-13
 Start Virtual Printer PJ 2-7
 Stop Virtual Printer PJ 2-7
access requirements, delivery IP 6-15
access to printer, remotely
 telnet SJ 8-1
 Web-based SJ 8-1
access, remote CM 1-4
Account information, Quick Print for
 Windows NT 4.0 SJ 6-24
account information, specifying PJ 1-8
accounting file versions CM 9-2
accounting files
 copying to floppy CM 9-8
 deleting CM 9-9
 maintaining CM 9-1–CM 9-9
 purging CM 9-7
accounting information, purging IP 4-10
Active List PJ 3-1
adding Job Ticket PJ 4-2
additional metrics entry PD 1-3
address data, merging DC G-1
addressing, relative PJ 6-1
administrative mode DC 7-9
administrator
 accessing commands CM 1-2
 changing password CM 1-3
Adobe
 Type Manager PD 1-6
Adobe fonts IP 2-6, SO 2-7
Adobe Photoshop DC 9-1
AdobePS drivers
 selecting SJ 4-6
 submitting print jobs SJ 4-22–SJ 4-38
Advanced Customer Training (ACT) IP B-3,
 RM 8-2
Advanced Function Image and Graphics
 (AFIG) SO 5-1

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

Advanced Function Presentation, *see* AFP
 advanced PostScript options
 Windows NT 4.0 (transparent)
 compressing graphics SJ 5-72
 overview SJ 5-71–SJ 5-76
 printing error information SJ 5-73
 printing graphics in color SJ 5-73
 printing mirror images SJ 5-73
 printing negative images SJ 5-73
 printing with printer fonts SJ 5-74
 specifying format SJ 5-76
 specifying halftoning options SJ 5-75
 specifying printing resolution SJ 5-75
 using substitution table SJ 5-74
 using TrueType fonts SJ 5-76

AFP

 data flows IS D-1–IS D-7
 definition IS 2-1
 overview IS 1-1
 page origins, modifying IS 4-19
 print flows IS D-1–IS D-7
 resources IS 2-1–IS 2-3
 summary IS 2-1
 AFP environment IP 1-8, SO 5-5
 AFP Font Collection IS 2-3, IS 4-2
 AFPDS IS 2-5
 AIX print flow IS D-6
 APA (all-points addressability) IS 2-1
 Apollo workstation SJ 2-15
 AppleTalk PD 1-17
 network IP 4-10
 zone name, specifying IP 4-10
 application examples DC 1-2
 applications, customer responsibility IP 4-4
 appName subdirectory PJ 6-2
 architecture IS 3-4–IS 3-7
 arc-to-bezier conversion PD 1-33
 AS/400
 AFP data flow IS D-5
 connections IS 2-11–IS 2-12
 AS/400, parameters IP F-21–IP F-28
 ASCII greeting message CM 12-4
 ASCII input PD 1-22
 ASCIIFontName attribute PJ 1-8
 ASCIIFontSize attribute PJ 1-8
 asynchronous communications PD 1-18

attributes
 changing PJ 1-29
 description PJ 1-1
 methods for selecting PJ 1-3
 precedence PJ 1-6
 priority in setting PJ 1-6
 setting PJ 1-2
 showing PJ 1-30
 understanding PJ 1-1
 virtual printer PJ 2-1
 attributes, overview SJ 1-2
 .attrs file CM 2-3
 automatic highlight color rendering PJ 1-15
 AutoTabShift attribute PJ 1-8
 award certificate example DC 4-1, DC 4-7

B

back panel, Sun workstations IP 2-3, SO 2-4
 background form DC 7-2
 Background Forms
 creating DC 5-1–DC 5-4
 cycling DC 5-5–DC 5-8
 background menu CM 3-3
 background printing, Macintosh
 AdobePS driver SJ 4-26
 LaserWriter driver version 7.x SJ 4-2
 LaserWriter version 8.x SJ 4-14
 backing up
 site files CM 2-9
 virtual printers list CM 2-11
 Xerox files CM 2-10
 backing up forms DC F-1
 Backup Site Files command CM 2-9
 Backup Virtual Printers List command CM 2-11
 Backup Xerox Files command CM 2-10
 banking applications, example IS 1-7
 banner page
 job message
 Quick Print for Windows NT 4.0 SJ 6-13, SJ 6-14
 Windows NT 4.0 (transparent) SJ 5-61
 sender name
 Macintosh drivers (transparent) SJ 4-9

*CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide*

banner pages CM 4-1
 banner pages, Novell PJ 3-18
 bar compression CM 2-3, CM 2-5, CM 2-6
 BARR/AFP connection IS 2-12
 BARR/RJE connection IS 2-9
 BCOCA IS 2-4
 BCOCA (Bar code Object Content Architecture) IP 1-8, SO 5-5
 benefit book example DC 1-3
 bezier PD 1-33
 billing
 meter
 displaying CM 8-8
 printing, data CM 8-11
 report, printing CM 8-11
 billing meter
 reading IP 8-6
 reporting IP 8-6
 billing meters, reporting RM 8-3
 binary input PD 1-22
 bindery entry PJ 3-16
 bitmaps PD 1-4, PD 1-14
 BitsPerSample TIFF tag DC E-1
 black areas, mapping PJ 1-16
 black pixels
 GetTiff macro DC 8-5
 Blank Back Sides PJ 1-9
 blank pages
 XCat DC 6-10
 XMerge DC 6-5, DC 6-7, DC 6-14, DC 6-18
 booting the controller CM 3-2
 borders, invisible frame DC 4-7
 bounding box padding PD 1-32
 break page PD 1-18
 broadcast message
 utility command CM 2-1
 Broadcast Message to All Execs command CM 2-1
 Broadcast message to all execs command CM 2-1
 browser based access CM 1-5
 BuildProfile option SJ 2-21
 bus and tag
 channel connection IP 1-5, SO 5-2
 ByteCode files

files created DC A-2
 proprietary compression DC 5-2
 Tiff/G4 format compared DC 3-2

C

cables
 IBM channel IP 7-3
 locations IP 7-2
 calculating throughput DC D-2
 calibration
 evaluating output CM 15-2
 when to perform CM 15-1
 Cancel Documents command PJ 3-4
 canceling commands CM 1-2
 capabilities IS 3-8–IS 3-10
 cartridge tape
 drive IP 5-6
 CCITT
 printing speed PD 1-34–PD 1-35
 specifications PD 1-34
 CD-ROM
 ejecting CM 2-2
 installing CM 10-2
 installing software updates from CM 2-7
 listing files on CM 2-8
 printing files from CM 2-8
 central processing unit IP 2-3, SO 2-3
 Change Administrator Password command CM 1-3
 Change Document Attributes command PJ 1-29
 Change Imager Parameters command CM 5-30
 Change PCL Imager Parameters command CM 5-34
 Change Virtual Printer command PJ 2-3–PJ 2-4
 Change virtual printer command
 CycleForms attribute DC 5-5–DC 5-8
 disposition attribute
 examples DC 3-7, DC 4-3
 Mask, Form formats DC 3-3–DC 3-6
 syntax DC 7-3
 Tiff/G4, ByteCode formats DC 3-2
 values DC 3-1
 overview DC 7-2

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM -Guide to Performing Routine
Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- changing imager parameters CM 5-30
- changing password
 - administrator CM 1-3
 - operator CM 1-3
- changing PCL imager parameters CM 5-34
- channel
 - switching online and offline PJ 3-15
- channel attachments IP E-1–IP E-3, IP E-6, IP E-7
- channel cable connector box IP 1-7, SO 5-4
- channel extender IS 2-9
- channel interface board IP 1-7, SO 5-4
- channel switching PJ 3-15
- channel-attached
 - cables IP 7-3
 - systems IP 1-7, SO 5-4
- chapters, concatenating
 - DOS xcat DC 6-15
 - Sun OS/Solaris DC 6-19
 - Windows XCat DC 6-7–DC 6-12
- character
 - codes PD 1-6
 - illegal PD 1-18–PD 1-20
- characteristics, image PD 1-15
- charpath operator PD 1-21
- checklists
 - installation planning IP 4-5–IP 4-7
 - network installation IP 4-8–IP 4-14
 - preinstallation IP 4-8
- Chinese fonts PD 1-3
- cleaning
 - 4mm cartridge tape drive RM 6-2
 - touch screen RM 6-2
- clearance space IP 6-10–IP 6-14
- client workstations
 - communicating with network SJ 1-5–SJ 1-6
 - overview SJ 1-1
- CMYK default PJ 1-23
- code examples, PostScript PJ 6-4
- collating, PCL Copy command PD 2-6
- color
 - adding IS 5-1
 - conditional processing IS 5-5
 - data driven IS 1-1, IS 5-3
 - evaluating output CM 15-2
 - full IS 5-2
 - lines and borders IS 5-8
 - mapping IS 5-3
 - overlays IS 5-7
 - shading IS 5-9
 - when to calibrate CM 15-1
- color billing RM 8-5
- color calibration SJ 2-21, TG 5-1
 - procedure CM 15-2
 - work flow CM 15-5
- color driver, Macintosh LaserWriter driver 8.x SJ 4-40
- Color images IS 2-5
- color in forms DC 3-1, DC 3-6, DC 5-1
- color limitations IS C-1
- color models, using IS 5-3
- color pages in copiers SO 1-7
- colors
 - presentation, matching PJ 1-14
 - preset PJ 1-14
 - rendering, automatic PJ 1-15
 - replacing PJ 1-16
 - saturation
 - converting PJ 1-14
 - specifying PJ 1-14
- colorTables highlight color rendering PJ 1-14
- colorToHighlight rendering PJ 1-14
- command
 - job status SO 4-6
 - lpq SO 4-6
 - lpr SO 4-6
- command sets IS 3-5
- commands
 - administrator, accessing CM 1-2
 - Cancel Documents PJ 3-4
 - canceled CM 1-2
 - Change Virtual Printer PJ 2-3–PJ 2-4
 - Configure utility CM 2-19–CM 2-29
 - control-D PD 1-17–PD 1-22
 - control-Z PD 1-18–PD 1-22
 - Copy Virtual Printer PJ 2-4
 - copying
 - accounting data to floppy CM 9-8
 - documents to floppy CM 2-3, CM 2-4, CM 2-5
 - logs CM 9-11

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM -Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- Create Virtual Printer PJ 2-2
- Delete Virtual Printer PJ 2-4
- deleting
 - accounting files CM 9-7, CM 9-9
 - fonts CM 10-4
 - forms CM 11-4
 - logs CM 9-12
- Duplex, PCL PD 2-9
- End, combining PJ 5-6
- EndOfSet PJ 5-3–PJ 5-4
- entering CM 1-1
- font installation IP 2-6, SO 2-7
- Forward Document PJ 3-5
- Hold Documents PJ 3-6
- installing
 - fonts from disk CM 10-2
 - PCL fonts from disk CM 10-3
- job submission IP 4-10
- LCDS PD 3-2
- licensing CM 2-15–CM 2-18
- List Documents PJ 3-7–PJ 3-10
- List Virtual Printers PJ 2-5
- listing CM 1-1
 - CDROM fonts CM 10-6
 - floppy fonts CM 10-6
 - fonts CM 10-6
 - logs CM 9-10
- listjob SJ 3-13
- listq SJ 3-16
- lpc (UNIX) SJ 3-35
- lpd IP 4-10
- lpq (DOS) SJ 3-31
- lpq (UNIX) SJ 3-32
- lpr SJ 3-19, IP 4-10
- lprm SJ 3-33
- merge, inserting DC G-7
- operator, accessing CM 1-2
- PCL Copy PD 2-8–PD 2-9
- PCL Paper Source PD 2-12
- PJL PD 2-6
- print SJ 3-2
- printing
 - font list CM 10-8
 - font sample CM 10-8
 - form samples CM 11-3
 - PCL font sample CM 10-9
- Promote Document PJ 3-11
- Release Document PJ 3-11
- Set IPDS Virtual Printer PJ 2-10
- Set Scheduling Policy PJ 3-12
- sets, installing PD 3-4
- shortcuts CM 1-1
- Show Document Attributes PJ 1-30
- Show IPDS Virtual Printer PJ 2-10
- Show Scheduling Policy PJ 3-13
- Start PJ 3-13
- Start Virtual Printer PJ 2-7
- status IP 4-10
- Stop PJ 3-14
- telnet CM 1-4
- terminating CM 1-2
- UNIX command tool IP 4-10
- utility CM 2-1–CM 2-13
- communications, asynchronous PD 1-18
- Compatibility fonts IS 4-11
- complete media match PJ 4-6
- completed sheets PJ 1-21
- components
 - hardware IP 5-6
 - printer IP 3-1, SO 3-1
 - printer controller IP 2-1, SO 2-2
 - printing system IP 1-9
- components, curveto PD 1-33
- compression
 - bar CM 2-3, CM 2-5, CM 2-6
 - ByteCode files DC 3-3, DC 5-2
 - quality PD 1-34
 - TIFF images PJ 6-4
- compression tag, TIFF DC 8-5, DC E-1
- concatenating chapters
 - DOS XCat DC 6-15
 - Sun OS/Solaris DC 6-19
 - Windows XCat DC 6-7–DC 6-12
- conditional processing, adding color IS 5-5
- conditioning paper IP A-6–IP A-7, SO A-6–SO A-7
- conditions, print queue PJ 3-1
- configuration
 - choosing remote printer or print server CM 4-1–CM 4-3
 - differences between RPRINTER and PSERVER CM 4-1–CM 4-3

- configuration reports
 - printing CM 2-23
- configuration, network IP 1-11
- Configure utility
 - changeable parameters CM 2-20
 - options CM 2-23
- Configure utility commands CM 2-19–CM 2-29
- configuring
 - NFS daemon CM 13-2
- configuring as PSERVER CM 4-4
- configuring as RPRINTER CM 4-5
- connections
 - AS/400 IS 2-11–IS 2-13
 - mainframes IS 2-7–IS 2-11
 - RS/6000 IS 2-13–IS 2-15
- connections, Ethernet SO 4-4–SO 4-5
- connectivity
 - multiple SO 4-7
- consistency
 - font PD 1-16
- consumable supplies tables IP A-9, SO A-9
- continuous form, converting IS 4-18
- control-D command PD 1-17–PD 1-22
- controller
 - powering on CM 3-2
- control-Z command PD 1-18–PD 1-22
- conversion
 - arc-to-bezier PD 1-33
 - LCDS commands PD 3-2
- conversion programs IS B-1–IS B-4
- coordinates
 - device PD 1-1–PD 1-2, PD 1-32
 - user PD 1-1–PD 1-2, PD 1-39–PD 1-41
- Copies attribute PJ 5-11
- copies, multiple PJ 5-11
- Copy Accounting to Floppy command CM 9-8
- copy count
 - Macintosh drivers
 - AdobePS SJ 4-24
 - LaserWriter 7.x SJ 4-9
 - LaserWriter 8.x SJ 4-13
 - Quick Print for Windows NT 4.0 SJ 6-11
 - Windows NT 4.0 (transparent) SJ 5-57
- Copy Documents to DOS Floppy command
 - CM 2-4
- Copy Documents to Floppy command CM 2-3
- Copy Documents to Tape command CM 2-4, CM 2-5
- Copy IOT Fault Data to Disk command CM 2-18
- Copy Logs to Floppy command CM 9-11
- copy output PJ 1-9
- Copy Virtual Printer command PJ 2-4
- CopyCount attribute PJ 1-9
- copying
 - documents to diskette CM 2-3
 - documents to DOS diskette CM 2-4
 - Documents to Floppy command CM 2-3, CM 2-4, CM 2-5
 - logs CM 9-11
 - print-job data CM 9-8
 - to tape CM 2-4, CM 2-5
- copying to diskette CM 2-3
- copypage PD 1-16
- core interchange fonts IS 4-11
- correcting color calibration CM 15-9
- Correcting stacking problems TG 7-1
- corruption problems
 - database CM 2-28
 - software CM 2-26
- cover page
 - AdobePS driver SJ 4-27
 - Macintosh, LaserWriter 7.x driver SJ 4-10
 - Macintosh, LaserWriter 8.x driver SJ 4-15
- Create Input Profile command CM 6-2
- Create Output Profile command CM 6-2
- Create Profiles command CM 6-2
- Create Virtual Printer command DC 7-1, PJ 2-2
- creating print queue, Novell PJ 3-16
- creating profiles CM 6-2
- current transformation matrix (CTM) PD 1-1
- curves PD 1-25, PD 1-33
- curveto components PD 1-33
- custom fonts IS 4-12
- customer responsibilities IP 1-12, IP 4-3–IP 4-5, IP 8-2–IP 8-3

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

customized forms DC 1-2
 customized forms, forms
 customized DC 1-3
 cut sheet, converting IS 4-18
 Cycle Exceptions DC 5-8
 cycle up time DC D-2, DC D-7
 CycleExceptions attribute PJ 1-9
 CycleForm value DC 5-5
 CycleForms attribute DC 5-5–DC 5-8, PJ 1-9

D

data
 adding color IS 5-3
 flushing PD 1-21
 placement operators PD 3-2–PD 3-3
 streams IS 2-5
 towers IS 2-6
 transfer protocol PJ 3-5
 Data 1 fonts IS 4-12
 data base mode PD 3-2
 See also line mode
 data cables IP 7-1
 data flows
 AS/400 IS D-5
 mainframe
 MVS AFP IS D-1
 MVS for remote printer IS D-2
 VM IS D-3
 VSE IS D-4
 PS/2 IS D-5
 RS/6000 IS D-6
 data streams IP 1-8, SO 5-1, SO 5-5
 database
 corruption CM 2-28
 date, setting CM 7-1
 DCF/Script IS 5-8
 Decomp DC 1-3
 Decomp Service Install Options screen DC 2-1
 decomposed forms
 directory location DC 4-3, DC 6-3
 file formats DC A-1–DC A-4
 decomposing Background Forms DC 5-3
 decomposing time
 reducing PJ 5-13
 Decomposition Service

application examples DC 1-2–DC 1-4
 benefits DC 1-1, DC 1-6
 examples DC G-1–DC G-7
 installing
 DOS DC 2-2
 overview DC 2-1
 Windows DC 2-1
 overview DC 1-1
 Decomposition Service Tools, installing SJ 2-6, SJ 2-15
 default
 font PD 1-3
 user coordinate system PD 1-39–PD 1-41
 default color rendering PJ 1-20
 default Grayscale PJ 1-23
 default router IP 4-9
 default settings
 resetting job ticket
 Quick Print for Windows NT 4.0 SJ 6-8
 Windows NT 4.0 (transparent SJ 5-55
 defaults
 Jog command PJ 5-10
 media specifications PJ 4-2
 media values PJ 4-2
 media, setting CM 5-2
 options, listing CM 5-28
 scheduling policy PJ 3-12
 defining forms, Novell PJ 2-9
 definitions, nonstandard PD 1-11–PD 1-12
 definitions, see sample printer definitions
 Delete Accounting command CM 9-9
 Delete Color Calibration command CM 15-10, CM 15-11
 Delete Fonts command CM 10-4
 Delete Form command DC 7-4
 Delete Forms command CM 11-4
 Delete Logs command CM 9-12
 delete output profile command CM 6-3
 Delete Virtual Printer command DC 7-4, PJ 2-4
 deleting
 accounting files CM 9-9
 fonts CM 10-4
 forms CM 11-4, DC 7-4

*CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM -Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide*

logs CM 9-12
 virtual printers DC 7-4
 Deleting Input|Output profiles CM 6-3
 delimiters, EOF PD 1-18–PD 1-20
 delimiting PostScript jobs PD 1-17–PD 1-18
 delivery instructions, print job SJ 6-14
 delivery requirements IP 6-15
 demo mode, VIPP PD 3-3
 developer IP A-8, SO A-8
 Device Control command set IS 3-6
 device-dependent operators TG 5-2
 devices
 coordinates PD 1-1–PD 1-2, PD 1-32
 dependent features PD 1-29–PD 1-33
 DFA group number PJ 1-10
 DFA maximum set size PJ 1-10
 DFA support IS 1-2, IS 5-14
 diagnostic data, gathering CM 2-18
 Diagnostic Lockout feature IS 6-2
 diagnostic tools IP 1-13, SO 1-4
 dialog box options, customizing Quick Print
 for Windows NT 4.0 SJ 6-25
 dictionary operators
 Execution PD 1-11
 IdleTime PD 1-10
 Printer PD 1-10–PD 1-11
 Server PD 1-9
 Status PD 1-10
 System PD 1-8
 User PD 1-8–PD 1-9
 Direct Bus and Tag IS 2-7
 directories
 forms location
 decomposed forms DC 4-3, DC 6-3
 non-default DC B-1
 installation
 Windows DC 2-2
 Xcat jobs default DC 6-12
 directory
 queue PJ 3-17
 required, DocuPrint file system PJ 6-3
 Disable Modem command CM 2-31
 Disable Remote Shell command CM 2-32
 disk space, installation requirements SJ 2-1
 diskette
 copying documents to CM 2-3

 copying documents to DOS CM 2-4
 ejecting CM 2-2
 formatting CM 2-2
 installing licenses from CM 2-17
 installing software updates from CM 2-7
 listing files on CM 2-3
 printing documents from CM 2-9
 diskettes IP A-8, SO A-8
 contents, listing CM 2-3
 ejecting CM 2-2
 formatting CM 2-2
 Display Billing Meters command CM 8-8
 display monitor IP 5-6
 displaying
 date CM 7-1
 logs CM 9-10
 PDL code CM 2-6
 time CM 7-1
 displaying PDL code CM 2-6
 displaying virtual printers PJ 2-5
 disposition attributes
 examples DC 3-7, DC 4-3, DC 7-3
 Mask, Form formats DC 3-3–DC 3-6
 Tiff/G4, ByteCode formats DC 3-2
 values DC 3-1, DC 7-3
 dividing print jobs PJ 5-1
 document attributes PJ 1-1
 Document Feeding and Finishing
 Architecture, *see* DFA
 Document Structure Editor (DSE) DC 9-1
 Document Structuring Conventions (DSC)
 PJ 4-2
 document types IS 1-8
 documentation IP C-1
 AS/400 IP F-28
 IBM channel connections IP 7-3
 MVS references IP F-20
 DocumentID attribute PJ 1-11
 DocumentName attribute PJ 1-11
 documents
 attributes PJ 1-1
 changing PJ 1-29
 list PJ 1-2
 see also attributes
 showing PJ 1-30
 cancelling PJ 3-3

- changing full color to highlight color SJ 6-19
 - Decomp Service examples DC 1-1–DC 1-4
 - forwarding PJ 3-3
 - holding PJ 3-3
 - ID number, determining PJ 1-29
 - ineligible PJ 3-8
 - listing PJ 3-7–PJ 3-10
 - master DC 4-1
 - promoting PJ 3-3, PJ 3-11
 - releasing PJ 3-3
 - scheduling PJ 3-12
 - stapling
 - long PJ 5-9
 - order PJ 5-10
 - status, determining PJ 3-7–PJ 3-10
 - DocuPrint NPS Setup window
 - Quick Print for Windows NT 4.0
 - accessing SJ 6-9
 - image shift SJ 6-12
 - imaging and job setup options SJ 6-10–SJ 6-13
 - job notes SJ 6-13–SJ 6-14
 - paper stocks SJ 6-15–SJ 6-17
 - Windows NT 4.0 (transparent)
 - advanced PostScript options SJ 5-71–SJ 5-76
 - copy count SJ 5-57
 - finishing features SJ 5-59
 - highlight color SJ 5-67–SJ 5-71
 - image shift SJ 5-58
 - job notes SJ 5-59–SJ 5-61
 - overview SJ 5-56
 - page orientation SJ 5-57
 - page range SJ 5-57
 - paper stocks SJ 5-61–SJ 5-64
 - paper weight SJ 5-58
 - preferences SJ 5-76
 - programming, Main Stock SJ 5-58
 - sides to image SJ 5-57
 - special pages SJ 5-65–SJ 5-67
 - DOS
 - formmrg tool DC 6-13
 - getg4 tool DC 9-1–DC 9-2
 - installing Decomp Services DC 2-2
 - reprint tool DC 6-13
 - xcat tool DC 6-15
 - xmerge tool DC 6-14
 - DOS client software
 - installing SJ 2-2
 - removing SJ 2-6
 - double byte fonts PD 1-3
 - drilled paper
 - Quick Print for Windows NT 4.0 SJ 6-16
 - Windows NT 4.0 SJ 5-64
 - drivers, PCL 5c PD 2-17
 - drivers, Xerox SJ 1-1
 - drives
 - cartridge tape IP 5-6
 - disk IP 2-3, SO 2-4
 - DVD-ROM IP 2-3, SO 2-4
 - dry ink cartridge, replacing RM 4-2
 - dry ink distribution PD 1-14
 - DSE (Document Structure Editor) DC 9-1
 - dual feeder IP 6-18
 - Dual Mode SO 5-1
 - Dump Accounting command CM 9-7
 - duplex
 - color SO 1-7
 - Duplex commands, PCL PD 2-9
 - duplex printing PJ 5-11, PD 2-8
 - specifying
 - Windows NT 4.0 (transparent) SJ 5-57
 - duplexing with MultiSet PJ 5-11
 - DVD-ROM drive IP 2-3, SO 2-4
 - dynamic media, setting PJ 4-5–PJ 4-6
 - dynamic plex changes PJ 7-2
- E**
- EarlyStaple option PJ 5-9
 - EBCDIC PD 3-2
 - edge deletion SJ 4-40
 - eexec operator PD 1-8
 - Eject CD-ROM command CM 2-2
 - Eject CDROM command CM 2-2
 - Eject Floppy command CM 2-2
 - ejecting a CD-ROM CM 2-2
 - ejecting a diskette CM 2-2
 - electrical
 - specifications IP 5-1–IP 5-3, IP 6-1

- elevator tray fault DC D-7
 - ElideHeader attribute PJ 1-11
 - Elixir products IS 4-3–IS 4-5
 - embedding images PD 1-34, PD 1-43
 - Enable Modem command CM 2-30
 - Enable Remote Shell command CM 2-31
 - enabling
 - lpr security option CM 12-5
 - EndOfRun command PJ 5-4–PJ 5-7
 - EndOfSet command PJ 5-3–PJ 5-4, PJ 5-6–PJ 5-7
 - engine
 - write-black PD 1-15–PD 1-16, PD 1-26
 - write-white PD 1-15–PD 1-16
 - enhancement, resolution PD 1-12–PD 1-16
 - entering commands CM 1-1
 - Enterprise Printing Option IS 3-3
 - entry, bindery PJ 3-16
 - environmental requirements IP 6-5
 - EOBs, printing IS 1-8
 - EOF delimiters PD 1-17–PD 1-20
 - eofill TG 5-4
 - erasepage operator PJ 5-2
 - error
 - limitcheck PD 1-31
 - undefined command PD 1-18
 - error condition, restarting printer TG 7-4
 - error handling SJ 4-18, SJ 4-30
 - error messages, Client Software installation TG 2-2
 - error page DC 6-5, DC 6-14, DC 6-18
 - ESCON connection IS 2-8
 - estimates, rough performance DC D-2
 - Ethernet
 - AS/400 IS 2-12
 - configurations using IP 1-5, SO 5-2
 - connections SO 4-4–SO 4-5
 - description SO 4-6
 - framing type IP 4-12
 - mainframes IS 2-10
 - requirements IP 4-15
 - RS/6000 IS 2-14
 - Examine Document command CM 2-6
 - Example DC 7-6
 - Excel, Microsoft DC 4-4
 - exception pages
 - Quick Print for Windows NT 4.0 SJ 6-21–SJ 6-22
 - ExceptionPages attribute PJ 1-11
 - Execution Dictionary operators PD 1-11
 - exitserver operator PD 1-20, PD 1-22
 - explanation of benefits, *see* EOBs
 - extensions, proprietary PostScript PD 1-16
- F**
- fast scan direction PD 1-35, PD 1-38
 - fax resolution PD 1-34
 - FDOCA IS 2-4
 - features, device dependent PD 1-29–PD 1-33
 - feedback, job status SO 4-5–SO 4-6
 - feeder tray attributes, setting CM 5-4
 - feeder trays IP 3-14, SO 3-15
 - feeder, establishing PJ 4-1
 - feeding options IS 5-14
 - specifications IS A-3
 - fields, form references DC 8-7–DC 8-9
 - file
 - name, static form DC G-7
 - PPD PD 1-28–PD 1-29
 - file formats, decomposed forms DC A-1–DC A-4
 - file locks
 - setting maximum CM 4-6
 - File of Files
 - different directories DC B-1
 - multiple print jobs (Windows XCat) DC 6-11
 - XCat DC 4-9–DC 4-11
 - XMerge DC 4-11–DC 4-13, DC 6-5
 - file operator PJ 6-1, PD 1-31
 - file server IP D-13
 - file server support CM 4-6
 - filename extensions
 - .pg DC A-1
 - .tif DC A-1
 - filenames, File of Files
 - carriage returns DC 4-13
 - space character DC 4-11, DC 4-13
 - files
 - accounting, maintaining CM 9-1–CM 9-9
 - backing up CM 2-9

- backing up Xerox CM 2-10
- NPS log, maintaining CM 9-9
- referenced content
 - cleanup PJ 6-7
 - placement PJ 6-2
 - shared resource PJ 6-2
 - single-use PJ 6-2
- referencing PJ 6-3
- restoring backed-up site CM 2-10
- restoring Xerox CM 2-11
- specifying for printing
 - Macintosh LaserWriter driver 8.x SJ 4-10, SJ 4-22
- TIFF PJ 6-4
- transferring PJ 6-3
- fill TG 5-4
- fill operator PD 1-24–PD 1-26
- FillOrder TIFF tag DC E-1
- filter operator PD 1-21, PD 1-34
- finishing device maximum PJ 1-10
- finishing features
 - Windows NT 4.0 (transparent) SJ 5-59
- finishing options IS 5-14
 - specifications IS A-4–IS A-5
- FirstComeFirstServed attribute PJ 3-13
- Fixed Document Reference file DC 6-15
- FlipSide attribute PJ 1-12
- floating-point operators PD 1-1
- floor leveling IP 6-15
- floppy
 - see diskette
- floppy, see diskette
- flushfile TG 5-2
- flushing input data PD 1-21
- FOCA IS 2-4
- font installation commands IP 2-6, SO 2-7
- Font Thicken parameter CM 5-31
- fonts IS 2-3
 - Adobe Type 1 IP 2-6, SO 2-7
 - cache size PD 1-33
 - Chinese PD 1-3
 - consistency PD 1-16
 - converting IS 4-13
 - creating PD 1-6
 - default PD 1-3
 - deleting CM 10-4
 - double byte PD 1-3
 - downloading IS 4-10
 - error messages PD 1-22
 - HP PCL CM 10-3
 - HP PCL 5 PD 2-5
 - IBM AFP collection IS 4-10–IS 4-12
 - installing CM 10-2
 - Intellifont PD 2-4
 - list, printing CM 10-8
 - listing
 - all available CM 10-7
 - disk CM 10-6
 - printer controller CM 10-6
 - loading PD 1-4, PD 1-6
 - MICR PD 1-3, PD 2-4, IP 2-7, SO 2-8
 - name, specifying PJ 1-2
 - PCL IP 2-6, IP 2-7, SO 2-7, SO 2-8
 - printer-resident IS 4-10
 - sample, printing CM 10-8
 - selecting PD 2-4
 - size, specifying PJ 1-2
 - Type 0 PD 1-3
 - installing PD 1-3
 - Type 1
 - installing PD 1-2
 - using PD 1-5–PD 1-8
 - Type 3 PD 1-3
 - installing PD 1-3
 - user-defined PD 1-4
 - using IS 4-10–IS 4-13
 - Xerox CMC-7 IS 5-12
 - Xerox E13B IS 5-12
- fonts, MICR PD 2-4
- fonts, PCL
 - sample, printing CM 10-9
- form DC 6-2
- form definitions, (FormDefs) IS 2-2
- form files
 - ByteCode format DC A-1–DC A-2
 - TIFFg4 format DC A-1–DC A-2
- Form format DC 3-3–DC 3-6
- form references
 - applications DC 8-7–DC 8-9
 - GetTiff macro DC 8-4–DC 8-7
 - overview DC 8-1
 - run exec macro DC 8-1–DC 8-3

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- form. DC 6-2
- Format Floppy command CM 2-2
- formatting
 - diskette CM 2-2
- FormMerge dialog DC 6-4
- formmerge tool
 - overview DC 1-4
 - SunOS/Solaris DC 6-17
 - Windows DC 6-3–DC 6-5
- formmrg tool (DOS) DC 6-13
- forms DC 1-2, DC 6-2
 - background PJ 1-8, PJ 1-9
 - backing up, restoring DC F-1
 - color DC 3-1, DC 3-6, DC 5-1
 - creating DC 4-2
 - Decomp Service benefits DC 1-1
 - definition DC 3-6
 - deleting CM 11-4, DC 7-4
 - directory location
 - non-default DC B-1
 - listing DC 5-3, DC 7-4
 - managing CM 11-1
 - Mask, Form structures DC 3-3–DC 3-4
 - naming, Novell PJ 2-9
 - overlying variable data
 - DOS formmrg tool DC 6-13
 - SunOS/Solaris formmerge DC 6-17
 - printing controller-resident
 - Windows FormMerge DC 6-3–DC 6-5
 - Windows Reprint DC 6-2–DC 6-3
 - printing samples CM 11-3
 - printing single DC 7-6
 - static DC G-6
 - virtual printer setup DC 3-7
- formulas
 - Decomp PPM DC D-2
 - PPM DC D-2
- Forward Document command PJ 3-5
- Forwarded From attribute PJ 1-12
- Forwarded To attribute PJ 1-12
- FrameMaker software, image quality SJ 4-40
- frames
 - static data DC 4-7
 - variable data DC 4-3
- framing type, Ethernet IP 4-12
- FTP login DC 4-12, DC C-1
- FTP PC/TCP SJ 2-2
- full color printing IS 5-2
- full color vs. highlight color PD 1-17
- fuser
 - agent IP A-7, SO A-7
 - shield IP A-7, SO A-7
- fuser oil, adding RM 3-1

- G**
- GDDM (Graphical Data Display Manager) IS 4-2
- Generate PostScript dialog DC 6-12
- getg4 tool
 - DOS DC 9-1–DC 9-2
 - overview DC 1-4
 - SunOS/Solaris DC 9-3
- GetTiff capabilities PJ 6-5
- GetTiff limitations PJ 6-7
- GetTiff macro DC 1-5, DC 8-4–DC 8-7
- GetTiff macro, referencing files PJ 6-4–PJ 6-5
- gfi directories, removing CM 13-3
- GMC PrintNet IS 4-8
- GOCA (Graphics Object Content Architecture) IS 2-4
- GOCA (Graphics Object Content Architecture) IP 1-8, SO 5-5
- GOCA image resolution IS 4-16
- Golden Print Job masters SJ 2-5
- graphic borders SJ 4-40
- graphical user interface CM 1-1
- graphics
 - bitmap PD 1-5, PD 1-14
 - raster PD 2-3
 - vector PD 2-2
- graphics, Windows NT 4.0
 - compressing SJ 5-72
 - printing in color SJ 5-73
- gray shading
 - setcolorscreen TG 5-2–TG 5-3
 - setscreen TG 5-2–TG 5-3
 - settransfer function TG 5-3
 - transfer function TG 5-3
- gray values, rendering PD 1-27
- Group4Options TIFF tag DC E-1

H

halftoning PD 1-12, PD 1-27
 Halt System command CM 3-3
 handwritten test masters PD 1-1–PD 1-2
 hard disk, Xerox Client Software requirements TG 2-2
 hardware IS 3-1
 components IP 5-6
 network options SO 4-4–SO 4-5
 printer controller, installing IP 8-3
 specifications IP 5-6, IP 6-18
 supported IP 1-11–IP 1-12
 HCF IP 3-14, SO 3-15
 HCS IP 3-16, SO 3-17
 problems TG 6-4
 HCS, see High Capacity Stacker
 HCSS IP 3-18, SO 3-18
 problems TG 6-4
 HCSS, see High Capacity Stacker Stapler
 HCU (Host Control Unit) IS 3-1
 header pages, suppressing PJ 1-11
 heat dissipation IP 6-18
 Held List PJ 3-3
 Hewlett-Packard
 PCL fonts IP 2-6, IP 2-7, SO 2-7, SO 2-8
 High Capacity Stacker (HCS) RM 2-2
 unloading RM 2-3
 High Capacity Stacker Stapler (HCSS) RM 2-6, RM 2-7
 high-capacity feeder IP 3-14, SO 3-15
 high-capacity stacker IP 3-16, SO 3-17
 problems TG 6-4
 high-capacity stacker stapler IP 3-18, SO 3-18
 problems TG 6-4
 High-Capacity Stitcher/Stacker PJ 5-8
 highlight color DC A-2, IP 6-18
 mapping PJ 1-16
 matching options
 Macintosh AdobePS driver SJ 4-28
 Macintosh LaserWriter 8.x driver SJ 4-16
 mismatch with loaded ink color
 Quick Print for Windows NT 4.0 SJ 6-19, SJ 6-20
 results compared SJ 3-37

Windows NT 4.0 (transparent) SJ 5-69
 process, Macintosh LaserWriter driver 8.x SJ 4-39
 Quick Print for Windows NT 4.0
 changing full color to highlight color SJ 6-19
 overview SJ 6-18–SJ 6-20
 selecting color mismatch action SJ 6-19, SJ 6-20
 specifying color SJ 6-19
 Windows NT 4.0 (transparent)
 overview SJ 5-67–SJ 5-71
 selecting SJ 5-68
 selecting color mismatch action SJ 5-69
 selecting extraction color SJ 5-69
 selecting rendering algorithm SJ 5-70
 highlight color mismatch attribute PJ 1-14
 highlight color vs. full color PD 1-17
 HighlightColor attribute PJ 1-13
 HighlightColorRendering attribute PJ 1-13, PJ 1-14–PJ 1-15
 Hold attribute PJ 1-15
 Hold Documents command PJ 3-6
 Hold Reason attribute PJ 1-15
 holding print jobs PJ 3-3
 HorizontalImageShift attribute PJ 1-15
 HorizontalImageShiftForBack attribute PJ 1-15
 host ID
 showing CM 2-13
 hostname attribute PJ 3-6
 HP PCL 5 fonts PD 2-5
 HP PCL fonts, installing CM 10-3

I

IBM AFP Font Collection IS 4-2
 IBM AFP Group 3 page printer SO 5-1
 IBM AFP Windows Printer Driver IS 4-3
 IBM Group 3 compatible printers IS 1-1
 IBM Open Blueprint architecture IS 2-4
 IBM, outline fonts SO 5-7
 ICC profile SJ 2-21
 ID number, document PJ 1-30
 IdleTime Dictionary operators PD 1-10

*CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide*

- IEEE
 - 802.3 IP 1-10, IP 4-15
 - 802.5 IP 1-10
- IEEE 802.3 IP 4-15
- illegal characters, ignoring PD 1-18–PD 1-20
- image
 - area SO 1-6
 - characteristics PD 1-15
 - coordinates, transforming PD 1-40
 - data
 - order, optimizing PD 1-35–PD 1-40
 - embedding PD 1-34, PD 1-43
 - orientation PD 1-36
 - overlying DC G-4
 - post-enhancement PD 1-14
 - pre-enhancement PD 1-14
 - quality SO 1-6
 - quality, maintaining PD 1-12–PD 1-16, PD 2-2–PD 2-3
 - rendering PD 1-37
 - rotating PD 1-36–PD 1-37
 - scaling PD 1-40–PD 1-43
 - scanning PD 1-35–PD 1-40
- image editors DC 9-1
- Image Lift printing DC G-3
- image shift
 - horizontal
 - Quick Print for Windows NT 4.0 SJ 6-12
 - Windows NT 4.0 (transparent) SJ 5-58
 - vertical
 - Quick Print for Windows NT 4.0 SJ 6-12
 - Windows NT 4.0 (transparent) SJ 5-58
- image shifting, mixed plex PJ 7-8
- ImageLength TIFF tag DC E-1
- imager parameters CM 5-29–CM 5-32
- imager parameters, PCL CM 5-33–CM 5-35
- images IS 4-16
 - ensuring proper printing
 - GetTiff macro DC 8-4
 - run exec macro DC 8-2
 - overlayed variable data DC 5-1–DC 5-4, DC 7-2
 - positioning (Quick Print for Windows NT 4.0) SJ 6-12
 - print quality IS 4-16
 - PSF conversion IS 4-16
 - quality considerations
 - Macintosh LaserWriter driver 8.x SJ 4-40
 - quality, maintaining PJ 1-14
 - TIFF PJ 6-4
- images, GOCA IS 4-16
- ImageWidth TIFF tag DC E-1
- implementation limits PD 1-30
- ineligible documents PJ 3-10
- Infoprint Manager
 - AIX IP E-5, IP F-30
 - Windows 2000 IP E-4, IP F-29
 - Windows NT IP E-4, IP F-29
- initgraphics operator PJ 5-2
- ink, replacing RM 4-2
- inks RM 4-1
- input group migration, IPS PJ 2-1, PJ 2-11
- input profiles CM 6-1–CM 6-6
- input resolution IS 4-13
- input trays
 - preparing IS 6-1
 - specifications IS A-3
- insertion order PJ 3-1
- Install Feature License command CM 2-16
- Install FlexLicense from Floppy command CM 2-17
- Install Fonts from CDROM command CM 10-2
- Install Fonts from Floppy command CM 10-2
- Install License command (obsolete) CM 2-18
- Install PCL Fonts from Floppy command CM 10-3
- Install Remote Update command CM 2-7
- Install Update from CDROM command CM 2-7
- Install Update from Floppy command CM 2-7
- installation
 - hardware IP 8-1
 - network checklist IP 4-8–IP 4-14
 - planning checklist IP 4-5–IP 4-7
 - preparation IP 4-1–IP 4-14
 - process IP 8-1–IP 8-2

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

timeframes IP 4-5
 Xerox responsibilities IP 4-2

installing
 command sets PD 3-4
 Decomposition Service Tools SJ 2-6, SJ 2-15
 fonts CM 10-2
 NFS CM 13-1
 PostScript drivers
 Windows NT 4.0 (transparent) SJ 5-41–SJ 5-47
 PPD file SJ 2-5, SJ 2-15
 system, Windows NT 4.0 SJ 5-41–SJ 5-47
 Type 0 fonts PD 1-3
 Type 1 fonts PD 1-2
 Type 3 fonts PD 1-3
 verifying
 PC-DOS SJ 2-5
 UNIX SJ 2-12
 XDOD/DigiPath CM 13-2
 Xerox Client Software SJ 2-10

installing Decomposition Service
 DOS DC 2-2
 overview DC 2-1
 Windows DC 2-1

insurance
 examples IS 1-3

insurance quote customized DC 1-4

Intellifont fonts PD 2-4

Internet Printing Protocol (IPP) SJ 7-1

interrupting print jobs PJ 3-14

invisible strokes, setlinewidth TG 5-4

IOCA (Image Object Content Architecture)
 IS 2-5, IP 1-8, SO 5-5

IOCA colors SO 5-7

IOCA Replicate and Trim SO 5-5

IOT (input/output terminal) IS 3-2

IP
 address IP 4-8
 broadcast address IP 4-9
 Netmask IP 4-9

IPDS PJ 7-1, IS 2-5, IS 6-2
 channel switching PJ 3-15
 simplex PJ 8-3

IPDS data streams IP 1-8, SO 5-1, SO 5-5

IPDS input resolution PJ 1-16

IPDS printing
 starting PJ 3-15
 stopping PJ 3-15

IPDS virtual printer PJ 2-1

IPDSContinuousEmulation IS 4-18

IPP IP 1-4, SO 1-4

IPP, see Internet Printing Protocol

IPS input group migration PJ 2-1, PJ 2-11

IPX internal network number, specifying IP 4-12

ISIS products IS 4-6–IS 4-7

ISOLatin1Encoding operator PD 1-8

J

JES2
 FSS statement parameters IP F-3–IP F-5
 Initialization Dataset commands example IP F-5
 printer definitions IP E-1

JES3
 configuring IP F-5
 FSS statement parameters IP F-6–IP F-8
 initialization dataset commands example IP F-8

job
 status
 command SO 4-6
 feedback SO 4-5–SO 4-6
 submission
 methods SO 4-2–SO 4-5

job description ticket (JDT) PD 3-2

job IDs
 resetting CM 2-12

Job Message sheet PJ 1-11

job message, banner page
 Quick Print for Windows NT 4.0 SJ 6-13–SJ 6-15
 Windows NT 4.0 (transparent) SJ 5-61

job names, Quick Print for Windows NT 4.0 SJ 6-24

job notes
 Quick Print for Windows NT 4.0 SJ 6-13–SJ 6-14

- Windows NT 4.0 (transparent) SJ 5-59–SJ 5-61
- Job Pool Manager (JPM) PJ 3-2
- job processing
 - stopping and starting CM 3-5
- job sizes PJ 3-1
- job status
 - determining, platforms compared SJ 1-7
 - methods SJ 1-6
 - telnet connections SJ 1-6
- job tickets
 - Macintosh, AdobePS driver SJ 4-34
 - Quick Print for Windows NT 4.0
 - generic SJ 6-24
 - job note summary information SJ 6-14
 - loading SJ 6-4–SJ 6-5
 - resetting to defaults SJ 6-8
 - saving SJ 6-6
 - Windows NT 4.0 (transparent)
 - opening SJ 5-51–SJ 5-52
 - resetting SJ 5-55–SJ 5-56
 - saving SJ 5-53–SJ 5-54
- jobs
 - arrival PJ 3-2
 - canceling PJ 3-3
 - constructing PJ 5-1
 - copying PJ 5-11
 - delivery order PJ 5-8
 - dividing PJ 5-1
 - forwarding PJ 3-3
 - holding PJ 3-3
 - insertion order PJ 3-1
 - interrupting PJ 3-14
 - listing PJ 3-3
 - Macintosh PJ 4-2
 - managing large PJ 5-8
 - Novell PJ 3-16
 - parameters, PSERVER PJ 3-17
 - print order PJ 3-1
 - prioritizing PJ 3-1
 - priority PJ 3-1
 - promoting PJ 3-11
 - queues
 - remote printer PJ 3-18
 - releasing PJ 3-3, PJ 3-11–PJ 3-12

- reordering PJ 3-2
- scheduling PJ 3-2
- sets
 - delineating PJ 5-2
 - stapling PJ 5-10
 - stapling runs PJ 5-10
 - stapling, multiple PJ 5-3
- starting PJ 3-13
- stopping PJ 3-14
- submitting PJ 4-2
- ticket PJ 4-2
- Jog command PJ 5-10–PJ 5-11
- JPEG compressed IOCA IS 2-5

K

- keyboard IP 2-5, IP 5-6, SO 2-6
- key-value pairs
 - availability, determining PJ 5-2
 - device dictionary PJ 5-2
 - multiple calls PJ 5-2
- Kill command CM 3-6

L

- labels
 - selecting IP A-3, SO A-3
- LAN
 - Ethernet SO 4-6
 - Token Ring SO 4-6
- LAN network number, specifying IP 4-12
- LaserWriter PD 1-22
- LaserWriter drivers
 - version 7.x
 - selecting SJ 4-2
 - submitting print jobs SJ 4-9–SJ 4-10
 - version 8.x
 - selecting SJ 4-3
 - submitting print jobs SJ 4-10–SJ 4-40
- LCDS commands, converting PD 3-2
- Level 2 operators PD 1-21
- leveling, floor IP 6-15
- license, software IP 8-4, SO 1-5
- license, VIPP PD 3-3
- licenses
 - diagnostic CM 2-15
 - displaying remaining days CM 2-17
 - installing feature CM 2-16

- installing from diskette CM 2-17
 - showing status CM 2-17
- licenses, software CM 2-15
- licensing commands CM 2-15–CM 2-18
- limit
 - path PD 1-31
 - storage object size PD 1-33
 - virtual memory PD 1-31
- limitations, color IS C-1
- limitations, stock SO 1-7
- limitcheck error PD 1-31
- line mode PD 3-2
- line mode extension PD 3-3–PD 3-4
- lines and borders, adding color IS 5-8
- lines, zero-width PD 1-24
- List CDROM Fonts command CM 10-6
- List Color Calibrations command CM 15-10
- List Documents command DC D-9, PJ 3-7–PJ 3-10
- List Executives command CM 1-4, CM 8-8
- List Files on CDROM command CM 2-8
- List Floppy Fonts command CM 10-6
- List Fonts command CM 10-6, CM 10-7
- List Forms command CM 11-2
 - performance measurements DC D-7
 - syntax and example DC 7-4
 - verifying forms DC 5-3
- List Logs command CM 9-10
- List Options command CM 5-28
- List Sample Documents command CM 8-5
- List Virtual Printers PJ 2-5
- List Virtual Printers command DC 7-5, PJ 2-5
- List Volumes command CM 8-2
- listing
 - default options CM 5-28
 - files on CD ROM CM 2-8
 - files on diskette CM 2-3
 - files on tape CM 2-5
 - fonts
 - disk CM 10-8
 - printer controller CM 10-8
 - forms DC 5-3, DC 7-4
 - logs CM 9-10
 - virtual printers DC 7-5
- listing commands CM 1-1
- listjob command SJ 1-7, SJ 3-13

- listq command SJ 1-7, SJ 3-16
- lists, job
 - Active PJ 3-7
 - Held PJ 3-7
- loaded font command set IS 3-7
- loading fonts PD 1-4, PD 1-6
- loading job tickets
 - Quick Print for Windows NT 4.0 SJ 6-4–SJ 6-5
- logging in CM 4-2, CM 4-6
- logos PD 1-5
- logs
 - copying to floppy CM 9-11
 - deleting CM 9-12
 - displaying CM 9-10
 - listing CM 9-10
 - printing CM 9-13
- lpc command (UNIX) SJ 3-35
- lpd commands IP 4-10
- lpq command SO 4-6
 - determining job status SJ 1-7
 - DOS SJ 3-31
 - UNIX SJ 3-32
- lpr
 - print utilities, enabling SJ 2-17–SJ 2-19
 - security option, enabling CM 12-5
 - Solaris SJ 2-18
 - SunOS SJ 2-17
- lpr command SJ 3-19, SO 4-6
 - color mismatch results SJ 3-37
 - overview SJ 1-4
 - syntax DC 5-1
 - virtual printer assignment DC 5-5
- lpr commands IP 4-10
- lprm command SJ 3-33
- lpstat command SJ 1-6
- LU 6.2 connection IS 2-12

M

- Macintosh client software SJ 2-7
- Macintosh drivers
 - highlight color printing SJ 4-39
 - image quality SJ 4-40
 - monitoring and controlling printing SJ 4-39
 - selecting AdobePS driver SJ 4-6–SJ 4-9

- selecting LaserWriter driver
 - version 7.x SJ 4-1–SJ 4-2
 - version 8.x SJ 4-3–SJ 4-6
- submitting print jobs
 - AdobePS driver SJ 4-22–SJ 4-38
 - Laser 7.x driver SJ 4-9–SJ 4-10
 - LaserWriter 8.x driver SJ 4-10–SJ 4-40
- Macintosh jobs, submitting PJ 4-2
- Macintosh platforms DC 1-5
- macro, GetTiff PJ 6-4–PJ 6-5
- macros
 - GetTiff DC 1-5, DC 8-4–DC 8-7
 - listed DC 1-5
 - run exec DC 1-5, DC 8-1–DC 8-3
- magnetic ink character recognition see MICR
- Mail Merge Helper dialog DC 4-4–DC 4-6
- mainframe
 - AFP data flows IS D-1–IS D-5
 - connections IS 2-7–IS 2-11
- maintaining pictorial quality PJ 1-14
- maintenance
 - ongoing IP 8-5
 - routine IP 8-5
- maintenance services RM 8-1–RM 8-6
- man pages SJ 2-12–SJ 2-13
- managing
 - long jobs PJ 5-8
 - print queue, Novell Netware PJ 3-16
 - virtual printers PJ 2-1
- Managing IPDS jobs PJ 8-1
- manufacturing application, example IS 1-6
- map color
 - highlight color algorithm SJ 4-16, SJ 4-28
 - print and lpr command color match/mismatch results SJ 3-37
- mapping user coordinates PD 1-1–PD 1-2
- mapping, color
 - automatic rendering PJ 1-15
 - highlight PJ 1-14–PJ 1-15
- MarkForm facility IS 5-10
- Mask format DC 3-3–DC 3-6
- master documents DC 4-1
- master, PostScript PD 1-27
- masters, multiple PJ 6-1
- matching media PJ 4-1, PJ 4-5
- math operators PD 1-1
- MAU (modular access unit) IS 2-11
- maximum
 - retry number PJ 1-21
- Maximum File Locks
 - setting CM 4-6
- measuring performance DC 7-7, DC D-1–DC D-11
- media
 - criteria PJ 4-1
 - default values PJ 4-1
 - match
 - complete PJ 4-6
 - none PJ 4-6
 - partial PJ 4-6
 - tolerance PJ 4-6
 - specifications
 - dynamic PJ 4-5–PJ 4-6
 - static PJ 4-1
 - submitter PJ 4-2
 - static, determining PJ 4-2
 - virtual printer PJ 4-3
 - weight PJ 4-5
- Media attribute PJ 1-17
- media list PJ 4-3
- media selection precedence, PCL PD 2-13
- media setting default CM 5-7
- media, determining specifications DC 6-8, DC 7-8
- medical center example DC 5-2–DC 5-4
- memory, virtual PD 1-20
- merge
 - commands, inserting DC G-7
 - document, printing DC G-8
- Merge Pages dialog DC 6-7
- merging files DC 4-8
- messages
 - Client Software installation TG 2-2
 - font substitution error PD 1-22
 - stdout PD 1-22
 - telnet CM 1-4
- meter, billing
 - reading IP 8-6
 - reporting IP 8-6
- MICR IS 5-12

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- applications IS 1-2, IS 5-11–IS 5-14
- fonts
 - clearing from memory CM 14-6
 - deleting CM 14-6
- fonts for NPS CM 14-5
- resources IS 5-13
- security CM 14-6, IS 5-14
- tasks for NPS CM 14-5
- Xerox Check Performance Guarantee IS 5-11
- Xerox CMC-7 font IS 5-12
- Xerox E13B font IS 5-12
- MICR font floppy PD 1-3, PD 2-4
- MICR fonts IP 2-7, SO 2-8
- MICRMode attribute PJ 1-17
- Microsoft Word
 - data merge example DC G-5
 - inserting merge commands DC G-7
- migrating applications IS 4-1
- mixed plex PJ 7-1
 - counting pages PJ 7-4
 - dynamic plex changes PJ 7-2
 - image shifting PJ 7-8
 - introduction PJ 7-1
 - other attributes PJ 7-9
 - side selection for PCL PJ 7-7
 - static plex changes PJ 7-3
- mixed plex, simulated PostScript PD 1-21
- mixing plex types PJ 5-12
- MO:DCA-P (Mixed Object Document Content Architecture for Presentation) IP 1-8, SO 5-5
- MODCA data streams IS 2-5
- modem
 - connecting CM 2-30
 - disabling CM 2-31
 - enable TG 1-2
 - enabling CM 2-29
 - switch settings CM 2-30
- monitor IP 5-6
- monitoring printing, LaserWriter version 8.x SJ 4-39
- Mount CDROM command CM 12-2, CM 12-3
- Mount Floppy command CM 12-3
- mouse IP 2-5, IP 5-6
- multiple
 - copies PJ 5-11
 - jobs, removing reference files PJ 6-8
 - masters PJ 6-1
 - setpagedevice calls PJ 5-1
- multiple master font PD 1-4
- MultiSet
 - copying PJ 5-11
 - duplexing PJ 5-11
 - EarlyStaple option PJ 5-9
 - Jog command PJ 5-10–PJ 5-11
 - minimizing decomposition time PJ 5-13
 - setpagedevice entries PJ 5-2
 - specifying multiple copies PJ 5-11
- MVS
 - channel attachment IP E-1–IP E-3
 - TCP/IP connection IP F-1–IP F-20
- MVS print flow IS D-1
- N**
- names
 - document PJ 1-19
 - referenced content files PJ 6-1–PJ 6-2
 - sender PJ 1-11
 - shared resource files PJ 6-2
 - single-use files PJ 6-2
 - virtual printer PJ 1-19, PJ 2-2
- native mode PD 3-1, PD 3-2
- Netware PJ 3-16
- NetWare servers, Novell, attaching printers
 - Quick Print for Windows NT 4.0 SJ 6-29–SJ 6-35
- network
 - AppleTalk IP 4-10
 - communication
 - overview SO 4-3–SO 4-5
 - protocols SO 4-3–SO 4-5
 - communications SO 4-4–SO 4-5
 - configuration IP 1-11
 - Ethernet IP 1-9
 - installation checklist IP 4-8–IP 4-14
 - multiple connectivity SO 4-7
 - Novell IP 4-11
 - Token Ring IP 1-10, IP 8-1
- network configurations
 - AS/400 IP F-21

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

MVS IP F-2
network interface requirements IP 4-14
networks, communicating SJ 1-5–SJ 1-6
newsletters, mailers, forms, pricing lists DC
1-2
NFS
 configuring CM 13-2
 installing CM 13-1
no media match PJ 4-6
nonstandard definitions PD 1-11–PD 1-12
Not Ready Signals on the IPDS Host PJ 8-4
Notify flag PJ 3-18
Novell
 banner pages PJ 3-18
 data transfer PJ 3-16
 forms PJ 2-9
 jobs, queuing PJ 3-16
 PCONSOLE PJ 3-16
 print server PJ 3-17
 PSEVER PJ 3-17
 remote printer PJ 3-18
 RPRINTER PJ 3-18
Novell implementation, troubleshooting TG
3-3
Novell NetWare
 connectivity requirements IP 4-14
 information IP 4-11
 installation information IP 4-11–IP 4-13
 PCONSOLE IP D-2
 print queues IP D-2, IP D-11, IP D-13
 PSEVER IP 4-11, IP D-3–IP D-5, IP
D-7–IP D-11, IP D-13
 remote printer (RPRINTER) IP 4-12, IP
D-5–IP D-9, IP D-11–IP D-14
 virtual printers IP 4-12, IP D-5, IP D-11,
IP D-13
Novell network CM 4-1
NPS log files, maintaining CM 9-9
number
 EndOfSet command PJ 5-3–PJ 5-4

O

ObjectSize attribute PJ 1-18
OCA colors SO 5-6
OCAs (Object Content Architectures) IS 2-4
offset stacking facility IS 5-10

OffsetPerCopy attribute PJ 1-18
OffsetPerJob attribute PJ 1-18
offsetting sets PJ 5-11
OGL (Overlay Generation Language) IS 4-2
Olympics, 1996
 Background Form use DC 5-1
 Decomp Service use DC 1-2
online and offline
 switching IPDS channel PJ 3-15
OPC (Obtain Printer Characteristics)
 command IS 3-9
opening job tickets
 Windows NT 4.0 (transparent) SJ 5-51–
SJ 5-52
operating systems
 requirements SO 4-4–SO 4-5
operating systems supported IP 1-5, IP
1-11–IP 1-12, SO 5-1
operator
 accessing commands CM 1-2
 changing password CM 1-3
operator training IP 4-3, RM 8-2
operators
 #copies PD 1-9
 charpath PD 1-21
 data placement PD 3-2–PD 3-3
 dictionary
 Execution PD 1-11
 IdleTime PD 1-10
 Printer PD 1-10–PD 1-11
 Server PD 1-9
 Status PD 1-10
 System PD 1-8
 User PD 1-8–PD 1-9
 eexec PD 1-8
 exitserver PD 1-20, PD 1-22
 file PD 1-31
 fill PD 1-24–PD 1-26
 filter PD 1-21, PD 1-34
 floating-point PD 1-1
 ISOLatin1Encoding PD 1-8
 obsolete PD 1-33
 pathforall PD 1-33
 PostScript Level 2 PD 1-21
 rotate PD 1-37, PD 1-41
 scale PD 1-40

*CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM -Guide to Performing Routine
Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide*

SetCacheDevice PD 1-32
 setfileposition PD 1-21
 setflat PD 1-25
 setgray PD 1-28
 setlinewidth PD 1-23, PD 1-24
 setscreen PD 1-32
 stroke PD 1-23–PD 1-24
 operatorseq string PJ 6-3
 optimized scaling PD 1-41
 options
 default, listing CM 5-28
 order
 insertion PJ 3-1
 page PJ 4-4
 print PJ 3-1
 stapling PJ 5-8
 ordering supplies IP A-14–IP A-15, SO
 A-14–SO A-15
 orientation PD 1-32, PD 1-36
 Orientation attribute PJ 1-18
 Orientation TIFF tag DC E-1
 orphan data files, removing CM 12-6
 OS/390, *see* MVS
 OS/400 print flow IS D-5
 outlets, power configurations IP 5-2, IP 6-2
 outline fonts IS 4-12, SO 5-7
 output limit, List Documents command PJ
 3-7
 output pages PJ 1-9
 output profiles CM 6-1–CM 6-6
 output resolution IS 4-13
 output trays
 specifications IS A-4–IS A-5
 OutputBin attribute PJ 1-18, PJ 3-9
 overlay command set IS 3-7
 overlaying
 images DC G-4
 overlaying TIFF images PJ 6-4
 overlays IS 2-3, IS 4-15
 adding color IS 5-7
 adding color shading IS 5-9
 overstrike support SO 5-6
 overview IS 1-1–IS 1-9
 processing IS 3-2

P
 padding, bounding box PD 1-32
 page definitions (PageDefs) IS 2-2
 page definitions, modifying Quick Print for
 Windows NT 4.0 SJ 6-22
 page description language, *see* PDL
 page device dictionary PJ 5-2, PJ 5-8
 page numbers, run exec macro DC 8-2
 page orientation, specifying
 Windows NT 4.0 (transparent) SJ 5-57
 page origins
 modifying for AFP IS 4-19
 page ranges, specifying
 Quick Print for Windows NT 4.0 SJ 6-12
 Windows NT 4.0 (transparent) SJ 5-57
 page segment command set IS 3-7
 page segments IS 2-3, IS 4-15
 Page Size command, PCL PD 2-12
 pagedevice PJ 5-12
 PageOrder attribute PJ 1-18, PJ 4-4
 PageRange attribute PJ 1-19
 pages
 blank
 XCat DC 6-10
 XMerge DC 6-5, DC 6-7, DC 6-14, DC
 6-18
 specifying, cycling method DC 5-5–DC
 5-8
 superimposing multiple
 GetTiff macro DC 8-4, DC 8-5–DC 8-7
 run exec macro DC 8-2
 XMerge caveats DC 6-5, DC 6-7, DC
 6-14, DC 6-18
 pages per minute (PPM) DC D-1
 PagesDone attribute PJ 1-19
 PagesPerCopy attribute PJ 1-19
 paper
 characteristics IP A-3, SO A-3
 conditioning IP A-6–IP A-7, SO A-6–SO
 A-7
 guidelines for loading RM 1-1
 loading tray 4 RM 1-5
 loading trays 1, 2, 3 RM 1-2
 recommended weight, grade IP A-2, SO
 A-2
 size IP A-2, SO A-2

- storing IP A-5, SO A-5
- types TG 4-1
- weight conversion RM 1-9
- weight, specifying PJ 4-5
- paper color
 - Quick Print for Windows NT 4.0 SJ 6-16, SJ 6-17
 - Windows NT 4.0 (transparent) SJ 5-64
- paper size
 - Quick Print for Windows NT 4.0 SJ 6-24
 - Windows NT 4.0 (transparent) SJ 5-63
- paper source
 - Macintosh LaserWriter driver 7.x SJ 4-10
- Paper Source command, implementing PD 2-10
- Paper Source command, PCL PD 2-12
- paper stock
 - specifying
 - DOS xcat DC 6-15
 - Quick Print for Windows NT 4.0 SJ 6-15–SJ 6-17
 - SunOS/Solaris formmerge DC 6-19
 - Windows NT 4.0 (transparent) SJ 5-61–SJ 5-64
 - Windows XCat DC 6-8, DC 6-11
- paper trays RM 1-1
- paper type
 - Quick Print for Windows NT 4.0 SJ 6-16
 - Windows NT 4.0 (transparent) SJ 5-63
- paper weight
 - Quick Print for Windows NT 4.0 SJ 6-16
 - Windows NT 4.0 (transparent) SJ 5-58
- paper, drilled
 - Quick Print for Windows NT 4.0 SJ 6-16
 - Windows NT 4.0 (transparent) SJ 5-64
- Papyrus Document System, *see* ISIS
 - products
- parameters, PSERVER PJ 3-17
- parentheses ()
 - DOS xcat DC 6-15
 - SunOS/Solaris formmerge DC 6-19
- parser, IPDS
 - restarting CM 3-6
- partial media match PJ 4-6
- password
 - changing administrator CM 1-3
 - changing operator CM 1-3
 - password, Superuser IP 4-9
 - passwords
 - creating File of Files DC 4-9–DC 4-11, DC 4-11–DC 4-12
 - FTP default DC 4-12
- path limits PD 1-31
- pathforall operator PD 1-33
- pattern listing, creating File of Files DC 4-11
- PC operating systems, tools supported DC 1-5
- PC-DOS workstations, setting up SJ 2-2–SJ 2-6
- PCL IS 6-2
 - drivers for 5c PD 2-17
- PCL 5
 - coding recommendations PD 2-14
 - resolution PD 2-2–PD 2-3
- PCL 5c
 - coding recommendations PD 2-16
- PCL 5c support PD 2-15
- PCL commands, supported PD 2-6
- PCL Copy command PD 2-8–PD 2-9
- PCL data streams SO 5-1
- PCL fonts IP 2-6, IP 2-7, SO 2-7, SO 2-8
- PCL fonts, installing CM 10-3
- PCL mixed plex side selection PJ 7-7
- PCL Paper Source command PD 2-12
- PCL parameters
 - changing CM 5-36
 - restoring default CM 5-40, CM 5-41
 - setting CM 5-36
- PCL support
 - full color PD 2-1
 - highlight color PD 2-1
 - monochrome PD 2-1
- PCL symbol sets CM 5-38
- PCL tray assignment PD 2-12
- PCONSOLE CM 4-4, PJ 3-16
- PCONSOLE, Novell IP D-2
- PDL SO 4-3
 - displaying code CM 2-6
- PDL code, displaying CM 2-6
- pecifying Colors for IPDS Jobs PJ 8-5
- pel fonts IS 4-12
- perforated paper IP A-4, SO A-4

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- performance
 - factors affecting PJ 9-1
 - improving GetTiff macro DC 8-5
 - measuring DC 7-7, DC D-1–DC D-11, PJ 9-3
- Personality Profile parameters CM 6-3
- Personalized documents DC 1-2, DC 1-3
- personnel, training IP 4-4
- Photometric-Interpretation TIFF tag DC E-1
- Photoshop, Adobe DC 9-1
- pictorial, highlight color rendering PJ 1-14
- pixel doubling IS 4-17
- pixels
 - distribution attributes
 - Tiff/G4, ByteCode compared DC 3-2
 - values DC 3-1
 - GetTiff macro DC 8-4, DC 8-5
 - Mask, Form formats DC 3-3–DC 3-4
- pixels, painting PD 1-23–PD 1-26
- PJL, commands PD 2-6
- placement, referenced files PJ 6-2
- PlanarConfiguration TIFF tag DC E-1
- planning checklist IP 4-5–IP 4-7
- platforms
 - job status capability SJ 1-7
 - job submission requirements SJ 1-5–SJ 1-6
- platforms, tools supported DC 1-5
- plex
 - attribute PJ 1-19
 - IPDS PJ 8-3
- Plex attribute PJ 5-12
- plex, PostScript simulated mixed PD 1-21
- PlexChangesDynamic PJ 7-2
- PlexChangesDynamic attribute PJ 1-19
- ports PD 1-18
- post-enhancement PD 1-14
- PostScript IS 6-2
 - code examples PJ 6-4
 - comment format PD 1-27
 - Document Structuring Convention (DSC) PJ 4-2
 - EOF delimiters PD 1-18–PD 1-20
 - extensions, proprietary PD 1-16
 - fonts
 - listing PD 1-2
 - Type 1 PD 1-2–PD 1-6
 - GetTiff macro PJ 6-4–PJ 6-5
 - jobs, delimiting PD 1-17–PD 1-18
 - level 2 PJ 1-11
 - Level 2 operators PD 1-21
 - master PD 1-27
 - masters, referencing files PJ 6-3
 - Printer Controller operations PD 1-22
 - printer description, see PPD
 - setpagedevice operator PJ 4-2
 - virtual memory PD 1-20, PD 1-31
- PostScript data streams SO 5-1
- PostScript drivers, Microsoft Word DC 4-2
- PostScript files
 - coding form references
 - applications DC 8-7–DC 8-8
 - GetTiff macro DC 8-4–DC 8-7
 - run exec macro DC 8-1–DC 8-3
 - generating
 - DOS formmrg tool DC 6-13
 - DOS reprint tool DC 6-13
 - DOS xcat tool DC 6-15
 - SunOS/Solaris FormMerge DC 6-17
 - Windows FormMerge DC 6-3–DC 6-5
 - Windows Reprint DC 6-2–DC 6-3
 - Windows XCat DC 6-11, DC 6-12
- PostScript fonts IP 2-6, SO 2-7
- PostScript Printer Description file, see PPD file
- PostScript, proprietary extensions TG 5-2
- power
 - requirements IP 5-1–IP 5-3, IP 6-1, IP 6-18
- power outage
 - powering off and on after CM 3-5
- power saver mode DC D-7
- powering off
 - system CM 3-3
- powering off after power failure CM 3-5
- powering on IS 6-1
 - controller CM 3-2
 - system CM 3-1
- PPD
 - files PD 1-28–PD 1-29
 - specifications PD 1-28
- PPD file, installing SJ 2-5, SJ 2-15

PPFA (Page Printer Formatting Aid) IS 4-3
 PPM (pages per minute) DC D-1
 precedence, dynamic media PJ 4-5
 precedence, plex changes PJ 7-4
 predrilled paper IP A-4, SO A-4
 pre-enhancement PD 1-14
 preferences
 Quick Print for Windows NT 4.0
 print SJ 6-23–SJ 6-25
 Windows NT 4.0 (transparent) SJ 5-76
 Pre-installation checklist IP 6-19
 preinstallation checklist IP 4-8
 preprinted paper IP A-3, SO A-3
 presentation highlight color rendering PJ
 1-14
 preset colors PJ 1-14
 print
 engine
 write-black PD 1-15–PD 1-16, PD
 1-26
 write-white PD 1-15–PD 1-16
 resolution, recommended PD 2-2–PD 2-3
 server PJ 3-17
 speed PD 1-34–PD 1-35
 Print Billing Report command CM 8-11
 Print Color Calibration Target command CM
 15-6
 print command SJ 3-1, SJ 3-2
 color mismatch results SJ 3-37
 Print Documents from CDROM command
 CM 2-8
 Print Documents from Floppy command CM
 2-9
 print flows, AFP IS D-1–IS D-7
 Print Font List command CM 10-8
 Print Font Sample command CM 10-8
 Print Form List command CM 11-1
 Print Form Sample command CM 11-3, DC
 D-3
 DOS reprint alternative DC 6-13
 syntax, example DC 7-6
 Windows Reprint alternative DC 6-3
 print job data, copying CM 9-8
 print job submission programs SJ 1-4
 print jobs
 advancing PJ 3-11

arrival PJ 3-2
 canceling PJ 3-3
 cancelling PJ 3-4
 changing job name
 Windows NT 4.0 (transparent) SJ
 5-59
 concatenating chapters DC 6-11
 constructing PJ 5-1
 copying PJ 5-11
 delivery instructions SJ 6-14
 delivery order PJ 5-8
 dividing PJ 5-1
 enabling ineligible DC 7-6
 failures
 DOS formmrg DC 6-13
 DOS reprint DC 6-13
 DOS xcat DC 6-15
 DOS xmerge DC 6-14
 SunOS/Solaris formmerge DC 6-17
 Windows FormMerge DC 6-5
 Windows XCat DC 6-12
 holding PJ 3-3, PJ 3-6
 insertion order PJ 3-1
 interrupting PJ 3-14
 listing PJ 3-7–PJ 3-10
 Novell PJ 3-16
 prioritizing PJ 3-1
 promoting PJ 3-3, PJ 3-11
 queue PJ 3-3
 referenced content PJ 6-1
 releasing PJ 3-3, PJ 3-11
 reordering PJ 3-2
 scheduling PJ 3-12
 starting PJ 3-13
 stopping PJ 3-14
 submitting PJ 4-2, SO 4-2–SO 4-5
 transferring PJ 3-5
 Print Log command CM 9-13
 Print Monitor Application, LaserWriter
 version 8.x SJ 4-39
 Print on demand DC 1-2
 print options
 "Save as File" SJ 4-19, SJ 4-31
 application specific SJ 4-13, SJ 4-25
 background printing SJ 4-14, SJ 4-26
 color matching SJ 4-16, SJ 4-28

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- cover page SJ 4-15, SJ 4-27
- error handling SJ 4-18, SJ 4-30
- general SJ 4-12, SJ 4-24
- layout SJ 4-17, SJ 4-29
- printer specific SJ 4-20, SJ 4-32
- Xerox Job Ticket (Macintosh AdobePS driver) SJ 4-34
- Print Options command CM 5-29
- Print PCLFont Sample command CM 10-9
- print quality TG 5-1
- print queue
 - Quick Print for Windows NT 4.0 SJ 6-25–SJ 6-36
 - Windows NT 4.0 SJ 5-78
- print queues
 - conditions PJ 3-1
 - managing PJ 3-16
 - Novell Netware, managing PJ 3-16
- print queues, Novell IP D-2, IP D-11, IP D-13
- Print Sample Document command CM 8-7
- print server (PSERVER), Novell IP 4-11, IP D-3–IP D-5, IP D-7–IP D-11, IP D-13
- Print Service Facility, *see* PSF
- PRINTDEF command CM 4-6
- PRINTDEF program CM 4-2
- printer
 - attention alarm IP 3-1, SO 3-1
 - components IP 1-9, IP 3-1, SO 3-1
 - configurations IP 3-14, SO 3-15
 - defining IP 8-4
 - installation IP 8-1–IP 8-2
 - maintenance IP 8-5
 - performance
 - AS/400 IP F-28
 - MVS IP F-19
 - pinging
 - AS/400 IP F-25–IP F-27
 - MVS IP F-17–IP F-19
 - power requirements IP 5-6, IP 6-18
 - printer control console IP 3-1, SO 3-1
 - purge tray IP 3-1, SO 3-1
 - sample definitions
 - MVS with channel attachment IP E-1–IP E-3
 - MVS with TCP/IP connection IP F-1–IP F-20
 - VM with channel attachment IP E-6
 - VSE with channel attachment IP E-7
- sample tray IP 3-1, SO 3-1
- printer controller
 - components IP 2-1, SO 2-2
 - placement IP 5-3–IP 5-5
 - results of print command color mismatch SJ 3-37
- Printer Controller operations PD 1-22
- printer diagnostics CM 2-18
- Printer Dictionary operators PD 1-10–PD 1-11
- printer drivers
 - installing and configuring Windows NT 4.0 (transparent) SJ 5-41–SJ 5-47
- printer engine
 - problems TG 6-1
- Printer Job Language, *see* PJL
- PrinterName attribute PJ 1-19
- printers
 - adding Novell NetWare-attached printer to print queue list
 - Quick Print for Windows NT 4.0 SJ 6-29–SJ 6-35
 - adding TCP/IP-attached printer to print queue list
 - Quick Print for Windows NT 4.0 SJ 6-27–SJ 6-28
 - ByteCode compression DC 3-3
 - capabilities IP 1-1, SO 1-1
 - emulation IS 3-9
 - IBM Group 3 compatible IS 1-1
 - models IS 3-3
 - remote PJ 3-17
 - removing from setup, Quick Print for Windows NT 4.0 SJ 6-37
 - restarting TG 7-4
 - selecting
 - Macintosh transparent printing SJ 4-2
 - Quick Print for Windows NT 4.0 SJ 6-2–SJ 6-3
 - setting defaults, Quick Print for Windows NT 4.0 SJ 6-36
 - specifications IS A-5

- virtual PJ 1-6
- printing
 - billing meter data CM 8-11
 - cancelling PJ 3-4
 - controller-resident forms
 - Windows FormMerge DC 6-3–DC 6-5
 - Windows Reprint DC 6-2–DC 6-3
 - Decomp Service benefits DC 1-1
 - duplex PD 2-8
 - environment IS 3-2
 - font list CM 10-8
 - font sample CM 10-8
 - form samples CM 11-3
 - IPDS PJ 3-15
 - merge documents DC G-8
 - options CM 5-11
 - PCL font sample CM 10-9
 - quality, features affecting TG 5-2
 - remote solutions IS 3-10
 - sample documents CM 8-5–CM 8-7
 - showing status CM 8-2
 - single forms DC 7-6
 - starting IPDS PJ 3-15
 - stopping CM 3-3, PJ 3-14
 - stopping IPDS PJ 3-15
 - TIFF tags DC 9-1–DC 9-2
 - using
 - Macintosh (transparent) SJ 4-1–SJ 4-40
 - Windows NT 4.0 (transparent) SJ 5-47, SJ 5-49–SJ 5-50
 - using lpr utilities SJ 3-18
 - using Xerox utilities software SJ 3-1
- printing configuration reports CM 2-23
- printing considerations SO 1-6
- printing documents from diskette CM 2-9
- printing files from CD ROM CM 2-8
- printing IPDS jobs PJ 8-3
- priority in setting attributes PJ 1-6
- problems
 - high-capacity stacker (HCS) TG 6-4
 - high-capacity stacker stapler (HCSS) TG 6-4
 - printer TG 6-1
 - printer engine TG 6-1
 - system TG 7-1
 - tray 4 TG 6-5
- procedures
 - Background Forms, creating DC 5-2–DC 5-4
 - book building DC 6-10, DC 6-12
 - File of Files, creating
 - XCat DC 4-9–DC 4-11
 - XMerge DC 4-11–DC 4-13
 - forms
 - creating DC 4-2
 - printing (Windows Reprint) DC 6-2–DC 6-3
 - gfi directories, removing CM 13-3
 - paper tray 4, loading RM 1-5
 - paper trays 1, 2, 3, loading RM 1-2
 - PostScript files, generating
 - FormMerge (Windows) DC 6-3–DC 6-5
 - XMerge (Windows) DC 6-5–DC 6-7
 - printers, restarting TG 7-4
 - variable data files, creating DC 4-3–DC 4-9
 - Xerox Client Software, installing
 - PC-DOS SJ 2-3–SJ 2-4
 - UNIX workstations SJ 2-10–SJ 2-12
- processor IP 2-3, IP 5-6, SO 2-3
- product operator TG 5-2
- Profile parameters CM 6-3–CM 6-6
- profiles CM 6-1–CM 6-6
 - creating CM 6-2
 - setting CM 6-2
 - showing CM 6-2
- programming, Main Stock
 - Windows NT 4.0 (transparent) SJ 5-58
- Promote Document command PJ 3-11
- protocol
 - data transfer PJ 3-5
 - submission tools PJ 4-3–PJ 4-7
- protocols
 - network communication requirements
 - SO 4-3–SO 4-5
 - translation requirements SO 4-4–SO 4-5
- PS/2
 - AFP data flow IS D-5
- PS2 setting PJ 1-11
- PSERVER PJ 3-17, IP D-3

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- choosing CM 4-1–CM 4-3
- configuring system as CM 4-4
- PSERVER configuration PJ 2-9
- PSF
 - data towers IS 2-6
 - platforms IS 2-6
 - printer definitions IP E-2
 - supported levels, minimum IS 2-7
- PSF compatibility SO 5-1
- PSF for AIX IS 2-14–IS 2-15
- PSF/6000 IP E-5, IP F-30
- PSF/MVS
 - configuring IP F-9
 - PRINTDEV statement example IP F-13
 - PRINTDEV statement parameters IP F-9–IP F-12
- PSF/VSE IP 1-5, SO 5-1
- PT2 Subset SO 5-6
- PTOCA IS 2-5
- PTOCA (Presentation Text Object Content Architecture) IP 1-8, SO 5-5, SO 5-6
- publications IP C-1
- purging accounting information IP 4-10

Q

- QuarkXPress software, image quality SJ 4-40
- queues
 - directory, Novell PJ 3-16
 - job priority PJ 3-2
 - remote printer PJ 3-18
 - starting PJ 3-13
 - stopping PJ 3-14
- Quick Print for Windows NT 4.0
 - accessing Quick Print SJ 6-2–SJ 6-3
 - customizing print queue list SJ 6-25–SJ 6-37
 - job tickets
 - loading SJ 6-4–SJ 6-5
 - resetting to defaults SJ 6-8
 - saving SJ 6-6
 - setting up SJ 6-9–SJ 6-25
 - overview SJ 6-1
 - selecting printer SJ 6-2–SJ 6-3
- QuotaPages attribute PJ 1-20
- QuotaSeconds attribute PJ 1-20

R

- ranges, printing PJ 1-1
- raster graphics PD 2-3
- read access PJ 6-3
- ReadyToPrint attribute PJ 1-20
- rebooting
 - controller CM 3-6
- RecipientName attribute PJ 1-20
- reference mode DC 6-5
- referenced content files
 - associating PJ 6-7
 - naming PJ 6-1
 - placement PJ 6-2
 - removing PJ 6-7–PJ 6-8
 - sharing PJ 6-2
 - single-use PJ 6-2
 - transferring PJ 6-3
- referencing files
 - using GetTiff macro PJ 6-4–PJ 6-5
 - within PostScript masters PJ 6-3
- referencing forms DC G-6
- reinitializing software CM 2-26
- relative addressing PJ 6-1
- Release Document command PJ 3-11
- remote access CM 1-4
 - broadcast message CM 2-1
 - telnet SJ 8-1
 - web based CM 1-5
 - Web-based SJ 8-1
- remote access, using CM 1-4
- remote connections IS 3-10
- remote device
 - enabling CM 2-29
- remote disabling Unix shell CM 2-32
- remote enabling Unix shell CM 2-31
- remote printer (RPRINTER), Novell IP 4-12, IP D-5–IP D-9, IP D-11–IP D-14
- remote printer workstation, Novell PJ 3-18
- remote service TG 1-2
- removing
 - gfi directories CM 13-3
 - orphan data files CM 12-6
- rendering
 - gray PD 1-27
 - image PD 1-37
- reordering print jobs PJ 3-2

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM -Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- reprint tool
 - DOS DC 6-13
 - overview DC 1-4
 - Windows DC 6-2–DC 6-3
 - ReprocessForCopies attribute PJ 1-21
 - required directory, referenced files PJ 6-2
 - requirements
 - see *also* specifications
 - clearance space IP 6-10–IP 6-14
 - delivery access IP 6-15
 - environmental IP 6-5
 - Ethernet IP 4-15
 - network information IP 4-11
 - network interface IP 4-14
 - Novell Netware information IP 4-11
 - operating systems SO 4-4–SO 4-5
 - power IP 5-1–IP 5-3, IP 5-6, IP 6-1, IP 6-18
 - site IP 4-6
 - space IP 5-3, IP 6-10–IP 6-14
 - Token Ring IP 4-15
 - translation protocol SO 4-4–SO 4-5
 - requirements, hard disk TG 2-2
 - requirements, installation DC 2-1
 - Reset Job IDs CM 2-12
 - Reset Job IDs command CM 2-12
 - resetting job tickets
 - Windows NT 4.0 (transparent) SJ 5-55–SJ 5-56
 - resolution PD 1-26, IS 4-13
 - enhancement PD 1-12–PD 1-16
 - fax PD 1-34
 - PCL 5 PD 2-2–PD 2-3
 - Resolution attribute PJ 1-21, PJ 3-10
 - resolution, IPS 7.2 and NPS/IPS IS 4-14
 - ResolutionUnit TIFF tag DC E-1
 - resource towers IS 3-7
 - resourceMatch attribute PJ 3-12
 - resources
 - creating IS B-1–IS B-4
 - MICR IS 5-13
 - storing IS 4-1
 - responsibilities
 - customer IP 1-12, IP 4-3–IP 4-5, IP 8-2–IP 8-3
 - Xerox IP 1-12, IP 4-2, IP 8-2–IP 8-3
 - Restart IPDS Parser command CM 3-6
 - Restart Sequencer DC B-1
 - Restart Sequencer command CM 3-6
 - Restart System command CM 3-6
 - restarting
 - controller CM 3-6
 - IPDS parser CM 3-6
 - restore context, bypassing PD 1-9
 - Restore Default Imager Parameters
 - command CM 5-32
 - Restore Default PCL Imager Parameters
 - command CM 5-35
 - Restore IPDS Input Groups PJ 2-1
 - Restore IPDS Input Groups command PJ 2-11
 - Restore Site Files command CM 2-10
 - Restore Virtual Printers List command CM 2-11
 - Restore Xerox Files command CM 2-11
 - restoring
 - virtual printers list CM 2-11
 - restoring backed-up site files CM 2-10
 - restoring forms DC F-2
 - restoring key-value pairs PJ 5-2
 - restoring Xerox files CM 2-11
 - retry count IP 4-10
 - RGB color space PJ 1-23
 - RGB color, converting PJ 1-14
 - root password IP 4-9
 - rotate operator PD 1-37, PD 1-41
 - rotation, image PD 1-36–PD 1-37
 - rough performance estimates DC D-2
 - router, default IP 4-9
 - RPRINTER PJ 3-18, IP D-7
 - choosing CM 4-1–CM 4-3
 - configuring system as CM 4-5
 - RPrinter problems TG 3-3
 - RS/6000
 - AFP data flow IS D-6
 - connections IS 2-13–IS 2-15
 - RS232 port PD 1-18
 - run exec macro DC 1-5, DC 8-1–DC 8-3, DC 8-6
- S**
- sample documents, printing CM 8-5–CM 8-7

- sample printer definitions
 - MVS with channel attachment IP E-1–IP E-3
 - MVS with TCP/IP connection IP F-1–IP F-20
 - VM with channel attachment IP E-6
 - VSE with channel attachment IP E-7
- SamplesPerPixel TIFF tag DC E-1
- SAP packets TG 3-1
- saturation, color PJ 1-14
- save context, bypassing PD 1-9
- SaveFormBC attribute DC 3-1, DC A-2
- SaveFormG4 attribute DC 3-1, DC A-2
- SaveFormG4 format DC D-7
- SaveMaskBC attribute DC 3-1, DC 7-3
- SaveMaskBC format DC 5-1, PJ 1-10
- SaveMaskG4 format PJ 1-10
- saving job tickets
 - Quick Print for Windows NT 4.0 SJ 6-6
 - Windows NT 4.0 (transparent) SJ 5-53–SJ 5-54
- saving print jobs DC 3-1–DC 3-6
- scale operator PD 1-40
- scaling PD 1-26, PD 1-34, PD 1-40–PD 1-43
- scaling images
 - run exec macro DC 8-2
 - TIFF images DC 8-4
- scanconversion TG 5-4
- scanning
 - conversion PD 1-23, PD 1-25
 - order PD 1-35–PD 1-40
 - rotation PD 1-35–PD 1-40
- scheduling
 - policy
 - setting PJ 3-2, PJ 3-13
 - showing PJ 3-2
 - print jobs PJ 3-12
- Security IS 5-14
- security option, lpr CM 12-5
- Security, MICR CM 14-6
- security, MICR IS 5-14
- Select Jobs dialog DC 6-10–DC 6-11
- Select Paper dialog DC 6-8
- selecting
 - labels IP A-3, SO A-3
 - paper, characteristics IP A-3, SO A-3
 - transparencies IP A-3, SO A-3
- Selecting Media for Feeder Trays PJ 8-2
- sender name
 - unknown
 - Macintosh AdobePS driver SJ 4-22
 - Macintosh LaserWriter 8.x driver SJ 4-10
 - Macintosh LaserWriter driver 7.x SJ 4-9
- SenderName attribute PJ 1-11, PJ 1-21
- sending print data PJ 3-16
- sequencer
 - restarting CM 3-5
- serial port, asynchronous PD 1-18
- Server Dictionary operators PD 1-9
- server override switch, Xerox Client print command TG 2-2
- service
 - Xerox responsibilities IP 4-2
- service call, required information TG 1-1
- service telephone number IP B-1, RM 8-1
- Set Channel Offline command PJ 3-15
- Set Channel Online command PJ 3-15
- Set color calibrations CM 15-1, CM 15-6, CM 15-10, CM 15-11, CM 15-12
- Set Default Color Calibration command CM 15-11
- Set Default Media command CM 5-2
- set input profile command CM 6-2, CM 6-3
- Set IPDS Virtual Printer command PJ 2-10
- Set Option command CM 5-11
- set output profile command CM 6-2
- Set Profiles command CM 6-2, CM 6-3
- Set Scheduling Policy command PJ 3-12
- Set Status Message command CM 2-12
- Set Time command CM 7-1
- Set Tray Purge|No Purge CM 5-8
- Set Tray <n> Tray <m> command CM 5-7
- Set Tray Command RM 1-1
- Set Tray command CM 5-4, CM 5-5, DC 7-6, PJ 4-1, PJ 4-4
- Set Tray Default command CM 5-5
- Set tray from virtual printer media CM 5-8
- Set Virtual Printer Flags command PJ 2-8
- setbscolor TG 5-3
- SetCacheDevice operator PD 1-32

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- setcmykcolor TG 5-3
- setcolorscreen TG 5-2–TG 5-3
- setfileposition operator PD 1-21
- setflat TG 5-4
- setflat operator PD 1-25
- setgray TG 5-3
- setgray operator PD 1-28
- setlinewidth TG 5-4
- setlinewidth operator PD 1-23, PD 1-24
- setpagedevice error
 - DOS xcat DC 6-15
 - SunOS/Solaris formmerge DC 6-19
- setpagedevice operator
 - calls, multiple PJ 5-2
 - caution PJ 5-2
 - command PJ 5-12
 - example PJ 5-4
 - media
 - requests PJ 4-2
 - selection PJ 4-6
 - MultiSet feature PJ 5-2
- setrgbcolor TG 5-3
- setrgbcolor call DC 8-6
- setscreen TG 5-2–TG 5-3
- setscreen operator PD 1-32
- setting
 - default media CM 5-7
 - dynamic media PJ 4-5–PJ 4-6
 - feeder tray attributes CM 5-4
 - imager parameters CM 5-29
 - imager parameters, PCL CM 5-33
 - multiple copies PJ 5-11
 - printer options CM 5-29
 - profiles CM 6-2
 - static media PJ 4-1
- Setting IPDS Options PJ 8-1
- setting stacker groups CM 5-10
- settransfer TG 5-3
- shading
 - adding color IS 5-9
 - limitations IS C-1
 - Macintosh LaserWriter driver 7.x SJ 4-10
- shared resource content files, naming PJ 6-2
- shared space IP 6-11–IP 6-14
- shortcuts, command CM 1-1
- Show Default Color Calibration command
 - CM 15-12
- Show Default Media command CM 5-4
- Show Document Attributes command PJ 1-30
- Show Host ID CM 2-13
- Show Host ID command CM 2-13
- Show Imager Parameters command CM 5-30
- Show IPDS Tracing command CM 2-13
- Show IPDS Virtual Printer command PJ 2-10
- Show License Status command CM 2-15, CM 2-17
- Show Log command CM 9-10, DC 7-7, DC D-1
- Show PCL Imager Parameters command CM 5-33
- Show Profiles command CM 6-1
- Show Scheduling Policy command PJ 3-13
- Show Status command CM 8-2, DC 7-8, DC D-7
- Show Time command CM 7-1
- showpage operator DC 8-2
- shutting down the system CM 3-3
- simplex output PD 2-6
- simplex printing
 - specifying
 - Windows NT 4.0 (transparent) SJ 5-57
- single job, removing referenced files PJ 6-7
- single-use referenced content files PJ 6-2
- site
 - selection, Xerox responsibilities IP 4-2
- Sixth Sense IP 1-13, IP B-2, SO 1-4
- size of job PJ 3-1
- SkipJTPrescan attribute PJ 1-22
- slow scan direction PD 1-35, PD 1-38
- smooth curves TG 5-4
- SNMP IP 1-3, SO 1-3
- socket printing SJ 2-19
- Socket Printing, TCP/IP CM 2-28
- software IS 3-2
 - corruption problems CM 2-26
 - features, IPS SO 5-5
 - licensis CM 2-15
 - network IP 1-11–IP 1-12
 - operating system IP 1-11–IP 1-12

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

- printer controller
 - installing IP 8-1
 - reinitializing CM 2-26
 - supported products IP 1-8, SO 5-5
 - system SO 4-1
- software license SO 1-5
- software prerequisites
 - AS/400 IP F-21
 - MVS IP F-1
- software updates CM 2-7
 - installing from CD-ROM CM 2-7
 - installing from diskette CM 2-7
- Solaris 2.3
 - tools supported DC 1-5
- Solaris clients, lpr SJ 2-18
- Sonoran fonts IS 4-11
- space
 - planning guidelines IP 6-10
 - requirements IP 5-3, IP 6-10–IP 6-14
- space character DC 4-11, DC 4-13
- special
 - processing PJ 1-10
- special pages
 - Windows NT 4.0 (transparent)
 - adding SJ 5-65
 - changing SJ 5-67
 - deleting SJ 5-67
 - overview SJ 5-65–SJ 5-67
- specifications
 - see *also* requirements
 - CCITT PD 1-34
 - electrical IP 5-1–IP 5-3, IP 5-6, IP 6-18
 - environmental IP 5-3
 - PPD PD 1-28
 - printer IP 6-18
 - printer controller IP 5-6
- specifications, printers IS A-5
- speed, printing PD 1-34–PD 1-35
- spooling, checking available space CM 8-2
- stacker tray
 - specifying PJ 1-18
- stackers RM 2-1
- stacking, offset facility IS 5-10
- Staple attribute PJ 1-22
- Staple command
 - syntax PJ 1-18
 - using PJ 5-7–PJ 5-10
- stapling PD 2-7, PD 2-9
- Start command CM 3-5, PJ 3-13
- Start IPDS Printing command PJ 3-15
- Start IPDS Tracing command CM 2-13
- Start Virtual Printer command DC 7-9, PJ 2-7
- starting
 - IPDS printing PJ 3-15
 - system CM 3-1
- starting job processing PJ 3-13
- static data
 - frames DC 4-7
 - variable data compared DC 4-1
- static forms
 - creating DC G-6
 - filename DC G-7
 - referencing DC G-6
 - submitting DC G-6
- static media specification PJ 4-1
- static plex changes PJ 7-3
- Status attribute PJ 1-22
- Status Dictionary operators PD 1-10
- status message
 - setting telnet CM 1-4
- status messages
 - setting CM 2-12
- status, determining PJ 3-7–PJ 3-10
- status, job command SO 4-6
- stdout message PD 1-22
- Stitcher/Stacker PJ 5-8
- stitcher/stacker IP 6-18
- stitching IS 5-10
 - specifying
 - Quick Print for Windows NT 4.0 SJ 6-13
 - Windows NT 4.0 (transparent) SJ 5-59
 - specifying none
 - Windows NT 4.0 (transparent) SJ 5-59
- STM (Sense Type and Model) command IS 3-9
- stock limitations SO 1-7
- Stop command CM 3-5, PJ 3-14
- Stop IPDS Printing command PJ 3-15
- Stop IPDS Tracing command CM 2-14

CM = Guide to Configuring and Managing the System DC = Decomposition Service and Tools Guide IP = Installation Planning Guide
 IS = IPDS Solutions Guide PD = Guide to Using PDL PJ = Guide to Managing Print Jobs RM = Guide to Performing Routine
 Maintenance SJ = Guide to Submitting Jobs from the Client SO = System Overview Guide TG = Troubleshooting Guide

Stop Queuing command CM 4-4
 Stop Virtual Printer command DC 7-9, PJ 2-7
 stopping
 system CM 3-1
 Stopping and starting IPDS printing PJ 3-15
 stopping and starting job processing CM 3-5
 stopping the system
 using background menu CM 3-3
 using Halt System command CM 3-3
 stopping virtual printers DC 7-9
 storage object size limits PD 1-33
 StripOffsets TIFF tag DC E-1
 stroke TG 5-4
 stroke operator PD 1-23–PD 1-24
 subdirectory, appName PJ 6-2
 SubmissionDate attribute PJ 1-22
 SubmissionProtocol attribute PJ 1-22
 Submitter media specification PJ 4-2
 submitting print jobs SO 4-2–SO 4-5
 Macintosh drivers (transparent) SJ 4-1–
 SJ 4-40
 methods SJ 1-4
 workstation reference SJ 1-5–SJ 1-6
 subscript support SO 5-6
 Sun PC-NFS V5.1 SJ 2-2
 Sun SPARCstation, requirements IS 3-1
 Sun workstations IP 5-4
 SunOS clients, lpr SJ 2-17
 SunOS/Solaris
 formmerge tool DC 6-17
 getg4 tool DC 9-3
 tools supported DC 1-5
 xcat tool DC 6-19
 superscript support SO 5-6
 Superuser password IP 4-9
 supplies
 checklist IP A-16, SO A-16
 consumable supplies tables IP A-9, SO
 A-9
 developer IP A-8, SO A-8
 diskettes IP A-8, SO A-8
 fuser
 agent IP A-7, SO A-7
 shield IP A-7, SO A-7
 paper IP A-1–IP A-5, SO A-1–SO A-5
 tapes IP A-8, SO A-8

supplies table IP A-9, SO A-9
 support services IP A-14–IP A-15, IP B-1,
 RM 8-1–RM 8-6, SO A-14–SO A-15
 suppressing header pages PJ 1-11
 symbol sets, PCL CM 5-38
 system components IP 1-9
 System Dictionary operators PD 1-8
 System overview IP 1-1, SO 1-1
 system problems TG 7-1
 system status, checking CM 8-1–CM 8-8
 System V UNIX clients, lpr SJ 2-17
 Systems Application Architecture (SAA) IS
 2-4

T

tab stock, Quick Print for Windows NT 4.0 SJ
 6-16
 tables, color
 ColorTables PJ 1-14
 tape
 copying documents to CM 2-4, CM 2-5
 listing files on CM 2-5
 ordering IP A-8, SO A-8
 tape drive IP 5-6
 TCP/IP PJ 3-5, IP 8-2
 defining IP F-1
 Ethernet interface IP 1-5, SO 5-2
 MVS
 configuring IP F-13
 Profile dataset IP F-14–IP F-16
 Socket Printing CM 2-28
 TCP/IP servers
 Quick Print for Windows NT 4.0 SJ 6-27
 TCP/IP socket printing SJ 2-19
 TCP/IP, see Ethernet; Token Ring
 technical manual example DC 1-2
 telephone line, modem CM 2-30
 telephone numbers
 Xerox Parts and Product Support Center
 IP A-14, SO A-14
 Xerox Supply Center IP A-14, SO A-14
 telnet SJ 8-1
 broadcast message, sending CM 1-4
 greeting message CM 1-4
 listing clients CM 1-4
 logging on and off CM 1-4

- messages CM 1-4
 - using CM 1-4
- telnet connections, determining job status SJ 1-6
- Telnet greeting message CM 12-4
- terminating commands CM 1-2
- test masters, handwritten PD 1-1–PD 1-2
- The DC 6-8
- Thicken attribute PJ 1-22
- TIFF file format DC E-1
- TIFF files, reading PJ 6-4
- TIFF tags
 - mandatory DC E-1
 - printing
 - getg4 tool (DOS) DC 9-1–DC 9-2
 - getg4 tool (SunOS/Solaris) DC 9-3
- TIFF utilities
 - getg4 (DOS) DC 9-1–DC 9-2
 - overview DC 9-1
- Tiff/G4 files
 - ByteCode files compared DC 3-2
 - processing, GetTiff macro DC 8-4–DC 8-7
- TIFF/G4 format DC 8-6
- TiffEdit tool
 - Macintosh platform DC 1-5
 - Tiff/G4 files DC 3-2
- time requirements, planning installation IP 4-5
- time, setting CM 7-1
- tinted paper IP A-3, SO A-3
- Token Ring IP 1-5, IP 1-10, IP 4-15, SO 5-2
 - AS/400 IS 2-13
 - mainframes IS 2-11
- Token Ring LAN SO 4-6
- tokens, defining PD 1-19–PD 1-20
- tolerance, media matching PJ 4-6
- toner cartridge, replacing RM 4-2
- tools
 - listed DC 1-4
- touch screen, cleaning RM 6-2
- Trace command CM 2-13
- trace facility SO 5-6
- trace file
 - viewing CM 2-13
- tracing, IPDS CM 2-13
 - showing CM 2-13
 - starting CM 2-13
- tracing, IPDSstopping CM 2-14
- training IP B-3
 - customer responsibility IP 4-4
 - operators IP 4-3, IP 8-2
 - Xerox responsibilities IP 4-2
- training, operators RM 8-2
- transfer TG 5-3
- transfer functions TG 5-3
- transferring software updates CM 2-7
- transforming user coordinates PD 1-40
- translation requirements, protocol SO 4-4–SO 4-5
- transmission rate IP 1-5, SO 5-2
- transparencies, selecting IP A-3, SO A-3
- transport, bypass PJ 1-18
- tray 4
 - problems TG 6-5
- tray assignment, PCL PD 2-12
- tray assignments PD 2-13
- Tray definition, PCL PD 2-12
- tray switching, automatic SO 1-7
- trays
 - capacities
 - HCF IP 3-15, SO 3-16
 - determining loaded media DC 6-8
 - selecting PJ 4-1
 - Set Tray command DC 7-6
 - specifying PJ 1-18
 - number DC 6-10
- trays, see input trays; output trays
- troubleshooting
 - Novell implementation TG 3-3
 - Xerox Client Software installation TG 2-1–TG 2-2
- tumble duplex printing PJ 5-11
 - specifying
 - Windows NT 4.0 (transparent) SJ 5-57
- Type 0 fonts PD 1-3
 - installing PD 1-3
- Type 1 fonts
 - creating PD 1-6
 - installing PD 1-2
 - loading PD 1-4, PD 1-6

using PD 1-5–PD 1-8
 Type 3 fonts PD 1-3
 installing PD 1-3
 typefaces, see fonts

U

UI commands
 Change virtual printer
 Backgroundform attribute DC 7-2
 CycleForms attribute DC 5-5–DC 5-8
 disposition attribute DC 7-3
 overview DC 7-2
 Create Virtual Printer DC 7-1
 Delete Form DC 7-4
 Delete Virtual Printer DC 7-4
 List Documents DC D-9
 List Forms DC 7-4, DC D-7
 List Virtual Printers DC 7-5
 listed DC 7-1
 Print Form Sample DC 7-6, DC D-3
 Set Tray DC 7-6
 Show Log DC 7-7, DC D-1
 Show Status DC 7-8, DC D-7
 Start Virtual Printer DC 7-9
 Stop Virtual Printer DC 7-9
 Uncollated attribute PJ 1-22
 undefined command error PD 1-18
 underscore support SO 5-6
 United States/Canada IP 5-2
 UNIX
 command tool IP 4-10
 compressed bar format CM 2-3
 root password, selecting IP 4-9
 shell, using CM 12-2
 Sun operating system IP 2-5, SO 2-6
 Superuser password IP 4-9
 UNIX client software
 installing SJ 2-9
 removing SJ 2-14
 Unix compressed bar format CM 2-3, CM 2-5, CM 2-6
 Unix shell
 disabling remote CM 2-32
 disabling remotely CM 2-32
 enabling remotely CM 2-31
 unresponsive printer CM 3-5

Unset Tray CM 5-9, CM 5-10
 updates
 software CM 2-7
 updates, software
 installing from CD-ROM CM 2-7
 installing from diskette CM 2-7
 user coordinate system
 default PD 1-39–PD 1-41
 mapping PD 1-1–PD 1-2
 User Dictionary operators PD 1-8–PD 1-9
 user interface IS 3-8
 user interface, web-based SJ 8-1
 user-customized TRC PJ 1-23
 user-defined category PJ 1-9
 user-defined fonts PD 1-4
 utilities
 PCONSOLE PJ 3-16
 PSERVER PJ 3-17
 RPRINTER PJ 3-18
 utility commands CM 2-1–CM 2-13

V
 /var/db/forms directory DC 4-3, DC 6-3
 /var/spool/data directory
 generating PostScript files DC 6-3
 File of Files default DC 6-5
 storing files DC C-1
 Xcat jobs default DC 6-12
 variable data
 forms overlaying DC 6-17
 Mask, Form formats DC 3-4–DC 3-6
 overlaying images DC 5-1–DC 5-4, DC 7-2
 specifying form pages DC 6-7
 static data compared DC 4-1
 variable data files
 blank page requirement DC 6-5, DC 6-7, DC 6-14, DC 6-18
 caveats DC 6-5, DC 6-14, DC 6-18
 creating, Word Mail Merge DC 4-3–DC 4-9
 directory storage methods DC C-1
 locating local DC 6-5
 vector graphics PD 2-2
 VerticalImageShift attribute PJ 1-23
 VerticalImageShiftForBack attribute PJ 1-24

View Field Codes button DC 8-8
 viewing print queue, Novell PJ 3-16
 VIPP
 benefits PD 3-1
 demo mode PD 3-3
 license PD 3-3
 modes PD 3-1, PD 3-2
 VIPP cache capability CM 5-28
 virtual memory PD 1-20, PD 1-31
 virtual printer attributes
 Background Form DC 5-1
 disposition DC 3-1–DC 3-6, DC 5-3
 virtual printer, IPDS PJ 2-1
 virtual printers CM 4-2, CM 4-6, IP 4-12, IP
 D-5, IP D-11, IP D-13
 backing up list of CM 2-11
 changing PJ 2-3–PJ 2-4
 Create Virtual Printer command DC 7-1
 creating Background Forms DC 5-1, DC
 7-2
 defining, configuring
 commands DC 3-1
 example DC 3-7
 mask/form formats DC 3-3–DC 3-6
 TIFF/G4, ByteCode formats DC 3-2
 deleting DC 7-4, PJ 2-4
 description PJ 2-1
 listing PJ 2-5
 media attributes PJ 4-3
 media list PJ 4-3
 restarting DC 7-9
 restoring list of CM 2-11
 setting flags PJ 2-8
 specifying using Novell forms PJ 2-9
 starting PJ 2-7
 stopping DC 7-9, PJ 2-7
 virtual printers, overview SJ 1-3
 VM IP E-6
 VM print flow IS D-3
 VMS systems SJ 1-1
 Vn DC 5-8
 voltages, requirements IP 5-2
 VSE IP E-7
 VSE print flow IS D-4

W

waste dry ink/toner RM 5-1
 waste dry ink/toner, replacing RM 5-2
 web based access CM 1-5
 Web-based user interface SJ 8-1
 weight conversion RM 1-9
 Weight field, Select Paper dialog
 editing DC 6-15, DC 6-19
 "What is..." prompt
 DOS xcat DC 6-15
 DOS xmerge DC 6-15
 SunOS/Solaris formmerge DC 6-19
 Windows
 changing form directory DC B-1–DC B-4
 Decomp Service installation DC 2-1
 FormMerge tool DC 6-3–DC 6-5
 Reprint tool DC 6-2–DC 6-3
 XCat tool
 described DC 6-7–DC 6-12
 XMerge tool DC 6-5–DC 6-7
 Windows 2000, setting up a new printer SJ
 2-20
 Windows NT 4.0 (transparent)
 installing and configuring system SJ
 5-41–SJ 5-47
 job tickets
 opening SJ 5-51–SJ 5-52
 resetting SJ 5-55–SJ 5-56
 saving SJ 5-53–SJ 5-54
 setting up SJ 5-56–SJ 5-77
 Windows platforms DC 1-5, DC 6-2
 wizard mode, using CM 12-1
 Wollongong Pathway Access release 3.1 SJ
 2-2
 Word 6.0, Microsoft
 inserting form references DC 8-8
 Mail Merge
 producing PostScript file DC 5-2
 variable data files DC 4-3–DC 4-9
 WordPerfect, converting IS C-2
 workstation, remote PJ 3-18
 workstations
 client SO 4-1
 description SO 4-1–SO 4-5
 disk space requirements SJ 2-1
 workstations see Sun workstations

write-black engine PD 1-15–PD 1-16, PD 1-26

write-white engine PD 1-15–PD 1-16

X

x axis PD 1-35

XCat tool

creating File of Files DC 4-9–DC 4-11

overview DC 1-4

Windows

described DC 6-7–DC 6-12

xcat tool

DOS DC 6-15

Sun OS/Solaris DC 6-19

XDS for Macintosh

system requirements SJ 4-1

Xerox Check Performance Guarantee IS 5-11

Xerox Client print command TG 2-1

Xerox Client Software IP 2-6, IP 4-10, IP 8-2, SO 2-7

installing

man pages SJ 2-12–SJ 2-13

PC-DOS workstations SJ 2-2–SJ 2-4

UNIX workstations SJ 2-9–SJ 2-12

package, general requirements SJ 2-1

removing

DOS SJ 2-6

UNIX SJ 2-14

Xerox Client Software, troubleshooting installation TG 2-1–TG 2-2

Xerox CMC-7 IS 5-12

Xerox Customer Education IP B-4, RM 8-3

Xerox Customer Parts and Product Support Center IP A-14, SO A-14

Xerox Customer Service Center RM 8-1

Xerox Customer Service Support Center IP B-1

Xerox Documentation and Software Services (XDSS) IP B-3, RM 8-1

Xerox drivers SJ 1-1

Xerox files

restoring backed up CM 2-11

Xerox files, backing up CM 2-10

Xerox Font Center IP B-4, RM 8-2

Xerox network print queue

Windows NT 4.0, printing to SJ 5-78

Xerox PPD files required with third-party drivers

Windows NT 4.0 (transparent) SJ 5-47

Xerox responsibilities IP 4-2, IP 8-2–IP 8-3

Xerox Supply Center IP A-14, SO A-14

Xerox utilities software SJ 3-1

Xerox value-added features IS 1-1, IS 5-1

XGFNub. See line mode extension

XIPP prescan DC C-1

XMerge tool

creating File of Files DC 4-11–DC 4-13

overview DC 1-5

Windows DC 6-5–DC 6-7

xmerge tool

DOS DC 6-14

SunOS/Solaris DC 6-18

XPAF solution, comparing IS 6-1

XPPS PJ 4-2

XResolution TIFF tag DC E-1

Y

y axis PD 1-35

YResolution TIFF tag DC E-1

Z

zero-width lines, imaging PD 1-24

zone name, specifying IP 4-10

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>