


PURE

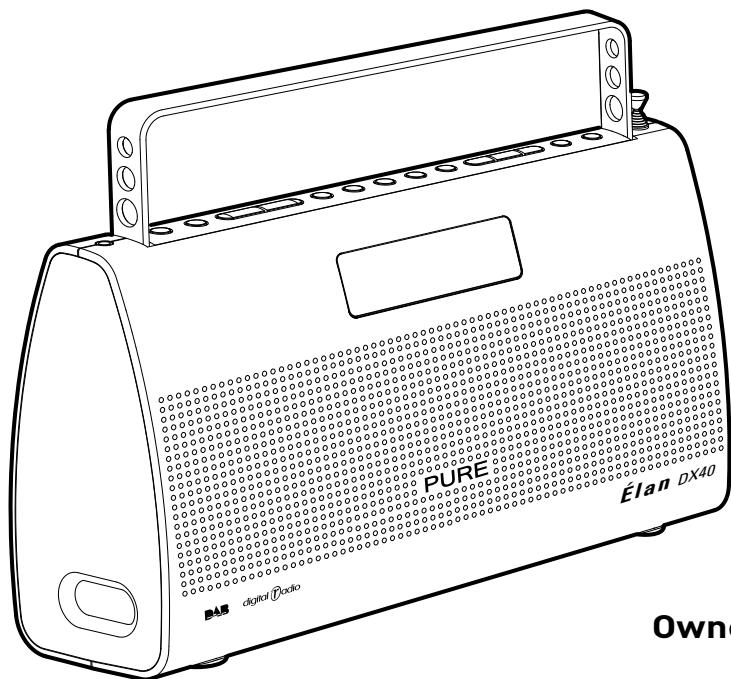

Owner's manual

Élan DX40

⚠ Safety instructions

Keep the radio away from heat sources.
Do not use the radio near water.
Avoid objects or liquids getting into the radio.
Do not remove screws from or open the radio casing.
Fit the mains adaptor to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.

⚠ Sicherheitshinweise

Halten Sie das Radio fern von Heizquellen.
Benutzen Sie das Radio nicht in der Nähe von Wasser.
Verhindern Sie, dass Gegenstände oder Flüssigkeiten in das Radio gelangen.
Entfernen Sie keine Schrauben vom Gehäuse und öffnen Sie dieses nicht.
Schließen Sie das Netzeil an eine leicht erreichbare Steckdose in der Nähe des Radios an, und benutzen Sie AUSSCHLIESSLICH das mitgelieferte Netzeil.

⚠ Consignes de sécurité

Tenir la radio éloignée de toute source de chaleur.
Ne pas utiliser la radio à proximité d'un point d'eau.
Éviter que des objets ou des liquides ne pénètrent à l'intérieur de la radio.
Ne pas ouvrir le boîtier de la radio ou en enlever les vis.
Branchez l'adaptateur sur une prise de courant facilement accessible, à proximité de la radio et utilisez UNIQUEMENT l'adaptateur fourni.

⚠ Istruzioni di sicurezza

Tenere la radio lontana da fonti di calore.
Non utilizzare la radio vicino all'acqua.
Evitare che oggetti o liquidi penetriano nella radio.
Non rimuovere le viti né aprire l'involucro della radio.
Collegare l'adattatore di rete ad una presa della corrente facilmente accessibile, situata vicino alla radio e utilizzare ESCLUSIVAMENTE l'adattatore di rete fornito.

⚠ Sikkerhedsforskrifter

Hold radioen på afstand af varmekilder.
Brug ikke radioen i nærheden af vand.
Undgå at der kommer genstande eller væsker i radioen.
Fjern ikke skruer fra og åbn ikke radiokabinetet.
De bør tilslutte strømforsyningen til et lettilgængeligt strømudtag tæt på radioen. De bør KUN bruge den medfølgende strømforsyning.

⚠ Veiligheidsinstructies

Houd de radio uit de buurt van warmtebronnen.
Gebruik de radio niet in de buurt van water.
Vermijd dat voorwerpen of vloeistoffen in de radio terechtkomen.
Verwijder geen schroeven uit de omkasting van de radio en open het niet.
Steek de lichtnetadapter in een gemakkelijk toegankelijk stopcontact in de buurt van de radio en gebruik ALLEEN de meegeleverde spanningsadapter voor het lichtnet.

Copyright

Copyright 2006 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

Copyright

Copyright 2006 by Imagination Technologies Limited. Alle Rechte vorbehalten. Kein Teil dieser Publikation darf ohne ausdrückliche und schriftliche Zustimmung von Imagination Technologies Limited in irgendeiner Form (elektronisch, mechanisch, magnetisch, manuell oder auf andere Weise) kopiert, verteilt, übermittelt, überschrieben, in einem Suchsystem gespeichert, in eine andere natürliche oder Computersprache übersetzt oder Dritten zugänglich gemacht werden.

Copyright

Copyright 2006 Imagination Technologies Limited. Tous droits réservés. Aucune partie de la présente publication ne doit être copiée ou diffusée, transmise, retranscrite, stockée dans un système de récupération de données ou traduite, que ce soit dans une langue humaine ou dans un langage informatique, sous quelque forme et par quelque moyen que ce soit, électronique, mécanique, magnétique, manuel ou autre, ou encore diffusée auprès de tiers sans autorisation écrite expresse de Imagination Technologies Limited.

Copyright

Copyright 2006 by Imagination Technologies Limited. Tutti i diritti riservati. Nessuna parte della presente pubblicazione può essere copiata o distribuita, trasmessa, trascritta, memorizzata in un sistema di archiviazione, o tradotta in un formato normalmente comprensibile, in qualsiasi forma o con qualsiasi mezzo, elettronico, meccanico, magnetico, manuale o altro, o divulgata a terze parti senza il permesso scritto di Imagination Technologies Limited.

Copyright

Copyright 2006 tilhører Imagination Technologies Limited. Alle rettigheder forbeholdes. Ingen dele af denne publikation må kopieres eller distribueres, transmitteres, omskrives, gemmes i et system, hvori den kan hentes, eller oversættes til menneskeligt forståeligt sprog eller computersprog, i nogen som helst form eller med nogen som helst midler, det være sig elektroniske, mekaniske, magnetiske, manuelle eller på anden måde, eller fremvises til tredje parter uden udtrykkelig, skriftlig tilladelse fra Imagination Technologies Limited.

Copyright

Copyright 2006 door Imagination Technologies Limited. Alle rechten gereserveerd. Geen enkel gedeelte van deze publicatie mag gekopieerd of gedistribueerd, uitgezonden, overgeschreven, opgeslagen in een retrieval system of vertaald in om het even welke menselijke of computertaal, in geen enkele vorm of door geen enkel middel, elektronisch, mechanisch, magnetisch, manueel of anders of bekend gemaakt aan derde partijen zonder de uitdrukkelijke geschreven toestemming van Imagination Technologies Limited.

Trademarks

Élan DX40, the Élan DX40 logo, PURE, the PURE logo, PURE Digital, the PURE Digital logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. All other product names are trademarks of their respective companies. Version 2 October 2006.

Warenzeichen

Élan DX40, das Élan DX40 Logo, PURE, das PURE Logo, PURE Digital, das PURE Digital Logo, Imagination Technologies und das Imagination Technologies Logo sind Warenzeichen oder eingetragene Warenzeichen von Imagination Technologies Limited. Alle anderen Produktnamen sind Warenzeichen ihrer jeweiligen Besitzer. Version 02. Oktober 2006

Marques commerciales

Élan DX40, le logo Élan DX40, PURE, le logo PURE, PURE Digital, le logo PURE Digital, Imagination Technologies et le logo Imagination Technologies sont des marques commerciales ou des marques déposées de Imagination Technologies Limited. Tous les autres noms de produits sont des marques commerciales de leurs détenteurs respectifs. Version 2 er Octobre 2006.

Marchi

Élan DX40, il logo Élan DX40, PURE, il logo PURE, PURE Digital, il logo PURE Digital, Imagination Technologies e il logo Imagination Technologies sono marchi o marchi registrati di Imagination Technologies Limited. Tutti gli altri nomi di prodotti sono marchi di proprietà delle rispettive società. Versione 2 Ottobre 2006.

Varemærker

Élan DX40, Élan DX40-logoet, PURE, PURE-logoet, PURE Digital, PURE Digital-logoet, Imagination Technologies og Imagination Technologies-logoet er varemærker eller registrerede varemærker, der tilhører Imagination Technologies Limited. Alle andre produktnavne er varemærker, der tilhører deres respektive virksomheder. Version 2. oktober 2006.

Handelsmerken


Élan DX40, het Élan DX40 logo, PURE, het PURE logo, PURE Digital, het PURE Digital logo, Imagination Technologies en het Imagination Technologies logo zijn handelsmerken of geregistreerde handelsmerken van Imagination Technologies Limited. Alle andere productnamen zijn handelsmerken van hun respectieve firma's. Versie 2 Oktober 2006.

Contents


Overview of the controls and connectors	2
Overview of the display	2
Getting started	4
Changing stations.....	4
Using your Élan DX40	5
Changing the information shown on screen.....	5
textSCAN™ - pause and control scrolling text	5
Setting and selecting presets	5
Intellitext™ - news, sports and more	6
Using the sleep timer	6
Using the alarm.....	7
Using a ChargePAK™/batteries	7
Changing your radio setup	8
Hints and Tips	9
Technical Specifications	10

Overview of the controls and connectors


Top panel

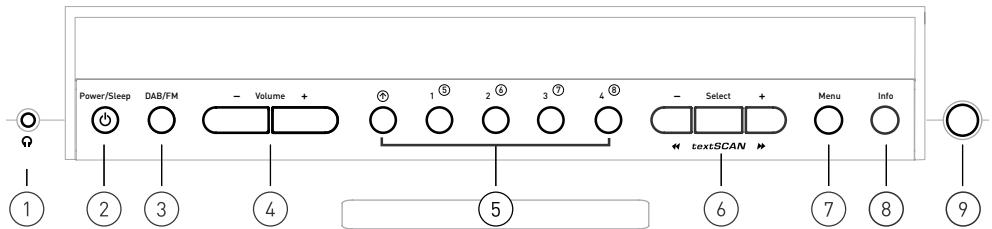

Rear panel

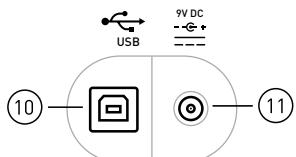


Overview of the display

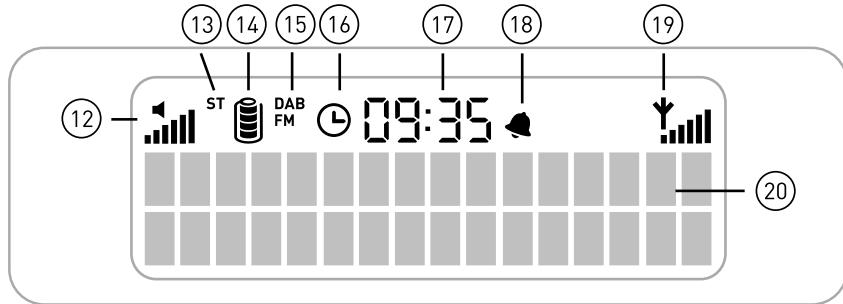

1. 3.5mm headphone socket (mutes speakers)
2. Press to switch between on and standby using mains.
Press to switch between on and off using batteries.
Hold down for around three seconds to access the sleep timer.
3. Switches between DAB and FM radio.
4. Volume control.
5. Set and select preset stations.
6. DAB +/- scroll radio stations or menu options and Select to confirm.
FM +/- press and release to manually step up or down frequency range. Hold and release to scan to next station.
In menus +/- scroll/change options and Select to confirm.
textSCAN - Press Select to pause scrolling text and +/- to move left and right.
7. Access Intellitext and setup options.
8. Changes the information shown on the display.
9. Adjustable telescopic aerial.
10. Connects to a PC for software updates.
11. Connects to the 9V DC mains adapter (supplied)
12. Volume level (max=6 bars)
13. Stereo indicator.
14. Battery power indicator (max=4 bars). Animated when charging. Disappears when connected to DC power and fully charged.
15. DAB or FM indicator.
16. Sleep timer set.
17. Time from the current DAB or FM (RDS) station.
18. Alarm set.
19. Signal strength indicator (max=6 bars)
20. 16 x 2 character text area.

Getting started

Fully extend the telescopic aerial, connect the mains adapter and plug in to your power supply or fit six size 'C' batteries or a ChargePAK.

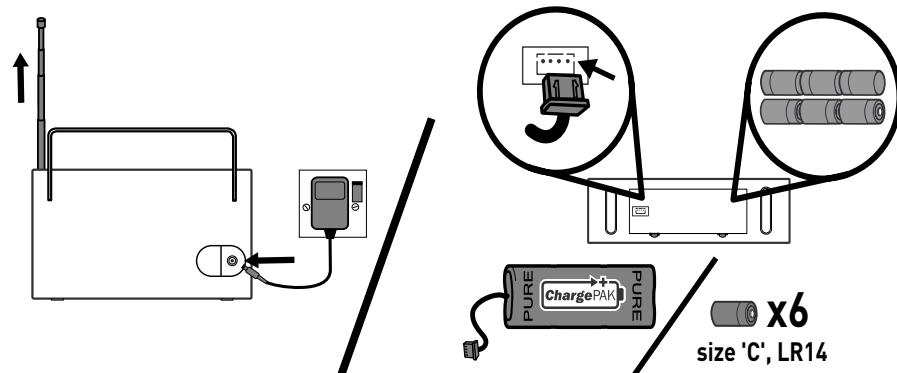

Power/Sleep



Press the Power button, if necessary, to switch the radio on. An autotune finds the DAB stations available in your area and selects one.

Changing stations

DAB



FM



Press to step -/+ 0.05MHz



Hold and release to scan to next station

Using your Élan DX40

Changing the information shown on screen

Info

- 1. Scrolling text broadcast by most DAB stations and FM (RDS) stations.
- 2. Content being broadcast e.g. Pop music.
- 3. DAB Multiplex in which the current station is broadcast.
- 4. Time and date updated regularly by the current DAB or FM (RDS) station.
- 5. DAB channel and frequency for the current station.
- 6. DAB signal data rate and a stereo or mono indicator.
- 7. DAB signal quality; 85 to 100 Good, 70 to 84 OK, 0 to 69 poor.
- 8. DAB signal strength; maximum 16 bars.

textSCAN™ - pause and control scrolling text



Setting and selecting presets

Store up to 8 DAB and 8 FM radio stations for easy access.

To set a preset



To select a preset




Intellitext™ - news, sports and more

Intellitext* provides on-demand text information such as sports headlines and news. The text is stored in your radio while you listen to stations and is updated by the broadcasters. Intellitext is listed by station and split into categories. For example, the broadcaster may send information on Football, Cricket, Headlines etc.


When your radio is on, Intellitext will only appear for stations that you have been tuned to for a while. While your radio is in standby it will collect updates (from the last station from which you viewed Intellitext) ready for when you next switch on.

To access Intellitext

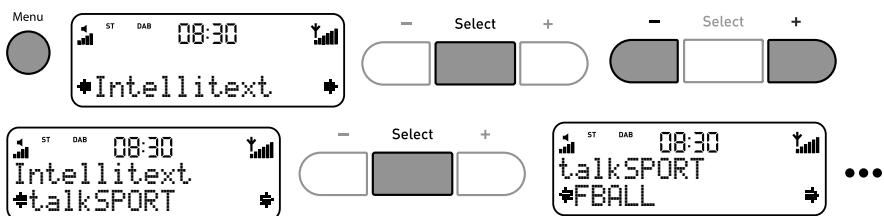

Note You can use textSCAN to pause and control the text, see page 5.

Intellitext options

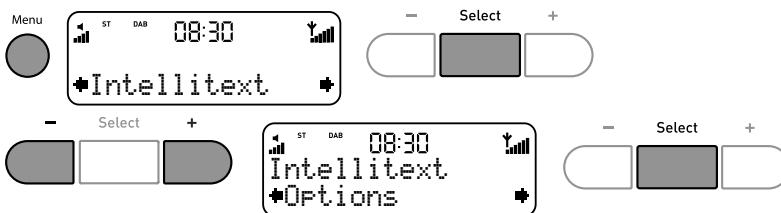

Set timeout

Delete Intellitext after 1 week (default) or 1 day.

Clear all

Deletes Intellitext immediately.

Using the sleep timer

Sleep Timer switches your radio into standby after a number of minutes.

To set/change a sleep timer



To cancel the sleep timer



* from participating broadcasters

Using the alarm

The alarm switches your radio on (if in standby) and tunes to a station or sounds a tone.

To set/change an alarm



Set the alarm on or off, the time and choose DAB, FM (both set to current station) or Tone alarm. Radio alarms will be at whatever the volume control is set at when the alarm goes off. A bell symbol is shown next to the clock when the alarm is set.

Note Alarms will not work if you are using batteries and switch your unit off.

To cancel an alarm

DAB/FM

Press any button except Volume to cancel the alarm and perform the button's normal function.

Tone

Press Select or Power to cancel the alarm.

Using a ChargePAK™/batteries



As an alternative to mains power you can use six size 'C' alkaline or rechargeable batteries or use the PURE ChargePAK™ C6x rechargeable battery pack. When charge is low the battery icon flashes. **Note** Always disconnect the radio from mains power supply before fitting or removing a ChargePAK or batteries, your settings will be retained.

Using a ChargePAK

ChargePAK is a rechargeable battery pack which plugs into the socket in your radio's battery compartment. Whenever your radio is connected to a mains supply the ChargePAK will be charging. When charging a ChargePAK the battery icon will be animated and when fully charged the icon disappears. A complete charge should take around 10 hours in standby.

To purchase a PURE ChargePAK C6x, contact your nearest PURE dealer, visit the shop on our website at www.pure.com or call the PURE order line on 0845 045 1122.

Battery safety

- Do not mix battery types or sizes
- Do not mix old and new batteries
- Remove used batteries as soon as possible to prevent leakage
- Dispose of old batteries carefully
- Orientate batteries as shown in the battery compartment

Changing your radio setup

Menu

- The following options are available in DAB, FM or both.

Backlight

Choose whether the screen backlight is on, off, or turns on when a button is pressed, both when the unit is on (Active) and in Standby.

Audio settings

FM stereo mode

Choose from Stereo or Mono - mono may be clearer for stations with weak signals.

DRC value

DRC (Dynamic Range Control) value makes the quieter sounds in a DAB broadcast easier to hear at low volume or in a noisy environment.

Check with the broadcasters to find out if they use DRC.

DRC full	Applies the DRC level as sent with the broadcast.
DRC half	DRC level is set to half that sent with the broadcast.
DRC off	Any DRC level broadcast will be ignored.

Station order

Alphanumeric	Lists all stations in alphanumeric order.
Active station	Lists active stations first on the station list.
Multiplex	Lists stations in groups according to their multiplex.
Trim stn. list	Removes inactive stations from the station list.

Tuning

Autotune

Scans all DAB Band III frequencies for stations and adds any new ones to the station list. To stop an Autotune press Select.

Manual tune

Shows DAB signal level which can help you find the best position for your radio.

1. Use the +/- buttons to scroll through different channels and push Select to choose one (UK stations are in the range 11B to 12D). You see a signal level display. The empty block indicates the minimum required level for reception and the filled blocks indicate the current level.
2. Move your aerial and try to raise the current level to the empty block or beyond. Once you have a good signal the display will show the multiplex name and add the stations to the station list.
3. Push the Menu button to exit or +/- and Select buttons to change channel.

Upgrade

Upgrade your radio using a PC connected to the USB socket. Upgrades may be issued to provide enhanced functions or improve performance. The version number of your radio is displayed on the top line.

Register your product and include an e-mail address to receive notification of product upgrades or visit our website at www.pure.com/support.

To upgrade, select the Upgrade option and follow the instructions provided with the upgrade. To exit the upgrade menu press the Menu button.

Hints and Tips

I don't see any Intellitext

This could be because you haven't tuned to a participating station or the station hasn't broadcast any Intellitext since you tuned in. Try tuning to a participating station (e.g. in the UK try talkSPORT), wait and then check again.

(<<) Secondary DAB services

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. A secondary service has a '<<' before its name in the station list.

(?) Inactive or unavailable DAB stations

Inactive or unavailable stations are those which appear on the station list but are not currently available. Inactive stations have a '?' before their name on the station list. If you select a station which has this symbol, your radio tries to tune in or returns to the previous station.

Display says 'No stations available'

Check that your aerial is fully extended. Use Autotune to search for stations. Try adjusting your aerial or radio position.

Display says 'Disabling alarms' when I switch off

When on battery power, any alarms you set will not work if the unit is switched off.

Resetting your radio

Resetting your radio removes all presets, stored stations and favourite station settings and resets all options to defaults. To reset:

1. Press and hold the Menu button for three seconds.
2. Press Select to confirm the reset or press no buttons to cancel the reset.

Technical Specifications

General	Fully compliant with ETS 300 401 and capable of decoding all DAB transmission modes 1-4 up to and including 192 kb/sec.
Speakers	Two full-range 3 inch drive units
Frequency range	DAB – Band III (174-240 MHz), FM – 87.5-108 MHz
Input connectors	9V DC power adapter socket (230V adapter supplied) USB (B type) connector for software upgrades
Output connectors	3.5mm socket for headphones
Mains power supply	230V AC to 9V (1.5A) DC external power adapter (supplied)
Battery power	6 size 'C' batteries or ChargePAK C6x (available separately). Battery life of around 30 hours on alkaline batteries for DAB at normal listening levels, around 15 hours using ChargePAK.
Approvals	CE marked. Compliant with the EMC and Low Voltage Directives (89/336/EEC and 73/23/EEC)
Dimensions	280 mm (width) x 168 mm (height) x 80 mm (depth)

Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please return your warranty card or visit www.pure.com/register to register your product with us. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual.

Garantie-Informationen

Imagination Technologies Ltd. garantiert dem Endbenutzer, dass dieses Produkt für die Dauer von zwei Jahren ab Kaufdatum bei normalem Gebrauch frei von Schäden am Material oder Verarbeitung ist. Diese Garantie umfasst Ausfälle aufgrund von Herstellungs- und Konstruktionsfehlern; sie gilt nicht für Unfallschäden, wie auch immer verursacht, Verschleiß, Fahrlässigkeit und Veränderung oder Reparatur durch von uns nicht autorisierte Personen. Senden Sie Ihre Garantiekarte ein oder registrieren Sie Ihr Produkt bei uns unter www.pure.com/register. Sollten Sie mit Ihrem Gerät ein Problem haben, wenden Sie sich an Ihren Verkäufer oder den PURE Support. Die Adresse finden Sie auf der Rückseite dieser Bedienungsanleitung.

Garantie

Imagination Technologies Ltd. garantit à l'utilisateur que le présent produit est exempt de défauts en termes de matériaux et de main-d'œuvre, dans le cadre d'une utilisation normale, pour une période de deux ans à compter de la date d'achat. La présente garantie couvre les pannes dues à un défaut de conception ou de fabrication; elle ne prend pas en compte les dommages accidentels, quelle que soit leur cause, l'usure normale du produit, ainsi que tous dommages dus à la négligence, à la modification, au réglage ou à la réparation effectué(e) sur l'appareil sans notre autorisation. Veuillez renvoyer votre carte de garantie ou visiter le site www.pure.com/register pour enregistrer votre produit auprès de nos services. En cas de problème avec votre appareil, veuillez contacter votre fournisseur ou le centre d'assistance PURE, à l'adresse indiquée au dos du présent manuel.

Informazioni sulla garanzia

Imagination Technologies Ltd. garantisce all'utente finale che il presente prodotto è esente da difetti di materiale e fabbricazione in condizioni normali di utilizzo per un periodo di due anni a partire dalla data di acquisto. La presente garanzia copre i danni dovuti a difetti di fabbricazione o progettazione; non si applica in casi quali danni accidentali, in qualsiasi modo siano stati provocati, usura, negligenza, regolazione, modifica o riparazione non autorizzate. Visualizzare la scheda della garanzia oppure visitare il sito www.pure.com/register per registrare il prodotto. In caso di problemi relativi all'unità, contattare il proprio fornitore oppure contattare il Supporto tecnico PURE all'indirizzo indicato sul retro del presente manuale.

Garantioplysninger

Imagination Technologies Ltd. garanterer over for slutbrugerne, at dette produkt ikke er fejlbehæftet, hvad angår materialer og håndværksmæssig udførelse ved normal brug i to år fra købsdatoen. Denne garanti dækker sammenbrud, der skyldes fremstillings- eller designfejl. Den dækker ikke til fælde, hvor enheden beskadiges som følge af hændeligt uehd, uanset hvordan dette sker, samt slitage, uagtsomhed, justering, ændring eller reparation, som ikke er godkendt af os. Du bedes returnere garantikortet eller besøge www.pure.com/register for at registrere produktet hos os. Hvis der skulle opstå problemer med enheden, bedes du kontakte leverandøren eller PURE Support på adressen, der er angivet på bagsiden af denne vejledning.

Informatie over de waarborg

Imagination Technologies Ltd. waarborgt de eindgebruiker dat dit product vrij is van defecten in materialen en werkuren bij normaal gebruik voor een duur van twee jaar vanaf de datum van aankoop. Deze garantie dekt defecten door productie- of ontwerfouten; het is niet van toepassing in gevallen als accidentele schade, hoe ook veroorzaakt, slijtage, onachtzaamheid, instelling, wijziging of reparatie die door ons niet werd goedgekeurd. Gelieve uw garantiekartaat terug te sturen of bezoek www.pure.com om uw product bij ons te registreren. Indien u een probleem hebt met uw apparaat, gelieve uw leverancier te contacteren of contacteer PURE Support op het adres op de achterzijde van deze handleiding.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Ausschluss hinweis

Imagination Technologies Limited gewährt keine Garantien für den Inhalt dieses Dokuments und lehnt insbesondere implizierte Garantien für die allgemeine Gebrauchstauglichkeit bzw. die Eignung für spezielle Zwecke ab. Weiterhin behält sich Imagination Technologies Limited das Recht vor, diese Publikation von Zeit zu Zeit zu überarbeiten und zu ändern, ohne dass daraus eine Verpflichtung für Imagination Technologies Limited entsteht, irgendeine Person oder Organisation von solchen Änderungen in Kenntnis zu setzen.

Avis de non-responsabilité

Imagination Technologies Limited refuse toute représentation ou garantie vis-à-vis du contenu du présent document et refuse spécifiquement toute garantie implicite de valeur marchande ou d'adéquation à un usage spécifique. En outre, Imagination Technologies Limited se réserve le droit de réviser la présente publication et d'y apporter des modifications, quand elle le souhaite, sans obligation de sa part de notifier toute personne ou organisation desdites révisions ou modifications.

Dichiarazione di non responsabilità

Imagination Technologies Limited non si assume alcuna responsabilità rispetto al contenuto del presente documento, in particolare non riconosce nessuna garanzia implicita di commercialità o idoneità per uno scopo specifico. Inoltre, Imagination Technologies Limited si riserva il diritto di revisionare la presente pubblicazione e di apportarvi modifiche periodiche senza alcun obbligo di notifica a qualsiasi persona o organizzazione.

Ansvarsfraskrivelse

Imagination Technologies Limited afgiver ingen garantier eller erklæringer med hensyn til indholdet af dette dokument og fralægger sig i særdeleshed eventuelle stiltende garantier for salgbarhed eller egnethed til et bestemt formål. Endvidere forbeholder Imagination Technologies Limited sig ret til at revidere denne publikation og foretage ændringer fra tid til anden, uden at Imagination Technologies Limited er forpligtet til at underrette nogen person eller organisation om sådanne revideringer eller ændringer.

Vrijwaring

Imagination Technologies Limited geeft geen verklaring of garanties met betrekking tot de inhoud van dit document en wijst specifiek elke verantwoordelijkheid af met betrekking tot om het even welke onuitgesproken garanties naar verhandelbaarheid of geschiktheid voor enig bijzonder doel. Daarenboven behoudt Imagination Technologies Limited zich het recht voor om deze publicatie te reviseren en af te toe veranderingen aan te brengen zonder de verplichting voor Imagination Technologies Limited om personen of organisaties van deze revisies of veranderingen op de hoogte te brengen.

www.pure.com

PURE Digital
Imagination Technologies Ltd.
Pinnacle House
Home Park Estate
Kings Langley
Herts, WD4 8DH
UK

PURE Digital
Karl-Marx Strasse 6
64589 Stockstadt/Rhein
GERMANY

PURE Digital - Vertrieb über:
TELANOR AG
Unterhaltungselektronik
Bachstrasse 42
4654 Lostorf
SCHWEIZ/SWITZERLAND

📞 +44 (0)1923 277477 support
📞 +44 (0)1923 277488 sales
📠 +44 (0)1923 270188
✉️ support@pure.com
✉️ sales@pure.com

📞 +49 (0) 6158 878872 sales
📠 +49 (0) 6158 878874
✉️ sales_gmbh@pure.com

📞 +41 (0)62 285 95 95 sales
📠 +41 (0)62 285 95 85
✉️ info@telanor.ch
www.telanor.ch



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>