


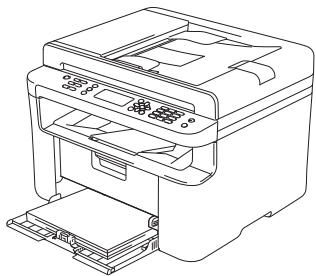

Setting up the DocuPrint M115 z printer on a wireless network




1 WPS-PBC (WPS Button)

Wi-Fi Protected Setup (WPS) is a network security standard that allow users to easily secure a wireless home network, and connect wireless client devices (iPad's etc.) to it, without accessing the router's configuration screens, and without even knowing the wireless network's security key/passphrase.

NOTE: A WPS-PBC enabled wireless access point is required. Please refer to the manual provided with the router.


Before starting WPS-PBC, confirm the position of the WPS button on the wireless access point or router. Please refer to the manual provided with the router.

- 1 Press the [Wi-Fi/WPS] button on the printer control panel.

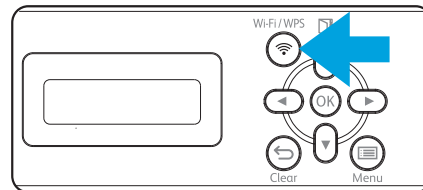

- 2 Press the number [1] on the keypad.

'Connecting WLAN' is displayed whilst the connection is established.

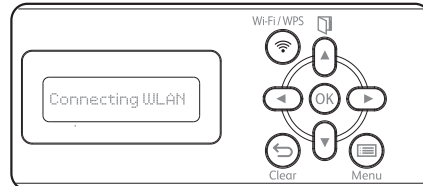


NOTE: There is a 2 minute time-out to complete the setup procedure

- 3 Complete the WPS-PBC procedure on the wireless access point.
- 4 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.


2 WPS-PIN

NOTE: A WPS-PIN enabled wireless access point is required.


- 1 Press the [Menu] button on the printer control panel.

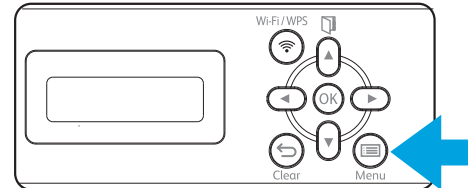


- 2 Use the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

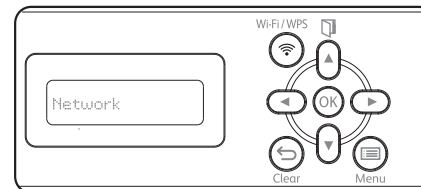

- 3 Use the [Up] or [Down] arrow buttons to select [WLAN], and then press the [OK] button.

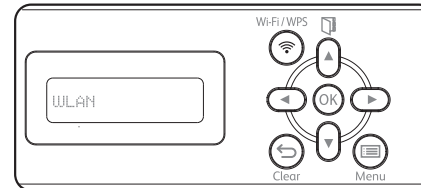

- 4 Use the [Up] or [Down] arrow buttons to select [WPS w/PIN Code], and then press the [OK] button.

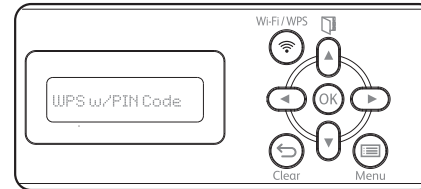

- 5 Press the number [1] on the keypad.

- 6 'Connecting WPS' and the PIN are displayed.


- 7 Complete the WPS-PIN setup procedure on the wireless access point. Please refer to the manual provided with the router.

NOTE: There is a 2 minute time-out to complete the setup procedure


- 7 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.

3 Auto SSID


- 1 Press the [Menu] button on the printer control panel.

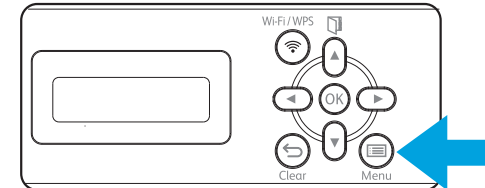


- 2 Use the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

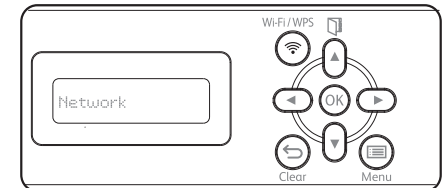

- 3 Use the [Up] or [Down] arrow buttons to select [1. WLAN], and then press the [OK] button.

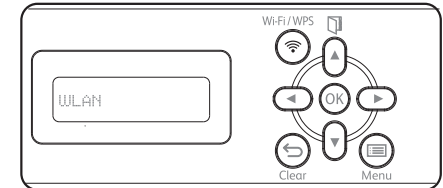

- 4 Use the [Up] or [Down] arrow buttons to select [3. Setup Wizard], and then press the [OK] button.

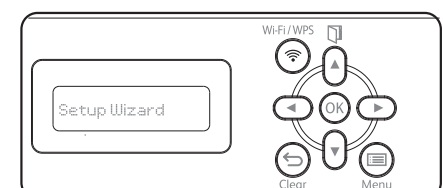

Before you begin

Ensure you have the **name of your wireless network (SSID), wireless network password, security and encryption types.**


To find the name and type of security encryption of your wireless network on your computer (example Windows 7):

- a) Go to the Start Menu. Select **Control Panel** and click on **Network and Sharing Centre.**
- b) Click on **Manage Wireless Networks.** Double click on your preferred wireless network. Note the SSID. Click on the security tab. Note the security and encryption types.




5 Reset Wireless Network Settings


1 Press the [Menu] button on the control panel.

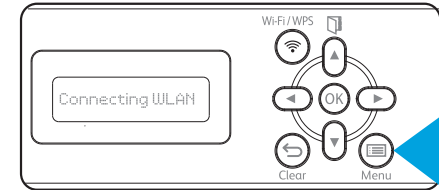

2 Use the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

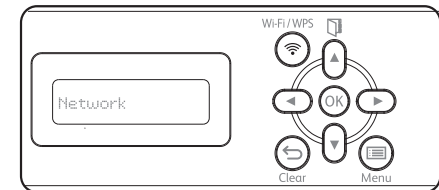

3 Use the [Up] or [Down] arrow buttons to select [Network Reset], and then press the [OK] button.

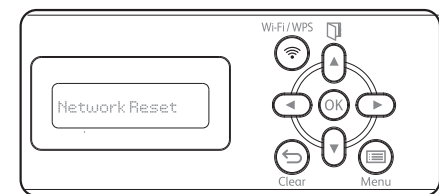

4 Press the number [1] button on the keypad to confirm reset.

5 Press the number [1] button on the keypad to confirm reboot.

6 'Accepted' will temporarily be displayed, then 'Please Wait' will be displayed while the printer reboots.

Find more support for your printer by visiting our comprehensive support website at:

<http://onlinesupport.fujixerox.com/>

5 Press the number [1] on the keypad to confirm enabling wireless.


6 'Searching SSID' is displayed whilst the printer searches for available wireless networks.

7 Use the [Up] or [Down] arrow buttons to select the correct SSID and then press the [OK] button. 'Network Key' is displayed.

8 Use the Number Pad keys on the Control Panel to enter the Network Key (Password), and then press the [OK] button.

9 Press the number [1] on the keypad to apply settings.


10 Connecting WLAN is displayed whilst the connection is established.

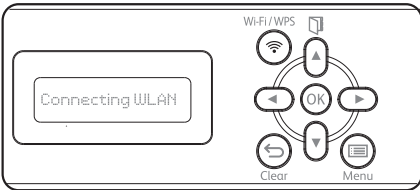


11 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.

4 Manual SSID


1 Press the [Menu] button on the control panel.

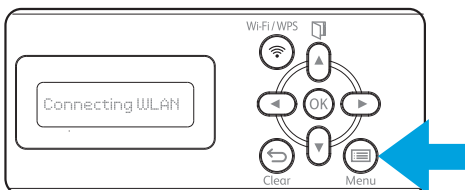


2 Use the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

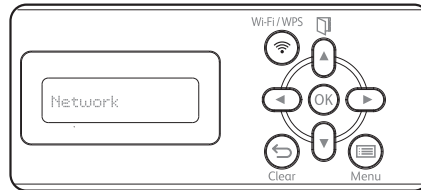

3 Use the [Up] or [Down] arrow buttons to select [WLAN], and then press the [OK] button.

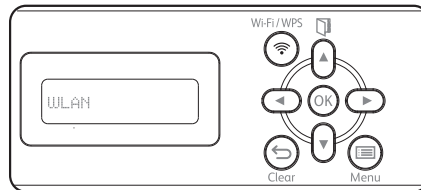


4 Use the [Up] or [Down] arrow buttons to select [Setup Wizard], and then press the [OK] button.

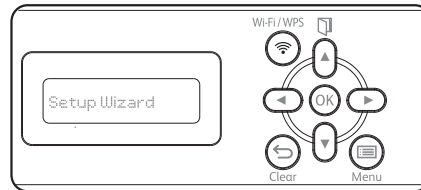

5 Press the number [1] on the keypad to confirm enabling wireless.

6 'Searching SSID' is displayed whilst the printer searches for available wireless networks.

7 Use the [Up] or [Down] arrow buttons to select [<New SSID>], and then press the [OK] button.

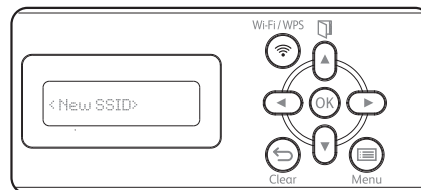

8 Use the Number Pad keys on the Control Panel to enter the Wireless Network SSID. Use the [Right] arrow button to move to the next character position. When the Wireless Network SSID is entered, press the [OK] button.

9 Use the [Up] or [Down] arrow buttons to select 'Network Mode', and then press the [OK] button.

Choose from:

- * Infrastructure
- * Ad-Hoc

10 Use the [Up] or [Down] arrow buttons to select 'Authentication Mode', and then press the [OK] button.

Choose from:

- * Open System
- * Shared Key
- * WPA/WPA2-PSK
- * LEAP
- * EAP-FAST
- * PEAP
- * EAP-TTLS

11 Use the [Up] or [Down] arrow buttons to select 'Encryption Type', and then press the [OK] button.


Choose from:

- * AES
- * TKIP + AES

12 Use the Number Pad keys on the Control Panel to enter the 'Network Key' (Password). When the Wireless Network key is entered, press the [OK] button.

13 Press the number [1] on the keypad to apply settings.

14 Connecting WLAN is displayed whilst the connection is established.

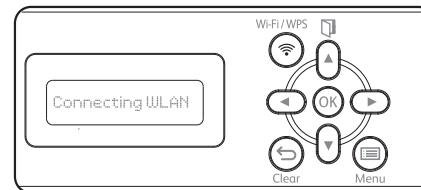

15 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>