



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX BP5013001M. You'll find the answers to all your questions on the AEG-ELECTROLUX BP5013001M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX BP5013001M
User guide AEG-ELECTROLUX BP5013001M
Operating instructions AEG-ELECTROLUX BP5013001M
Instructions for use AEG-ELECTROLUX BP5013001M
Instruction manual AEG-ELECTROLUX BP5013001M

BP5013001

EN OVEN

USER MANUAL



[Your user manual](#)
[AEG-ELECTROLUX BP5013001M](#)

Manual abstract:

· The appliance cannot be positioned on a base. · Built in ovens and built in cooking surfaces are attached with special connection system. To prevent damage to the appliance, only use an appliance with the appliances from the same manufacturer. Electrical connection · The appliance must be earthed. · Make sure that the electrical data on the rating plate agree with your domestic power supply. · Information on the voltage is on the rating plate. · Always use a correctly installed shockproof socket. · Do not use multi-way plugs, connectors and extension cables. There is the risk of fire. · Do not replace or change the mains cable.

Contact the service centre. · Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug if applicable. Use · The appliance is only for domestic use. Do not use the appliance for commercial and industrial use. · Only use the appliance for domestic cooking tasks. This is to prevent physical injury to persons or prevent damage to property. · Do not use the appliance as a work surface or storage surface. · The interior of the appliance becomes hot during use. There is the risk of burns. Do not touch the heating elements in the appliance. Use gloves when you insert or remove the accessories or pots. · Be careful when you remove or install the accessories to prevent damage to the oven enamel. · Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is the risk of skin burns. · To prevent damage or discoloration to the enamel: Do not put any objects directly on the appliance floor and do not cover it with aluminium foil. Do not put water directly into the hot appliance. Do not keep moist dishes and food in the appliance after you finish the cooking.

· Discoloration of the enamel has no effect on the performance of the appliance so it is not a defect in the sense of the warranty law. · Do not apply pressure on the open door. 6 Safety information · Always close the appliance door when you cook, even while grilling. Care and cleaning · Before maintenance, switch off the appliance and disconnect the appliance from the power supply. · Before maintenance, make sure that the appliance is cold. There is the risk of burns. There is the risk that the glass panels can break. · Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire. · Regular cleaning prevents the surface material from deteriorating · Use a deep baking tray for very moist cakes to prevent that fruit juices cause stains that can be permanent.

· For your personal safety and the safety of your property, only clean the appliance with water and a soap. Do not use flammable products or products that can cause corrosion. · Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers · If you use an oven spray, follow the instructions from the manufacturer. · Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter.

· When the door glass panels are damaged they become weak and can break. You must replace them. Contact the service centre. · Be careful when you remove the door from the appliance. The door is heavy! · Do not clean catalytic enamel (if applicable).

Risk of fire · Open the door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air. There is the risk of fire. · Do not let sparks or open flames come near the appliance when you open the door. · Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance. Pyrolytic cleaning · Do not leave the appliance unattended during Pyrolytic cleaning. · Do not try to open the door and do not cut the power supply during Pyrolytic cleaning. · Keep children away during pyrolytic cleaning. The appliance becomes very hot. There is the risk of burns.

· During pyrolytic cleaning, stubborn dirt can cause discoloration to the enamel..



[Your user manual](#)

[AEG-ELECTROLUX BP5013001M](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>