

Breville

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre Australian Customers

✉ Breville Customer Service Centre
PO Box 22
Botany NSW 2019
AUSTRALIA

☎ Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service: askus@breville.com.au

New Zealand Customers

✉ Breville Customer Service Centre
Private Bag 94411
Greenmount
Auckland, New Zealand

☎ Customer Service: 09 271 3980

Fax 0800 288 513

Email Customer Service: askus@breville.com.au

www.breville.com.au

© Copyright. Breville Pty. Ltd. 2007
Due to continual improvements in design or otherwise,
the product you purchase may differ slightly from the
one illustrated in this booklet.
Model BKE260 Issue 2/07



Breville

Glass Kettle

Instructions

BKE260



	Page
Breville Recommends Safety First	4
Know Your Breville Glass Kettle	6
Operating Your Breville Glass Kettle	7
Care and Cleaning	9



Congratulations

on the purchase of your new Breville Glass Kettle

Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following instructions.

IMPORTANT SAFEGUARDS FOR YOUR BREVILLE GLASS KETTLE

- Carefully read all instructions before operation and save for future reference.
- Remove any packaging material and promotional stickers before using the kettle for the first time.
- This appliance has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted. Fully unwind cord before use.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 200mm distance.
- Do not place on or near a gas burner, electric element or in or near a heated oven.
- To protect against electric shock, do not immerse the kettle base, switch area, power base, power supply cord or plug in water or allow moisture to come in contact with these parts.
- Always ensure the kettle switch is in the 'OFF' position, then turn the power off at the power outlet and remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched to 'OFF' position, after water has boiled, before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Keep the appliance clean. Refer to care and cleaning (page 9)
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with this appliance.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is recommended for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.



DO NOT OPERATE THE KETTLE ON AN INCLINED SURFACE. DO NOT MOVE THE KETTLE WHILE IT IS SWITCHED ON.



Before first use

Remove any packaging material or promotional stickers before using your kettle for the first time. It is recommended before the first use to fill the kettle to the maximum level with cold tap water, bring to the boil and then discard the water. Your kettle will only operate when positioned on the power base with the ON/OFF switch in the ON position. The kettle will automatically switch off once the water has boiled.

Operation of your kettle

1. To fill the kettle with water, remove it from the power base and open the lid by pressing the button on top of the lid back towards the handle and lift the lid up. Fill with the desired amount of water. Always fill the kettle between the minimum and maximum marks on the water window. Too little water will result in the kettle switching off.



2. Ensure that the lid is closed and locked firmly into place. Place the kettle firmly onto the power base. Plug the power cord into the 230/240V power outlet and switch 'ON'.
3. Press the ON/OFF switch down to turn ON the kettle. The power 'ON' light will illuminate.

Always fill the kettle to between the minimum (MIN) and maximum (MAX) marks indicated on the handle on the kettle. Too little water will result in the kettle switching 'OFF'. Lift up the ON/OFF to switch it OFF, switch OFF at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add more water. 'Click' sounds may be heard. Then, return the kettle to the power base. The safety device will be reset. Filling above the maximum mark on the exterior of the kettle may result in boiling water splashing from the kettle.

Note

Do not remove the kettle from the power base during operation. Ensure the kettle has switched to 'OFF' position after the water has boiled, before removing the kettle from the power base.

Note



DO NOT OPEN THE LID DURING AND AFTER OPERATION. THIS MAY RESULT IN BOILING WATER SPLASHING FROM THE KETTLE. POUR OUT ALL THE HOT WATER FROM THE KETTLE BEFORE OPENING THE LID TO REFILL.

- The kettle will automatically switch 'OFF' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.
- The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet when not in use.

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

Note

Safety boil dry protection

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating, and the Power On light will go out. Lift up the ON/OFF switch to switch it OFF, switch OFF at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add more water. 'Click' sounds may be heard. Then, return the kettle to the power base. The safety device will be reset.

Always switch off at the power outlet, and then unplug the appliance from the power outlet before cleaning.

Scale filter

The kettle features a mesh filter attached to the lid that removes scale deposits for cleaner water. To clean the scale deposits on the filter, fully open the lid, hold the handle and run it under hot water and rub with a cleaning cloth or brush.

The concealed element is made from high quality stainless steel. Any brown stains appearing are the result of mineral deposits and are not rust.

Note

The filter could become damaged with time, please check regularly and replace if found damaged.

Note

Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior and water gauge to discolour over time. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores.

Alternatively:

- Fill the kettle until $\frac{2}{3}$ full with 1 part vinegar and 2 parts water. Boil and allow to stand overnight.
- Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

To clean the exterior

The outside of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.

Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle.

Note

Do not place a load on the top of the glass or knock the glass on a hard surface or drop the kettle. The glass may break. Always take care cleaning or filling the kettle.

Note



THIS APPLIANCE IS DESIGNED FOR BOILING OF DRINKING QUALITY WATER ONLY. NEVER USE IT TO HEAT OR BOIL ANY OTHER LIQUIDS OR FOODSTUFFS. THE LID SHOULD ALWAYS BE FIRMLY IN PLACE AND LOCKED INTO THE CLOSED POSITION BEFORE USE.



NEVER IMMERSE THE KETTLE BASE, SWITCH AREA, POWER BASE OR POWER SUPPLY CORD IN WATER, OR ALLOW MOISTURE TO COME IN CONTACT WITH THESE PARTS.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>