



Digital Golf Scorecard

LOSE THE PENCIL—
KEEP YOUR SCORE

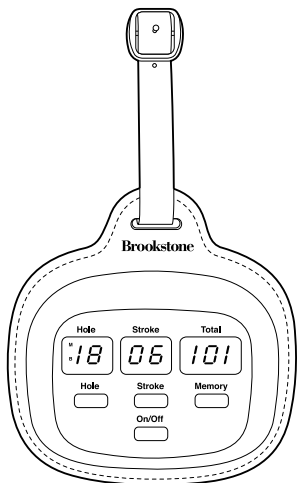

LOCATION OF CONTROLS

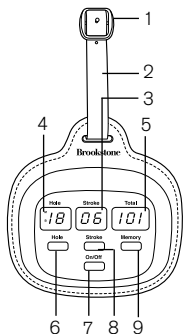

- | | |
|------------------|-----------|
| 1. Buckle | 6. Hole |
| 2. Strap | 7. On/Off |
| 3. Stroke Screen | 8. Stroke |
| 4. Hole Screen | 9. Memory |
| 5. Total Screen | |

USING THE SCORECARD

1. Remove the battery insulation tab from the battery compartment before first use.
2. Press On/Off to turn the unit on.
3. Press Hole repeatedly to select the hole number you are playing (up to 18 holes).

4. After playing the hole, press Stroke to enter the number of strokes taken. The TOTAL screen automatically increases game score when strokes are entered.
5. Press On/Off to turn the unit off.

Note: This unit does not have auto shutoff. Ensure you manually press On/Off to turn the unit off after use.

REVIEWING HOLES PLAYED

1. Press Hole repeatedly to locate the hole you wish to review.
2. Press Hole repeatedly again to return to your present hole.

STARTING A NEW ROUND

Press and hold Stroke and Hole at the same time for three seconds. Two beeps sound, all current playing scores are then erased, and Stroke and Total screens display zero.

USING MEMORY

Press and hold Memory for three seconds. Two beeps sound, and your desired round is now saved into memory.

Note: Saving a new round overwrites the last round saved.

REVIEWING MEMORY

1. Press Memory once to review the saved round. 'M' appears in the top left corner of the Hole screen.

2. Press Hole repeatedly to review your score for each hole of the saved round.
3. Press Memory again. 'M' disappears from the Hole screen, and all screens return to your current round.

Note: You may press memory to toggle between the saved round and your current round.

CLEARING MEMORY

Press and hold Stroke and Memory at the same time for three seconds. Two beeps indicate that memory has been cleared.

REPLACING THE BATTERY

'B' appears in the bottom left corner of the Hole screen when the battery needs replacing.

1. Unsnap the leather holder's back flap.
2. Insert a coin into the indentation and turn counterclockwise until the arrow points to OPEN.
3. Flip the unit over to release the battery cover and insert a new CR2032 button cell battery with the positive side facing up.

4. Replace the battery cover with the arrow pointing to OPEN and turn clockwise until the arrow points to LOCK.
5. Resnap the back flap.

CARE AND MAINTENANCE

- Never immerse unit into any liquid.
- Remove dust or stains with a soft cloth dampened with water or a mild detergent.
- Keep in a dry, cool, dust-free environment or container when not in use.
- Avoid dropping the unit.
- Do not attempt to disassemble the unit.
- Do not expose to prolonged moist conditions.

BATTERY PRECAUTIONS

- Dispose of the old battery properly. Do not dispose of the old battery in a fire.
- Do not leave battery where a child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge or disassemble the battery.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers

other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>