




## • NOTICE •

This spray gun is shipped in Siphon Feed mode, used for a finer finish with light materials. To use the gun with **high-viscosity materials** such as **latex paint**, use the **Pressure Feed mode**.

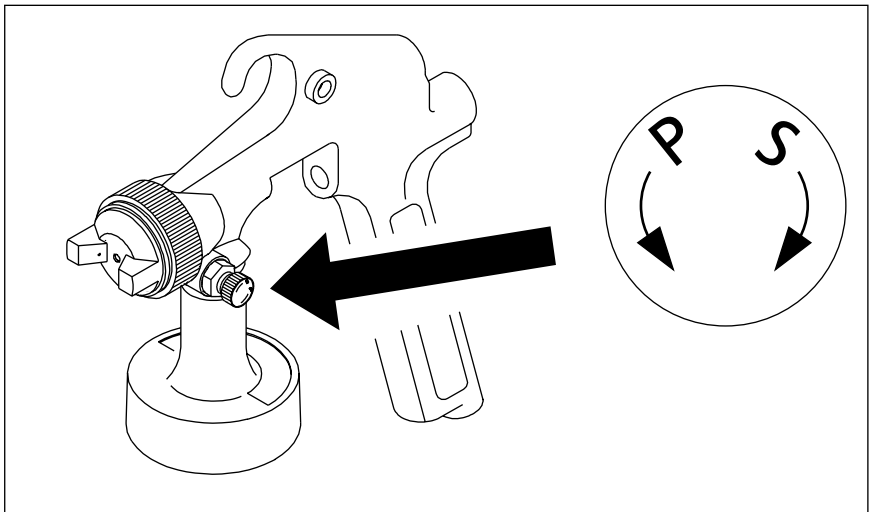

To change from Siphon Feed to Pressure Feed mode, turn the knob shown above from 'S' to 'P' until finger tight.

Thoroughly mix the material in accordance with the manufacturer's instructions. If necessary, thin per paint manufacturer's instructions.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>