



Important Safety Instruction

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Please carefully study this manual and always keep it available. There are, however, some installation and operation procedures which you should be aware of.

- Read these instructions. All safety and operating instructions should be read before the product is operated.
- Keep these instructions. The safety and operating instructions should be retained for future reference.
- Read all warnings. All safety and operating instructions should be adhered to.
- Follow all instructions. All operating and use instructions should be followed.
- Do not use this apparatus near water. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Clean only with dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Clean only with dry cloth.

Exception: A product that is meant for unattended service and that for some specific reason, such as the possibility of the loss of an authorization code for a CATV converter, is not intended to be unattended by the user for cleaning or any other purpose, may exclude the reference to unplugging the product in the cleaning description otherwise required in 131.8(5).

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not operate in the cabinet enclosure unless the manufacturer has provided adequate ventilation and protection to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by the manufacturer. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Use only the car, stand, stand, bracket, or table specified by the manufacturer, or with the apparatus. When a cart is used, use caution when moving the cart/appliance combination to avoid injury from tip-over.

Unpacking

Please make sure the following items are included with your DVD player. If any items are missing, contact your dealer.

- DVD Player
- Remote Control
- Battery
- CD Car Cord
- AC/DC Adapter
- Power Cord
- RCA Cable
- Headphones

Note on Disc

The DVD player can playback the following discs.

Disc Format	Content	Disc Size	Minimum Playback Time
Video disc	Video	120mm (DVD)	100 min (DVD)
Audio disc	Audio	120mm (DVD)	240 min (DVD)
Audio CD	Audio	120mm (CD)	74 min (CD)

In addition, this unit can play back CD-R or CD-RW discs containing audio files or MP3 files. You cannot playback discs other than those listed above (CD-RAM, CD-Extra, CD-i, CD-iG, and CD-i discs can not be played on the DVD player.)

Care of Disc

Video discs contain highly-densified compressed data that needs proper handling.

- Hold the disc's outer edge and/or the center spindle hole. Do not touch the disc surface.
- Do not bend or press the disc. Do not expose the disc to direct sunlight or heating sources.
- Store discs in cabinet vertically, and in dry condition. Prevent exposure to:
 - Direct sunlight
 - Heat or exhaust from a heating device.
 - Extreme humidity.
- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently and radially from center toward the outer edge. Do not use alcohol, benzene, acetone, or any other solvent, or spray when cleaning. Such cleaning fluids will permanently damage the disc surface.

Important Safety Instruction

- Unplug this apparatus during lightning storms or when unused for long periods of time. Unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been splashed or objects have fallen into the apparatus. The apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Power Sources: This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, or contact your power dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- Protective Attachment Plug: The product is equipped with an attachment plug having overload protection. This is a safety feature. See instruction manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Antenna #10 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding conductors, location or antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Open and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric, or other hazards.
- Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

NOTE 1: Mains plug is used as the disconnect device. It shall remain readily operable and should not be identified during intended use.

NOTE 2: The rating label is located on the bottom enclosure of the apparatus.

Safety Precautions

CAUTION: The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of unshielded "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.

CAUTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION: To prevent electric shock, match wide blade plug to wide slot, and fully insert.

CAUTION: This Digital Video Disc Player employs a Laser System. To prevent direct exposure to the laser beam, do not try to open the enclosure. When open and the mirrors are defocused, visible laser radiation is present.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. **DO NOT STARE INTO BEAM.**

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant with the FCC Rule Part 15, these limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions to avoid harmful interference to radio communication.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of the copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

NOTE:

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS Page

SAFETY INFORMATION Page

TABLE OF CONTENTS Page

UNPACKING 1

NOTE ON DISC 2

IDENTIFICATION OF CONTROLS 3,5

CONNECTIONS/Connecting to an amplifier 6

CONNECTIONS/Connecting to an amplifier equipped with a Dolby Digital Decoder 7

PREPARATIONS BEFORE OPERATION 8,10

PLAYING A DISC 11

 
 








 

FUNCTION BUTTONS 13,15

SETUP MENU 16

CUSTOM SETUP 17

TROUBLE SHOOTING 18

SPECIFICATIONS 19

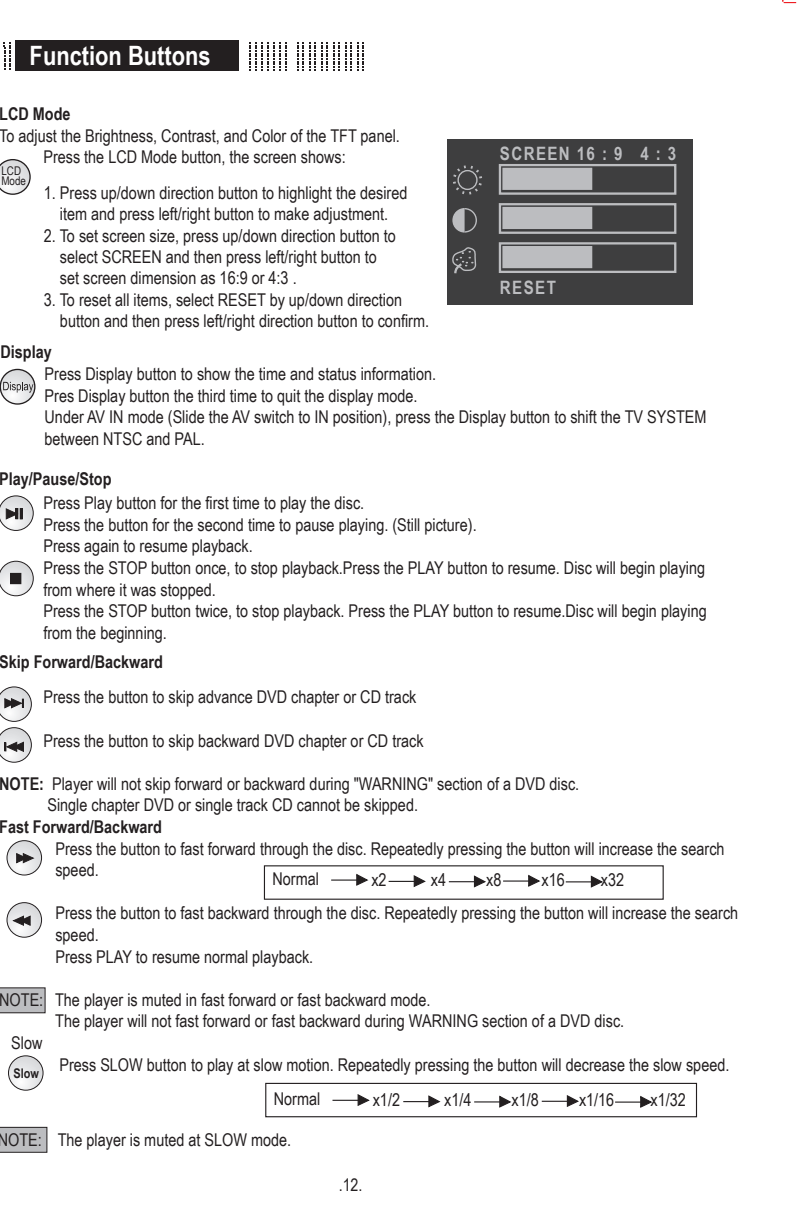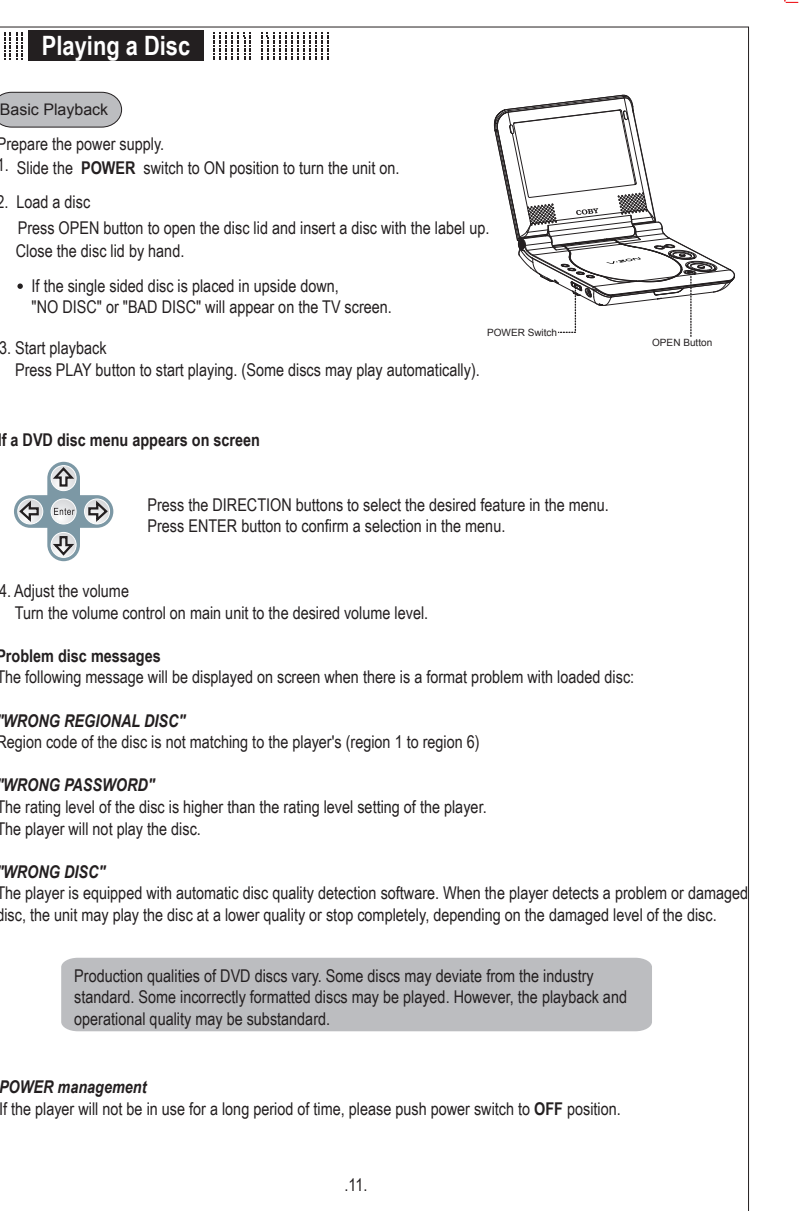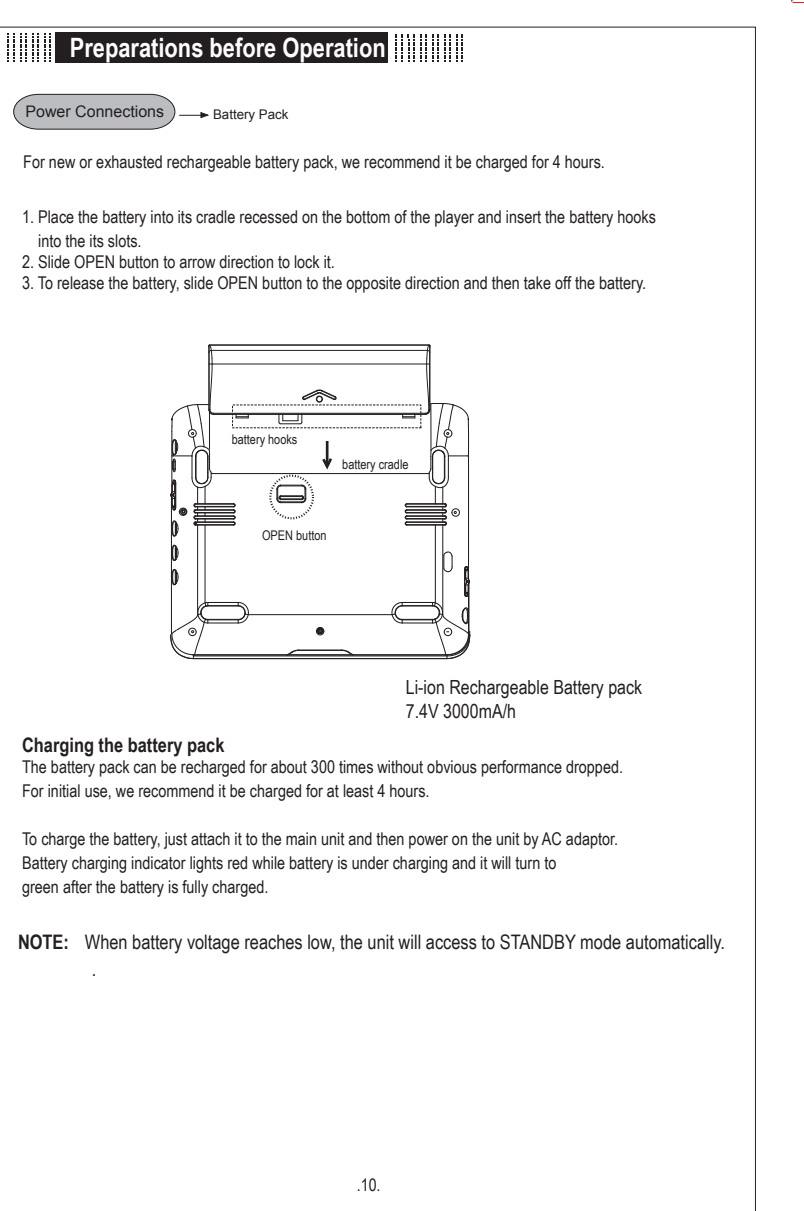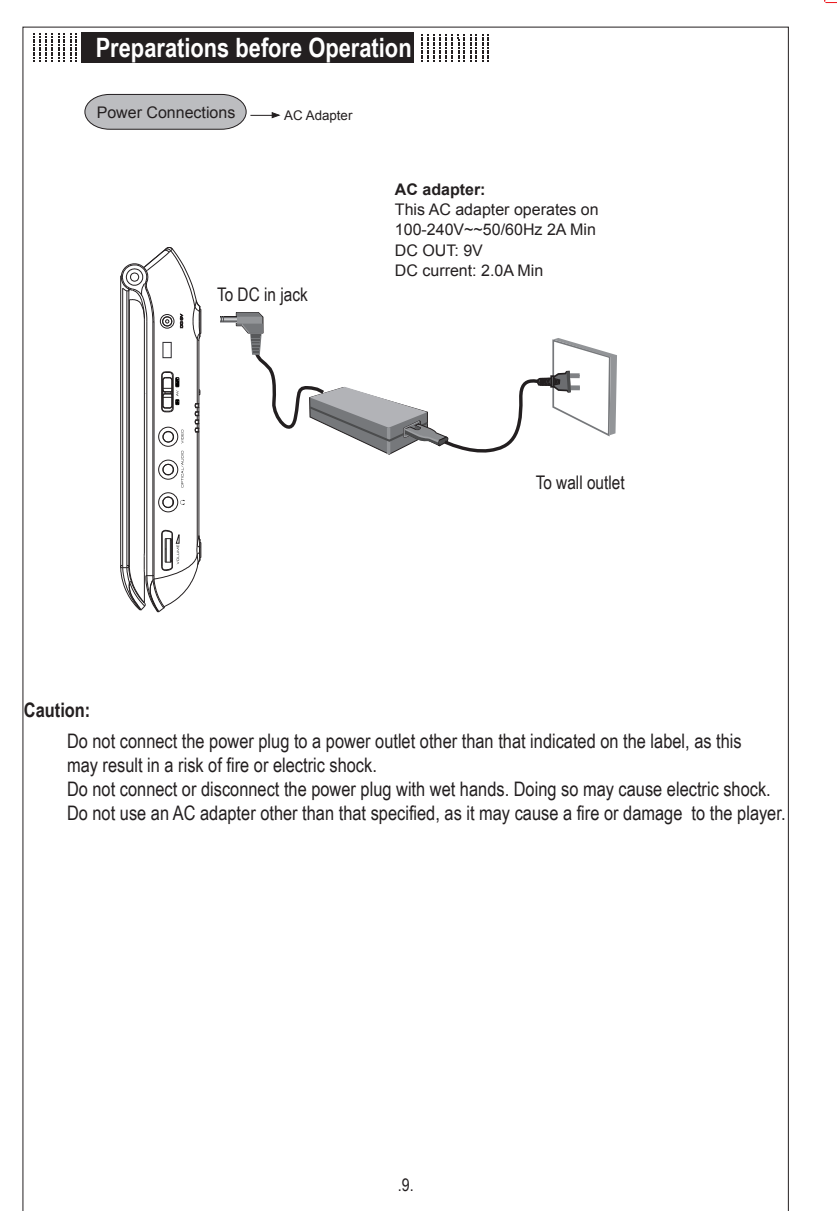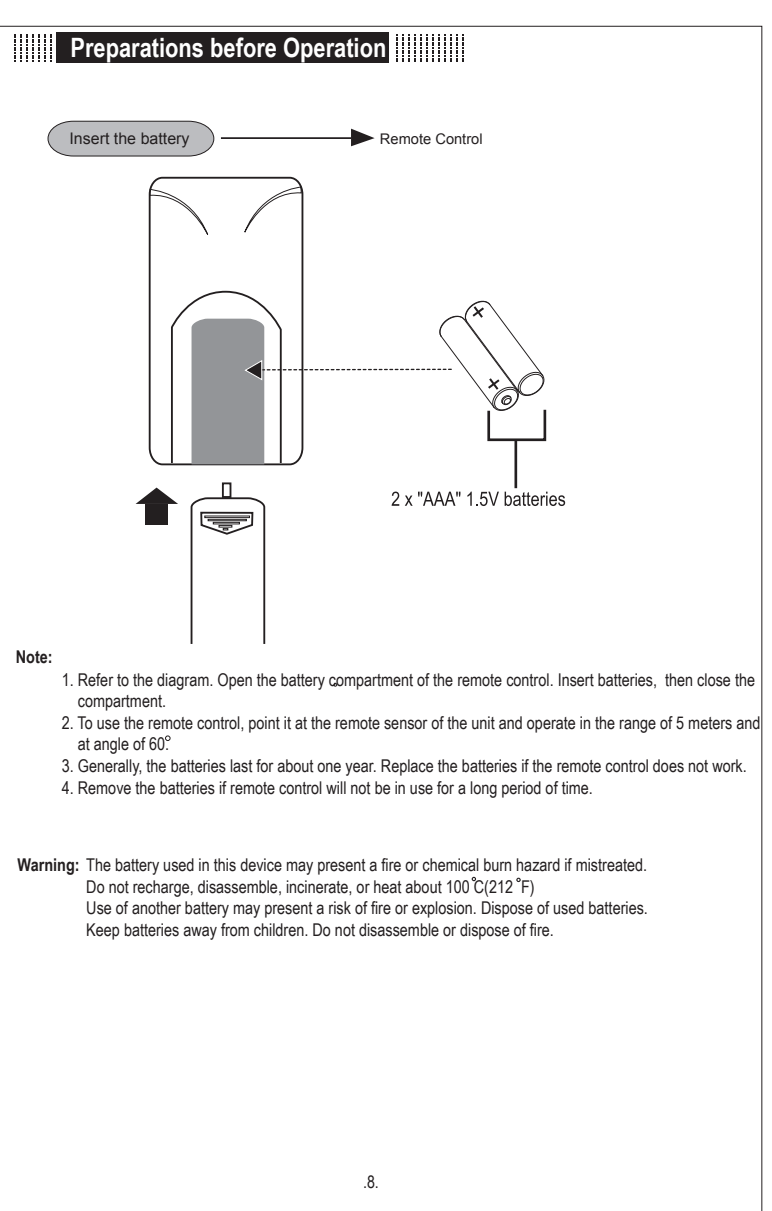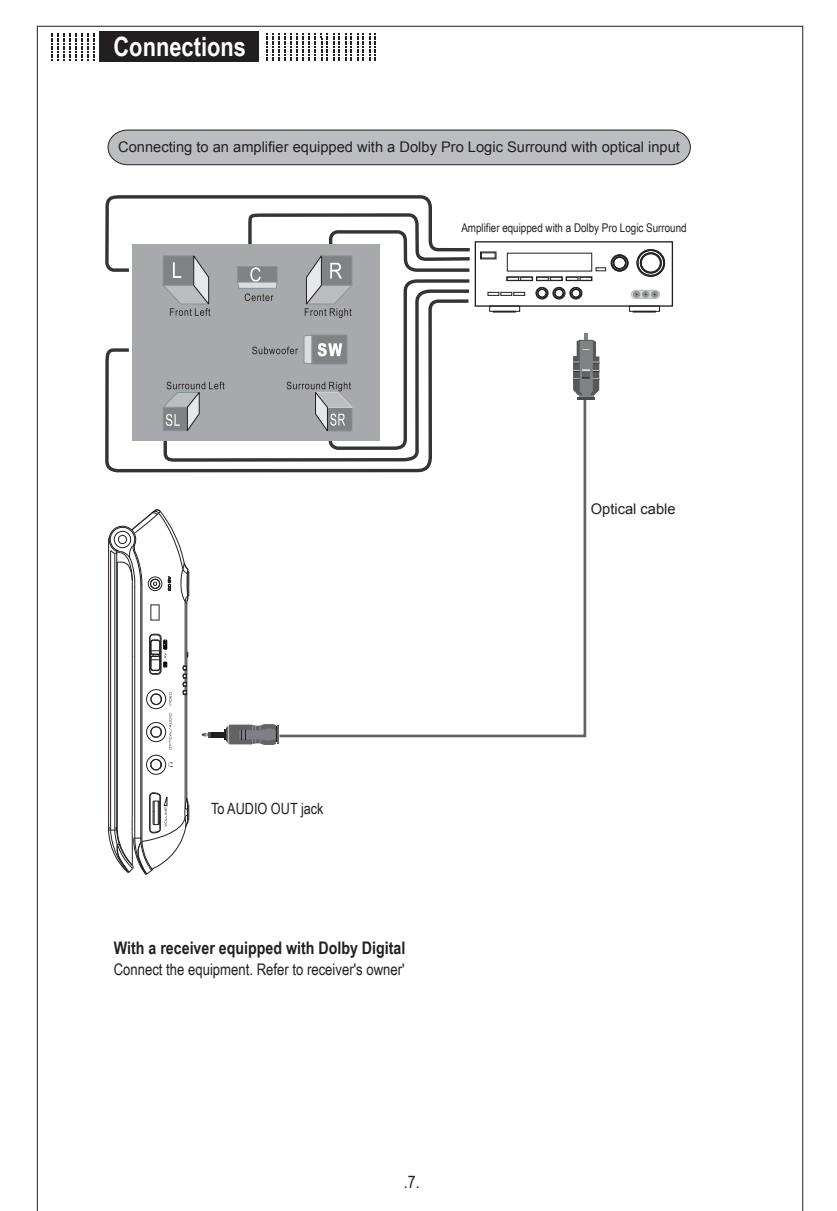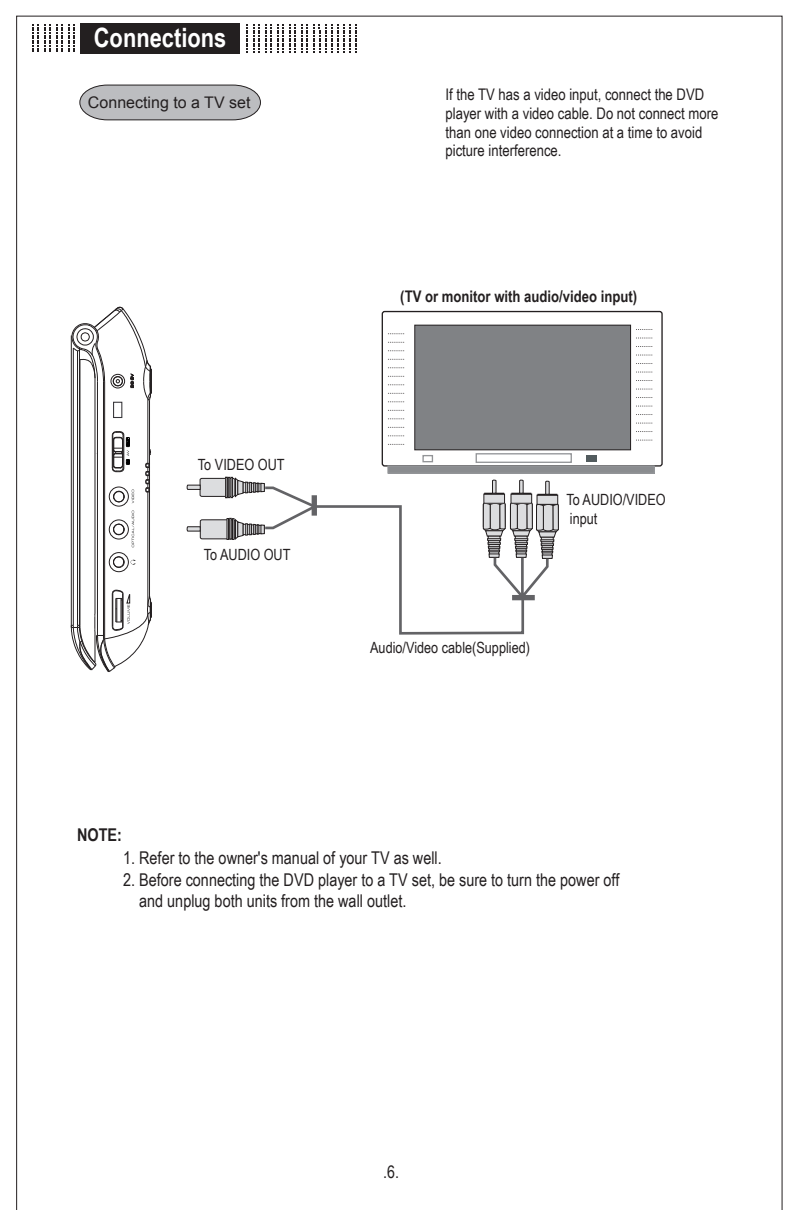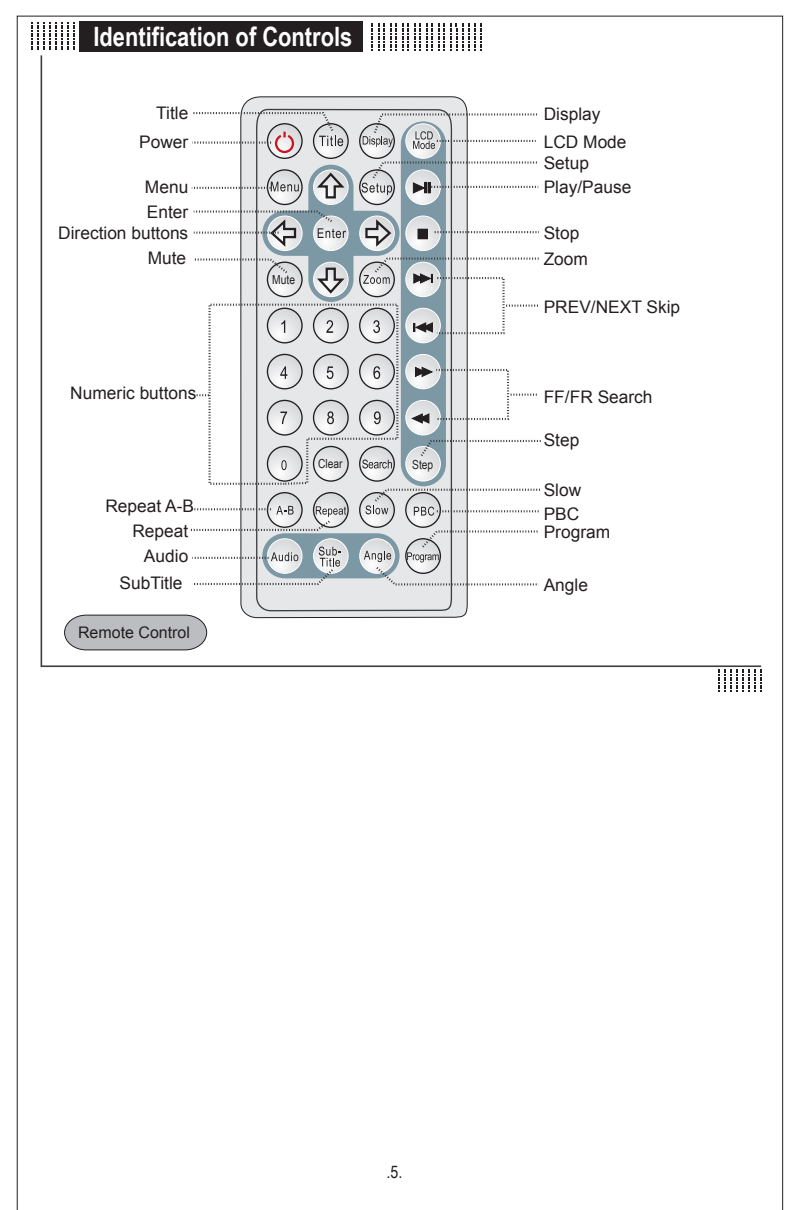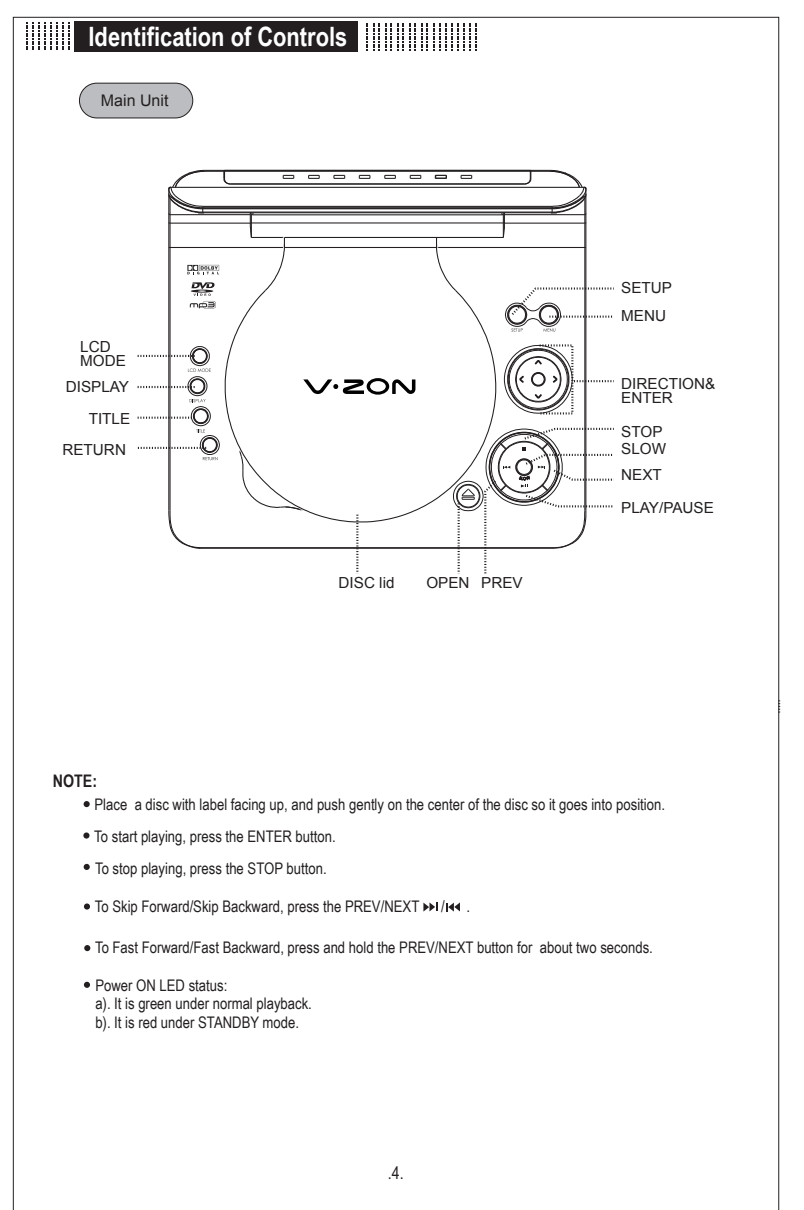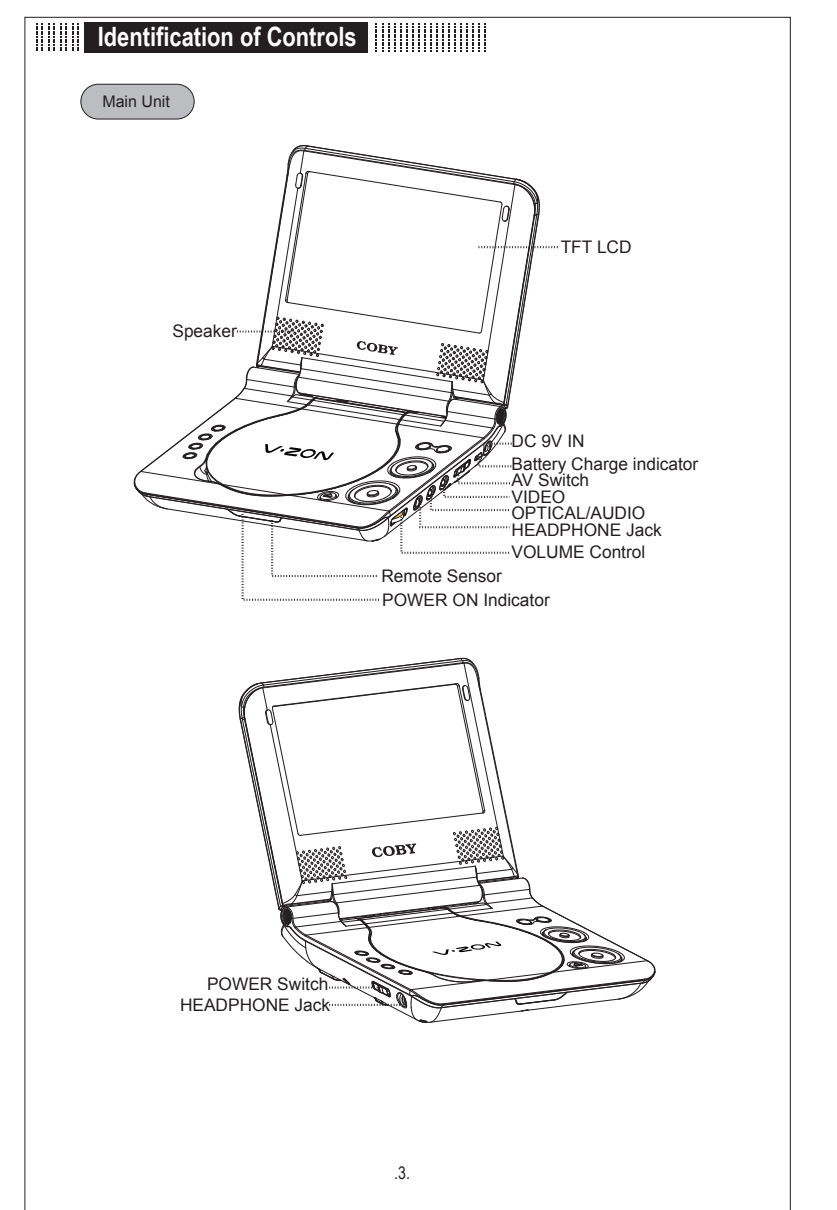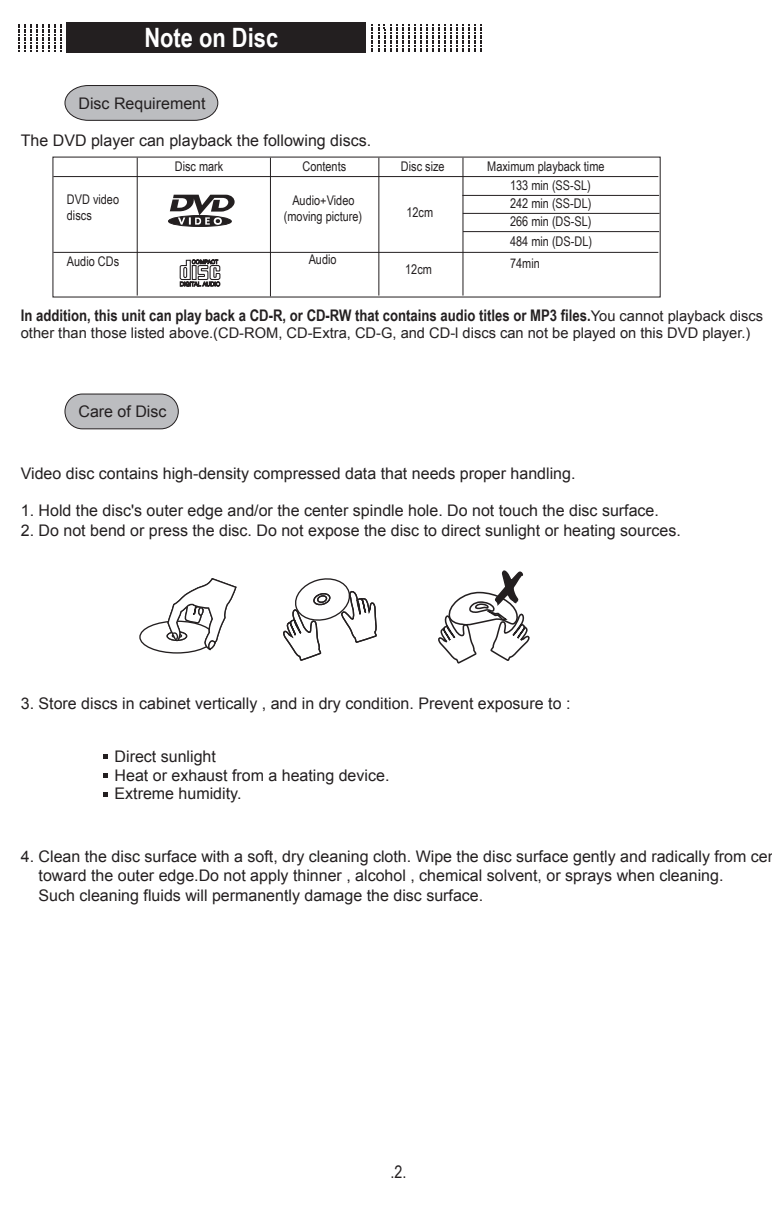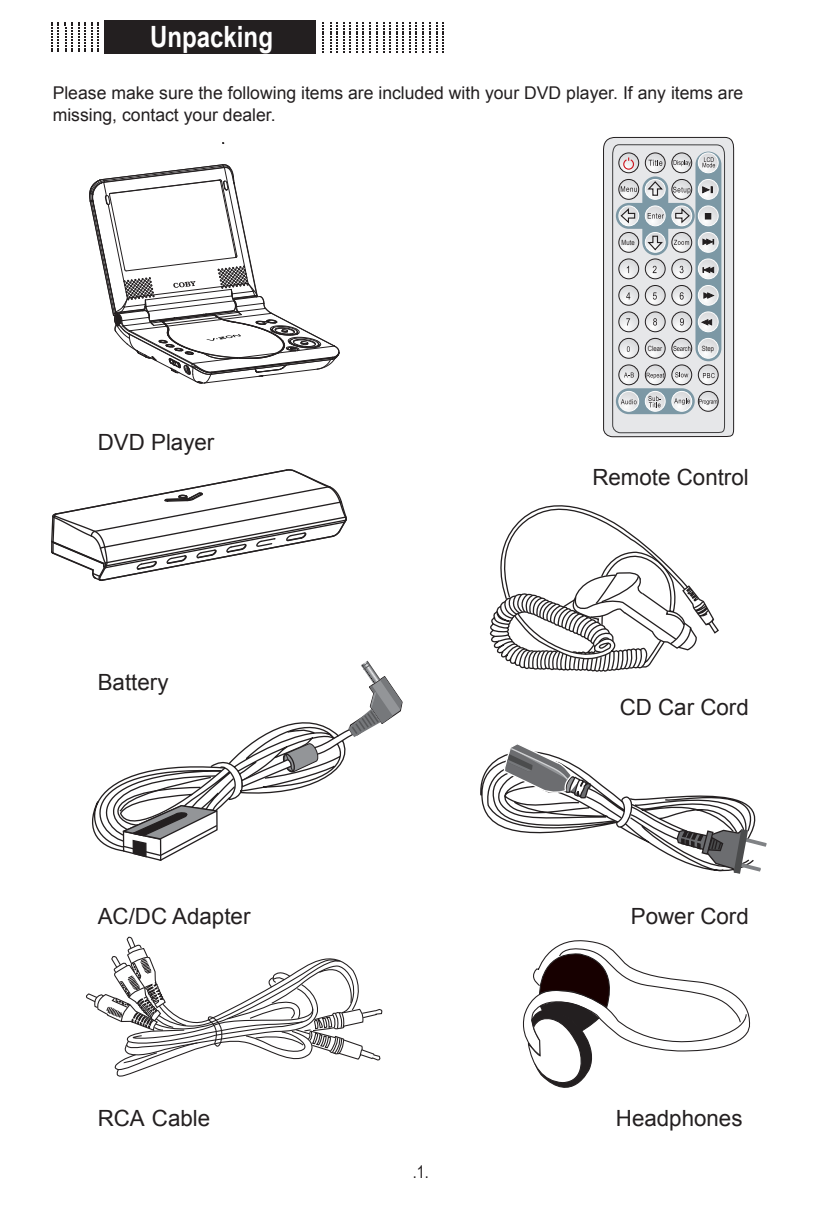

Function Buttons

Disc MENU/TITLE

While playing a DVD, press the MENU button to return to the DVD disc start menu.

While playing a DVD, press the TITLE button to return to the beginning of the Title menu.

Some DVD discs do not allow the TITLE function.

Select an item in the menu

Press DIRECTION buttons to highlight function items. Press ENTER button to confirm a selection.

Press CLEAR button to cancel an entry.

Press the RETURN button on main unit to return to the upper level menu.

Numeric Key Pad

Press the numeric key pad to directly access a DVD Chapter or a CD Track. Input the desired DVD Chapter or CD Track number using the numeric key pad.

Press the RETURN button to return to the player's setup menu.

Some DVD discs do not allow direct access function.

MUTE

Press MUTE button to select mute on or mute off.

ZOOM

PLAYING DVD

Press the ZOOM button repeatedly and the TV screen will display:

200% → 300% → 400% → 500% → 600%

PLAYING STOP

Press the ZOOM button repeatedly and the TV screen will display:

20% → 50% → 100% → 150% → 200%

When at 100%, press the direction button to rotate the picture. When at 150% or 200%, press the direction button to rotate the picture position.

The picture quality degrades as the picture size increases.

Function Buttons

SEARCH

Go to a desired section. (A desired Title, Chapter, Time)

Playing DVD

Search by Title/Chapter

- Press SEARCH button (shown below picture) appears.
- Press LEFT/RIGHT direction button to highlight the entry.
- Input the desired character by numeric keys.
- Press ENTER button to execute search.
- To exit, press SEARCH again.

Search by Time (For limited DVD discs only)

- Press the SEARCH button to show search entry.
- Input Second, Minute and Hour by the numeric keys.
- Press the ENTER button to execute the search.
- To cancel the incorrect information you have input, press the CLEAR button.
- To exit, press SEARCH again.

Repeat Section A/B

- Press the A/B button at the starting point of the desired section. "Repeat A/B" appears on screen.
- Press the A/B button again at the end of the desired section. "Repeat A/B" appears on screen.
- To cancel the incorrect input, press the Clear button.
- Press the ENTER button to execute the search.

NOTE: Some DVD discs do not allow the A/B function playback. This function does not apply to MP3 discs.

REPEAT

Press REPEAT button repeatedly to select the repeat mode.

▶ Track → ▶ Folder → ▶ Disc → ▶ Off

▶ Chapter → ▶ Title → ▶ Disc → ▶ Off

▶ Track → ▶ Title → ▶ Off

NOTE: Some DVD discs do not allow REPEAT function.

STOP

Press STOP button when playing. I can stop frame by frame.

Press PLAY button to select the STOP menu.

Multi-Angle/Subtitle/Audio

While playing DVD disc, press ANGLE button to view different camera angles on the disc. A DVD disc may contain up to 9 selectable camera angles.

While playing a DVD disc, press SUB-TITLE button to select the language of the subtitle. A DVD disc may contain up to 32 selectable subtitles.

Press PROCG button to quit.

Function Buttons

While playing a DVD, press AUDIO button to select the language of the audio sound track. A DVD disc may contain up to 8 selectable audio sound tracks.

NOTE: Some DVD discs do not have multiple ANGLES, SUBTITLES or AUDIO languages.

SETUP

Press the SETUP button to enter the player's setup menu.

The SETUP menu allows the viewer to adjust the setting details of the DVD player.

Please read the "SETUP menu" of the manual for further directions on how to use the SETUP menu.

PROGRAM

To program a disc in a desired sequence.

NOTE: The Program function is available just as the player is in Navigate Off mode.

Press the FRC button to set Navigate Off.

Language Setup

Press the Language button to select the program menu.

a. When the program menu appears, highlight "Title" column by RIGHT button; select the title by UP/DOWN button.

b. Press right button to move to "Chapter" column.

c. Press up/down button to select the chapter.

d. Press PLAY button to confirm.

NOTE: You can only assign chapter number directly by the numeric buttons.

e. Repeat the above steps to program up to 20 tracks.

f. Press PLAY to start playback.

g. Press PROCG button to quit.

MP3 mode

When the program menu appears, press direction button to select a desired file.

The selected file might be in different folders, press left/right button to open/enter the folder.

Press right direction button to confirm. The chosen file will be played in a programmed once.

To cancel selection, press right direction button again.

Repeat steps above to select tracks you wish to play.

Press PLAY to start playback.

Press PROCG button to quit.

Setup Menu

Various features of the DVD player can be adjusted in the SETUP menu:

- Press SETUP button to show "help" menu.
- Press the direction button to select a desired item.
- Press ENTER button to confirm.
- Press SET button again to go to "Or select EXIT" and press ENTER.

NOTE: Make sure the player is in STOP mode before setting the SETUP menu.

Language Setup

Press the Language button to highlight the desired LANGUAGE item.

Item	Instruction	Default setting
Language	To select the language of the menu.	English
OSD	To select the language of the OSD.	English
Menu	To select the language of the menu.	English
Audio	To select the language of the audio sound track.	English
Subtitle	To select the language of the subtitle.	English

NOTE: When OFF is selected, the subtitle will not be displayed.

Screen Setup

Press the Screen button to highlight the desired SCREEN item.

Item	Instruction	Default setting
TV Type	To select the TV screen size from 4:3 (Full Screen) to 16:9 (Wide Screen)	16:9
Screen Saver	To Screen Saver function ON or OFF.	OFF
TV System	To select the TV system from: NTSC, PAL, AUTO	NTSC
Brightness	To select the brightness from: Normal, Bright, Soft	NORMAL
Contrast	To select the contrast level from: 4, 7, 10, 13, 16, 19	9

NOTE: Certain DVD discs are formatted in wide screen (16:9) or letter box (4:3) only. Adjusting the setting of the player will not change the screen size for these. Format only disc.

The TV system for North America is NTSC. Also should only be used if you have a Multi-System TV.

Audio Setup

Press the Audio button to highlight the desired AUDIO item.

Item	Instruction	Default setting
SPDIF	To select the digital output from: SPDIF/COAX, SPDIF/AUX, OFF	SPDIF/AUX

NOTE: When Digital Out is NOT in use, it is recommended to turn OFF the digital out setting for the purpose of minimizing the circuit interference.

Custom Setup

Press the direction keys to highlight the desired Custom Item. (Parental Ctrl, Password, Angle Mark, Default)

A Parental Ctrl

There are eight levels of Parental Control. Level one opens discs to people of all ages. Level eight is suitable only for adults.

To change the parental control setting, a 4-digit code is required to be input first. (The default code is 8888.) When the four code is confirmed, the level setting menu will appear. Select the appropriate level by the UP/DOWN button, and press ENTER to confirm.

B. Password

Make the screen to be the PASSWORD prompt and press ENTER. Input the password 8888 if it is the first use. After confirmation, you will be required to input a new 4-digit code, and verify again.

WARNING:

- Protect a copy of the new password in a safe place. Otherwise, you will not be able to change the Parental Control.
- Remember your password, as the DEFAULT setting will revert everything BUT the PASSWORD to the factory default.

C. Angle Mark

Choose between ON and OFF.

When the Angle Mark function is ON, an icon will be displayed on screen if the disc has multiple angle shots available for viewing.

Press ANGLE on the remote control to enjoy these scenes.

D. Default

This function allows you to change the player back to the factory default settings. All settings will be changed back to the original settings except the Password.

Trouble Shooting

Should your DVD player develop a problem, please check below before requesting service:

Symptom	Check and Action
No power	1. Make sure the power cord is plugged in or unplugged properly. 2. Check the power cord and power connections to the power outlet. 3. Make sure the battery pack is fully charged.
Does not play	1. No disc, load a disc. 2. Disc has been loaded upside down. Place the disc with the label side up. 3. Disc's rating level is higher than the player's setting. 4. Disc is incorrect type for the player. 5. Disc is damaged or dirty. Clean the disc or try another one. 6. Malfunction may be contained inside the player. Remove the disc and leave the unit power on for one or two hours.
No Picture	1. Check if the TV set has been powered on. Use TV remote to select AV signal for DVD or other than broadcast. 2. Check if the power cord and audio system connections are correct. 3. Check if the AV cable function of the TV amplifier has been activated. 4. Check if the connections cables are damaged. 4. Clean the disc.
Picture noisy/green	1. Disc is damaged or dirty. Clean the disc or try another one. 2. Check the cable system of the TV set. 3. Make sure the DVD player is not connected through a VCR, cable or satellite dish.
No sound or sound output not complete	1. Check if the TV and amplifier have been switched on and correctly set. 2. Check if the TV and amplifier system connections are correct. 3. Press A/D/O button to select other audio tracks of the disc. 4. Check if the AV cable function of the TV amplifier has been activated. 5. There will be no sound output during REVERSE PLAY/PAUSE/SLOW and SEARCH.
Remote control does not work	1. Make sure the POWER button on the unit has been turned on manually. 2. Remove the obstacle between the remote control and the player. 3. Press A/D/O button to select other audio tracks of the disc. 4. Check if the batteries of the remote control have been inserted correctly. 5. Replace the batteries of the remote control.
Malfunction	Should the player develop a malfunction, unplug the player for 30 minutes. After that, power on the player and the manufacturer's service should reset the player.

Specification

Power supply	DC 9.0V 2A (AC adapter TERMINAL)
Power consumption	4.9 8W
Signal system	NTSC, PAL
Video output	140.2V (p-p), 75ohm, composite signal, 3.5 mm mini jack x1
Audio output	1.5 Vrms (1 kHz, 0dB), 3.5 mm mini jack x1
Capstone terminal	3.5mm stereo mini jack x2
Signal Noise ratio(audio)	90dB typical
Dynamic range(audio)	140.2V (p-p), 75ohm, composite signal, 3.5 mm mini jack x1
Resolution	480 X 234 pixels
Laser	WaveLength: 650 nm
Operating conditions	Temperature: 0°c to 35°c, Operation status: Horizontal
Dimensions	118 (x) 88 (y) 38 (z) mm (main unit)
Weight	370g (main unit)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>