

LIFETIME LIMITED WARRANTY

Your Cuisinart® MultiClad Pro Non-Stick Stainless Cookware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime. If your cookware should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190, or write to Consumer Service Center, Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please also enclose \$7.00 for shipping and handling of the product. Please also be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by check or money order.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces which does not impair the functional utility of the cookware.

This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions. California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store which sells Cuisinart® products of the same type. The retail store shall then, at its choice, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished.* Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

*California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Customer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

©2007 Cuisinart

Cuisinart® is a registered trademark of Cuisinart,
150 Milford Road, East Windsor, NJ 08520
Printed in China 07CUC2003

IB-6227A

Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.



Cuisinart®

MultiClad Pro Non-Stick Cookware

MultiClad Pro Cookware

Use and Care Guide

PROFESSIONAL COOKWARE FOR GOURMET COOKING

Cuisinart® MultiClad Pro Non-Stick Stainless is an investment that will prove its worth every time you use it. Exclusively designed triple ply material provides superior heat conductivity and even heat distribution to meet the demands of gourmet chefs everywhere. When properly cared for, your Cuisinart® MultiClad Pro Non-Stick Stainless Cookware will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain the cookware's original beauty.

■ ESSENTIAL PRECAUTIONS


Never use Cuisinart® MultiClad Pro Non-Stick Stainless Cookware on high heat. Food will burn. The triple ply construction of this cookware is highly conductive and efficient for quick, even heat distribution. We recommend using a low to medium setting for most cooking. To boil water, medium-high is sufficient. Never leave Cuisinart® Cookware or any pan empty over a hot burner. Doing so can ruin the pan and cause damage to the stovetop.

CUISINART® MULTICLAD PRO NON-STICK COOKWARE

Construction ensures unsurpassed heat distribution. Cookware heats quickly and spreads heat evenly. Eliminates hot spots.

■ TRIPLE-LAYER CONSTRUCTION DELIVERS DURABILITY AND PROFESSIONAL COOKING PERFORMANCE:

1. Quantumium® Non-Stick Cooking Surface is reinforced with titanium for lifetime food release, healthy cooking and easy cleaning.
2. Aluminum core heats quickly and cooks at an even temperature.
3. Brushed stainless exterior finish for enhanced beauty and easy cleaning.

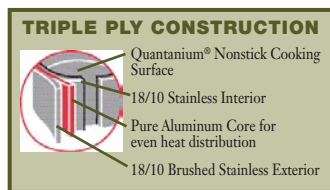

■ BEFORE USING

Wash your new cookware in hot water with a mild soap or dish detergent, or in a dishwasher, before using for the first time. Rinse thoroughly and wipe dry immediately with a soft dish towel, or you may place your Cuisinart® MultiClad Pro Non-Stick Stainless cookware in a dishwasher.

■ EASY MAINTENANCE

Immediately after each use, fill the pan with hot water and liquid dish detergent; let stand until lukewarm. Use a sponge or soft cloth to remove any remaining food particles. **Do not use steel wool or other metal pads that make coarse scratches.** Rinse thoroughly and dry immediately for a flawless finish.

Cuisinart® MultiClad Pro Non-Stick Stainless features oven-safe handles that can withstand oven temperatures up to 500°F. Caution should be used when handling any cookware handles and we recommend the use of potholders.

■ WHAT ABOUT THE DISHWASHER?

Cuisinart® MultiClad Pro Non-Stick Stainless is dishwasher-safe, but remember that soil from other dishes may be abrasive. If the dishwasher is carelessly packed, other dishes or flatware may mar the surface of the cookware. Over a long period, regular dishwasher cleaning will eventually scratch any utensil. We recommend using a non-lemon detergent.

■ PROPER COOKING UTENSILS?

We recommend using plastic or wooden utensils with your Cuisinart® MultiClad Pro Non-Stick Stainless Cookware. Refrain from cutting foods or using sharp utensils such as forks, knives, mashers or whisks that can scratch the cooking surface.

■ TO REMOVE STAINS

Calcium in your water may leave a multicolored stain. This is a harmless deposit and can be removed with a little warm vinegar. Certain foods such as pasta or oatmeal may leave a light residue or cloudy appearance. This can be easily removed with any of these cleaning products: Bon Ami®, Cameo® Stainless Steel or Metal Cleaner, Nevv-Dull®.

■ TO REMOVE STUBBORN RESIDUE

When food is burned in the pan, a stubborn black residue may remain. If soaking does not loosen it, add water to a depth of one inch in the pan, then add a tablespoon of dishwasher detergent (a non-lemon product). Bring to a boil, reduce heat and simmer for 15 minutes. Let cool in the pan, then drain and rinse. Loosen the residue with a sponge or plastic spatula. Repeat if necessary.

CAUTION: Detergent fumes can be irritating. Carry out this procedure under a hood with an exhaust fan or in a well-ventilated room.

■ TO REMOVE BURNER STAINS

Stains on the outside bottom (not sides) of pans can be removed with an oven cleaner. Follow the manufacturer's directions and spray or brush the cleaner on only the outside bottom of the pan. If the directions call for using the cleaner in a warm oven, heat the pan before applying the cleaner. Rinse thoroughly after cleaning.

■ COOKING OVER A GAS BURNER

When cooking over a gas burner, make certain the flame touches only the pan bottom. If the flame comes up the sides of the pan, energy is wasted and the sides of the pan may become permanently discolored.

IMPORTANT NOTE: Cuisinart® MultiClad Pro Non-Stick Stainless Cookware has exceptionally high thermoconductivity, and even a low setting on some gas burners will overheat or even burn foods such as thinly sliced onions. An inexpensive gas "flame-tamer" placed between the burner and the bottom of the pot solves this problem. Flame-tamers are readily available at most hardware stores.

■ COOKING TEMPERATURE IN OVEN

Cuisinart® MultiClad Pro Non-Stick Stainless Cookware can be used in the oven without damage. Naturally, the handle as well as the pan will become hot. Use potholders to prevent burns. The cookware can be used in the oven at any baking temperature up to 500°F and can go from burner to oven and to table when placed on a heat-resistant trivet.

■ CONVENIENT STORAGE

A cookware rack or pegboard provides convenient, safe storage for your Cuisinart® MultiClad Pro Non-Stick Stainless Cookware. Stacking and crowding in cabinets or drawers may cause scratches.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>