

Cuisinart®

INSTRUCTION AND RECIPE BOOKLET



Cuisinart™ Tazzaccino™ Milk Frother **FR-10 Series**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Always unplug unit from outlet when not in use, before putting on or taking off parts and before cleaning. To unplug, grasp plug and pull from electrical outlet. Never pull cord. Allow to cool before handling.**
3. To protect against risk of electric shock, do not put motor base, power cords and plugs in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if appliance has been dropped or damaged in any manner. Return the appliance to the nearest authorized Cuisinart Service Facility for examination, repair, and electrical or mechanical adjustment.
6. The use of attachments not recommended or sold by Cuisinart may cause fire, electric shock or injury.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Do not plug in or take out plug when your hands are wet.
9. Do not use outdoors.
10. Do not touch hot surfaces.
11. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
12. Do not use the appliance for other than intended use.
13. Where applicable, always attach plug to appliance and check that the control is off before plugging cord into wall outlet. To disconnect, turn the control to OFF, then remove plug from wall outlet.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.

-
15. Be especially careful when opening the cover; the contents in the unit tank can splash out.
 16. Do not move the unit while it is switched on. While being moved, hot liquid can escape from the unit.
 17. Scalding may occur if the lid is removed during the mid-cycle.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power supply cord is provided to reduce the risks of becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over unintentionally.

NOTICE

This appliance has a polarized plug (one prong is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FEATURES AND BENEFITS

1. **Transparent Cover with Seal**

eliminates leaks and lets you watch frothing process. It is also magnetized to store un-used attachment.

2. **Double-Walled Housing**

stays cool to the touch when frothing hot milk

3. **Hot Milk Button**

is used to froth hot milk or warm up milk

4. **Cold Milk Button**

lets you froth cold milk

5. **Milk Frothing Whisk**

aerates milk to create creamy foam

6. **Milk Warming Stirrer**

stirs milk as it heats to prevent burning

7. **Froth Spoon**


makes it easy to scoop out froth

8. **Detachable Cord**

for easier storage

9. **BPA-Free (not shown)**

parts include everything that comes into contact with food

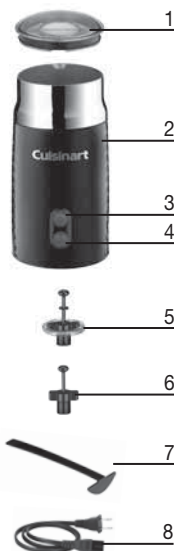

BEFORE THE FIRST USE

Carefully unpack the unit and remove any packaging and promotional labels in or on the milk frother.

Rinse all accessories thoroughly in warm soapy water and then dry completely.

OPERATING INSTRUCTIONS

Frothing Milk

1. Remove the cover and insert the milk frothing whisk in the recess in the bottom of the housing.
2. Fill the tank with the desired amount of milk.



Note: Never fill milk over the MAX fill line. ☹️ Frothed milk expands and it will overflow the tank if the level is too high.



3. Put the cover back on the tank.
4. Start frothing by pressing the corresponding Milk Button (top position button for HOT and bottom position button for COLD). The LED light will be illuminated during operation.

Note: Preparation stops automatically after 2 minutes, depending on the amount of milk.

5. Open the cover after frothing is complete.
6. Pour or ladle the milk froth into a cup or glass.
7. After using the unit, clean it as described in the Cleaning and Maintenance section, next page.



Note: Wait for tank to cool before cleaning.

Warming Milk

1. Remove the cover and insert the milk warming stirrer.
2. Fill the tank with the desired amount of milk.



Note: Never fill milk over the MAX fill line.

3. Put the cover back on the tank.
4. Start warming milk by pressing the corresponding Hot Milk Button (top position). The LED light will be illuminated during operation.



Note: Preparation stops automatically after 2 minutes, depending on the amount of milk.

5. Open the cover after warming is complete.
6. Pour the warmed milk into a cup or glass.
7. After using the unit, clean it as described in the Cleaning and Maintenance section, next page.

Note: Wait for tank to cool before cleaning.

CLEANING AND MAINTENANCE

Always make sure the appliance is unplugged before you start cleaning it.

1. Clean the exterior of the unit with a soft, moist cloth. If heavily soiled, a mild detergent can be used.
2. Remove the whisk or stirrer from tank and rinse them with soap under warm running water. Seal on cover can also be removed and rinsed under warm, soapy water.
3. Clean out the tank with hot water and a soft cloth after use. If the tank is still soiled, wash using a soap solution and rinse thoroughly. Use a soft cloth to prevent damaging the nonstick coating.

CAUTION: Never submerge the base, the power cord or plugs in water or other liquids.

4. Any service other than cleaning and normal user maintenance should be performed by an authorized Cuisinart Service Representative.

TROUBLESHOOTING

Q: Why are LED lights not illuminating after I push the corresponding button?

A: The plug is not plugged in. Make sure plug is placed correctly in the socket.

A: Temperature monitoring has been triggered. Let the unit cool for 5 minutes.

A: Filling level was too high. Reduce the amount of milk in the tank.

Q: Why is milk leaking from around the cover?

A: The seal ring is missing or dirty. Clean the seal ring and replace.

A: The cover is not placed correctly over the milk tank. Put the cover on so that it is flush with the tank and the seal is not showing.

Q: Why is the milk froth not coming out the way I want?

A: The wrong attachment may be in place in the milk tank. Double check and make sure the milk frothing whisk is inserted in the tank correctly.

RECIPES

Espresso Macchiato

A simple spot of foam makes this drink a classic.

Makes 1 serving

1 **tablespoon cold skim milk**

1 **shot espresso**

1. With the frothing whisk in place, add the milk to the tank. Cover and press the hot milk button.
2. Pour espresso into a demitasse cup.
3. When the frothing process is complete, use the froth spoon to dollop the foam on top of the espresso. Serve immediately.

Espresso Breve

American version of a latte – substituting half & half for milk.

Makes 1 serving

¾ **cup cold half & half**

1 **shot espresso**

1. With the warming stirrer in place, add the half & half to the tank. Cover and press the hot milk button.
2. Pour espresso into a mug.
3. When the warming process is complete, pour the cream into the espresso and serve immediately.

Cappuccino

A thick layer of foam and bit of milk let the boldness of the coffee shine through in this popular drink.

Makes 1 serving

¼ **cup cold skim milk**

1 **shot espresso**

1. With the frothing whisk in place, add the milk to the tank. Cover and press the hot milk button.
2. Pour espresso into a mug.
3. When the frothing process is complete, pour the milk into the espresso, using a spoon to hold back the foam. Top with 2 to 3 tablespoons of the foam. Serve immediately.

Caffè Latte

Similar to a cappuccino, this drink contains more milk, which makes it creamy.

Makes 1 serving

½ cup cold skim milk

1 shot espresso

1. With the frothing whisk in place, add the milk to the tank. Cover and press the hot milk button.
2. Pour the espresso into a mug.
3. When the frothing process is complete, slowly pour the milk into the espresso, using a spoon to hold back the foam. Top with foam and serve immediately.

Caffè Mocha

This ultra-rich drink makes the perfect ending to any special meal.

Makes 1 serving

¼ cup cold skim milk

1 shot espresso

1 tablespoon chocolate syrup

2 tablespoons sweetened whipped cream

1 teaspoon shaved bittersweet chocolate or unsweetened cocoa powder (for garnish)

1. With the frothing whisk in place, add the milk to the tank. Cover and press the hot milk button.
2. Pour the espresso and chocolate syrup into a mug and stir to combine. When the frothing process is complete, pour the milk into the mug, using a spoon to hold back the foam.
3. Top with a dollop of the foam, whipped cream, and garnish with chocolate. Serve immediately.

Iced Cappuccino

Cool down during the warmer months with this refreshing drink.

Makes 1 serving

2 tablespoons cold skim milk

4 ice cubes

1 shot espresso, chilled

1/3 cup whole milk

1. With the frothing whisk in place, add the skim milk to the tank. Cover and press the cold milk button.
2. Put the ice cubes, espresso, and whole milk into a glass. Stir to combine.
3. When the frothing process is complete, top the drink with the foam. Serve immediately.

Hot Chocolate

Why wait for the snow? Hot chocolate in an instant is perfect anytime.

Makes 1 serving

1/2 cup cold whole milk

1 1/2 tablespoons chocolate syrup

1. With the warming stirrer in place, add the milk to the tank. Cover and press the hot milk button.
2. Pour the syrup into a mug.
3. When the warming process is complete, pour the milk into the mug and stir well to combine. Serve immediately.

Flat White

Similar to a latte, this creamy espresso-based drink was developed in Australia and New Zealand.

Makes 1 serving

1/2 cup cold skim milk

1 shot espresso

1. With the frothing whisk in place, add the milk to the tank. Cover and press the hot milk button.
2. When the frothing process is complete, pour the milk into a mug, using a spoon to hold back the foam. Pour the espresso over the milk.
3. Top with a bit of the foam and serve immediately.

Café au Lait

French for “coffee with milk,” serve this alongside fresh pastries for a mid-morning treat.

Makes 1 serving

½ cup cold whole milk

½ cup strong, freshly brewed coffee

1. With the warming stirrer in place, add the milk to the tank. Cover and press the hot milk button.
2. When the warming process is complete, simultaneously pour the milk and coffee into a mug to mix. Serve immediately.

Sleepy Time Milk

This soothing concoction will make you feel warm and cozy, whether before bed or on a wintry day.

Makes 1 serving

1 cup cold whole milk

1 tablespoon honey

⅛ teaspoon freshly grated nutmeg plus more for garnish

1. With the warming stirrer in place, add the milk to the tank. Cover and press the hot milk button.
2. Add the honey and the nutmeg into the bottom of a mug.
3. When the warming process is complete, pour the milk into the mug and stir to combine. Top with additional nutmeg and serve immediately.

Chai Tea

Store leftover tea in the refrigerator and serve over ice for a chilled version.

Makes 1 serving*

4 cups water

3 whole cinnamon sticks

1 vanilla bean, cut into ½-inch pieces

¾ teaspoon ground ginger

1½ teaspoons allspice berries

2 teaspoons cardamom pods

-
- ¾ teaspoon whole cloves**
 - 4 teaspoons loose black tea, such as Darjeeling**
 - 2 tablespoons brown sugar**
 - ⅓ cup cold whole milk**

1. Combine all ingredients except the sugar and milk in a large saucepan. Bring to a boil; remove from heat and steep mixture for 15 minutes.
2. Pour the liquid through a fine mesh strainer into a clean saucepan. Add the brown sugar and cook over medium-low heat for 5 to 10 minutes, stirring occasionally to dissolve the sugar and slightly reduce the tea. Remove from heat and measure out 1 cup of tea into a mug.
3. With the warming stirrer in place, add the milk to the tank and press the hot milk button. Pour milk into tea and stir. Serve immediately.

*This recipe makes more tea than is needed for a single serving; however, we like to prepare this as a larger batch for having on hand when desired.

Hot Milk Punch

Stay warm with this cocktail, which is traditionally imbibed during the holiday season.

Makes 1 serving

- 1 cup cold whole milk**
- 2 tablespoons dark rum**
- 2 tablespoons brandy**
- 1½ teaspoons granulated sugar**
- ¼ teaspoon vanilla extract (optional)**
freshly grated nutmeg, for garnish

1. With the warming stirrer in place, add the milk to the tank. Cover and press the hot milk button.
2. In a large mug or heatproof glass combine the rum, brandy, sugar and vanilla.
3. When the warming process is complete, pour the milk into the mug and stir well to combine and dissolve the sugar. Top with freshly grated nutmeg and serve immediately.

Creamy Irish Coffee

Baileys and frothed milk make a sweeter, more delicate version of the traditional drink.

Makes 1 serving

- 3 tablespoons cold skim milk**
- 1 cup hot, fresh brewed coffee**
- 1 teaspoon granulated sugar**
- 3 tablespoons Baileys Irish Cream**

1. With the frothing whisk in place, add the milk to the tank. Cover and press the hot milk button.
2. In a large mug or heatproof glass combine the coffee and sugar and stir to dissolve. Add the Baileys and stir to combine.
3. When the frothing process is complete, use a spoon to dollop the foam on top of the drink. Serve immediately.

Maple Cinnamon Oatmeal

Cut your morning cook-time with this quick yet satisfying breakfast.

Makes 1 serving

- ½ cup cold whole milk**
- 1 packet plain instant oatmeal**
- ⅛ teaspoon kosher salt**
- 1½ teaspoons maple syrup**
- ½ teaspoon ground cinnamon**
- 2 tablespoons dried fruit or nuts**

1. With the warming stirrer in place, add the milk to the tank. Cover and press the hot milk button.
2. Empty the oatmeal packet into a serving bowl.
3. When the warming process is complete, pour the milk into the oats and stir well to combine. Let stand for 1 to 2 minutes.
4. Stir in the remaining ingredients and serve.

WARRANTY

Limited 3 Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart™ Tazzaccino™ Milk Frother that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart™ Tazzaccino™ Milk Frother will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Cuisinart™ Tazzaccino™ Milk Frother should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307. To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product. Please pay by check or money order (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was

purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Consumer Service Center at 1-800-726-0190 before returning the product for service. If servicing is needed, a representative can confirm whether the product is under warranty and direct you to the nearest service location. Your Cuisinart™ Tazzaccino™ Milk Frother has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as by use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

Cuisinart®

SAVOR THE GOOD LIFE®



Food Processors



Juicers



Espresso makers



Cookware



Tools and Gadgets

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools and gadgets.

www.cuisinart.com

© 2013 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

13CE139112

B IB-12106

Any other trademarks or service marks referred to herein are the trademarks or service marks of their respective owners.

Version no : IB-12106

Fold Size: 89MM(W)X171MM(H) 16pp

Material (Cover): 157gsm matt artpaper
(Inside): 120gsm gloss artpaper

Coating: Gloss Varnishing in cover

Color (Cover): 4C(CMYK)+1C(K)

(Inside): 1C(K)+1C(K)

Date: Apr-02-2013 Co-ordinator: ASlor You / Andy WS Chan

BOND FUND Descriptio

PDF version : IB-12106 (0,0) BOOK

BOND FUND Code : Operator : long

Color Series: Non

Remark: Gloss Varnishing in cover



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>