

Cuisinart®

INSTRUCTION
BOOKLET



2-Slice Long Slot Motorized Toaster

CPT-2000

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. **Do not touch hot surfaces. Use handles or knobs.**
3. To protect against electrical shock, do not place any part of the toaster in water or other liquid. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always unplug appliance from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the nearest Cuisinart Repair Center for examination, repair, or mechanical or electrical adjustment.
7. The use of accessory attachments not recommended or sold by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. **Oversize foods, metal foil packages or utensils must not be inserted in the toaster as they may involve a risk of fire or electric shock.**
13. **A fire may occur if the toaster is covered or touching flammable materials, including curtains, draperies, walls and the like, when in operation. Do not operate under wall cabinets.**
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.

15. To avoid possibility of fire, do not leave toaster unattended during use. Unplug when not in use.
16. To disconnect, push the cancel button, then remove plug from wall.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CONTENTS

Important Safeguards	2
Features and Benefits	3
Use and Care	3
Cleaning and Maintenance	5
Warranty	5

FEATURES AND BENEFITS

1. Extra-Wide and Extra-Long Toasting Slot

1½"-wide toaster slot is 9½" long.

2. Shade Control Settings

Set desired toast shade from light to dark using settings 1–7.

3. Function Control Buttons

Choose Toast, Bagel, or Defrost for custom settings.

4. Toast / Cancel Lever

Lowers bread into slot to start toaster, and pops up automatically at end of cycle. Also used to pop up toast before end of cycle.

5. Bagel Button

The bagel feature reduces heat on one side of the toasting slot. This toasts the cut side of the bagel slightly more than the other side. An embossed (■) icon located on top of the toaster, just above the control panel, shows you the right way to insert your bagel.

5a) Embossed Bagel Icon

Outlines proper bagel placement.

6. Always Even™ Shade Control (not shown)

Electronically monitors and adjusts toaster's internal temperature to provide consistent toasting results from one use to the next. Heating elements deliver even heat for uniform browning.

7. Self-Centering Bread Rack (not shown)

Centers all shapes and sizes of bread in the middle of toaster chamber for more even toasting results.

8. Cool to the Touch Housing

9. Slide-out Crumb Tray (not shown)

Removes easily to clean crumbs from bottom of toaster.

10. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.

11. Bright Blue Neon Countdown Lights (not shown)

Show shade settings.

12. BPA Free (not shown)

All parts that come in contact with food are BPA free.



USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slot. Plug power cord into the wall outlet.

1. Insert bread.

Be sure that multiple slices do not overlap and that the carriage is in the up position. **NOTE:** Correct position for bagels. See embossed icon on top of unit.

2. Set the Shade Control.

Press the ▲ ▼ button until you find the desired setting.

Setting	Color
1–2	light
3–5	medium
6–7	dark

Some notes on browning

Toasting is a combination of cooking and drying of the bread.

Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly-cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before inserting into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.
- Before toasting bagels, slice each bagel into two equal halves.

Notes on Specialty Uses

Toaster pastries: Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

3. To Begin Toasting

Push the Toast lever down. This lowers the toast.

4. To Stop Toasting

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply push the Cancel lever up to end the cycle.

Tips

- Never force food into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads or pastries with fillings or frostings in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

Defrost Function

The Defrost function is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert bread.

Be sure that multiple slices do not overlap and the carriage is in the up position.

2. Set the Shade Control Dial.

Settings 1-2

For refrigerated breads and thinner frozen items such as frozen pancakes.

Settings 3-4

For toaster pastries, frozen waffles and (thin) French toast, and refrigerated bagels.

Settings 5-6

For thicker frozen items such as bagels, hand-cut bread and thick French toast.

3. Select the Defrost function.

4. Push the Toast lever down to lower the toast.

To stop cycle

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply push the Cancel lever up. After use, unplug the toaster from the electrical outlet.

Bagel Function

The bagel feature reduces heat on one side of the toasting slot. This toasts the cut side of the bagel slightly more than the other side. An embossed (■) icon located on top of the toaster, just above the control panel, shows you the right way to insert your bagel. (Looking straight at the toaster the cut side should always face to the right.)

1. Insert bagel.

Be sure that multiple slices do not overlap and the carriage is in the up position.

2. Select the Bagel function.

3. Push the Toast lever down to toast.

4. When the Bagel cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply push the Cancel lever up.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.

Any other servicing should be performed by an authorized service representative.

CUISINART® LIMITED 3 YEAR WARRANTY

This limited warranty is available to consumers only. You are a consumer if you own a Cuisinart® Long-Slot Motorized Toaster which was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Long-Slot Motorized Toaster will be free of defects in materials and workmanship under normal home use for three years from the original date of purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your toaster should prove to be defective within the warranty period, we will repair or replace it at our option. To obtain warranty service, simply send the defective product to:

Cuisinart
7475 North Glen Harbor Blvd.
Glendale, Arizona 85307.

or call our Consumer Service Center toll-free at 1-800-726-0190.

To facilitate the speed and accuracy of your return, please also enclose \$7.00 for shipping and handling of the product. **CA residents need only provide proof of purchase and should call 1-800-726-0190 for shipping instructions.** Please be sure to include a return address, description of the product defect, product serial number and any other information pertinent to the product's return. Please pay by check or money order.

Note: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart® product, we suggest that you call our Consumer Service Center at 1-800-726-0190 before returning the product for servicing. Often, our Consumer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, a representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® Long-Slot Motorized Toaster has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary

household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

***Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the Servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.**

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells Cuisinart products of the same type. The retail store shall then decide to either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling of such nonconforming products under Warranty.

Cuisinart®

 
SAVOR THE GOOD LIFE™



Coffeemakers



Food
Processors



Toasters



Blenders



Grills



Ice Cream
Makers

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savor the Good Life®.

www.cuisinart.com

©2013 Cuisinart
150 Milford Road
East Windsor, NJ 08520

Printed in China

11CE125958

N IB-10653B

Version no: N CPT2000 IB-10653B
SIZE: 216MM x 178MM
Pages: 8pp
Paper: Cover:157GSM MATT ARTPAPER Inside:120GSM GLOSS ARTPAPER
Color: Cover:4c+1c Inside:1c+1c(BLACK)
Coating: GLOSS VARNISHING IN COVER
Conair: By Astor You
Date: 07/03/2013

SUN HING PRINTING CO., LTD.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>