



MP3 PLAYER / LECTEUR DE MP3
MP1031



USER'S MANUAL / MODE B'EMPLOI

- ENGLISH
- FRENCH

CONTENT

Recording _____

Select Audio Input Source for Recording -----

Perform Recording -----

Other Operation _____

File browser

Formatting your digital player

Trouble shooting

Technical Specification

Earphone

 
About Earphone

● Avoid Hearing Damage

1. Set the volume at comfortable level
2. Do not adjust volume to high level suddenly
3. Wear the earphone correctly to avoid improper volume adjustment

● Using the Earphone


1. Connect the earphone to the digital player as indicated below:

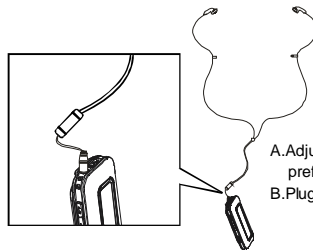

- A. Adjust the length of the earphone wires to your preference.
- B. Plug the earphone into earphone jack in the player.

Earphone

 
2. Place earphone pieces marked "L" and "R" into your left and right ears respectively.

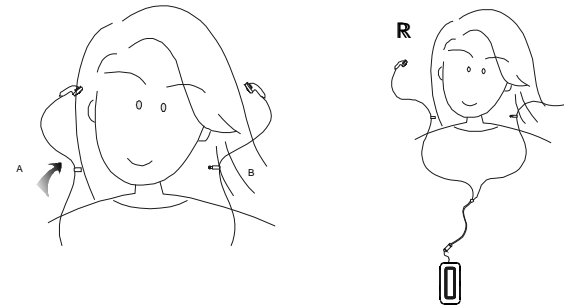

● Road Safety

1. Do not use digital player while operating automobile or motorcycle or bicycle
2. Avoid operating the digital player during jogging or walking on the road

 
Main Unit Interface

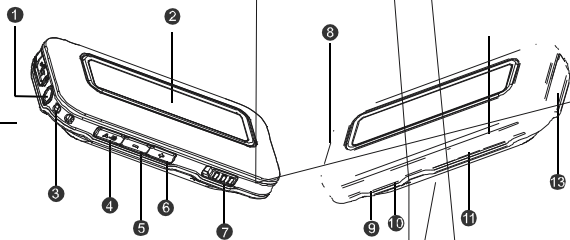

- | | |
|---|---|
| ① Earphone jacks | ⑧ Built-in microphone |
| ② LCD display screen | ⑨ Next track in player mode/Fast-forward during playback/Next menu item |
| ③ Digital player holder (to tie with the necklace-style earphone) | ⑩ Previous track in player mode/Rewind during playback/Previous menu item |
| ④ A-B button | ⑪ Power on/play/confirm/poweroff |
| ⑤ Volume Down | ⑫ Menu (upon pressing) |
| ⑥ Volume Up | ⑬ USB/connector port |
| ⑦ Key-lock (to avoid pressing of keys during playback accidentally) | |



 LCD Illustration

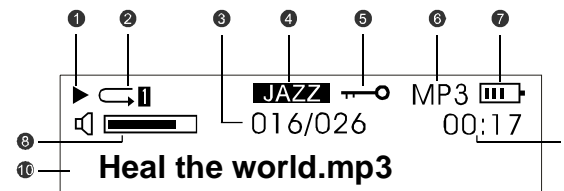


- | | |
|--|--------------------------------|
| ① Playback | ⑥ Music codec format (MP3/WMA) |
| ② Play mode (Normal/Repeat all/Repeat one/Random/Random all/Preview) | ⑦ Battery life |
| ③ Current music track and total tracks in the player | ⑧ Volume |
| ④ Sound effect indicator (Normal/Rock/Jazz/Classical/Pop) | ⑨ Play time |
| ⑤ Key-lock | ⑩ Music tags |



 Please pay attention to the display of LCD screen, it helps to operate the player correctly.



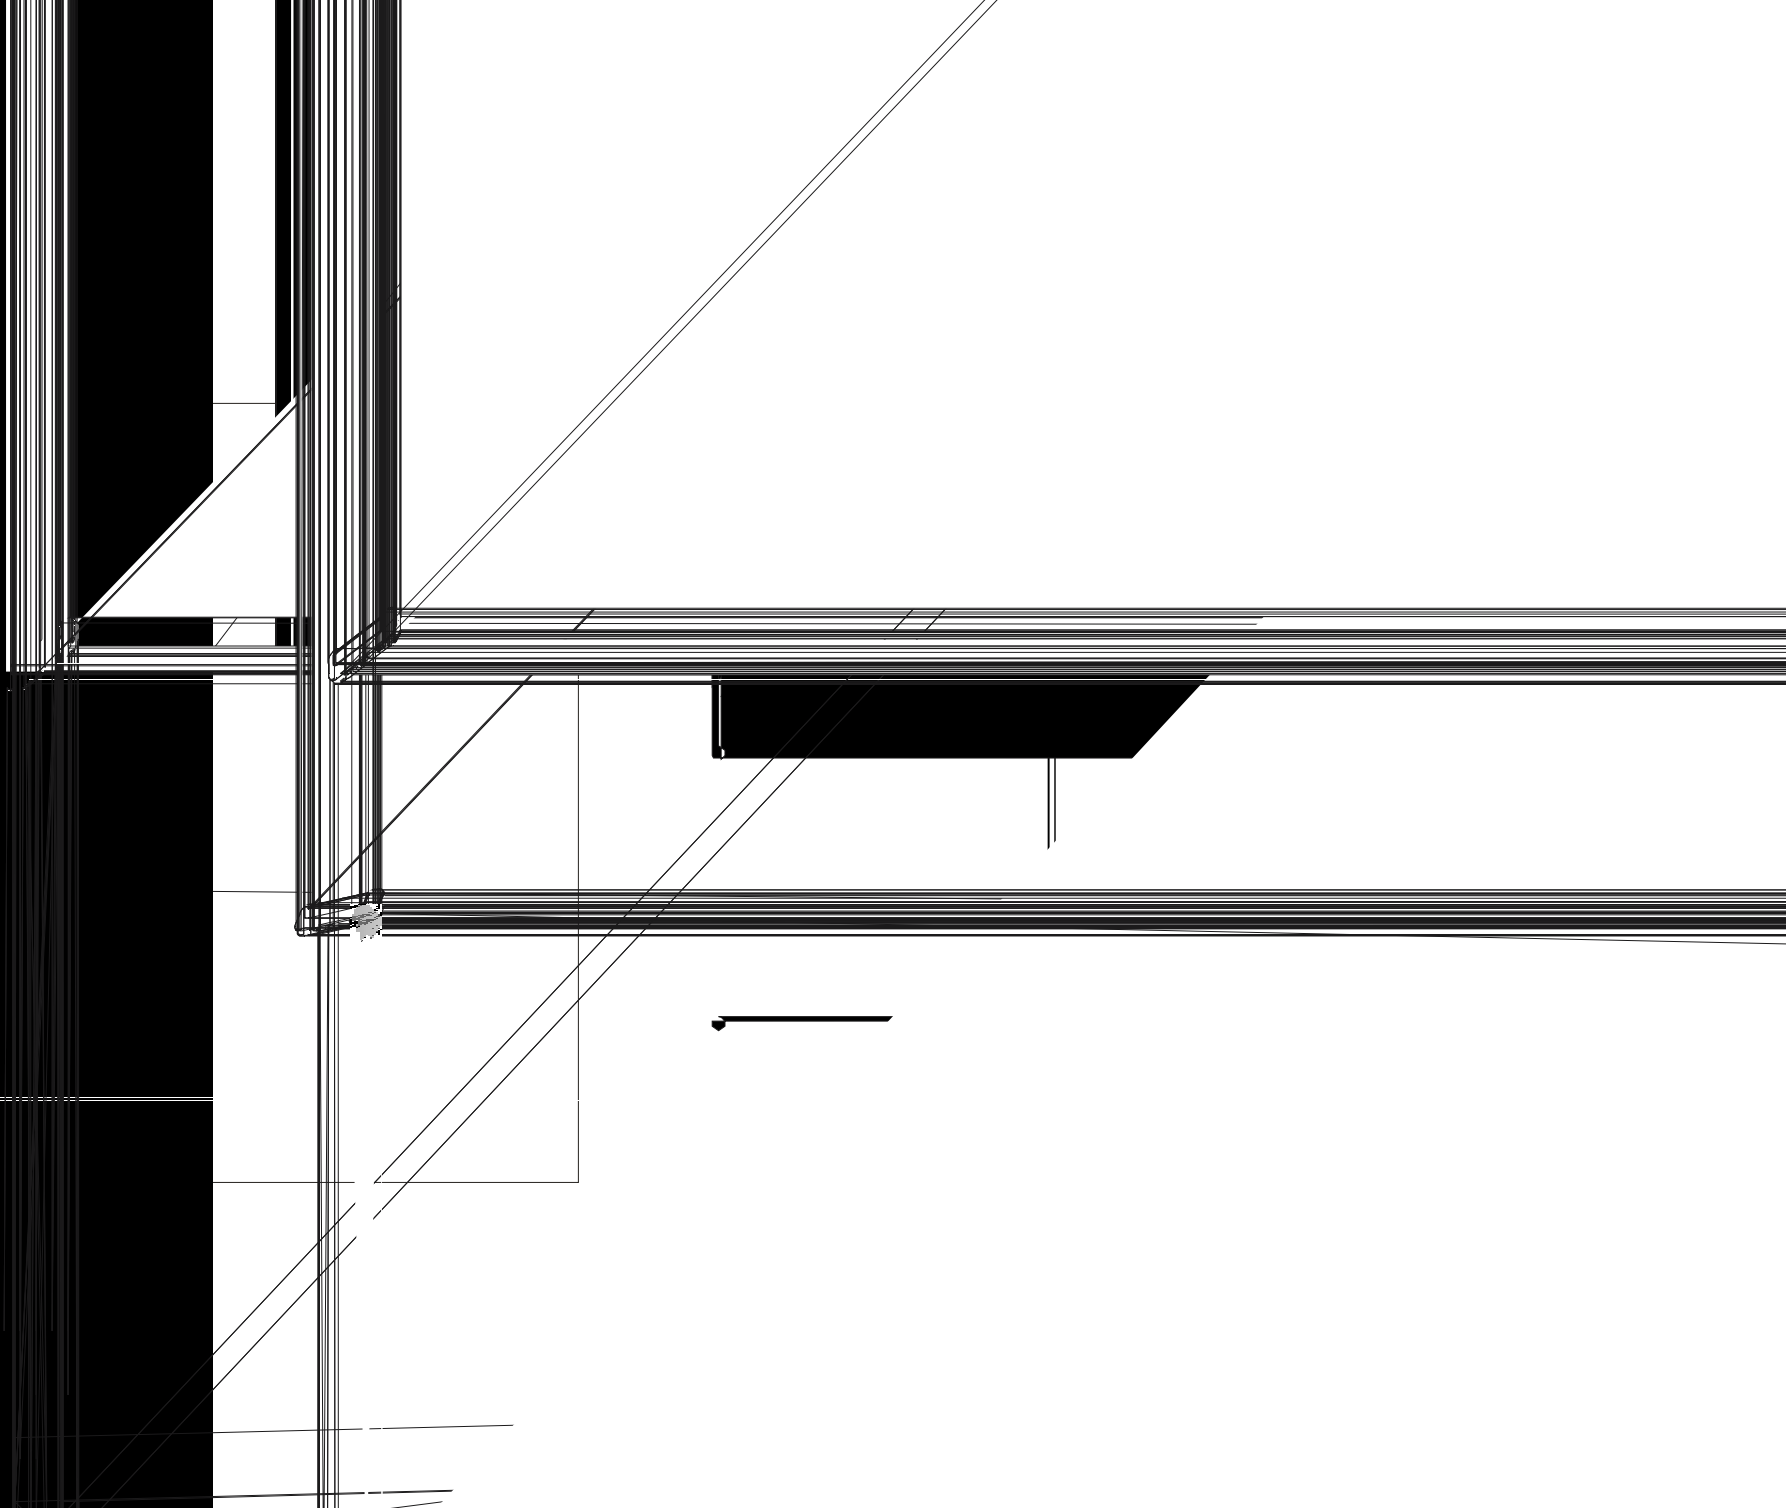

General Function



Menu

General function



Menu

 


Menu

Play Music

Sound Effect Mode

1. Press the MENU button to select, and “⏪” or “⏩” to navigate around the menu items.

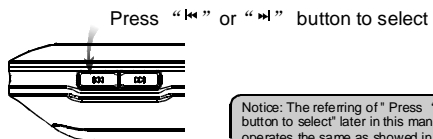

2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button.



3. Press “⏪” or “⏩” button and select “EQ Set” by pressing the MENU button




Play Music

4. Select the desired sound effect by Press MENU button.
There are 5 sound profiles: Normal, Rock, Jazz, Classical and Pop



5. The LCD screen displays the sound effect selected:

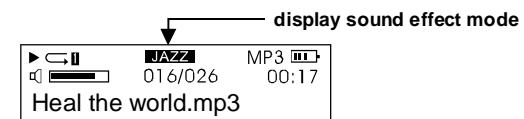

Play Music

Lyrics Display

- Synchronization of Lyrics
Your digital player supports synchronized lyrics in during playback of a MP3/WMA file.
- Enable the display of lyrics
Place the lyrics file in “.Lrc” format in the same directory as the MP3 file. E.g. place “yesterday.mp3” and “yesterday.lrc” in the same directory. Your digital player looks for the lrc file and displays the lyrics upon your selection of the MP3 track, no lyrics will be displayed if the lrc file is absent.

Change the playback mode

1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button:



Play Music





 
 
3. Press “⏪” or “⏩” button and select “Play mode” by pressing the MENU button:



4. Select the desired playback mode:



- There are 6 play modes for you to select. They are:

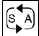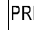Normal		Repeat all	
Repeat one		Random	
Random all		Preview	

Play Music

5. The LCD display screen will reflect the chosen playback mode as shown below:




6. In the standby mode, pressing the A-B button will change the playback mode.

Play Music


A-B Repeat mode

Many a time we would like to replay a portion of a certain section of the audio/music track. The A-B Repeat Mode is designed for the instant replay:

1. Press the A-B button to mark the beginning during the playback of a audio/music track

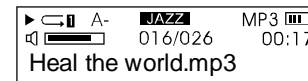

 2. Press the A-B button again to mark the end. Your digital player will automatically replay the track between the A-B markers.

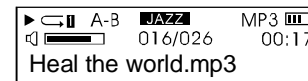

3. Press the A-B button the third time to reset the A-B markers.

Form Recording

rd

Record voice via built-in Microphone

ess

 
... Press MENU button Press “ ” or “ ” button and select “Vr pressing MENU button.

y p

4. Press menu button
press


Sample Encoder

previous recording files.



Other Operation

Power Setting

 This timer will switch off your digital player after a specific time to conserve battery life.

 
1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button.



3. Press “⏪” or “⏩” button and select “Power set” by pressing the MENU button as shown:



4. Press “⏪” or “⏩” button to select the duration you desired, press the MENU button to effect as shown:



5. Press the MENU button to exit

Other Operation

Backlight Setting


1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button.



3. Press “⏪” or “⏩” button and select “Backlight” by pressing the MENU button as shown:



4. Press “⏪” or “⏩” button to set the backlight display timer as shown:

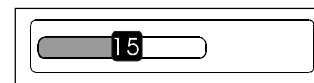

5. Press the MENU button to exit

Other Operation

Backlight color setting

1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button as shown.



3. Press “⏪” or “⏩” button to select “backlight color” by pressing the MENU button as shown.



- *Y-yellow, R-Red, C-Cyan, B-blue, G-Green, W-white, P-Purple, Auto mode
4. Press “⏪” or “⏩” button to select the desired color, press the MENU button to confirm the setting and exit.

Other Operation

LCD Display Contrast Setting

 
1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button.



3. Press “⏪” or “⏩” button and select “Contrast” by pressing the MENU button as shown:



4. Press “⏪” or “⏩” button to select the contrast level desired, press the MENU button to effect as shown:



5. Press the MENU button to exit

Other Operation

Language Setting

 
1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Setting” by pressing the MENU button.




3. Press “⏪” or “⏩” button and select “Language” by pressing the MENU button as shown:



4. Press “⏪” or “⏩” button and select your preferred language from the list by pressing the MENU button as shown:



5. Depends on your area, your digital player may support partial or all of the following languages: ENGLISH, FRENCH, etc

 You shall see unrecognized characters if your MP3's tags or lyrics language does not match the language you selected here.

Other Operation

Delete Files

 
1. Press the MENU button
2. Press “⏪” or “⏩” button and select “Del” by pressing the MENU button.



3. Press “⏪” or “⏩” button and select file types:
 - a. “Delete music files” : delete MP3/WMA files
 - b. “Delete voice files” : delete recorded voice files



4. Press “⏪” or “⏩” button to select the file to delete as shown



5. Press the “●A-B” to highlight “YES” and press “▶/■” to confirm the removal of the file.
6. Press the MENU button to exit

Other Operation

Transfer Audio/Music Files via USB

 
Your digital player supports Plug-and-Play operation and is regarded as a removable disk drive under Windows 2000/XP (Windows 98 users please install driver), you may transfer files from PC to player by drag and drop method.

There are three operating USB access modes:

1. Standby/Waiting





2. File download
3. File upload



Please ensure your PC ejects or disconnect your USB device properly before removal. Sudden removal of the digital player from your PC may cause operating problems to both your PC system and the digital player.

 
Other Operation

Display System Info

1. Press the MENU button
2. Press “” or “” button and select “About” by pressing the MENU button as shown:



3. Press MENU button you shall see the firmware version and Memory storage status



Formatting your digital audio player

1. connect your digital player to your PC with USB cable.
2. right click the “removable disk” icon in “my computer”, click “Formatting” To format your digital audio player.
3. All files inside your digital player will be deleted after formatting the disk.

Trouble Shooting

Symptoms	Recommended Action
No power	1. Confirm a good quality battery is loaded correctly. 2. Reload a new battery with full charge.
No sound from earphone	1. Check volume is not set at lowest level 2. Earphone is connected firmly 3. Earphone is functional 4. Confirm the audio/music file is not full of silent sound.
LCD screen display unrecognized codes	Select the correct language
Files cannot be transferred to the digital player	1. Confirm the USB cable is not damaged and is connected 2. Confirm the digital player is in working condition 3. Confirm your PC has recognized the player, please install driver if not.
The memory size displayed under "About" and PC file directory seems lower than specified.	There is a system software that takes up some memory space in your player, thus the useable memory is less than specified.

Technical Specification

Display Screen	Matrix (128*32) LCD	
USB Interface	Full Speed USB (Read 1000K Byte, Write 800K Byte)	
Memory Capacity	1GB	
Record	Sample Rate	8KHz
	Record Format	WAV(32K bps)
	Maximum Record Time	8 Hours
MP3. WAV	Maximum Earphone Output	5 MW
	Bit Rate	5K bps-384K bps
	Frequency Response	20Hz-20KHz
	Signal/Noise Ratio	85dB
Decoding Format	MP3, WMA, WAV	
Operating Temperature	-5°C-45°C	
Language Support	ENGLISH, FRENCH,	
Operation System	WIN98/SE/ME/2000/XP(WIN2000 and above no driver needed)	
Playing time(Screen Protection status)	7 hours	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>