


TV/VCR Combination Unit

Owner s Manual

CMC13003

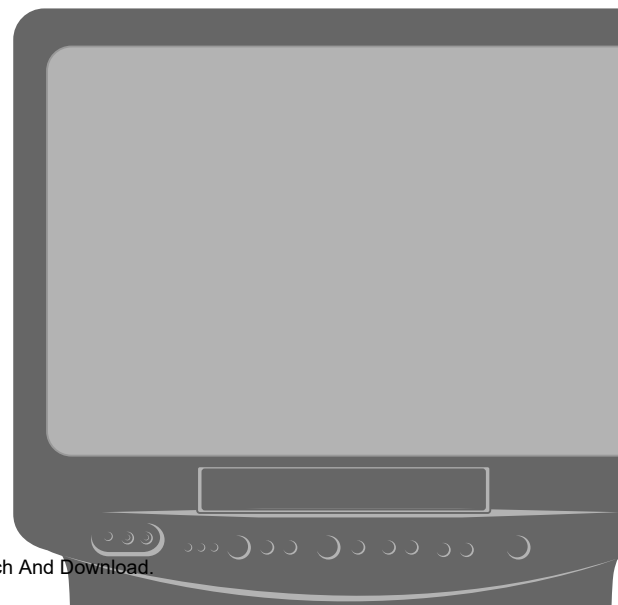

IMPORTANT SAFETY INSTRUCTIONS

Save These Instructions



Warning! Important Safety Instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

Note to CATV system installer: This reminder is provided to call CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I), that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Caution: FCC regulations state that any unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Caution: To prevent electric shock, match the wide blade of plug to the wide slot, and fully insert the plug.

Attention: Pour éviter les chocs électriques, introduire la lame le plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Important: One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws.

To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information



Always be careful when using your TV/VCR. To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine:

- Read all safety and operating instructions before operating the TV/VCR.
- Retain the safety and operating instructions for future reference.
- Heed all warnings on the TV/VCR and in the operating instructions.
- Follow all operating and use instructions.
- Unplug the TV/VCR from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners.
- Never add any attachments and/or equipment without approval of the manufacturer. Such additions may result in the risk of fire, electric shock, or other personal injury.
- Do not use the TV/VCR where contact with or immersion in water is a possibility, such as near bath tubs, sinks, washing machines, swimming pools, etc.
- Provide ventilation for the TV/VCR. The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings, and do not place the TV/VCR on a bed, sofa, rug, or other similar surface. Do not place it near a radiator or heat register. If you place the TV/VCR on a rack or bookcase, ensure that there is adequate ventilation and that you've followed the manufacturer's instructions for mounting.

IMPORTANT SAFETY INSTRUCTIONS

Save These Instructions

Important Safety Information, *continued*

- Do not place the TV/VCR on an unstable cart, stand, tripod, bracket, or table. The TV/VCR may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the TV/VCR. Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer. Move the TV/VCR and its cart with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart to overturn.
- Operate your TV/VCR only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. For your safety, this TV/VCR is equipped with a polarized alternating current line plug having one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still doesn't fit, contact your electrician to replace your outlet.
- Protect the power cord. Power supply cords should be routed so that they are unlikely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- Unplug the TV/VCR from the wall outlet and disconnect the antenna or cable system during a lightning storm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-line surges.




- Avoid overhead power lines. An outside antenna system should not be placed in the vicinity of overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, be extremely careful to keep from touching the power lines or circuits. Contact with such lines can be fatal.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.
- Do not insert foreign objects through openings in the unit, as they may touch dangerous voltage points or damage parts. Never spill liquid of any kind on the TV/VCR.

IMPORTANT SAFETY INSTRUCTIONS

Save These Instructions

Important Safety Information, *continued*

- Ground outdoor antennas. If an outside antenna or cable system is connected to the TV/VCR, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- Do not attempt to service the TV/VCR yourself. Refer all servicing to qualified service personnel. Unplug the unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - when the power-supply cord or plug is damaged
 - if liquid has been spilled on, or objects have fallen into, the unit
 - if the TV/VCR has been exposed to rain or water
 - if the TV/VCR does not operate normally by following the operating instructions
 - if the TV/VCR has been dropped or the cabinet has been damaged
 - when the TV/VCR exhibits a distinct change in performance

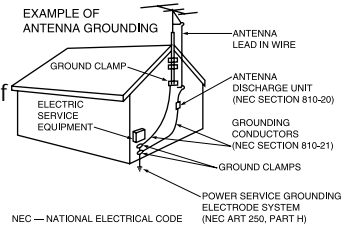

- If you make adjustments yourself, adjust only those controls that are covered by the operating instructions. Adjusting other controls may result in damage and will often require extensive work by a qualified technician to restore the TV/VCR to normal.
- When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in additional damage to the unit.
- Upon completion of any service or repairs to this TV/VCR, ask the service technician to perform safety checks to determine that the TV/VCR is in a safe operating condition.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference that may cause undesired operation.

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

CONTENTS

Chapter 1: Learning About Your New TV/VCR	1
List of Features	1
Checking Parts	1
Understanding the Controls	2
Front Panel Jacks	2
Front Panel Controls	2
Rear Panel	4
Remote Control	5
Chapter 2: Installation	6
Connecting VHF and UHF Antennas	6
Antennas With 300-ohm Flat Twin Leads	6
Antennas With 75-ohm Round Leads	6
Separate VHF and UHF Antennas	6
Connecting Cable TV Systems to the TV/VCR	7
Cable Without a Converter Box	7
Cable With a Converter Box	7
Installing Batteries in the Remote Control	9
Chapter 3: TV Operation	10
Viewing the On-screen Display	10
Viewing the Main Menu	10
Selecting the On-screen Language	10
Selecting the Signal Source	11
Programming the Channels	11

Setting the Clock	12
Choosing Picture Settings	14
Customizing Picture Settings	14
Resetting Standard Picture Settings	14
Setting the Sleep Timer	15
Using the On/Off Timer	15
Chapter 4: VCR Operation	16
Inserting and Ejecting a Video Tape	16
Playing a Video Tape	16
Playing a Tape	16
Pausing	16
Using Picture Search	17
Using Tracking	17
Using the Time Counter	17
Using Memory Stop	17
Using P.PLUS	18
Recording TV Programs as You Watch	18
Recording	18
Editing While Recording	19
Using Advanced Recording Features	19
One-touch Recording	19
Timer Recording	19
Using Program Review	22

CONTENTS

Chapter 5: Special Features	23
Viewing the Demonstration Mode	23
Using Turbo Rewind	23
Using True Repeat	23
Using Block Repeat	24
Viewing Closed Captions	24
Using the V-Chip	25
Setting Up Your Personal ID Number(PIN)	25
How to Enable/Disable the V-Chip	26
How to Set up Restrictions	
Using the "TV guidelines"	26
How to Set Up Restrictions Using the MPAA	
Ratings; G, PG, PG-13, R, NC-17, X	27
How to Reset the TV after the V-Chip Blocks	
a channel("Emergency Escape")	28
Copying, or Dubbing, a Video	29
Making the Connections	29
Dubbing	29
Chapter 6: Troubleshooting	30
Identifying TV Problems	30
Identifying VCR Problems	30

Appendix	31
Caring for Your TV/VCR	31
Placement	31
Liquids	31
Cabinet	31
Video Heads	31
Temperature	31
About Video Tapes	31
Caring for Video Tapes	31
Recording Speeds	31
The Record Safety Tab	31
Specifications	32
Warranty information	33

List of Features

Your TV/VCR was designed and engineered using the latest technology. This TV/VCR is a full-featured, high-performance unit that not only meets, but exceeds, industry standards. Along with the standard features you expect, This TV/VCR has included the following special features:

- Easy-to-operate infrared remote control
- Easy-to-use on-screen menu system you can use from the front panel or the remote control
- Closed captioning
- On-screen programmed recording of up to six events in one month
- Digital auto-tracking
- Repeat play
- Infra-red wireless remote control system
- Quick-start, full loading system
- High-speed rewinding (Turbo rewind)
- High-quality video circuitry
- 181-channel capability (frequency synthesized tuner)
- Auto channel programming
- One-touch recording (up to four hours)
- Eight-hour recording on a single T-160 video cassette
- Auto clock setting
- Rental picture plus
- Tri-lingual on-screen displays (English, Spanish, and French)
- V-chip


Checking Parts

Once you have unpacked your TV/VCR, check to make sure that you have all the parts shown here. If any piece is missing or

broken, call your dealer. (The TV illustration shown does not necessarily match the design of your TV/VCR set.)



wireless remote
control

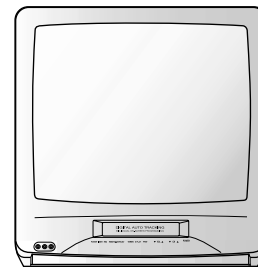

TV/VCR




this
manual


LEARNING ABOUT YOUR NEW TV/VCR

Understanding the Controls

Front Panel Jacks

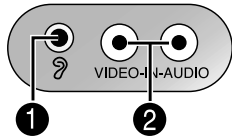

Front Panel Controls

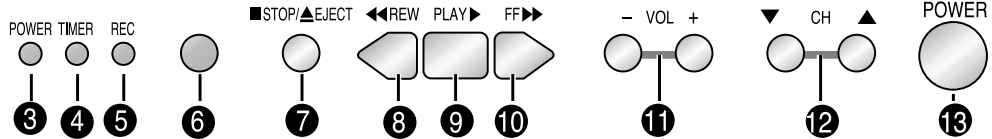

LEARNING ABOUT YOUR NEW TV/VCR

Understanding the Controls, *continued*


The buttons on the front panel control basic features. For more advanced features, you will use the remote control.

- 1 EARPHONE** jack - Connect a set of earphones (with a mini connector) to this jack.
- 2 VIDEO** and **AUDIO IN** jacks - Connect components, such as a camcorder, to these jacks.
- 3 POWER** indicator - Lit when TV/VCR power is on.
- 4 TIMER** indicator - Lit when the timer is set to record a program.
- 5 REC** indicator - Lit when the TV/VCR is recording.
- 6 REMOTE** sensor - Receives signals from the remote control.
- 7 STOP/EJECT** button - Press to stop a video tape during play, record, rewind, or fast forward. Press to eject a video tape if the tape is stopped.
- 8 REW** button - Press to rewind a video tape.
- 9 PLAY** button - Press to play a video tape.
- 10 FF** button - Press to fast forward a video tape.
- 11 - VOL** and **VOL+** buttons (**VOLUME**) - Press to change the volume or to change features on the menu.
- 12 CH▼** and **CH▲** buttons (**CHANNEL**) - Press to change channels or to select features on the menu.
- 13 POWER** button - Press to turn the TV/VCR on or off.

LEARNING ABOUT YOUR NEW TV/VCR

Understanding the Controls, *continued*


Rear Panel

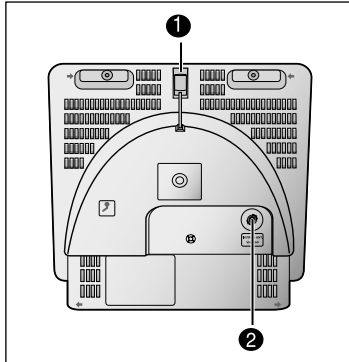

- 1 VHF antenna mount**
VHF rod antenna mount.
See page 6.
- 2 Antenna terminal**
Use this terminal (VHF/UHF
IN FROM ANT) to connect
the TV/VCR to a 75-ohm
outdoor antenna or cable
system. See page 6.

VHF rod antenna and 300-75 ohm adapter

Connect the VHF rod antenna to
the 300-75 ohm adapter. Connect
the 300-75 ohm adapter to the
antenna terminal on the TV/VCR.
See page 6.

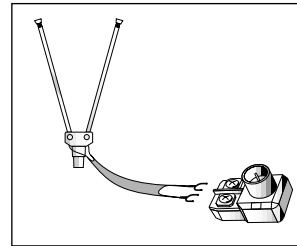


<Separately sold>

LEARNING ABOUT YOUR NEW TV/VCR

Understanding the Controls, *continued*

Remote Control

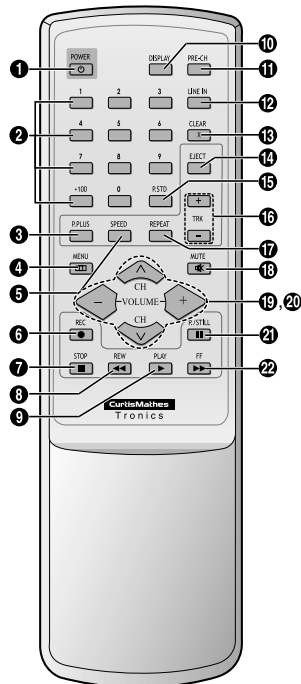

Use the remote control within 33 feet (10 meters) of the TV/VCR and point it directly at the TV/VCR.

- 1 POWER**
Press to turn the TV/VCR on and off.
- 2 Number buttons**
Press to select specific channels.
- 3 P.PLUS**
Press to compensate for a poor rental tape.
- 4 MENU**
Press to display the on-screen menu.
- 5 SPEED**
Press to select the tape recording speed.
- 6 REC (record)**
Press to begin recording.
- 7 STOP**
Press to stop a tape.
- 8 REW (rewind)** -
Press to rewind a tape.
- 9 PLAY**
Press to play a tape.

 
- 10 DISPLAY**
Press to show on-screen displays.
- 11 PRE-CH (previous channel)** -
Press to return to the last channel viewed.
- 12 LINE IN**
Press to select the component connected to the Audio/Video jacks.
- 13 CLEAR**
Press to correct programming errors, clear programs, or reset the tape counter.
- 14 EJECT**
Press to eject a tape.
- 15 P.STD (picture-standard)** -
Press to select memorized or standard picture settings.
- 16 TRK+, - (tracking)** -
Press to adjust tape tracking.
- 17 REPEAT**
Press to play a tape or a section of tape repeatedly.

- 18 MUTE**
Press to silence the volume.
- 19 -VOL and VOL+ (volume)** -
Press - VOL to decrease or VOL+ to increase the volume.
- 20 CH^ and CH^ (channel)** -
Press CH^ or CH^ to change channels. Also used with the menu system.
- 21 P. (pause)/STILL**
Press to freeze a video frame.
- 22 FF (fast forward)** -
Press to fast forward a tape.

Connecting VHF and UHF Antennas

If you do not have cable TV, you must connect an antenna to your TV/VCR. First you need to identify your antenna's lead type:

- If you are using the antenna that also has 300-ohm twin flat leads, (see the illustration below) see "Antennas With 300-ohm Flat Twin Leads," on this page.



- If your antenna has a 75-ohm round lead (see the illustration below), see "Antennas With 75-ohm Round Leads," on this page.




- If you have two antennas, see "Separate VHF and UHF Antennas," on this page.


Antennas With 300-ohm Flat Twin Leads

If you use a 300-ohm antenna with twin flat leads, follow the directions below.


- 1 Push the stem of the rod antenna into the antenna mount.

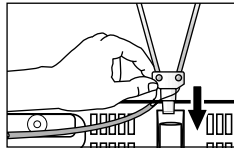

- 2 Place the wires from the twin leads under the screws on the 300-75 ohm adapter. Use a screwdriver to tighten the screws.

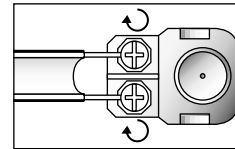


- 3 Plug the adapter into the terminal on the rear panel of the TV/VCR.

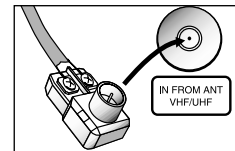

Extend the antenna and adjust it for the clearest picture. To reduce the risk of damage, only adjust the antenna by moving the black plastic base.

Antennas With 75-ohm Round Leads

- 1 Plug the lead into the terminal on the rear panel of the TV/VCR.

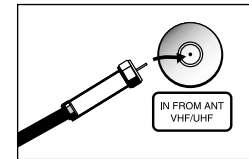

Separate VHF and UHF Antennas


If you have two separate antennas for your TV/VCR (one VHF and one UHF), you must combine the two antenna signals before connecting them to the TV/VCR. This procedure requires a combiner attachment that you can purchase at an electronics store.

INSTALLATION


Connecting VHF and UHF Antennas, *continued*

If you use a 300-ohm antenna with twin flat leads, follow the directions below, but skip step 1.


- 1 Push the stem of the rod antenna into the antenna mount.

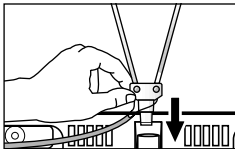

- 2 Connect both antenna leads to the combiner.

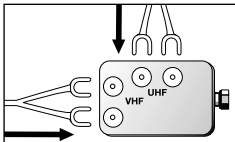

- 3 Plug the combiner into the terminal on the rear panel of the TV/VCR.

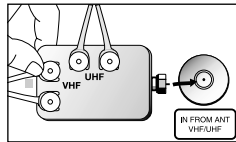

Connecting Cable TV Systems to the TV/VCR


Choose one of the sections below for connecting a cable system.

- ✓ This TV/VCR is cable-ready; you don't need a converter for basic cable channels.

Cable Without a Converter Box

To connect cable without a converter box:

- 1 Plug the incoming cable into the terminal on the rear panel of the TV/VCR.

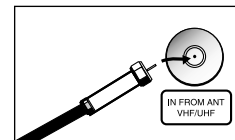


Cable With a Converter Box

If your cable company scrambles some channels and requires you to use a converter box for only those channels, use these instructions.

You will need the following pieces of equipment, which you can purchase from an electronics store:


- A two-way splitter
 - An RF (A/B) switch
 - Four lengths of coaxial cable
- 1 Plug the incoming cable into the 2-way splitter.

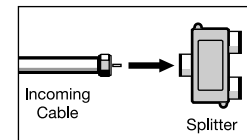


INSTALLATION

Connecting Cable TV Systems to the TV/VCR, *continued*


- 2 Connect one of the coaxial cables between the splitter and the input on the converter box.

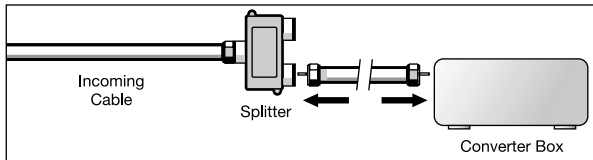


- 3 Connect a second coaxial cable between the output of the converter box and the "B" input on the RF (A/B) switch.

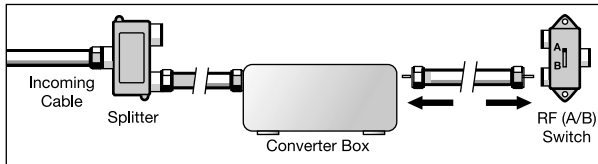

- 4 Connect a third coaxial cable between the splitter and the "A" input on the RF (A/B) switch.

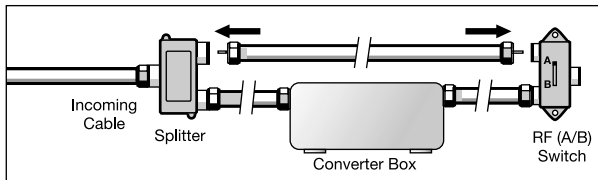

- 5 Connect the fourth coaxial cable between the output on the RF (A/B) switch and the terminal on the TV/VCR's back panel.

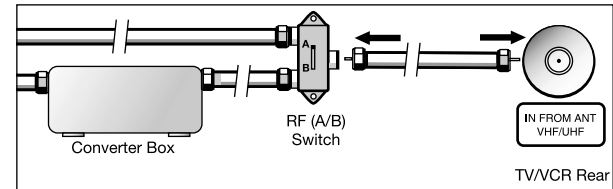


Choose the "A" position on the A/B switch to select all non-scrambled channels by remote control. Choose the "B" position on the A/B switch to select scrambled channels via the converter box. When using the "B" position, tune your TV/VCR to the output channel of the converter box (usually channel 3 or 4).


INSTALLATION

Installing Batteries in the Remote Control


- 1 Open the battery cover by pressing on the back cover's tab and lifting up.

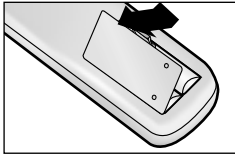

- 2 Install two AA size batteries. Make sure to match the + and - ends of the batteries with the diagram inside the compartment.

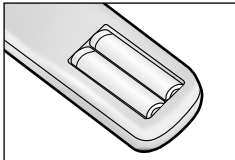

- 3 Replace the cover.

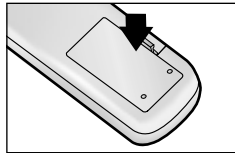


- ✓ If you won't be using the remote control for a long time, remove the batteries and store them in a cool, dry place.
- ✓ Batteries last for about one year.

Viewing the On-screen Display


The on-screen displays automatically appear on the screen when you turn the TV/VCR on or change its status (from stop to play, from play to stop, etc.). You can also activate the on-screen displays manually by using the remote control.

- 1 With the power on, press DISPLAY.

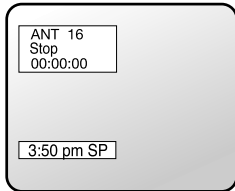


- ✓ This display disappears from the screen within ten seconds.

- 2 Press DISPLAY again (while the display items are still on the TV/VCR screen) to display the time counter.

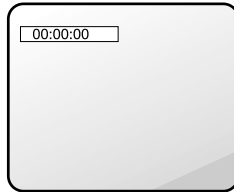


- 3 Press DISPLAY again to display the counter memory.

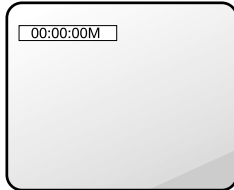

Press DISPLAY once more to remove all displays from the screen and return to normal viewing.

Viewing the Main Menu

- 1 With the power on, press MENU.

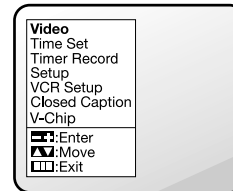


The main menu appears on the screen. Press MENU again to remove the main menu from the screen.

The menu will disappear from the screen in less than fifteen seconds if you don't press any buttons on the remote.


Selecting the On-screen Language

On-screen text can appear in English, Spanish, or French.

- 1 With the main menu on the screen, press CH^ until "Setup" is highlighted.
- 2 Press VOL+.

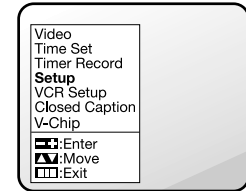

- 3 Press CH^ until "Language" is highlighted.

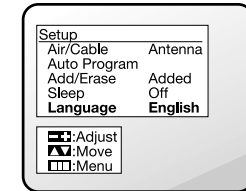


- 4 Press VOL- or VOL+ button to select the on-screen language you want.

TV OPERATION

Selecting the Signal Source


The first step in programming your TV/VCR is to select the signal source of your antenna or cable TV system.

- 1 With the main menu on the screen, press CH[^] until "Setup" is highlighted.
- 2 Press VOL+.

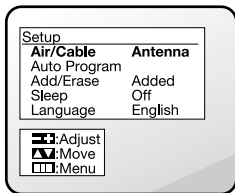

- 3 Press VOL- or VOL+ to select "Antenna," "Cable STD," "Cable HRC," or "Cable IRC."

- ✓ If your TV/VCR is connected to an antenna, select "Antenna." If you have cable TV, select "Cable STD," "Cable HRC," or "CABLE IRC," depending on the type of cable system you have.

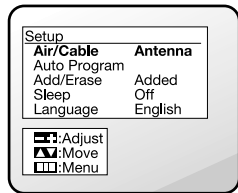

Programming the Channels


Storing Channels in Memory

Your TV/VCR can automatically memorize all the channels you receive. Once they are in memory, you can use CH[^] and CH[^] to select channels without using the number buttons.


- ✓ Before you can store channels in memory, you must have already selected the signal source. See "Selecting the Signal Source" on this page.

- 1 With the main menu displayed, press CH[^] until "Setup" is highlighted.
- 2 Press VOL+.

- 3 Press CH[^] until "Auto Program" is highlighted.

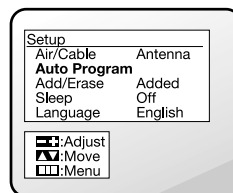

- 4 Press VOL- or VOL+ button to begin automatic programming.

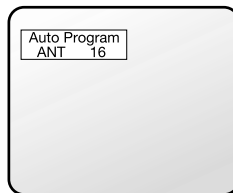

The TV/VCR automatically cycles through all the channel numbers and places the available channels in memory. This takes one to two minutes.

- ✓ Press MENU at any time to interrupt the programming process and return to normal viewing.

- 5 When the programming process is complete, press CH[^] or CH[^] to scan the channels stored in the TV/VCR's memory.

- ✓ Occasionally the TV/VCR will miss an active channel if the signal is weak or if the channel is off the air when you start programming. Likewise, an unavailable channel may be included in memory if there are stray signals on that channel.


Adding and Erasing Channels in Memory

You can manually add or erase a channel from your TV/VCR's memory.


- 1 Use the number buttons to select the channel you want to add to or erase from the TV/VCR's memory.

Programming the Channels, *continued*

- When entering single-digit channels, press 0 first. For example, to select channel 8, press 0, then 8.
 - When entering three-digit channels, press the +100 button on the remote control first. For example, to select channel 104, press +100, then press 0, then 4.
- 2 Press MENU to display the menu.
 - 3 Press CH^ until "Setup" is highlighted.
 - 4 Press VOL+ to display the Setup menu.

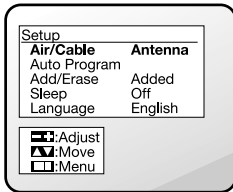

- 5 Press CH^ until "Add/Erase" is highlighted.

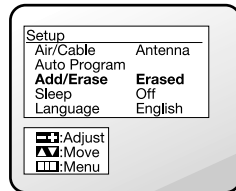

- 6 If you want to:
 - Add a channel: Press VOL+ or VOL- to display "Added."
 - Erase a channel: Press VOL+ or VOL- to display "Erased."

You can still view a channel that is not stored in memory by using the number buttons to select the channel directly.

Setting the Clock

To record programs while you are away, or to use the sleep timer, you must first set the clock and calendar.

There are two ways to set the clock:


Option 1, Direct: The digits for hours and minutes are entered directly.

Option 2, Auto: The TV's clock is synchronized to a time signal sent out by the local PBS channel.


- 1 With the main menu displayed, press CH^ until "Time Set" is highlighted.
- 2 Press VOL+.
- 3 Press VOL+ to activate the "Clock Set" and "Manual" field. (Note: Press VOL+ to alternate between "Manual" and "Auto".)

Option 1: Setting the clock directly ("Manual" Method)

- 1 Press the CH^ button to select the "Clock" field.

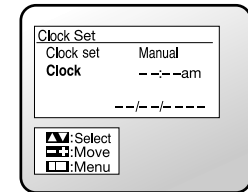

- 2 Press VOL+ to activate the hour digits.

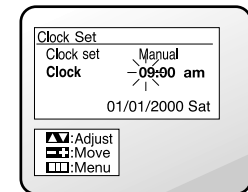


- 3 Press CH^ or CH^ to set the current hour.

- ✓ Be sure to set the correct time of day (am or pm), which appears to the right of the minutes.

Setting the Clock, *continued*


4 Press VOL+.

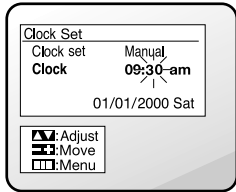

5 Press CH[^] or CH[^] to set the current minute.

Setting the date


1 Press VOL+.

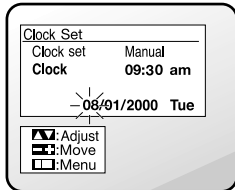

The month will blink.

2 Press CH[^] or CH[^] to set the current month.


3 Press VOL+.

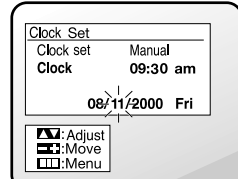

The day will blink.

4 Press CH[^] or CH[^] to set the current day.

5 Press VOL+.

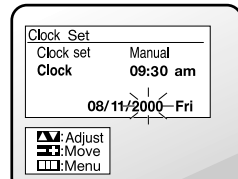

The year will blink.

6 Press CH[^] or CH[^] to set the current year. The day of the week is set automatically.

- ✓ If you make a mistake, press VOL - to move back to the incorrect item. Press CH[^] and CH[^] to change the item.

7 Press MENU to return to the first menu.

8 Press MENU again to return to normal viewing.

Option 2: Using the Local PBS channel to Automatically Set the TV Clock:


If the TV clock is set using the Auto option, it will be automatically synchronized to a time signal sent out by the local PBS channel.

1 With the main menu displayed, press CH[^] until "Time Set" is highlighted.


2 Press VOL+.

The Time Set menu appears.


3 Press VOL+ to activate the "Auto" option.

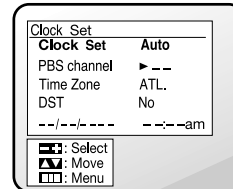

4 Press the CH[^] button to select the "PBS channel" field.

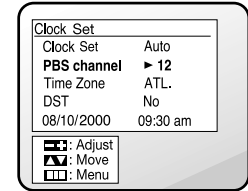

5 Press VOL +. Press CH[^] and CH[^] buttons to select your local PBS channel. Press VOL + again to lock in the PBS channel.

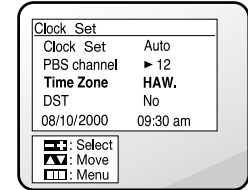

✓ The picture changes according to the channel.


6 Press the CH[^] button to select the "Time Zone" field.

Setting the Clock, *continued*

- ✓ While "Time Zone" is selected, press either the VOL + or the VOL - button to change the Time Zone.

Sequence : ATL., HAW., ALAS, PAC., MTN., CEN., EAST.

- 7 Press CH^ button to select the "DST"(Daylight Savings Time) field.

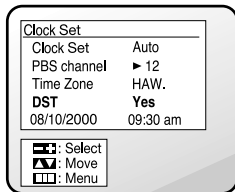

- ✓ While "DST" is selected, press VOL + to indicate "YES," or "NO."

(Set DST ON on the appropriate day in April, and set DST OFF on the appropriate day in October.)


- 8 Press MENU to return to the Clock Set menu.
 - 9 Press MENU twice to return to normal viewing.
- ✓ The time is automatically corrected when viewing your local PBS channel.

Choosing Picture Settings

Your TV/VCR has preset standard values for picture settings (contrast, brightness, sharpness, color, and tint). You can also customize these settings.

Customizing Picture Settings


- 1 With the main menu on the screen, press CH^ or CH^ until "Video" is highlighted.
- 2 Press VOL+.

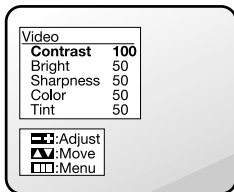

The Video menu appears on the screen.

- 3 Press CH^ or CH^ to select contrast, brightness, sharpness, color, or tint.

- 4 Press VOL+ or VOL- to change the setting.

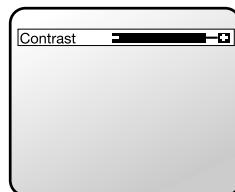

The setting for the feature appears on the screen.


- 5 Press MENU or wait a few seconds to store the setting.
 - ✓ Once you've made changes to one or more of the picture features, your settings are stored in the TV/VCR's memory. Your custom picture setting now becomes the default setting for the TV/VCR.

- 6 Press CH^ or CH^ to select another setting or press MENU to exit the menu.

Resetting Standard Picture Settings

To return the customized settings to standard settings:

- 1 Press P-STD.

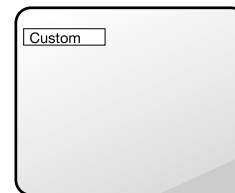

The word "Custom" appears, indicating that the current settings are customized. If "Standard" appears, the TV/VCR is set for standard picture settings.


- 2 Press P-STD again (before "Custom" disappears) to reset the standard settings.

TV OPERATION

Setting the Sleep Timer

The sleep timer automatically turns off the TV/VCR at the time you select. This is convenient if you like to fall asleep with the television on.

- 1 With the main menu on the screen, press CH[^] or CH^v until "Setup" is highlighted.
- 2 Press VOL+.

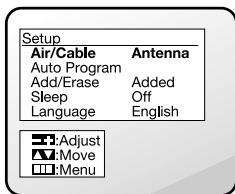

The Setup menu is displayed.

- 3 Press CH[^] until "Sleep" is highlighted.
- 4 Press VOL+ or VOL- to set the length of time you want the TV/VCR to remain on; off, 10, 20, 30, 60, 90, 120, 240, or 360 minutes.
- 5 Press MENU twice to exit the menu system.


Using the On/Off Timer

This timer turns the TV/VCR on or off at a specific time. You may set the on time, the off time, or both the on and the off time. Whatever you choose, you must turn the timer on after you set the on or off times.

- 1 From the main menu, press CH[^] to highlight "Time Set."
- 2 Press VOL+ to display the Time Set menu.

Setting the on time

- 1 Press CH[^] to highlight "On Time."
- 2 Press VOL+ to make the hour flash.

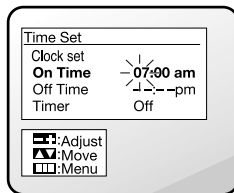

- 3 Press CH[^] or CH^v to set the hour the set will turn on.
- 4 Press VOL+ to make the minutes flash.
- 5 Press CH[^] or CH^v to set the minute the set will turn on.

Setting the off time

- 1 Press CH[^] to highlight "Off Time."
- 2 Press VOL+ to make the hour flash.
- 3 Press CH[^] or CH^v to set the hour the set will turn off.
- 4 Press VOL+ to make the minutes flash.
- 5 Press CH[^] or CH^v to set the minute the set will turn off.


Turning the timer on

- 1 Press CH[^] or CH^v to highlight "Timer."
- 2 Press VOL+ to set the timer to "ON."
- 3 Press MENU twice to return to normal viewing.

Inserting and Ejecting a Video Tape

To insert a video tape:


- 1 Hold the video tape window-side up, with the arrow pointing away from you.

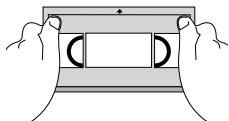

Don't try to insert a tape upside down or backwards.

Use only video tapes labeled "VHS." PAL and S-VHS video tapes are not compatible with this unit. Choose brand name, high quality tapes for best results.

- 2 Gently push the tape through the compartment door until you feel the VCR pull it in.

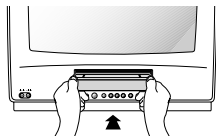

The TV/VCR loads the tape automatically.

If the power is off when you insert a tape, the TV/VCR turns on automatically.

If the safety tab of your video tape has been removed, the tape begins to play automatically.

- ✓ For more information on the safety tab, see page 33.

To eject a video cassette tape:

- 1 Press STOP to stop playing the tape.

- ✓ When you're finished playing a video tape, rewind it and remove it from the TV/VCR to protect it from wear and tear.


- 2 Press STOP/EJECT on the TV/VCR to eject the tape.

Remove the tape and turn off the TV/VCR.

Playing a Video Tape

Playing a Tape

- 1 Insert the video tape.
- 2 If the tape doesn't begin to play automatically, press PLAY.

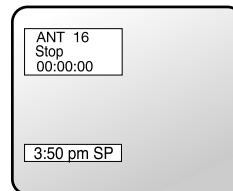

The channel indicator, mode indicator, time counter, and tape speed appear on the screen for a moment.

Then, if necessary, the TV/VCR will automatically adjust the tape's tracking.

- ✓ For information on automatic tracking, see page 17.
- ✓ For information on the time counter, see page 17.

Pausing

- 1 While a tape is playing, press P/STILL to pause the tape.

There may be vertical jitter or horizontal streaks on the screen while a tape is paused. You can try to eliminate these problems by pressing the TRK + and TRK - buttons on the remote control.

- ✓ For information on automatic tracking, see page 17.

After five minutes in pause, the TV/VCR automatically enters PLAY mode to protect the video heads.

- 2 Press PLAY to resume playing the tape.

Playing a Video Tape, *continued*

Using Picture Search

Picture Search lets you quickly search a pre-recorded video tape for a particular scene.

- 1 While playing a tape, press and release FF or REW.

The images from the tape are displayed on the screen at a high speed.

This technique is useful if you are searching a small amount of tape. If you want to search a large amount of tape, stop the tape before pressing FF or REW.


There is no sound while you search for a picture at high speeds, and some horizontal streaks may appear on the screen while you search.

- 2 When you find the scene you want, press and release FF or REW again to resume playing the tape at regular speed.

Using Tracking

This feature automatically adjusts tracking on video tapes.

- 1 Insert and play a video tape.

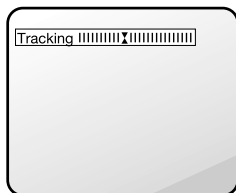

When the tape begins to play, the TV/VCR begins automatic tracking.


The tracking display will appear the first time a tape is played after being inserted into the TV/VCR, when there is a change in tape speed, or when you press the TRK +, - buttons.

- 2 If automatic tracking doesn't remove the streaks from the picture, press and hold the TRK+ or TRK- button until the streaks disappear.

Using the Time Counter

The time counter allows you to keep track of how much time (in hours, minutes, and seconds) has elapsed on the video tape. The counter can also be useful if you want to find a specific point on a pre-recorded tape.

- 1 While a tape is playing, press DISPLAY twice.

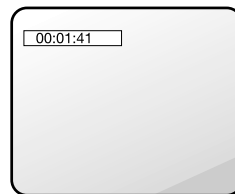

The time counter appears.

The counter displays time only for recorded sections of tape. Blank tapes or blank sections of tapes do not affect the counter display.

- 2 Press CLEAR to set the counter to "00:00:00."


- ✓ The TV/VCR automatically resets the counter to "00:00:00" when you eject a tape.
- 3 Press DISPLAY twice to remove the time counter.

Using Memory Stop

Memory Stop makes it easy to find a particular scene in a video tape. The TV/VCR automatically stops rewinding when the memory counter reaches "00:00:00." If you mark a desired scene as "00:00:00," you can search for it the next time you watch the tape.

- 1 While playing a tape, when you reach the scene you want, press DISPLAY twice. The time counter appears.
- 2 Press CLEAR to reset the timer to "00:00:00."
- 3 Press DISPLAY again to enter the scene into memory.

Playing a Video Tape, *continued*

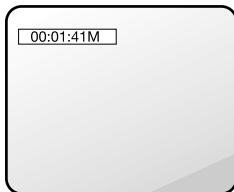

The letter "M" appears beside the time counter.

If you want to remove the time counter memory from the screen and cancel the memory stop feature, just press DISPLAY again.


To return to the scene you marked:

- 1 Press STOP.
For this feature to work, the time counter and the letter "M" must still be on the screen. If they are not on screen, press the DISPLAY button until the time counter and the letter "M" appear.
- 2 Press FF or REW to return to the scene you marked.
The TV/VCR stops the tape when the counter reaches "00:00:00M."

- 3 Press PLAY to view the scene you marked again.

Using P.PLUS

Press P.PLUS to compensate for a poor rental tape.

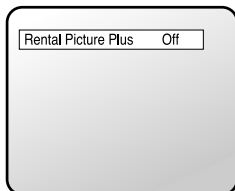

- 1 Insert a tape and press PLAY.
- 2 Press P.PLUS, and "Rental Picture Plus Off" appears on the screen. Press P.PLUS again to turn to "Rental Picture Plus On". The Rental Picture Plus functions only when a tape is being played.


- ✓ If the tape is ejected and reinserted, the Rental Picture Plus feature will be OFF.

Recording TV Programs as You Watch

Recording

- 1 With your TV/VCR turned on, and with a tape in the unit, press SPEED.

- ✓ Be sure the record safety tab is in place. For information on the record safety tab, see page 33.

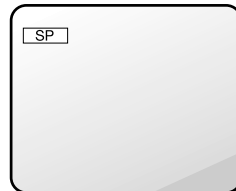

The tape speed appears in the upper left corner of the screen.

- 2 Press SPEED repeatedly until the speed you want (SLP, SP) appears.
 - ✓ SP (Standard Play) is the most common speed for recording. For more information on tape speeds, see page 33.

- 3 Select the television channel you want by pressing CH^ or CH^ or by using the number buttons.

If you are using the number buttons to select the channel, press 0 before a single-digit channel number (for channel 5, press 0, 5).

- 4 Press the REC button on the remote control.

The record indicator on the control panel illuminates and the TV/VCR begins recording.

- ✓ The TV/VCR automatically stops recording when it reaches the end of the tape.
- ✓ Press STOP at any time to stop recording.
- ✓ Don't change tape speeds while recording; this may cause picture distortion during playback.

When you finish recording, rewind the tape and remove it from the TV/VCR.

VCR OPERATION

Recording TV Programs as You Watch, *continued*

Editing While Recording

You can edit while recording, selecting only those scenes you want to record from the current television program. This is especially helpful if you want to record a program without commercials.


- 1 Be sure you have begun recording and that the record indicator light on the front panel is lit.
- 2 Press P/STILL to temporarily stop recording.
After ten minutes in pause mode, the TV/VCR stops the tape automatically and switches to TV mode to protect the video heads. If this happens, press REC to resume recording.
- 3 To resume recording, press P/STILL again.

Using Advanced Recording Features

One-touch Recording

One-touch Recording (OTR) lets you record television programs with the touch of a button. You can program the length of time (up to four hours) that you want to record.

- 1 Insert a video cassette tape, set the tape speed, and select the channel you want to record.
 - ✓ The TV/VCR won't record if the record safety tab on the tape has been removed. For more information, see page 33.
- 2 Press the REC button on the remote control three times.

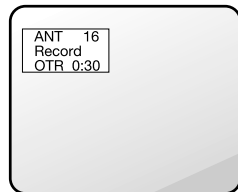

The OTR time appears in the upper left corner.

Your recording time options are: 30 minutes, 1 hour, 1 hour and 30 minutes, 2 hours, 3 hours, or 4 hours.

- 3 Press the REC button on the remote control repeatedly until the time you want appears.

The TV/VCR begins recording. You can increase the length of time you want to record at any time during the recording process by pressing the REC button again and choosing additional time.


If you want to stop recording before the time is up, press the REC button until the OTR display shows "0:00." The recording stops after a few seconds. You can also press POWER on the front panel, then press STOP/EJECT.

Timer Recording

You can set the timer to record up to six different programs. The timer can turn the TV/VCR on at the time you select, record for a selected length of time, and then turn off.

You can record a program one time, daily (every day, Monday through Friday), or weekly (the same day every week).

- 1 With the menu on the screen, press CH ^ until "Timer Record" is highlighted.

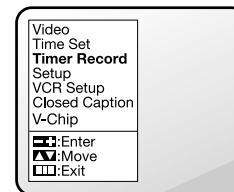


- 2 Press VOL+.

- ✓ The clock must be set to the correct time and date before you program the timer.

VCR OPERATION


Using Advanced Recording Features, *continued*

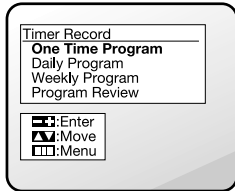

The Timer Record menu appears on the screen.

- Use the CH[^] or CH[^] buttons to select One Time Program, Daily Program, or Weekly Program. Press VOL+.

The type of programming you choose will be displayed in the first line of the on-screen display. In the following example, "One Time Program" has been chosen. The instructions for using the feature are the same regardless of which type of programming you have chosen.

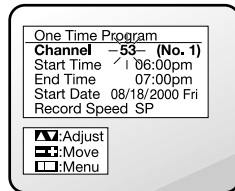


The One Time Programming screen appears. Press VOL+. The channel number will blink.

The TV/VCR assigns a number (1-6) to your entry which is used in the program review feature. (For more information, see page 22.)

- Use CH[^] or CH[^] to select the channel you want to record. Press VOL+ to lock in the channel you've chosen.
- ✓ If you make a mistake at any point during programming, press VOL- and CH[^] until the number you want to change is flashing, then enter the correct number.


If you are recording a channel that comes through a cable converter box, enter the output number of the cable box.

- Use CH[^] to highlight "Start Time." Press VOL+.

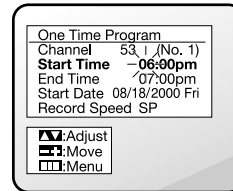


The starting hour will blink. Use CH[^] or CH[^] to select the hour to begin recording.

- Press VOL+.

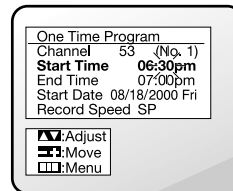


The starting minute will blink. Use CH[^] or CH[^] to select the minute to begin recording. Press VOL+ to lock in the minute. Press CH[^] to highlight "End Time."

- Press VOL+.

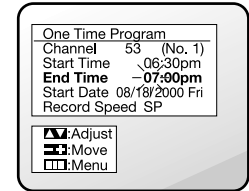

The ending hour will blink. Use CH[^] or CH[^] to select the hour to end recording.

- Press VOL+.

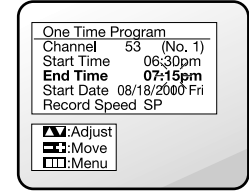


VCR OPERATION

Using Advanced Recording Features, *continued*

The ending minute will blink. Use CH \wedge or CH \wedge to select the minute to end recording. Press VOL+ to lock in the minute. Press CH \wedge to highlight "Start Date."


- ✓ The TV/VCR automatically selects AM or PM for the ending time.

9 Press VOL+.

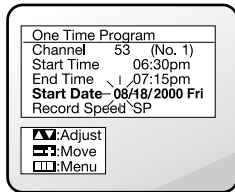


The month will blink. Use CH \wedge or CH \wedge to select the month to begin recording.

10 Press VOL+.

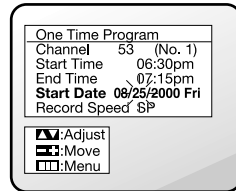


The date will blink. Use CH \wedge or CH \wedge to select the date to begin recording.

11 Press VOL+.

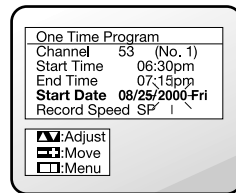

The year will blink. Use CH \wedge or CH \wedge to select the year to begin recording. Press VOL+ to lock in the year. Press CH \wedge to highlight "Record Speed."

12 Press VOL+.

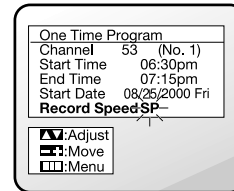

Press VOL+ to select the speed at which you want to record.

13 Press MENU repeatedly to exit the menu system and return to normal viewing.

- ✓ If you enter two program times that overlap, a program overlap warning appears on the TV screen, along with instructions for fixing the overlap.
- ✓ The timer indicator on the front panel of the TV/VCR is lit when program times are stored.

14 Press POWER to turn off the TV/VCR.

Important

- The TV/VCR should be off to record the programs you've chosen. But, if you are recording a channel that comes through a cable box, be sure to leave the cable box on and tuned to the channel you want to record.
- During timer recording, there is no picture on the screen because the power is off. If you want to watch the channel while it's being recorded, press POWER on the remote control.
- One-time timer programs clear from memory after recording. Daily and weekly programs remain in the timer until you remove them. If power to the TV/VCR is interrupted all programs will be disabled, until you reset the clock. Then, the programs will be restored.


VCR OPERATION

Using Advanced Recording Features, *continued*


Using Program Review

Program Review allows you to review all of the programmed recordings currently stored in the TV/VCR's memory and to remove a programmed recording quickly and easily.

- 1 In the Timer Record Menu, press CH \wedge to select "Program Review."

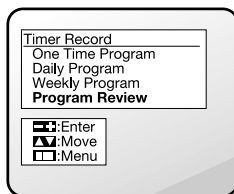

- 2 Press VOL+.

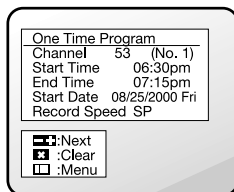

The Program Review screen appears. The information for the first program appears on the screen.

- ✓ Program Review is only available if you have programmed your TV/VCR to record at a later time.
- 3 To see the information for the next program number, press VOL+ or VOL-.
 - ✓ If you're recording through a cable box, the Program Review screen displays the output channel of the cable box as the channel number to be recorded.
 - 4 If you want to remove a program from memory, press CLEAR when the program you want to erase appears on the screen.

That program is erased from memory.

The TV/VCR is equipped with a program memory backup that saves all the timer program information if the power to the TV/VCR is interrupted.


If the unit has been without power, all of the timer program information will be disabled, until you reset the clock. When the clock is reset, the programs will be restored.

- 5 Press MENU to exit the menu system and return to normal viewing.


Viewing the Demonstration Mode

The Demonstration Mode displays all on-screen menus and programmable features.

- 1 With the main menu on the screen, press CH \wedge until "VCR Setup" is highlighted.

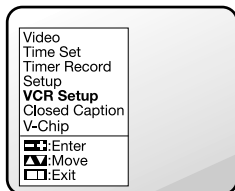


- 2 Press VOL+.

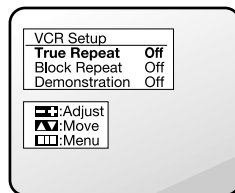

The VCR Setup screen is displayed.

- 3 Press CH \wedge until "Demonstration" is highlighted.

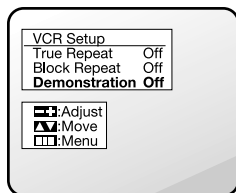

- 4 Press VOL+.
- The TV/VCR cycles through the various menus and settings available.
- 5 Follow the previous steps to turn off the Demonstration Mode.

Using Turbo Rewind

This product features Turbo Rewind, a high speed rewind mechanism that allows the user to rewind the tape in a shorter time period than normal. (T120 tape: within 100 seconds).

Note: The Turbo Rewind feature works only when rewinding the tape in stop mode.


You may experience a higher noise level when using this feature compared to standard rewind.

Download from www.Somanuals.com. All Manuals Search And Download.

Using True Repeat

You can set your TV/VCR to automatically repeat a tape or a section of tape. When you use True Repeat, your TV/VCR will play until it reaches the end of a tape. Then, it will rewind to the beginning of the tape and begin playing again.

- 1 With the VCR setup menu on the screen, press CH \wedge or CH \wedge until "True Repeat" is highlighted. Press VOL+ to turn True Repeat on.

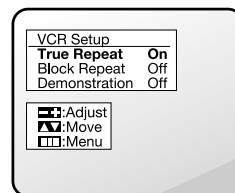

- 2 Press MENU twice to return to normal viewing.
- 3 Insert and play a pre-recorded video tape.

The TV/VCR will play the tape until it reaches the end of the tape. Then, the TV/VCR will stop the tape, rewind it to the beginning, and begin playing again.

If the TV/VCR reaches an unrecorded section of tape before it reaches the end, it will search forward and check the tape again. If it finds a recorded section of tape, it will begin playing. If the tape is still blank, it will continue to search forward, until it reaches the end of the tape.


- 4 Press STOP to end the repeat.

Using Block Repeat

Block Repeat allows you to repeat a section of tape that you select. You can repeat this section of tape (the "block") from one to ten times, or endlessly. "Repeat" section should be set up at a minimum ten-second interval.

- 1 With the VCR Setup menu on the screen, press CH[^] to highlight "Block Repeat."

Press VOL+ to select the number of times you want your "block" to repeat.

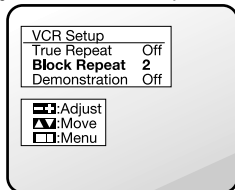

You can choose to have your "block" repeat from one to ten times, or endlessly.

- 2 Press MENU twice to return to normal viewing.

- 3 Insert and play a pre-recorded video tape.
- 4 Press REPEAT at the beginning of the "block" you want to repeat. ("Repeat" does not appear on the screen when the button is pressed.)
- 5 When you reach the end of the "block," press REPEAT again.

The TV/VCR will rewind the tape to beginning of the block and repeat it.

The TV/VCR will repeat the block as many times as the number you set in step 1.

The word "Repeat" will appear on the screen.


- 6 To stop block repeat, press the STOP, P./STILL, or POWER buttons. You can also cancel block repeat by fast forwarding or rewinding to a point outside of the "block."

Viewing Closed Captions


Your TV/VCR decodes and displays closed captions. These captions are usually subtitles for the hearing impaired or translations into another language. All VCRs record the closed caption signal from television programs, so home-recorded video tapes also provide closed captions.

- ✓ Most pre-recorded commercial video tapes provide closed captions. Check for this symbol in your television schedule and on tape packaging.

- 1 With the main menu on the screen, press CH[^] until "Closed Caption" is highlighted. Press VOL+.

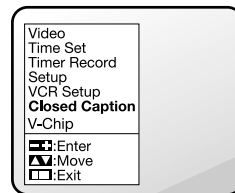


- 2 Press VOL+ to turn the closed caption feature on.

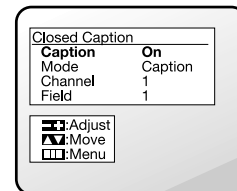

- ✓ Misspellings and unusual characters sometimes appear in closed caption transmissions.
- ✓ There may be a small delay before captions appear when you change channels.

- 3 Press or CH[^] to highlight, "Mode." Press VOL+ to choose "Caption" or "Text."

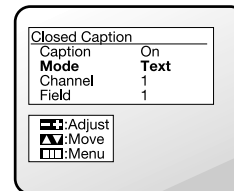


SPECIAL FEATURES

Viewing Closed Captions, *continued*

- ✓ In text mode, information unrelated to the captions is displayed, such as news or weather. Text often covers a large portion of the screen.
- 4 If you wish, use CH[^], CH[^], or VOL+ to change the channel or field. Then, press MENU to return to normal viewing.
- ✓ Different channels display different information. For example, Channel 1 may have subtitles in English, while Channel 2 has subtitles in Spanish.

The second field contains additional information that could not be included in the first field.

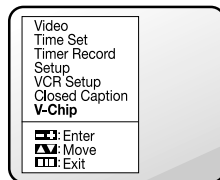

Using the V-Chip


The V-Chip feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a PIN (personal ID number) before any of the V-Chip restrictions can be set up or changed.

Setting Up Your Personal ID Number (PIN)

- 1 Press the MENU button on the remote control.
- 2 Press the CH[^] button 6 times, so that "V-Chip" is highlighted. (When V-Chip is highlighted, the letters change to red.)


- 3 Press the VOL+ button. The "Enter PIN" screen will appear. Enter your 4-digit PIN number.

Note: The default PIN number for a new TV set is "0-0-0-0."

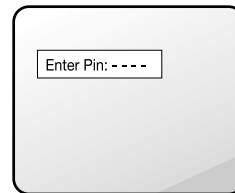

- 4 After entering a valid PIN number, the "V-chip mode" screen will appear. Press CH[^] and highlight "Change pin."
- (Note: When a particular field is highlighted, its color turns RED.)
- 5 While the "Change pin" field is selected, press VOL+ . The Change pin screen will appear. Choose any 4-digits for your PIN and enter them.

As soon as the 4 digits are entered, the "Confirm pin" screen appears. Re-enter the same 4 digits. When the Confirm screen disappears, your PIN has been memorized.

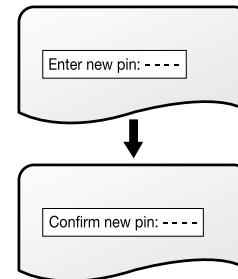


Note: If you forget the PIN, press the remote-control keys in the following sequence. (this resets the pin to 0-0-0-0.)

POWER OFF → MUTE → 8 → 2 → 4 → POWER ON.

Using the V-Chip, *continued*

How to Enable/Disable the V-Chip

- 1 Press the MENU button on the remote control.
- 2 Press CH ^ button 6 times, so that "V-Chip" is highlighted. (When V-Chip is highlighted, the letters change to red.)
- 3 Press the VOL + button. The "Enter PIN" screen will appear. Enter your 4-digit PIN number.
- 4 The "V-Chip mode" screen will appear, and "V-Chip lock" will be highlighted (red color). To enable the V-Chip feature, press VOL + so that the "V-Chip lock" field is YES. (Pressing VOL + will alternate between YES and NO.)

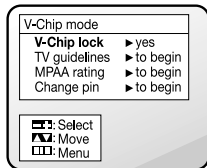


How to Set up Restrictions Using the "TV guidelines"


First, set up a personal identification number (PIN), and enable the V-Chip. (See last sections.) Parental restrictions can be set up using either of two methods: The TV guidelines or the MPAA rating.

- 1 Press the MENU button on the remote control.
- 2 Press the CH ^ button 6 times, so that "V-Chip" is highlighted. (When V-Chip is highlighted, the letters change to red.)
- 3 Press the VOL + button. The "Enter PIN" screen will appear. Enter your 4-digit PIN number.

- 4 The "V-chip mode" screen will appear. Press the CH ^ button, and highlight the field for "TV guidelines." (Note: When a particular field is highlighted, its color turns RED.)

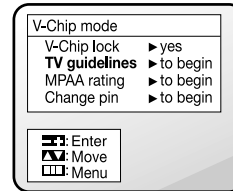

- 5 Press VOL +. The "TV guidelines" screen will appear. Press the CH ^ , CH ^ buttons to highlight one of the six age-based categories:

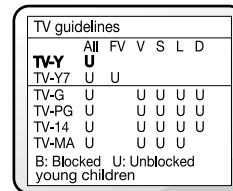

TV-Y Young children
TV-Y7 Children 7 and over

TV-G General audience
TV-PG Parental guidance
TV-14 Viewers 14 and over
TV-MA Mature audience
Note: These categories consist of two separate groups.

TV-Y and TV-Y7 (young children through age 7), and TV-G through TV-MA (everybody else). The restrictions for these two groups work independently: If a household includes very young children as well as young adults, the TV guidelines must be set up separately for each age group. (See next step.)

- 6 At this point, one of the TV-Ratings is highlighted (red color).

Press the VOL + button: Depending on your existing setup, either "U" or "B" will start blinking.

(U= Unlocked, B= Blocked)

Using the V-Chip, *continued*

While the "U" or "B" is blinking, press the CH ^ or CH ^ button to block or unblock the category.

Press MENU once to save the TV guidelines. A TV-Rating will be highlighted (RED), and no letters will blink. To exit this screen, press MENU again. To select a different TV-Rating, press CH ^ or CH ^ and then repeat the process.

Note 1: The TV-Y7, TV-PG, TV-14 and TV-MA have additional options. See the next step to change any of the following sub-rating:

FV: Fantasy violence
D: Dialog
L: L
S: Sexual situation
V: Violence

Note 2: The V-Chip will automatically block certain categories that are "more restrictive".

For example, if you block "TV-Y" category, then TV-Y7 will automatically be blocked.

Similarly, if you block the TV-G category, then all the categories in the "young adult" group will be blocked (TV-G, TV-PG, TV-14 and TV-MA). The sub-ratings (D, L, S, V) work together similarly. (See next section).

7 How to set the FV, D, L, S and V sub-ratings.

First, highlight one of these TV-Ratings: TV-Y7, TV-PG, TV-14 or TV-MA (See Step 4, above).

Next, while the TV-Rating is highlighted (red), repeatedly press the VOL + button. This will cycle through the available sub-ratings (FV, L, S, D or V).

A blinking letter ("U" or "B") will be displayed for each sub-rating. While the "U" or "B" is blinking, press CH ^ or CH ^ to change the sub-rating.

Press MENU once to save the TV guidelines.

A particular TV-Rating will be highlighted (red), and no letters will blink. To exit this screen, press MENU again. To select a different TV-Rating, press CH ^ or CH ^ and then repeat the process.

Note: The V-chip will automatically block certain categories that are "More restrictive".

For example, if you block the "L" sub-rating in TV-PG, then the "L" sub-ratings in TV-14 and TV-MA will automatically be blocked.

8 Press the MENU button twice to clear all the screens. (Or proceed to the next section, and set up additional restrictions based on the MPAA codes).

How to Set up Restrictions using the MPAA Ratings: G, PG, PG-13, R, NC-17, X


The MPAA rating system uses the Motion Picture Association of America (MPAA) system, and its main application is for movies. (Eventually, movie video cassettes will be encoded with MPAA ratings.) When the V-Chip lock is on, the TV will automatically block any programs that are coded with objectionable ratings (either MPAA or TV-Ratings).

- 1 Press the MENU button on the remote control.
- 2 Press the CH ^ button 6 times, so that "V-Chip" is highlighted. (When V-Chip is highlighted, the letters change to red.)
- 3 Press the VOL+ button. The "Enter PIN" screen will appear. Enter your 4-digit PIN number.


SPECIAL FEATURES

Using the V-Chip, *continued*

- 4 The "V-chip mode" screen will appear. Press the CH ^ button, and highlight the field for "MPAA rating" and "to begin."

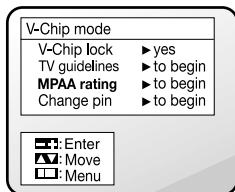

- 5 While "MPAA rating" is highlighted, press the VOL + button. The "MPAA rating" screen will appear.

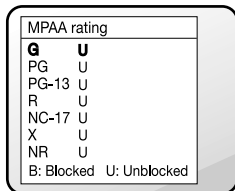

- 6 Repeatedly press the CH ^ button to highlight a particular MPAA category. Pressing the CH ^ button will cycle through the MPAA categories:

G: General audience (no restrictions).

PG: Parental guidance suggested.

PG-13: (Parents strongly cautioned).

R: R(Restricted. Children under 17 should be accompanied by an adult).

NC-17: No children under age 17.

X: X (Adults only).

NR: Not rated.

Next, press the VOL + button to activate the category. A blinking letter "U" or "B" will be displayed.

While a particular category is highlighted, press VOL + to activate it. A blinking letter ("U" or "B") will be displayed.

Press MENU twice to exit the V-Chip menu.

Note: The V-Chip will automatically block any category that is "more restrictive".

For example, if you block the "PG-13" category, then "R", "NC-17" and "X" will automatically be blocked also.

How to Reset the TV after the V-Chip Blocks a Channel("Emergency Escape")

If the TV is tuned to a restricted channel, the V-Chip will block it. The screen will go blank and the following message will appear: "Excessive rating."

To resume normal viewing, tune to a different channel using the number buttons. Under certain conditions (depending on the rating of the local TV programs) the V-Chip might lock out all the channels.

In this case, use the V-Chip function for an "emergency escape":

Press MENU and the blue MENU field will appear.

Press the CH ^ button 6 times so that "V-Chip" is highlighted. (When "V-Chip" is highlighted, the letters become red.)

Press VOL+: The V-Chip lock field will appear, and "V-Chip lock" will be highlighted.

Press VOL+ to switch V-Chip off. (Repeatedly pressing VOL+ will alternate between yes and no.)

SPECIAL FEATURES

Copying, or Dubbing, a Video

To make a copy, or “dub,” of another video tape, you need:

- your TV/VCR
- a separate VCR (or camcorder)
- two A/V cables with connectors. (You can find these at most electronics supply stores.)


Important warning:

One Federal Court has held that unauthorized recording of copyrighted TV programs may be an infringement of copyright laws.

Making the Connections


<FRONT>

Attach one end of the video/audio cable to the VIDEO/AUDIO OUT connector of the playback VCR (or camcorder) and the other end to the VIDEO/AUDIO IN connector of the TV/VCR.

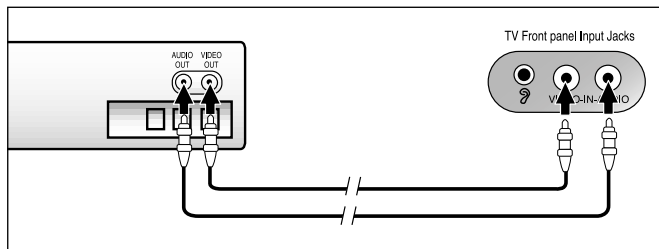

Dubbing

- 1 Insert the video cassette tape you want to copy into the playback VCR (or camcorder).
- 2 Insert a blank video tape (or any video tape with the record safety tab intact) into the recording TV/VCR.
- 3 Press LINE IN on the remote control of the recording TV/VCR.

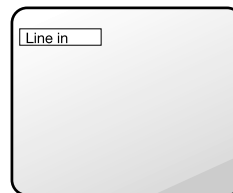

The words “Line in” appear in the upper left corner of the TV/VCR screen.

- ✓ The TV/VCR will be recording from the incoming line rather than from the normal broadcast signal.

“Line in” will remain on-screen until the PLAY button is pressed on the playback VCR.

- 4 To begin recording, simultaneously press the REC button on the recording TV/VCR's remote control and PLAY on the playback VCR (or camcorder).
- 5 When you are finished, press STOP on both the VCR (or camcorder) and the TV/VCR to stop recording.
- 6 Press LINE IN to return to normal TV viewing.

Identifying TV Problems

Poor picture, no picture, blurred picture, or blue screen.

- Try another channel. Make sure the unit is plugged into a working wall outlet.
- Adjust the antenna.
- Press LINE IN.
- Check all wire connections.

Poor sound quality.

- Try another channel.
- Adjust the antenna.

No color, wrong colors or tints.

- Make sure the program is broadcast in color.
- Adjust the picture settings.

Picture rolls vertically.

- Adjust the antenna.
- Check all wire connections.

Identifying VCR Problems

Unit won't turn on.

- Make sure the unit is plugged into a working wall outlet.
- Press the POWER button.

Unit won't take video tape.

- Make sure the tape is window side up with the arrow pointing away from you.
- Make sure there is no other tape in the compartment.

Unit didn't record a program.

- Make sure the antenna or cable is connected and that the TV/VCR is receiving the broadcast signal.
- Make sure the record safety tab on the tape is intact.

Unit didn't record a timer program.

- Make sure the unit was turned off.
- Check the programmed start and stop times.
- Make sure the time is set correctly.

There is no picture, the picture is distorted during video tape playback, or noise or streaks appear in the picture.

- Adjust the tracking.
- Clean the video heads.
- Make sure there has been a recording on the tape.

You can't receive regular broadcasts.

- Check the antenna or cable connections.

Rewind command doesn't work.

- Make sure the VCR is not in pause mode.
- Make sure the tape hasn't already been rewound.

Fast forward command doesn't work.

- Make sure the VCR is not in pause mode.
- Make sure the tape hasn't already been forwarded.

Picture is streaked during pause mode.

This is normal for SP recordings.

Caring for Your TV/VCR

Please follow these guidelines to get the maximum performance from your TV/VCR.

Placement

- Do not place the TV/VCR near extremely hot, cold, humid or dusty places.
- Do not place the TV/VCR near appliances with electric motors that create magnetic fields, such as vacuum cleaners.
- Keep the ventilation openings clear; do not place the TV/VCR on a soft surface, such as cloth or paper.
- Place the TV/VCR in an upright position only.

Liquids

Do not handle liquids near or on the TV/VCR. Liquids that spill into it can cause serious damage.

Cabinet

- Never open the cabinet or touch the parts inside.
- Wipe your TV/VCR with a clean, dry cloth. Never use water, cleaning fluids, wax, or chemicals.
- Do not put heavy objects on top of the cabinet.

Video Heads

- Use a head cleaning tape to remove any dirt that has accumulated on the video heads.
- Follow the instructions that come with the cleaning tape; excessive use of a cleaning tape can shorten head life.

Temperature

If your TV/VCR is moved from a cold to a warm place, unplug the power cord, and allow at least two hours for moisture that may have formed inside the unit to dry completely.

About Video Tapes

Use only video tapes marked VHS with this TV/VCR.

Caring for Video Tapes

- Keep tapes away from direct sunlight, heat or cold.
- Insert tapes with the window side up and the arrow pointing away from you.
- Do not subject tapes to violent vibrations or shocks.
- Never try to take apart or splice a video tape.
- Do not open the cassette, touch the tape, or put anything inside the tape case.
- Read the instructions supplied with video tapes.

Recording Speeds

You can play or record a tape at:

- SP (Standard Play) speed
- SLP (Super Long Play) speed


Your TV/VCR automatically plays tapes at the proper speed.

Recording at slower tape speeds allows tapes to hold more program material.


TAPE	SP	SLP
T-60	1 hr.	3 hrs.
T-120	2 hrs.	6 hrs.
T-160	2 hrs., 40 mins.	8 hrs.

The Record Safety Tab

 Most video tapes have a safety tab that must be intact to record. To protect a tape from erasure, you can break off the tab.



To record on a cassette with the tab removed, cover the hole with cellophane tape.

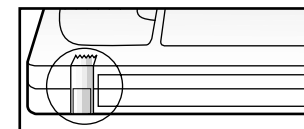

Specifications

Format

VHS Standard

Recording system

Rotary, azimuth two-head helical scanning system

Luminance: FM azimuth recording

Color signal: Converted subcarrier phase shift recording

Television system

NTSC-type color signal EIA Standard (525 lines, 60 fields)

Audio track

One track

Tape width

12.7 mm (1/2 inch)

Record speed

SP: 33.35 mm/s (1.31 in./s)

SLP: 11.12 mm/s (0.43 in./s)

Record/playback time

480 minutes with T-160 used in SLP mode

FF/REW time

Less than 100 sec. with T-120

Heads

Video: Two rotary heads

Audio/control: One stationary head

Erase: One full track erase, one audio track erase

Video

Input

VIDEO IN jack (RCA) 1.0 V p-p, 75-ohm unbalanced

Signal-to-noise ratio

Better than 43 dB

Horizontal resolution

Color/Monochrome, more than 220 lines

Audio

Input

AUDIO IN jack (RCA) -8 dBm,

50K-ohm unbalanced

Signal-to-noise ratio

SP: better than 35 dB

SLP: better than 35 dB

Frequency response

SP: -6 dB 100 Hz – 10 KHz

SLP: -6 dB 100 Hz – 5 KHz

TV tuners

VHF input: ch. 2 – ch. 13, cable channels "4A, A-W, W+1-W+84, A-5-A-1" 75-ohm unbalanced

UHF input: ch. 14 – ch. 69 VHF, UHF one input 75-ohm unbalanced

Operating temperature

41° F – 104° F (5° C – 40° C)

Operating humidity

10% – 75%

Equipment specifications are subject to change without notice

Model

CMC13003

Power requirement

120V AC, 60Hz

Power consumption

Approx. 65watts when on

Approx. 5watts when off

Dimensions(WxDxH)

362 x 383 x 382 mm
14.3 x 15 x 15 inches

Weight

11.7kg ; 25.79lbs

Curtis Mathes Tronics Color Television

LIMITED WARRANTY TO ORIGINAL PURCHASER

This CurtisMathes Tronics brand product, as supplied and distributed by CurtisMathes and delivered new, in the original carton to the original consumer purchaser, is warranted by CurtisMathes against manufacturing defects in materials and workmanship for a limited warranty period of:

Ninety (90) Days Labor and One (1) Year Parts

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact CurtisMathes for determination of problem and service procedures. Warranty service can only be performed by a CurtisMathes authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to CurtisMathes or CurtisMathes's authorized service center.

To obtain warranty service, please contact CurtisMathes at: **1-877-456-2788**

Transportation of the product to and from the service center is the responsibility of the purchaser.

For more information on CurtisMathes products and Customer support visit our website at: www.curtismathes.com

CurtisMathes will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products, if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of CurtisMathes and must be returned to CurtisMathes. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations; repairs, external wiring or connectors not supplied or authorized by CurtisMathes which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal and reinstallation; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; picture tube (CRT) brightness related to normal aging, or burned-in images. CurtisMathes does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESSED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESSED WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESSED WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON CurtisMathes. CurtisMathes SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, EVEN IF CurtisMathes HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CurtisMathes BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY CurtisMathes AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY, ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY CurtisMathes, NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CurtisMathes. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MEMO

MEMO

CurtisMathes
Tronics

AA68-00951A(ENG)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>