



## Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

## Operating Steps

Read and follow **Washing Procedures** in your Owner's Guide. It provides detailed information for preparing the wash load and choosing control settings to ensure best washing results.

1. **Sort laundry into loads that can be washed together.**
2. **Prepare items for washing.**
3. **Pretreat stains and heavy soil.**

4. **Add laundry load to the wash drum.**
5. **Open the dispenser drawer and add the measured amount of detergent to the detergent compartment.** If desired, add liquid bleach and fabric softener to the appropriate compartments. Slowly close dispenser drawer. The washer will not operate with the drawer open.
6. **Set Wash/Rinse Temperature according to fabric type and soil level of each load.**

See **Control Settings Chart** (reverse side) for more information on suggested water temperatures.

7. **Select desired Cycle Signal volume.**
8. **If desired, select Extra Rinse in the Regular or Perm Press cycle.**
9. **Push in the cycle selector knob and turn it clockwise to the desired wash cycle.** See **Cycle Selection** (reverse side) for cycle descriptions and the **Control Settings Chart** for suggested cycle settings.

10. **Start the washer by closing the door and pulling out the cycle selector knob.** The washer will **not** operate with the **door** open. As a safety measure, the **door** will automatically lock during the entire wash cycle.

- To stop the washer, push in the cycle selector knob.
- To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting.
- Pull out the knob to restart the washer.

11. **Remove items when cycle ends.** When the Cycle Signal control is on, a signal will sound at the end of the cycle.

**Note:** From time to time you may see water in the bleach and fabric softener compartments. This is a result of the siphoning action and is part of the normal operation of the washer.

*(continued, reverse side)*

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** if the care label is not available.

### Prewash Cycle

The Prewash Cycle can be used to help remove protein-based stains such as milk, grass or blood and to help loosen soils before washing. During Prewash, the washer will tumble the load for 6 minutes, drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

- The Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.
- This cycle should always be followed by a complete wash cycle using the recommended amount of detergent.

### Regular Cycle

Up to 19 minutes of reversing tumble action for most fabrics. Three rinses and a high-speed final spin complete the cycle.

- **Heavy Wash** provides up to 19 minutes of reversing tumble action for heavily soiled fabrics.
- **Wash** provides up to 13 minutes of reversing tumble action for normally to lightly soiled fabrics.

### Perm Press Cycle

Up to 13 minutes of reversing tumble action for cottons and blends with a no-iron finish. Three rinses and 2 spins complete the cycle.

To help reduce wrinkling and protect permanent press items, this cycle does not have a high-speed final spin. The wash load may feel damper at the end of the Perm Press cycle than it would at the end of the Regular cycle.

### Knits & Delicates Cycle

Up to 9 minutes of gentle tumble action for the gentle care of knit and delicate items. Two rinses and 2 slow speed spins complete the cycle.

## Controls

Always follow instructions on fabric care labels. Check the **Control Settings Chart** if the care label is not available.

Note: There is no need to select a water level because the washer automatically adjusts the water level to the type and size of wash load.

**WASH/RINSE TEMPERATURE** - This determines water temperatures for washing and rinsing. For example, the Warm/Cold setting provides a warm water wash and a cold water final rinse.

Note: Detergents are not as effective at wash water temperatures below 65° F.

**CYCLE SIGNAL** - A signal will sound at the end of the cycle. The Cycle Signal is adjustable and can be set at OFF or from QUIET to LOUD.

Note: If the signal is turned to the OFF position, it will not sound at the end of the cycle.

**EXTRA RINSE** - Use Extra Rinse when additional rinsing is desired to remove excess dirt and detergent from heavily soiled loads.

- Select **Extra Rinse YES** to automatically include an extra rinse in the Regular or Perm Press cycle.
- Select **Extra Rinse NO** to conserve water when an extra rinse is not desired.

**DOOR LOCK INDICATOR LIGHT** - The indicator light is on when the cycle selector knob is pulled out. The light turns off at the end of the cycle. See your Owner's Guide for detailed information.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle setting. **This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	Heavy Wash
Normally to Lightly Soiled Colorfast & White Cotton & Linen	Hot or Warm	Cold	Regular	Wash
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	Wash
<b>PERMANENT PRESS</b> White or Normally Soiled	Hot or Warm	Cold	Perm Press	Wash
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press	Wash
<b>KNITS/DELICATES</b> Knitted Fabrics Delicates	Cold Cold	Cold Cold	Knits & Delicates Knits & Delicates	Wash Wash
Washable Woolens	Warm	Cold	Knits & Delicates	Wash

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>