

iHome®

Model iD28
**App-enhanced Portable
Rechargeable System for
iPad®, iPhone® and iPod®**


works with



iHome + Sleep
alarm clock app



iHome + Radio
internet radio app

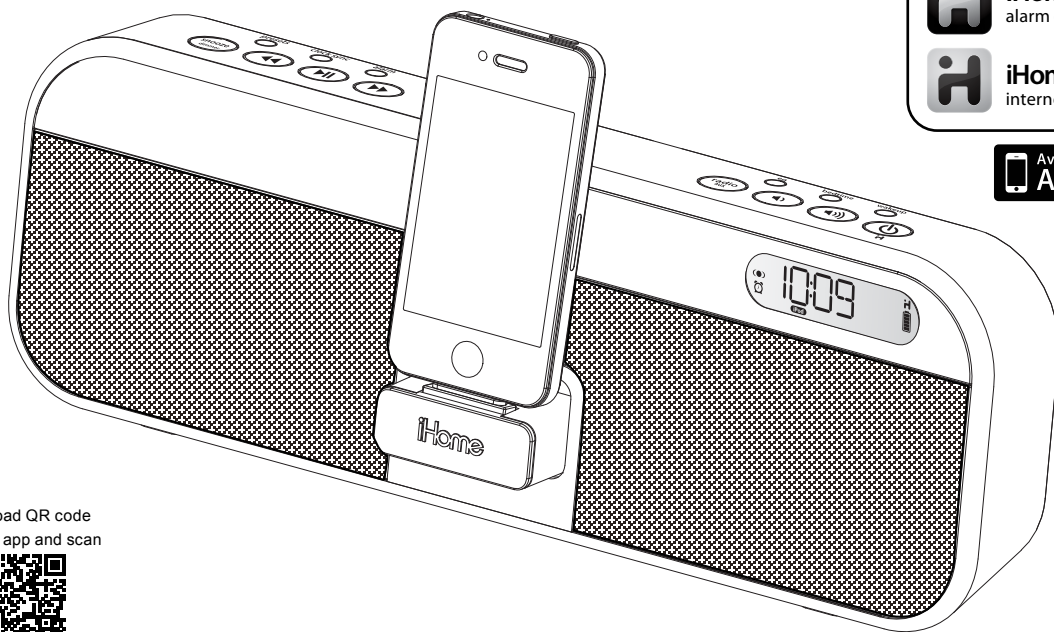

download QR code
reader app and scan



Note: *iHome+Sleep* and *iHome+Radio* apps are not covered in detail in this booklet. To learn more about how these apps can enhance your experience, please download the free *iHome+Sleep* app from the App Store and review the Start Guide.

Questions? Visit www.ihomeaudio.com

Download from Www.Somanuals.com. All Manuals Search And Download.

Table of Contents

Controls and Indicators / iD28 Display	1-2
Quick Start	3-4
Getting Started	5
Connect AC adaptor and Install Clock Backup Battery	
Charging Internal Battery	6
Reset the iD28	6
Setting Up the iD28	7
Updating Firmware, Docking iPhone/iPad/iPod, Setting the Time and Calendar using iPhone/iPod Time Sync, Setting Time and Calendar Manually	
Using the Alarm	8
Setting the Alarm, Review, Arming and Disarming Alarm Resetting the Alarm to Come on the Next Day, Sure Alarm, Snooze/Dimmer	
Listening to iPhone/iPad/iPod	9
Listening to FM Radio	9-10
Setting up the Antenna, Tuning and Playing the Radio Setting FM Radio Frequency/Range to use iD28 in Other Countries	
Using the Aux Line-In Jack with other Audio Devices, Sleep Timer, Using the Remote auto/on switch	10
A Consumer Guide to Product Safety	11
Troubleshooting	12
Warranty Information	13



TruBass and WOW technologies are incorporated under license from SRS Labs, Inc.

Download from www.Somanuals.com. All Manuals Search And Download.

FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.
- Consult your dealer or an experienced radio/television technician if the problem still exists.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it.

This Class B digital apparatus complies with Canadian ICES-003.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Maintenance


- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

Controls and Indicators

Front Panel

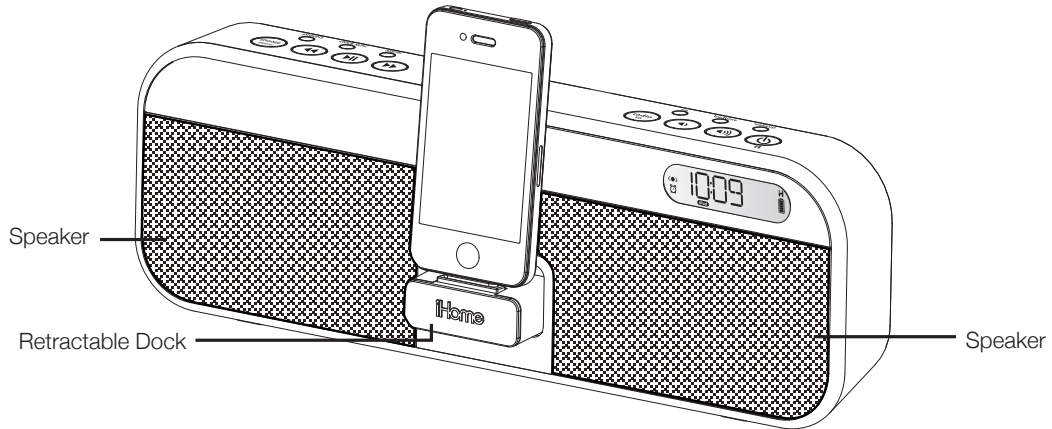


Top Panel

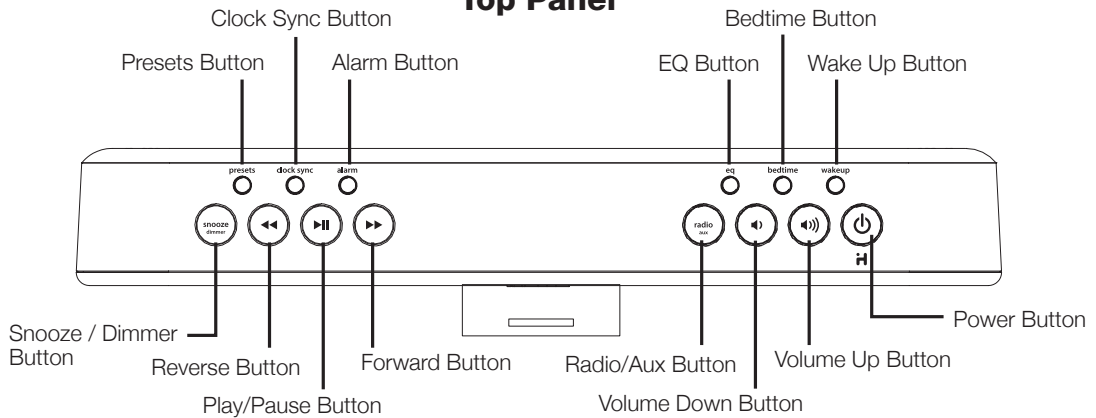


Controls and Indicators


Rear Panel

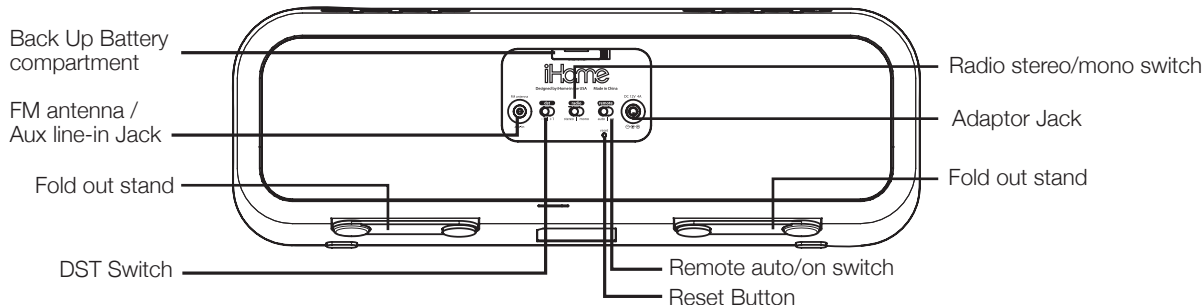

FM antenna/Aux line-in Jack (at Rear Panel)

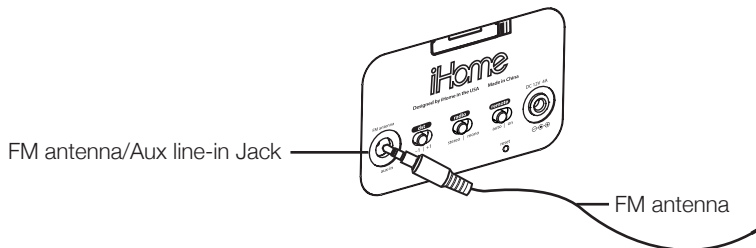


Display

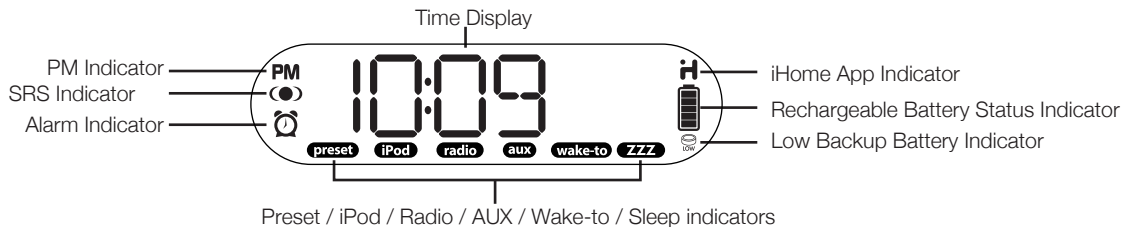


iD28 Quick Start

1:Stand

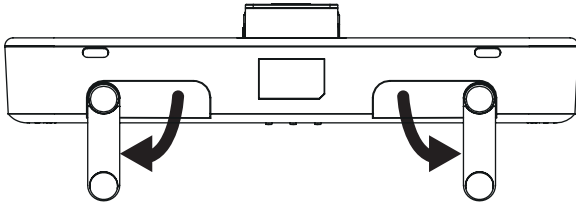


Fold out the stand feet on the bottom of the unit, then turn unit upright for operation.

2:Power

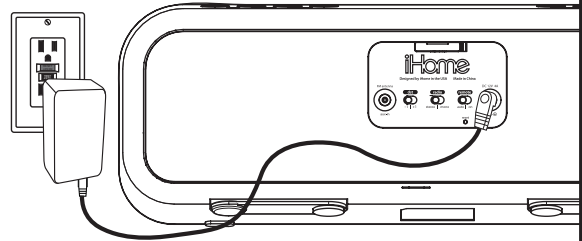

Plug the AC adapter into the adapter jack on the rear of the unit and the other end into a working outlet. The first time you connect the unit you should let it charge the internal battery completely (about 5 hours). The internal battery (and docked iPhone/iPad/iPod) will charge.


3:iPhone/iPad/iPod

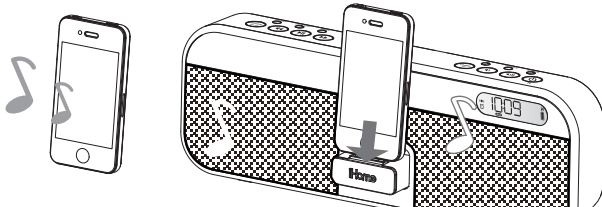

- Press on the iHome logo on front of the unit to release the dock (press in for travel)
- Gently dock playing iPad/iPhone/iPod. The unit will turn on and your audio will play through the unit.
- Press the ◀ or ▶ **Buttons** to adjust volume
- Press the **EQ Button** to cycle to Treble, Bass and SRS, press ◀◀ or ▶▶ to adjust settings.
- Press the ⏻ **Button** to turn unit off.

4:Time Sync


Press 

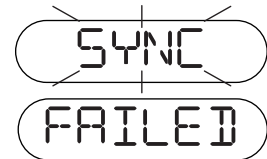

- Make sure unit is **OFF** and iPhone/iPad/iPhone is docked
- Press and release the **Clock Sync Button** on the top left of the unit. "SYNC" will flash in the display, followed by 2 beeps indicating time sync was successful.
- If "FAILED" appears on the display and a long beep sounds, sync was unsuccessful. Try again with a different iPhone/iPad/iPod, or set clock manually (see page 7).

iD28 Quick Start

5:Radio

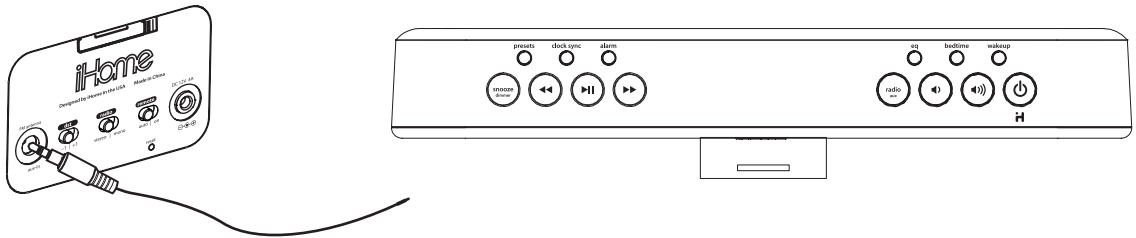

- Attach included FM antenna to FM Antenna/Aux line-in jack on back of unit
- Press and release the **Radio/AUX Button** as needed to select FM radio mode.
- Press and release the **◀** or **▶** **Buttons** to tune radio to desired station; press and hold briefly to scan to next clear station
- See page 9 for information on setting FM presets

Getting Started

Thank you for purchasing the iD28. Designed specifically to work with your iPhone, iPad and iPod, and with iHome apps like iHome+sleep and iHome+radio this system provides high quality audio performance that brings out the best in your music and lets you wake and sleep to it anywhere. These instructions do not cover the use of apps. For more on using this unit with iHome apps, please visit iHomeaudio.com/apps or look for iHome in the App Store.

Please read these instructions carefully before operating the unit and keep them for future reference.

Connect AC Adaptor

Connect the AC adaptor cable plug into the DC jack on the back of the system, then plug the AC adaptor into a working outlet. While connected to AC power, the iD28 will charge your docked iPhone, iPad or iPod as well as the internal lithium ion battery until fully charged.

Installing/Replacing the Clock Backup Battery


Note: The CR2032 lithium battery is included in the unit. Please pull out the battery pull tab before you use the unit.

This model is equipped with a battery backup circuit that will maintain the time and alarm time settings, as well as the radio station preset memory settings and EQ settings in the event of a temporary power interruption. The battery backup circuit will also operate the buzzer alarm to wake you up even if the power is out at the selected wake up time. The battery backup circuit requires one CR2032 lithium battery, included.


When the backup battery is getting weak the Low Backup Battery Indicator will begin flashing in the display. When you see this flashing indicator you should replace the backup battery as soon as possible. Purchase a replacement CR2032 battery, available wherever batteries are sold, and follow steps 1 through 4 below to install the replacement battery.

To replace the backup battery:

IMPORTANT: *When replacing the backup battery be sure to have the unit connected to the AC outlet to maintain all of your settings, otherwise it will be necessary to reset the time, alarm time, radio presets, and EQ settings after the battery is replaced.*


1. Locate the battery backup holder found on the rear of the unit towards the top center.
2. Pinch the locking tab on the right of the battery holder toward the center of the battery holder to unlock it and insert a thumbnail into the slot in and pry gently outwards to remove the battery holder.
3. Insert a fresh CR2032 battery in the backup battery holder with the "+" side facing up, as illustrated.
4. Replace the battery holder and confirm that the backup battery indicator  is not flashing in the display.

Note: Make sure you dispose of battery properly (see your local regulations).

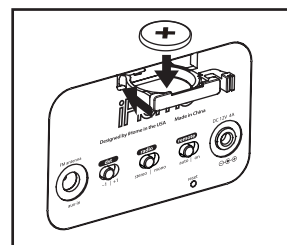

WARNING: Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry, ventilated area. Follow applicable laws and regulations for transport and disposal.

Charging the Internal Battery

Your unit comes with an internal lithium ion battery for portable operation. As noted above, the internal battery charges when the unit is connected to AC power. A battery status indicator  is located to the right of the clock display. When the indicator is low and flashing, you will need to connect the unit to AC power to recharge the battery. When the indicator is full and steady (not flashing), the battery is fully charged.

End-Of-Life Battery Disposal Instructions

This device uses a Lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact us for repair information. Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below.


Consult local laws and regulations for proper battery disposal in your region. If there are no local regulations concerning battery disposal, please dispose of the device in a waste bin for electronic devices.

Caution: The Battery used in this device may present a risk of fire, explosion or chemical burn if mistreated

Battery shall not be exposed to excessive heat such as sunshine, fire, or the like. Do not use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Do not leave your battery discharged or unused for extended periods of time. When batteries are misused, they may explode or leak, causing burns and personal injury. If your battery leaks, use normal precaution and discard the battery immediately.

Resetting the iD28

Your iD28 was designed with a special surge protection circuit to prevent permanent damage to the unit in the event of an unexpected power surge. If your unit appears to be 'locked up' and is not operating normally, and you know that the battery is properly charged, use a straightened paper clip, toothpick, or similar object to press the RESET button, located on the back panel next to the AC jack. This will unlock the unit and restore the original factory default settings.

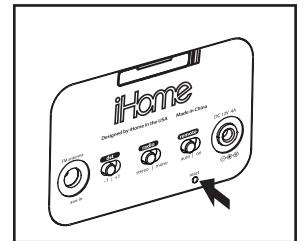

Setting Up the Unit

Updating your Firmware

To update the firmware on this unit to the latest version, please download the free iHome+Sleep app from the app store. Launch the app and follow directions for updating the firmware for this unit if available.

Docking your iPhone, iPad or iPod

1. Press on the iHome badge on the front of the unit to release the retracting dock (press in again for travel).
2. Carefully place your iPhone/iPad/iPod into the dock.

Setting the Clock

Setting the Time and Calendar using iPhone/iPad/iPod Time Sync

Time sync mode allows you to sync the unit to the time and calendar from your iPhone, iPad or recent models of iPod like iPod Touch, iPod Nano and iPod Classic (older models such as iPod Mini do not support this feature).

1. Make sure your iPhone, iPad or iPod is properly docked and the unit is OFF. Press and release the **Clock Sync Button** located on the top left of the unit. "SYNC" will flash on the display, indicating sync function is in progress.
2. After sync is complete, the display will show the current time and two beeps will confirm time sync is done.
3. If time sync fails, "FAILED" appears on the display a long beep sounds and the unit exits time sync mode. Try using a different iPhone/iPad/iPod to attempt syncing again or set time manually (see below).






NOTE: The iPhone is constantly updated to current time via cell phone towers. The time on your iPad or iPod is only accurate to the last time it was synced to a computer. It's possible to have up to 59 seconds difference between the unit and synced iPhone/iPad/iPod.

Setting Time and Calendar Manually

1. Set the **DST Switch** located on the back of the unit to +1 to add one hour or to -1 to subtract an hour to account for daylight saving time or standard time
2. Press and hold the **Clock Sync Button** until the hour display flashes. Press the **◀** or **▶** button to set the correct hour (press and hold for rapid advance). Remember to set the correct AM or PM time. The **PM Indicator** is located to the upper left side of the time digits; there is no AM indicator.
3. Press the **🔔 Alarm Button** at any time during clock setting to toggle the display between 24 hour (military) and 12 hour (standard) display mode. The PM indicator will not appear when display is in 24 hour mode.
4. Press the **Clock Sync Button**. The minutes will flash. Press the **◀** or **▶** button to set the current minutes.
5. Press the **Clock Sync Button**. The year will flash. Press the **◀** or **▶** button to set the current year.
6. Press the **Clock Sync Button**. The date will flash. Press the **◀** or **▶** button to select the current date (press and hold to enter fast scroll mode).
7. Press the **Clock Sync Button** again (or no button press within 10 seconds) to exit the clock setting mode. 2 beeps will confirm clock setting is complete.



Using the Alarm

Setting the Alarm


1. **Press and hold** the  **Alarm Button** until the alarm icon and alarm hour flashes on the display.
2. Press the **◀** or **▶** **Button** to set the desired alarm hour. Remember to set the correct AM or PM alarm time. The **PM Indicator** is located to the upper left side of the time digits; there is no AM indicator.
3. Press the  **Button**. The minutes will flash. Press the **◀** or **▶** **button** to set the desired alarm minutes.
4. Press the  **Button**. Press the **◀** or **▶** **button** to set the alarm schedule. 7 days = everyday, 5 days = weekdays and 2 days = weekends only.
5. Press the  **Button** to select wake to sound source. Press the **◀** or **▶** **Button** to cycle through alarm sources: iPod (includes docked iPhone, iPad or iPod), custom iHome Playlist, FM radio or buzzer (you cannot wake to aux audio device).
 - To wake to a custom playlist, you must first create a playlist in iTunes, name it “iHome” and import it into your iPhone/iPad/iPod. The playlist will wake you to random songs within the iHome playlist.
6. Press the  **Alarm Button** (or no button within 10 seconds) to exit alarm setting mode. Two beeps will confirm you have completed Alarm setting mode. The alarm will be armed, indicated by the alarm icon

Note: If iPhone/iPad/iPod or FM radio are wake-to source and unit detects no sound for around 30 seconds (or if no iPhone/iPad/iPod is detected), the buzzer will sound instead and iPhone/iPad/iPod will power down.

Review, Arming and Disarming Alarm (Turn Alarm Function On and Off)

To review the current alarm time and arm the alarm or to disarm the alarm, just press the  **Alarm Button** as needed. When the alarm is armed, the alarm icon and current alarm settings appear. When the alarm is sounding, press the  **Alarm Button** to turn it off and cancel alarm mode.

Resetting the Alarm to Come on the Next Day

When the alarm is sounding, press the  **Button** or the **Wakeup Button** to stop the alarm and reset it to come on the following day at the same time.

TIP: Download the iHome+Sleep app free on the App Store for enhanced custom alarms and more

Sure Alarm

The unit has a sure alarm feature. If you have installed the backup battery, the buzzer alarm will still sound in the event of power failure or if the internal battery is completely discharged.

Snooze/Dimmer

The unit has a programmable snooze.

1. **Press and hold** the **Snooze/Dimmer Button** during normal operation until the display flashes. Press the **◀** or **▶** **Button** to set the snooze time between 1 and 29 minutes. Press the **Snooze/Dimmer Button** (or no button within 10 seconds). 2 beeps will confirm snooze setting is complete.
2. When the alarm is sounding, press the **Snooze/Dimmer Button** to silence the alarm for the set snooze time. The alarm will sound again once the snooze time has elapsed. You can press snooze several times during the 1 hour alarm cycle.
3. Press the **Snooze/Dimmer Button** during normal operation to step through the display dimmer settings: High, medium, low and off.

Listening to iPhone/iPad/iPod

1. Gently dock an already playing iPhone, iPad or iPod. The unit will automatically turn on and you will hear the audio playing from your iPhone/iPad/iPod.
Note: If the playing audio loudness is too low on the iPhone/iPad/iPod, the iD28 may not detect that the iPhone/iPad/iPod is in play mode. Press the **▶|| Button** to play it.
2. Press the **◀◀** or **▶▶ Button** to change iPod/iPhone track forward/reverse.
3. When the iPhone/iPod is docked and in standby mode, press the **▶|| Button** to play it.
4. When the iPhone or iPod is in play mode, press the **▶|| Button** to pause play; press again to resume play.
6. Press the **Volume ◀||)** or **◀) Button** to adjust the unit volume.
7. Press the **eq Button** as needed to cycle through treble, bass and SRS™ sound settings. Press the **◀◀** or **▶▶ Button** to adjust settings for best sound. When the SRS circuit is switched 'On' the SRS indicator **●** will appear in the display.
8. To turn off the unit, press the **⏻ Button**. Your iPhone/iPod will continue charging while in the dock if unit is connected to AC power. It will not charge when running on internal battery.

Listening to FM Radio

Setting up the Antenna

Insert the FM Antenna plug into the Aux-in/FM Antenna Jack on the back of the unit. Extend the wire antenna fully for best reception. Do not strip, alter or attach to other antennas.

Tuning and Playing the FM Radio

1. Press the **Radio/AUX Button** as needed to turn the unit on and toggle between FM radio and aux-in modes. Select FM Radio mode. The last selected radio station will play and the frequency will appear in the display.
2. Press the **◀◀** or **▶▶ Button** to tune radio to a desired station. Pressing and holding the **◀◀** or **▶▶ Button** (2 sec. then release) will seek the next clear FM radio station.
3. Press the **Volume ◀||)** or **◀) Button** to adjust the volume setting.
4. If needed, move the **radio mono/stereo switch** located on back of the unit to mono to improve reception/signal.
5. To turn off the unit, press the **⏻ Button**. iPhone/iPod will continue charging while in the dock.

Setting and using FM Presets

You can set and save up to 6 radio station presets in memory.

1. To set a station as a preset, enter FM radio mode (see above).
2. Press the **Presets Button** as needed to step through the presets (1 - 6) to the desired preset number.
3. Press and hold the **Presets Button** until the display flashes, then press the **◀◀** or **▶▶ Button** to tune to the desired station for the preset number (press and hold **◀◀** or **▶▶** briefly to scan to the next clear FM station).
4. Press the **Presets Button** to confirm your preset. To continue setting presets, follow steps 2-3 above).

Listening to FM Radio

Setting FM Radio Frequency/Range to Use Unit in Other Countries

Different regions of the world use different FM radio frequency steps and ranges. You will need to select the one that matches the standards in your region (USA, EUROPE, JAPAN, AUSTRALIA, or CHINA). The default setting is USA; if you live in the US, you may skip this section.

1. Make sure the unit is OFF (not playing in any mode). Press and hold the **Radio/AUX Button** for about 5 seconds until "USA" flashes in the lower part of the display. Press the **◀** or **▶** **Button** to select your region (EU=Europe, JPN= Japan, AUS=Australia, CHN= China).
2. Press the **Radio/AUX Button** again (or no button within 5 seconds) to exit the radio frequency setting mode. Two beeps will confirm the setting is complete.

Using the Aux Line-In Jack with Other Audio Devices

The unit has an FM antenna/aux line-in jack that lets you play other audio devices through it. Unplug the FM antenna to use the aux line-in jack.

1. Plug one end of a standard 3.5mm audio patch cord (not included) into the headphone or line-out jack on your audio device and the other end of the patch cord into the aux line-in Jack, located on the rear of the unit.
2. Press the **Radio/AUX Button** until "AUX-IN" appears in the display, indicating aux mode is active.
3. Turn on and play your device (device must be controlled independently of the iD28).
4. Press the **Volume** **◀**) or **▶** **Button** to adjust the system volume. Adjust the output volume on your device if needed.
5. To turn off the unit, press the **⏻ Button**. Please remember to turn off your device, too.

Using the Sleep Timer

The unit has an adjustable sleep timer that lets you sleep to your iPad/iPhone/iPod or FM radio before shutting off after the specified time.

1. Select and play the audio source you wish to sleep to (iPad/iPhone/iPod or FM radio).
2. Press the **Bedtime Button** as needed to cycle through the sleep time settings: 90, 60, 15 minutes or OFF (cancels sleep mode and turns unit off). Press the **Bedtime Button** during sleep operation to review the sleep time remaining.
3. Press the **Volume** **◀**) or **▶** **Button** to adjust the sleep volume. This is separate from the unit's standard volume setting.
4. To turn off the unit, press the **⏻ Button**.

Using the Remote auto/on Switch

The unit has a remote auto/on switch located on the back of the unit. Slide the switch to the **AUTO** position to save battery power when traveling or operating on the internal battery. **AUTO** disables remote operation when operating on the internal battery. Slide switch to **ON** position for normal remote operation.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to assure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, and adhere to all warnings on the unit and in the instruction and service manual.

1. **Water and Moisture** – The unit should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat source such as radiators, heat register, stoves, or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power Cord Protection** – Power supply cord should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
6. **Cleaning** – The unit should be cleaned only as recommended by the manufacturer.
7. **Object and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged and take out batteries from the unit to prevent damage or corrosion.
14. **Servicing** – The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.

**Questions? Visit www.ihomeaudio.com
For any other questions: 1-800-288-2792 Toll Free**

Troubleshooting

Symptom	Possible Problem	Solution
Unit doesn't respond (no power)	AC adaptor isn't plugged to a wall outlet or the connector is not plugged into the power supply jack o the back of the unit	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit
	Wall outlet is not functioning	Plug another device into a wall outlet (same outlet) to confirm the outlet is working
	Internal battery is dead/needs charging	Connect AC adaptor to working outlet to charge battery
Phone/iPad/iPod does not dock properly	iPhone/iPad/iPod is obstructed	Remove your iPhone/iPad/iPod from the dock and check for obstruction on the connectors in the dock and on your device. Then reseat it in the dock.
iPhone/iPad/iPod does not respond to the unit	iPhone/iPad/iPhone is not docked properly	Remove your iPhone/iPad/iPod from the dock and check for obstruction on the connectors in the dock and on your device. Then reseat it in the dock.
	Your iPhone/iPad/iPod software is too old	Upgrade software on your iPhone/iPad/iPod via iTunes
	iPhone/iPad/iPod is locked up	Please make sure your iPhone/iPad/iPod is working properly before dock into the unit. Please refer to your iPod manual for detail.
	Using 3 rd generation iPod	iD28 doesn't support 3 rd generation iPod
iPhone/iPad/iPod didn't charge up	iPhone/iPad/iPod is not docked properly	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseat it in the dock.
	iPhone/iPad/iPod is locked up/frozen	Please make sure your iPod/iPhone is working properly before dock into the unit. Please refer to your iPod manual for detail.
	iPhone/iPad/iPod battery has problem	
Sound is distorted	Volume level is set too high	Decrease the volume.
	Sound source is distorted	If iPhone/iPad/iPod original sound source is poor quality, distortion and noise are easily noticed with high-power speakers. Try a different music file from a trusted source such as iTunes.
		Try reducing the output volume and EQ settings such as bass boost on the device itself.
Remote control doesn't work	Battery is weak or dead	Replace with new battery
	Remote Control is too far away or not aimed properly toward the device	Point the Remote Control toward the unit and use within 30 feet of the unit.
	Remote switch is in AUTO position	Move Remote switch to ON position
Unit is/feels warm	This is normal. The unit has a rechargeable battery and charging circuit that may make the unit feel warm to the touch when in charging mode.	No need for action, operate the unit as usual

Limited 1 Year Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$20.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$60.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$20.00 (\$60.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department
SDI Technologies Inc.
1330 Goodyear Drive
El Paso, TX 79936-6420

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

© 2011 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihomeaudio.com
For any other questions: 1-800-288-2792 Toll Free

iHome®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>