



TWO PERSON POP-UP TENT

Model 92654

Model 94054

Camouflage Print

ASSEMBLY AND OPERATING INSTRUCTIONS



3491 Mission Oaks Blvd., Camarillo, CA 93011
Visit our Web site at <http://www.harborfreight.com>

Copyright© 2005 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions and replacement parts, please call 1-800-444-3353

Specifications

Peak Height	37"
Material	Heavy Duty Nylon Fabric
Weight	7.4 lbs.
Includes: Tent Bag, 8 Metal Stakes, Stake Bag, 4 Nylon Tie-downs	

Save This Manual

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

Safety Warnings and Precautions

WARNING: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this Tent!

1. **Keep camp area clean.** Cluttered areas invite injuries.
2. **Observe work area conditions.** Keep work area well lighted during assembly.
3. **Keep children away.** Children must never be allowed in the work area during assembly. Do not let them assemble the Tent, or use it without adult supervision.
4. **Store idle equipment.** When not in use, the Tent must be stored in a dry location to inhibit mold.
5. **Do not modify this Tent and do not use this Tent for a purpose for which it was not intended.**
6. **Pick a proper location.** Set up the Tent on a flat, level surface. Make sure to set up the tent a safe distance from the campfire or any other heat source.
7. **Use eye and hand protection.** Always wear ANSI approved impact safety goggles and gloves during assembly.
8. **Maintain the Tent with care.** Keep the Tent clean for better and safer performance. Inspect Tent Poles and fabric periodically, and if damaged, have them repaired by a qualified technician.
9. **Stay alert.** Watch what you are doing, use common sense. Do not assemble the tent when you are tired.
10. **Check for damaged parts.** Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for any broken parts or mounting fixtures; and any other condition that may affect proper operation. Any part that is damaged should be properly repaired or replaced by a qualified technician.
11. **Use care when using electrical products in or near the tent.** If an electrical unit malfunctions or breaks down it may cause a fire. Always shut off electrical devices before leaving the tent.
12. **Do not assemble the Tent if under the influence of alcohol or drugs.** Read warning labels if taking prescription medicine to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not assemble the Tent.
13. **This Tent is not waterproof.** During rain some leakage may occur. Keep objects from touching the inside of the Tent as they may cause leakage at the point of contact. Water pockets may also form on the roof, if the Tent is not assembled taut.



14. **Warning! Keep all flame and heat sources away from the Tent.** This Tent is not fireproof and the fabric will ignite and burn if put in contact with any flame source. Tent fires are very hazardous. Do not leave campfires unattended. Do not situate the Tent near an open flame. Do not use lit candles, matches, or cooking equipment in or near the Tent. Do not spray the Tent with insecticide or insect repellent; doing so may greatly increase the flammability of the Tent.




15. **CARBON MONOXIDE WARNING: Never use any fuel burning device that produces fumes (including stoves, lanterns, candles, barbecues, or heaters) in or around the Tent.** These devices emit carbon monoxide, an odorless, colorless, toxic gas that may cause personal injury or death.

16. **Always thoroughly extinguish fires when leaving the camping area.**
17. **Always stake and tie the tent down securely.** Often, wind can pick up without warning, causing a hazard if the tent is not secured properly.

Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Unpacking

When unpacking, check to make sure that the tent and all parts shown to the right are included. If any parts are missing or broken, please call Harbor Freight Tools at the number on the cover of this manual as soon as possible.

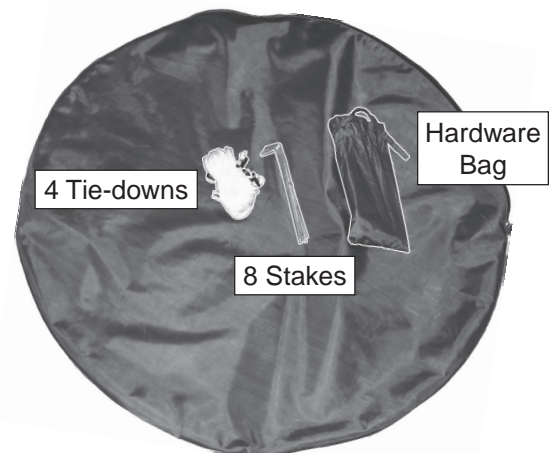

Carrying Case

Setting up and Using the Tent

1. **Caution!** The tent is held up by the spring tension of its supports. **Use care when unfolding, the tent can come open with some force.** Carefully unfold the tent on a smooth, level surface with the doorway facing the desired direction. Make sure no rocks or sharp sticks are under the Tent.
2. Using a rubber mallet (not included), tap a Stake through each of the 4 Stake Loops. Angle each Stake at approximately 70-80°, with the top leaning away from the Tent.
3. The included tie-downs can also be used to secure the tent by the tie-down loops to stakes or nearby stable objects, such as trees or boulders. To help prevent tripping, ensure that the tie downs do not cross any pathways.
4. **Carefully read and follow all use precautions, as outlined in the *Safety Warnings and Precautions* section of this manual.**




Folding and Storing the Tent

1

Before Taking the Tent Down:

- Make sure that the **area** is **without wind** and that **no bystanders** are nearby.
- **Empty** the tent. Then, **clean** and **dry** it to help prevent mildew.
- **Remove** all **tie-downs** and **stakes** (do not pull on the Stake Loops) holding the tent down. Store the hardware inside its bag.

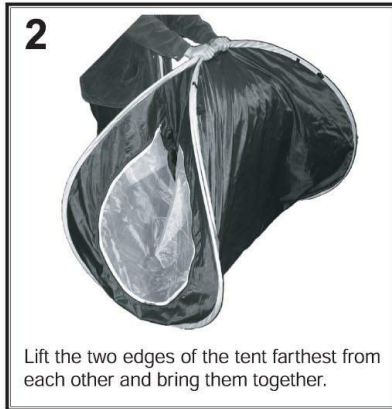

Maintenance

1. Before each use, inspect the general condition of the Tent. Check for rips or tears, bent/broken parts, loose seams, and any other condition that may affect its safe operation. If a problem occurs, have it corrected before further use. **Do not use damaged equipment.**
2. To clean the Tent, use only water and a mild detergent. Hang dry. Make sure the Tent is completely dry before packing into the Carrying Case.
3. **Replacement parts are not available for this unit.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>