

35 MM OUTDOOR CAMERA

Model 90850

OPERATING INSTRUCTIONS



3491 Mission Oaks Blvd., Camarillo, CA 93011
Visit our Web site at <http://www.harborfreight.com>

Copyright © 2003 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions and replacement parts, please call 1-800-444-3353

Specifications

Model Size	35 MM
Optical Lens	F9.0 Focus Free
Film Type	ISO 100, 200 or 400
Film Size	24 MM x 36 MM
Includes Wrist Strap	

Save This Manual

You will need the manual for the safety warnings, precautions, and operating procedures. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

Safety Warnings and Precautions

WARNING: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this product!

1. **Observe proper conditions.** This Camera isn't waterproof. Do not use the Camera in damp or wet locations. Don't expose to rain.
2. **Keep children away.** Do not let them handle the Camera without adult supervision. The Camera contains small parts that can be swallowed and/or choked upon.
3. **Store idle equipment.** When not in use, the Camera must be stored in a dry location out of reach of children.
4. **Stay alert.** Watch what you are doing, use common sense. Do not operate any product when you are tired.
5. **Check for damaged parts.** Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment and binding of moving parts; any broken parts or mounting fixtures; and any other condition that may affect proper operation. Any part that is damaged should be properly repaired or replaced by a qualified technician.

Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Unpacking

When unpacking, check to make sure the camera is complete and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number on the cover of this manual as soon as possible.

Operation

Loading the Camera

Note: Load and unload the film only in low light or shade. Bright light can damage the film whether it is exposed or unexposed.

1. Open the back of the Camera by pushing down on the latch on the left side of the back cover. Put the roll of film (not included) in the slot on the left side of the Camera.
2. Stretch the film over to the take-up spool making sure that the sprocket holes on the film fit onto the teeth across the bottom/middle of the Camera. Insert the end of the film through the slot on the take-up spool.

See **FIGURE 1**.

3. Wind the film by turning the center Knob from left to right slightly, to make sure that it catches, then close the back of the Camera. Wind, using the center Knob until it stops, and click the Trigger Button. Repeat 2-3 times until the film is past the exposed portion.

Shooting the Camera


1. Turn the center Knob from left to right until it stops. Hold the Camera steady (using both hands) making sure your finger is not in front of the lens.
2. Look through the Viewfinder and center your object. Gently push the Trigger Button.

See **FIGURE 1**.

Unloading the film (not included)

Note: When the counter on the bottom of the Camera indicates you have shot your last picture, you must rewind the film before opening the Camera or you will expose and ruin the film.

1. Unlock the film release by pushing and holding in the button on the bottom of the Camera, under the Knob. Flip the Handle up on the Rewind Dial and turn it clockwise (as indicated on the dial) until you hear and feel that the entire roll is back in side the film cartridge (Approximately 60 turns). See **FIGURE 1**.
2. Open the back of the Camera by pushing down on the latch on the left side of the back cover. Unload the Camera.

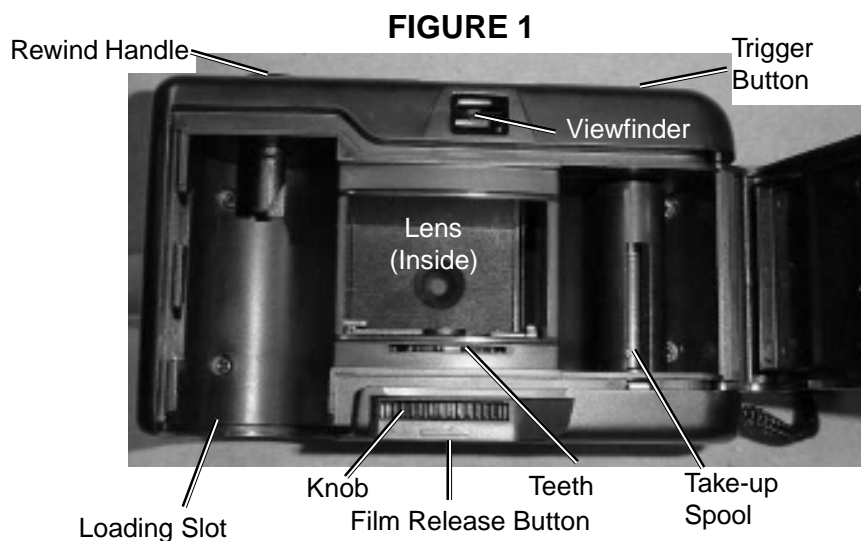

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>