

U.S. General®

PNEUMATIC ROLLER SEAT

Model 45342

ASSEMBLY AND OPERATING INSTRUCTIONS



Distributed Exclusively by



**HARBOR FREIGHT
TOOLS**



3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our Web site at <http://www.harborfreight.com>

Copyright © 2001 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions and replacement parts, please call 1-800-444-3353.

Revised Cover 12/04

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

Specifications

ITEM	DESCRIPTION
Overall Dimensions	19-1/2"H x 15" Dia.
Tool Tray	15" Dia. x 7/8"D x 9/100" Thick
Lifting Pole	1-31/32" Dia. x 7" to 11-5/8"H
Ram Extension	4-1/2"
Handle	5-1/4"L x 1-1/4"W x 5/8"Thick
Hub	1-47/64" Dia. x 1-1/4"H
Supporting Plate	7-5/8" Dia.
Casters	2-27/64" Dia. x 53/64"W
Seat	11-1/2" Dia. x 1-5/8" Thick
Material	Stamped Steel, Red Vinyl, Foam Rubber
Net Weight	12.35 Lbs.
Weight Capacity	300 Lbs.

Save This Manual

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

Safety Warnings and Precautions

WARNING: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this product!

1. **Keep work area clean.** Cluttered areas invite injuries.
2. **Keep children away.** Children should not be allowed in the work area.
3. **Use the right product for the job.** There are certain applications for which this product was designed. Do not modify this product and do not use this product for a purpose for which it was not intended.
4. **Use eye protection.** Always wear ANSI approved impact safety goggles.
5. **Maintain product with care.** Inspect parts periodically and, if damaged, have them repaired by an authorized technician.
6. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with this tool. Approved accessories are available from Harbor Freight Tools.

Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Unpacking

When unpacking, check to make sure all parts listed on Page 4 are included. If any parts are missing or broken, please call Harbor Freight Tools at the number on the cover of this manual.

Assembly

You will need a hammer and a crescent wrench to assemble this product.

1. Insert top of Lifting Pole [D] into the Hub [C] that has already been attached to the Seat Cushion [A].
2. Now insert Seat Cushion and Lifting Pole assembly into the top of the Tool Tray [E].
3. Check and tighten all fasteners as needed.

Operation/Maintenance

With its convenient tool tray, comfortable padded seat, and non-marking wheels, the Pneumatic Roller Seat is essential for the multi-tasking craftperson.

To lower seat, sit on the Stool and pull up on the handle until you have lowered the seat to the desired height (See Diagram I on Page 4). To raise seat, stand next to the Stool and pull up on the handle. Release handle when seat has risen to the desired height.

Do not let children play on or around the Roller Seat.

Do not stand on Roller Seat or use the tool tray to carry large amounts of weight. Do not attempt to exceed the Roller Seat's 300 lb capacity.

Once assembled, do not attempt to take this product apart.

Do not expose to heat. Parts of this product are under pressure.

Parts List

NO.	DESCRIPTION	QTY.
A	Seat Cushion	1
B	Supporting Plate	1
C	Hub	1
D	Lifting Pole	1
E	Tool Tray	1
F	2-1/2" Wheel	5
G	Handle	1
H	Truss Head Bolt M6x20	4
I	Cap Nut	5
J	Lock Washer Ø10	5
K	Rivet Ø3x18	1

Assembly Drawing

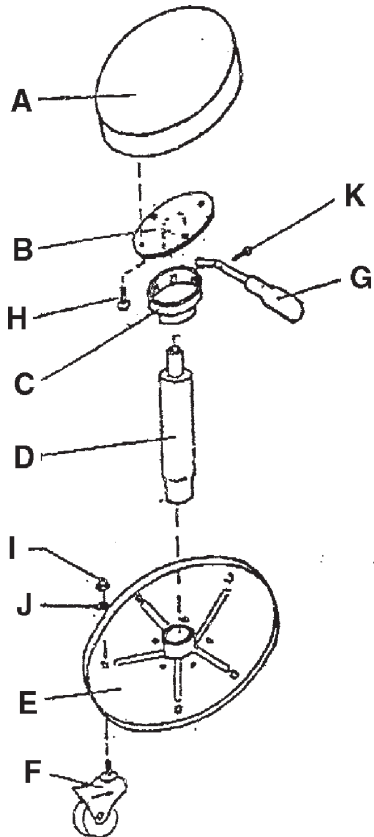


Diagram I, Lowering Seat

NOTE: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>