



# DIGITAL FISH SCALE

**Model 94569**

## ASSEMBLY & OPERATING INSTRUCTIONS



Diagrams within this manual may not be drawn proportionally.  
Due to continuing improvements, actual product may differ slightly from the product described herein.

**Distributed exclusively by Harbor Freight Tools®.**

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>



**Read this material before using this product.  
Failure to do so can result in serious injury.  
SAVE THIS MANUAL.**

Copyright© 2006 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

**For technical questions or replacement parts, please call 1-800-444-3353.**

THANK YOU for choosing a **HARBOR FREIGHT TOOLS** product. For future reference, please complete the owner's record below:

Model \_\_\_\_\_ Serial No. \_\_\_\_\_ Purchase Date \_\_\_\_\_

SAVE THE RECEIPT, WARRANTY AND THESE INSTRUCTIONS. It is important that you read the entire manual to become familiar with the unit BEFORE you begin assembly.

#### **Technical Specifications**

Maximum Weight Capacity	45 Lbs.
Back Light:	Blue LED
Construction:	Polypropylene
Accuracy:	+/- 1 oz. at 6 Lbs.
Battery:	9V (Not Included)
Net Weight:	0.40 Lbs.

**Note:** This Scale is not to be used for commerce or trade.



***READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!***

#### **Safety Warnings and Precautions**

**WARNING:** When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

**Read all instructions before using this product!**

1. **Store idle equipment.** When not in use, the Fish Scale must be stored in a dry location. Always lock up products and keep out of reach of children.
2. **Use the right product for the job.** There are certain applications for which the Fish Scale was designed. Do not modify the Fish Scale and do not use the Fish Scale for a purpose for which it was not intended.
3. **Check for damaged parts.** Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for any broken or damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn parts immediately.
4. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty.
5. **Do not operate product if under the influence of alcohol or drugs.** Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not operate the product.
6. **Do not exceed the Fish Scale's maximum weight capacity of 45 Lbs.**

**Warning:** The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

## Unpacking

When unpacking your Digital Fish Scale, check to make sure that the product is intact and undamaged. If any parts are missing or broken, please call **HARBOR FREIGHT TOOLS** at: **1-800-444-3353**.

## Operation

Your Digital Fish Scale requires no assembly. It is important that you read the entire manual to become familiar with the product BEFORE you use the Digital Fish Scale.

 
 
**Do not bump or shock the Fish Scale when it is in operation or being transported. Rough treatment may damage the highly sensitive mechanism.**

## Weighing the Fish

1. Insert a 9V battery (not included) into the Fish Scale-see Changing Battery section for additional information.
2. Press the **On/Off Button** down for two to three seconds to turn the Scale "ON" and activate the LED light. The LCD readout will display 0.00 and will flash when power is "ON"-see Figure 1.
3. The Fish Scale can be held by hand or hung from the loop at the top of the Scale. Place the fish onto the Hook. Press the **Hold Button** down while the fish is being weighed; the Hold Indicator light will go on-see Figure 2. The Scale will register the weight of the fish in Lbs. Pressing the **Hold Button** down a second time will bring the Scale back to zero.


## Total Weight for More Than One Fish

1. Each time you weigh an individual fish, press down on the **Memory Button**. The memory indicator light will go on-see Figure 2. Press the **Total Button** down to total the cumulative weight of each fish that was entered into **Memory**. Up to ten fish can be entered into Memory and added together to obtain a total weight.
2. **To clear the Memory**, press the **Memory Button** for two seconds. The LCD readout will flash four times to verify that the memory has been cleared.

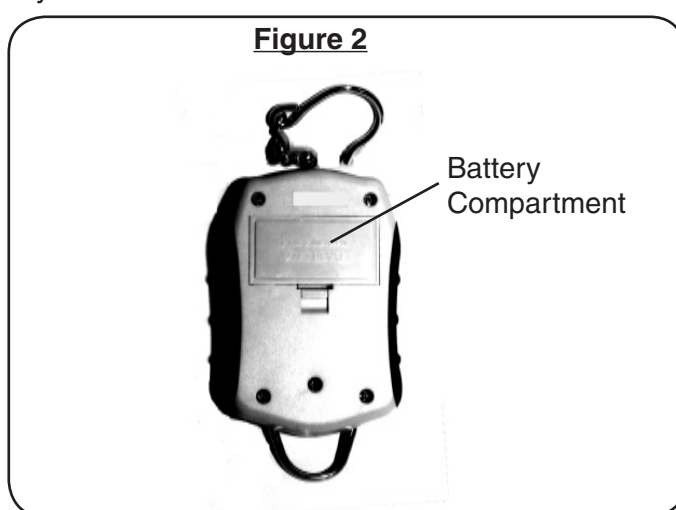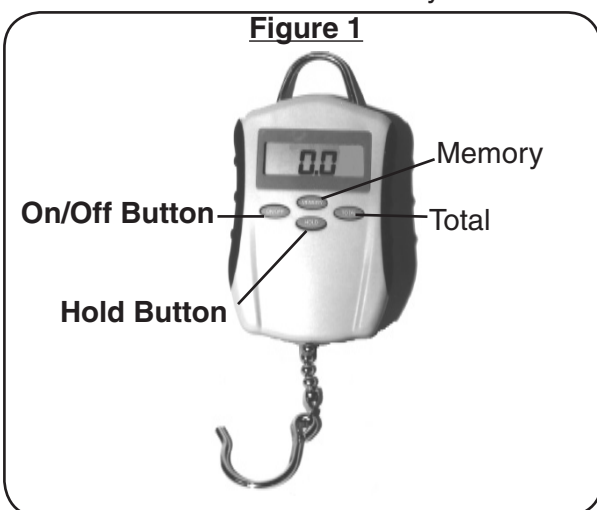

## Installing and Replacing the Battery

 1. Press down on the release tab on the back of the Fish Scale to open the Battery Compartment.
2. Insert one 9V battery (not included) and line up polarity with the markings indicated in the Battery Compartment.
3. When the Battery is running low, the LCD readout will show a picture of a battery. This indicates that the battery needs replacing.

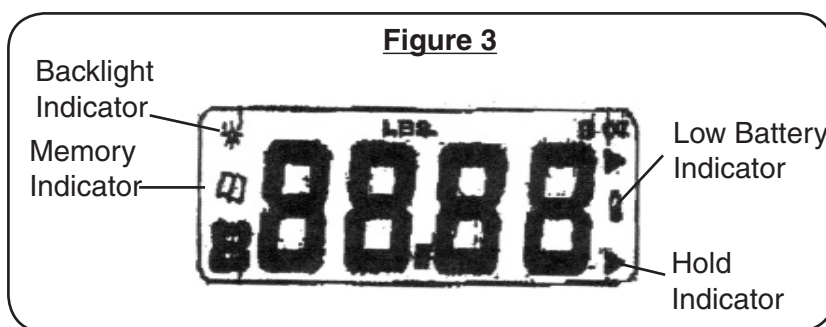

## Maintenance

1. Protect the Digital Fish Scale from rough use. It is susceptible to damage from being dropped, struck, or other abuse.
2. Protect the Digital Fish Scale from exposure to water or corrosive materials. It should be kept clean and dry. Occasional cleaning with a clean rag will extend its life and good appearance.
3. Lock it up and store in a dry location to inhibit rust. Keep out of the reach of children.

## Troubleshooting

1. LCD flashes continously: Battery charge is to low. Replace battery.
2. Display doesn't change when Buttons are pushed: Circuit needs to be reset. Remove the battery, wait 30 seconds, replace battery and turn the Fish Scale "ON".
3. LCD display does not show: Battery has poor connection or battery voltage is to low. Take battery out and adjust connections. Replace the battery as necessary.

**No replacement parts are available for this product.**

### **PLEASE READ THE FOLLOWING CAREFULLY**

**THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>