

TO REPLACE BATTERIES:

Batteries are included in this toy. When the batteries are exhausted, replace them with 3 "AA" batteries (alkaline recommended).

1. On back of toy, loosen screw in battery compartment cover, and remove cover (screw will remain attached to cover).
2. Insert 3 "AA" batteries into compartment. Replace cover and tighten screw.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and the receiver.
Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
Product and colors may vary.

© 2000 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

MADE IN CHINA

P/N 4783200000



Download from www.Somanuals.com. All Manuals Search And Download.

Musical Crib Puppy™

CAUTION: When toy is used in crib, the crib sides should be raised and the crib mattress should be in one of the lower positions.

 
Thank you for purchasing this Playskool® toy!



PLAYSKOOL®




TO ATTACH TOY TO CRIB:

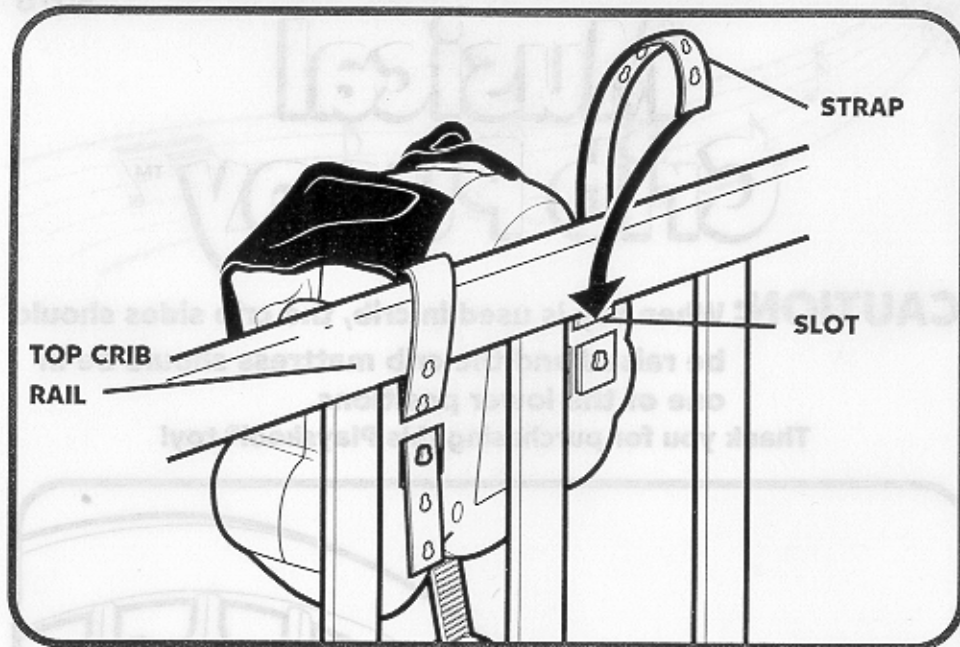

1. Line up arrow on strap with arrow on one of the slots on upper back of toy. Slide strap through slot and pull all the way up until strap end rests in recess. Repeat with other strap.
2. Position toy inside crib near top rail. Wrap strap around top crib rail, and back down through slot until strap is holding top of toy firmly onto rail.
3. Press closest strap keyhole onto raised tab.
4. Repeat process for other strap.

 TO ACTIVATE:

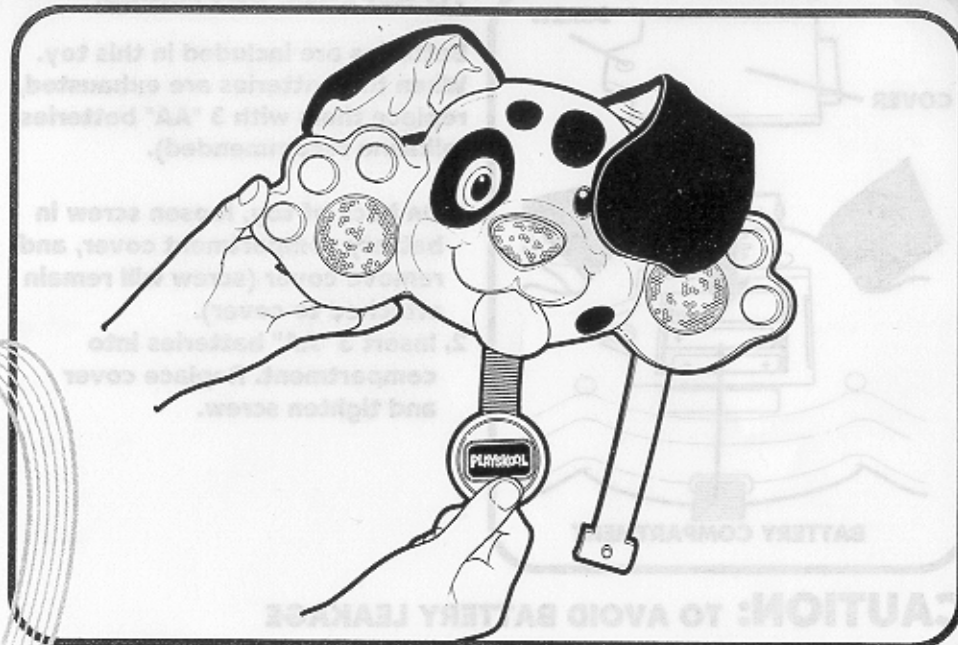

Each time you pull the dog tag, one of 20 songs play.

The songs are:

1. Bingo
2. Hickory Dickory Dock
3. Old MacDonald
4. Hey Diddle Diddle
5. Yankee Doodle
6. Oh Where Has My Little Dog Gone
7. Ta Ra Ra Boom De-ay
8. Old King Cole
9. Shoo Fly Don't Bother Me
10. The Farmer in the Dell
11. I'm a Little Buttercup
12. Rock-a-bye Baby
13. Skip To My Lou
14. Frère Jacques
15. Polly Wolly Doodle
16. Have You Ever Seen a Lassie
17. Git Along Little Doggies
18. Beautiful Dreamer
19. Clementine
20. Take Me Out to the Ballgame

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>