

Honeywell

**ADEMCO VISTA SERIES
VISTA-32FB/VISTA-128FB**

**Commercial Fire and Burglary
Partitioned Security System
With Scheduling**

User Guide

K3522V2 6/04 Rev A

TABLE OF CONTENTS

<p>SYSTEM OVERVIEW5</p> <p> General5</p> <p> A Partitioned System6</p> <p> Zones6</p> <p> Fire Protection6</p> <p> Burglary Protection7</p> <p> Alarms7</p> <p> Memory of Alarm7</p> <p> Speed Key (Macros)8</p> <p> Using Schedules8</p> <p> Device Timers8</p> <p> To Access Another Partition (GOTO Command)8</p> <p> Master Keypad Operation9</p> <p> Self-Help Feature9</p> <p> Phone Access & Voice Response Capability9</p> <p>ABOUT THE KEYPADS 10</p> <p> General10</p> <p> The Alpha Keypad10</p> <p>FUNCTIONS OF THE KEYPAD 11</p> <p>ENTRY/EXIT DELAYS 14</p> <p> General Information14</p> <p>SECURITY CODES & AUTHORITY</p> <p> LEVELS 15</p> <p> General Information15</p> <p> Duress Code15</p> <p> Quick Arming15</p> <p> Authority Levels16</p> <p> General Rules on Authority Levels and Changes17</p> <p> To Exit User Edit Mode17</p> <p> To Add a User18</p> <p> To Change a User's Code20</p> <p> To Delete a User20</p> <p>ACCESSING OTHER PARTITIONS.....21</p> <p> To Access Another Partition21</p> <p> Global Arming21</p> <p> Master Keypad Operation22</p> <p> Common Lobby Operation24</p>	<p> How User Codes Affect the Common Lobby25</p> <p>CHECKING FOR OPEN ZONES 26</p> <p> Using the [T]_READY Key26</p> <p>DISPLAYING ALL ZONE DESCRIPTORS..... 27</p> <p> Using the [*]_READY Key27</p> <p>BYPASSING PROTECTION ZONES... 28</p> <p> Using the [6] BYPASS Key28</p> <p> Quick Bypass29</p> <p> Displaying Bypassed Zones29</p> <p>ARMING PERIMETER ONLY 30</p> <p> Using the [3] STAY key30</p> <p>ARMING PERIMETER ONLY 31</p> <p> Using the [7] INSTANT Key31</p> <p>ARMING ALL PROTECTION 32</p> <p> Using the [2] AWAY Key32</p> <p>ARMING ALL PROTECTION 33</p> <p> Using the [4] MAXIMUM Key33</p> <p>DISARMING AND SILENCING ALARMS..... 34</p> <p> Using the [1] OFF Key34</p> <p> Memory of Alarm34</p> <p>USING THE KEYSWITCH 35</p> <p> General35</p> <p> Arming35</p> <p> Disarming35</p> <p>CHIME MODE 36</p> <p> Using the [9] Key36</p> <p>VIEWING ALARM COMPANY MESSAGES 37</p> <p> General Information37</p>
---	---

PANIC KEYS.....	38	TESTING THE SYSTEM (TO BE	
Using Panic Keys	38	CONDUCTED WEEKLY)	53
SPEED KEY (MACROS).....	39	Using the 5 TEST Key	53
General Information.....	39	Testing Your System	53
Defining	39	FIRE ALARM SYSTEM	54
Executing.....	40	In Case Of Fire Alarm.....	54
Using Speed Key For Fire Alarm		Silencing A Fire Alarm	54
Function	40	Fire Display Lock.....	55
ACCESS DOOR CONTROL	41	Fire Drill Test (Code + # + 69).....	55
General Information.....	41	TROUBLE CONDITIONS	56
Executing.....	41	Typical Trouble Displays	56
USING #70 RELAY MENU MODE	42	Power Failure	57
General Information.....	42	EMERGENCY EVACUATION	58
USING SCHEDULES	43	MAINTAINING YOUR SYSTEM	59
Delaying the Closing Time	43	Taking Care of Your System	59
Temporary Open/Close Schedules	43	Replacing Batteries in Wireless	
Programming Temporary Schedules.....	44	Sensors	59
PROGRAMMING DEVICE TIMERS.....	46	Silencing Low Battery Warning Tones	
General Information.....	46	at the Keypad	60
USING #77 INSTANT ACTIVATION		Routine Care	60
MODE.....	48	QUICK GUIDE TO SYSTEM	
EVENT LOG PROCEDURES.....	51	FUNCTIONS	61
General Information.....	51	SUMMARY OF AUDIBLE	
To Display The Event Log	51	NOTIFICATION.....	63
		INDEX	68

System Overview

General

Your Honeywell security system consists of a main control panel, at least one keypad, and various sensors strategically positioned throughout the premises. The system offers you three forms of protection: burglary, fire and emergency. The keypad provides full control of system operation.

The system uses microcomputer technology to monitor all protection zones and system status and provides appropriate information for display on the keypad(s) used with the system, and initiates appropriate alarms. Your system may also have been programmed to automatically transmit alarm or status messages over the phone lines to a central alarm monitoring station.

This manual is designed to help you become comfortable operating your system. Each function is explained in step-by-step detail. We recommend you read the SYSTEM OVERVIEW section to become familiar with the terminology and the basic features of the system.

NOTE: All references in this manual for number of zones, user codes, partitions, VistaKey modules, the master partition and the event log capacity, use the VISTA-128FB's features. The following table lists the differences between the VISTA-32FB and the VISTA-128FB control panels. All other features are identical for both panels.

Also, all procedures in this guide for entering zone numbers or user numbers show 3-digit entries, which is valid for the VISTA-128FB. For the VISTA-32FB these entries are only 2-digits.

Feature	VISTA-32FB	VISTA-128FB
Partitions	2	8
Number of Zones	32	128
Number of User Codes	75	150
Master Partition	3	9
VistaKey Modules	4	8

System Overview (cont'd)

A Partitioned System

Simply stated, a partitioned system shares one physical alarm system among different users, each with their own requirements. For the most part, you as a user need not know about other users and their structure in the system, but from time to time, you may see display messages which indicate the system is in use by another user. Do not be concerned, this is normal. Refer to the ACCESSING OTHER PARTITIONS section for additional information.

Zones

Your system's sensing devices have been assigned to various "zones." For example, the sensing device on your Entry/Exit door may have been assigned to zone 001, sensing devices on windows in the master bedroom to zone 002, and so on. These numbers will appear on the display, along with an alpha descriptor for that zone (if programmed), when an alarm or trouble condition occurs.

Fire Protection

The fire protection portion of your security system (if used) is always on and will sound an alarm if a fire condition is detected. Refer to the FIRE ALARM SYSTEM section for important information concerning fire protection, smoke detectors and planning emergency exit routes from your facility.

System Overview (cont'd)

Burglary Protection

The burglary protection portion of your system must be turned on or "armed" before it will sense burglary alarm conditions. Your system provides four modes of burglary protection: STAY, AWAY, INSTANT and MAXIMUM, and even allows you to BYPASS selected zones of protection while leaving the rest of the system armed. The system also provides a CHIME mode, for alerting users to the opening and closing of doors and windows while the system is disarmed. Refer to the other sections of this manual for procedures for using these features.

The following table lists the four different arming modes and the results of each.

Arming Mode	Features For Each Arming Mode		
	Exit Delay	Entry Delay	Perimeter Armed
AWAY	Yes	Yes	Yes
STAY	Yes	Yes	Yes
INSTANT	Yes	No	Yes
MAXIMUM	Yes	No	Yes

Alarms

When an alarm occurs, both the keypad and external sounders will sound, and the keypad will display the zone(s) causing the alarm. If your system is connected to a central monitoring station, an alarm message will also be sent. To stop the alarm sounding, simply disarm the system.

Memory of Alarm

When an alarm condition occurs, the keypad displays the number(s) of the zone(s) that caused the problem, and displays the type of alarm (ex. FIRE, ALARM). It remains displayed until it is cleared by disarming the system (see DISARMING THE SYSTEM section).

System Overview (cont'd)

Speed Key (Macros)

The system can store a string of up to 32 keystrokes, which can be activated anytime by simply pressing the “**A, B, C, or D**” keys. This feature can be used to make it easy to perform multiple functions at once (such as going to another partition to bypass a zone), or it can be used to simplify an everyday, repeated procedure. Refer to the SPEED KEY section for procedures for using this feature.

Using Schedules

Your system may have been programmed with schedules for automatically arming, disarming and activating various devices and/or performing other system functions at predetermined times. Users can modify some of these schedules by manually delaying a closing time, using temporary schedules, or by programming special user schedules. Refer to the USING SCHEDULES section at the end of this manual for scheduling related procedures.

Device Timers

The system provides up to 20 "timers" that can be used to control various devices, such as lights or appliances. These timers are similar in concept to the individual appliance timers that might be purchased at a department store. The devices that can be controlled are programmed into the system by the installer. Up to 96 of these devices can be programmed. Refer to the PROGRAMMING DEVICE TIMERS section for procedures.

To Access Another Partition (GOTO Command)

Each keypad is assigned a default partition for display purposes, and will show only that partition's information. But, if the user is authorized, a keypad in one partition can be used to perform system functions in another partition, by using the GOTO command. Note that only those partitions authorized and programmed by the installer can be accessed in this manner.

To GOTO another partition, enter your security code, then press [*] followed by the desired partition number.

The keypad will remain in the new partition until directed to go to another partition, or until 120 seconds has elapsed with no keypad activity. Entering your security code, pressing [*] followed by [0] will return the keypad to its original partition.

System Overview (cont'd)

Master Keypad Operation

A "Master" keypad is one on which the status of all 8 partitions is displayed simultaneously. A user can get more information about a certain partition by simply entering [*] + the desired partition number. To log on to the "Master" partition (3 for the VISTA-32FB; 9 for the VISTA-128FB) using the **GOTO** command, and to perform any functions at a Master keypad, a user must have access to all partitions.

Self-Help Feature

Abbreviated user's instructions are built into the system that can be easily viewed on the alpha keypad's message display screen. This feature will prove particularly useful if this manual is not conveniently accessible when you need to perform a system procedure with which you are not familiar.

To view the abbreviated instructions:

Simply press and hold down the function key of interest until the description starts to appear (about 5 seconds) and then release it. The system must be "READY TO ARM" to perform this function.

Refer to the **FUNCTIONS OF THE KEYPAD** section for descriptions of each key function.

Phone Access & Voice Response Capability

Your system may include a 4285 or 4286 VIP module that will permit you to access the system via a Touch-tone phone, either on-premises or by call-in when away. The phone access feature will enable you to do the following:

- Receive synthesized voice messages over the telephone regarding the status of the security system.
- Arm and disarm the system and perform most function commands via the telephone, with voice confirmation provided after each command entry.
- Control 4204/4204CF relays devices and lights and appliances through the #70 Manual Relay Activation mode.

Complete information regarding the use of this feature is provided in a separate manual entitled **PHONE ACCESS USER'S GUIDE**, which accompanies the 4285 or 4286 VIP module.

About The Keypads

General

IMPORTANT: If the keypad beeps rapidly upon entering the premises, it indicates that an alarm has occurred during your absence. LEAVE IMMEDIATELY and CONTACT THE POLICE from a safe location nearby.


Your keypads allow you to control all system functions. The keypads feature a telephone style (digital) keypad and a Liquid Crystal Display (LCD) that shows the nature and location of all occurrences. Keypad display back lighting is programmable to always stay on or to light only when a key is pressed, then turn off a few minutes later.

The keypads also feature a built-in sounder that will sound during alarms and troubles. It will also "beep" during certain system functions, such as during entry/exit delay times, during CHIME mode, and when depressing keys to perform system functions (to acknowledge the key press). These sounds can be optionally suppressed in some of your keypads (so as not to disturb other users of the system). Ask your installer if this has been done.

The Alpha Keypad

Alpha keypads feature a 2-line, 32 character alphanumeric Liquid Crystal Display (LCD) that can display system messages in user-friendly English. Abbreviated user's instructions can also be displayed (see Self Help paragraph in the SYSTEM OVERVIEW section). These keypads can also be programmed with custom zone descriptors.

Functions Of The Keypad

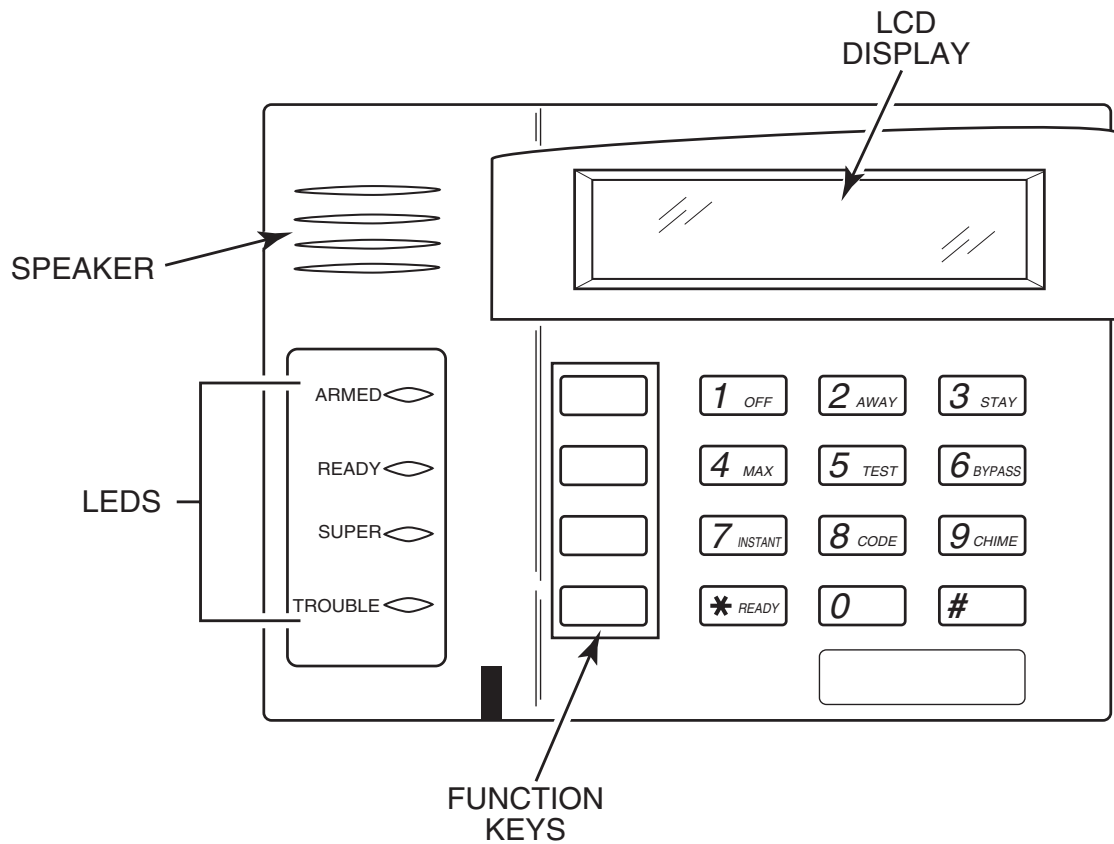

IMPORTANT! When using the keypad to enter codes and commands, sequential key depressions must be made within 3 seconds of one another. If 3 seconds elapses without a key depression, the entry is aborted and must be repeated from its beginning.

Functions Of The Keypad (cont'd)

ALPHA DISPLAY WINDOW: A 2-line, 32-character Liquid Crystal Display (LCD). Displays protection point identification and system status, messages, and user instructions.

1 OFF : Disarms the burglary portion of the system, silences alarms and audible trouble indicators, and clears visual alarm trouble after the problem has been corrected.

2 AWAY : Completely arms both perimeter and interior burglary protection by sensing an intruder's movements through protected interior areas as well as guarding protected doors, windows, etc. Late arrivals can enter through an entry delay zone without causing an alarm if the system is disarmed before the entry delay time expires.

3 STAY : Arms the perimeter burglary protection, guarding protected doors, windows and other perimeter protection points, and sounds an alarm if one is opened. Allows automatic bypassing of certain areas, which allows movement within your house without causing an alarm. Late arrivals can enter through an entry delay zone without causing an alarm if the system is disarmed before the entry delay time expires. See *ARMING PERIMETER ONLY* for a full explanation of the STAY key.

4 MAXIMUM : Arms in manner similar to AWAY mode, but eliminates the entry delay period, thus providing maximum protection. An alarm will occur immediately upon opening any protection point, including entry delay zones.

5 TEST : Tests the system and alarm sounder if disarmed.

6 BYPASS : Removes individual protection zones from being monitored by the system. Displays previously bypassed protection zones.

7 INSTANT : Arms in manner similar to STAY mode, but turns off the entry delay period, offering greater security while inside and not expecting any late arrivals. An alarm will occur immediately upon opening any perimeter protection point, including entry delay zones.

8 CODE : Allows the entry of additional user codes that can be given to other users of the system.

9 CHIME : Turns on & off the CHIME mode. When on, any entry through a protected delay or perimeter zone while the system is disarmed will cause a tone to sound at the Keypad(s).

Functions Of The Keypad (cont'd)

*** READY** : When depressed prior to arming the system, the keypad will display all open protection zones within the keypad's home partition. This key is also used to display all zone descriptors that have been programmed for your system, by holding the key down for at least 5 seconds.

: Permits ARMING of the system without use of a security code ("Quick Arm", if programmed).

KEYS 0-9: Used to enter your individual security access code(s).

LED READY INDICATOR: (GREEN) Lit indicates system is ready to be armed, while unlit indicates system not ready.

LED ARMED INDICATOR: (RED) Lit when the system has been armed (STAY, AWAY, INSTANT or MAXIMUM).

LED SUPER INDICATOR: (GREEN) Lit when a supervisory condition exists in the system.

LED TROUBLE INDICATOR: (RED) Lit when a trouble condition exists in the system.

SPEAKER: Source of audible internal warning and confirmation sounds, as well as alarms (see "Summary of Audible Notifications").

FUNCTION KEYS: These keys can be used for Speedkey (macros) functions or panic keys. Refer to the SPEEDKEY (MACROS) and PANIC KEYS sections for descriptions of these functions.

Entry/Exit Delays

General Information

Your system has installer-programmed time delays, known as exit delay and entry delay. Whenever you arm your system, **exit delay** gives you time to leave through the designated exit door without setting off an alarm. Exit delay begins immediately after entering any arming command, and applies to all modes of arming protection. If programmed, a slow beeping will sound throughout the exit delay period.

Entry Delay gives you time to disarm the system when you reenter through the designated entrance door. But the system must be disarmed before the entry delay period ends, or an alarm will occur. The keypad will beep during the entry delay period, reminding you to disarm the system. You can also arm the system with no entry delay at all by using either INSTANT or MAXIMUM arming modes. These modes provide greater security while on the premises or while away for extended periods of time. See your installer for your delay times.

Security Codes & Authority Levels

General Information

At the time of installation, you were assigned an authority level and a personal four-digit security code, known only to you and yours. The security code must be entered when arming and disarming the system. The authority level defines the system functions that you can perform.

As an additional safety feature, other users that do not have a need to know your code can be assigned different security codes, and each user can be given a different authority level. Users are identified by "user numbers", which are assigned when assigning a user's security code.

All codes can be used interchangeably when performing system functions within the limits of each code's authority level (a system armed with one user's code can be disarmed by another user's code), with the exception of the Operator Level C code. See AUTHORITY LEVELS on the following page for details regarding authority levels.

Duress Code

This feature is intended for use if you are forced to disarm or arm the system under threat. When used, the system will act normally, but can silently notify the central station of your situation, if that service has been provided. The duress code is pre-assigned by the installer during installation (authority level 6).

Important: This code is useful only when the system is connected to a central station.

Quick Arming

Note: If "Quick Arming" was programmed by the installer, the [#] key can be pressed in place of the security code when arming the system. The security code must always be used to disarm the system, however.

Security Codes & Authority Levels (cont'd)

Authority Levels

Authority levels define the system functions a particular user can perform. Depending on the authority assigned to you, there are certain system functions you may be prohibited from performing. In summary, there are six authority levels, each having certain system restrictions as shown below.

Level 1 Master: Can perform all system functions in assigned partitions, and can add, delete or change Manager and Operator level users. Master codes are added by the Installer.

Level 2 Manager: Can perform system functions in assigned partitions, and can add, delete or change Operator level users.

Level 3 Operator A: Can perform system functions in assigned partitions, but cannot add or delete other users.

Level 4 Operator B: Same as Operator A, except Operator B cannot bypass zones of protection.

Level 5 Operator C: Can arm the system in assigned partitions, but cannot disarm the system **unless** the system was armed with this code. This code is typically assigned to someone who has a need to arm/disarm the system only at certain times (such as a baby-sitter).

Level 6 Duress: Can arm and disarm the system, but also sends a silent panic alarm to the central station, if that service is connected.

To view your authority level and system capabilities:

1. Enter your code + [*] + [*].
2. The keypad will display the partition(s) that you are authorized to operate, and your user number and authority level in each partition.

Security Codes & Authority Levels (cont'd)

General Rules on Authority Levels and Changes

- A user may not delete or change the user code of the SAME or HIGHER authority than which he is assigned.
- A user may only ADD users to a LOWER authority level.
- A user may assign access codes only to those partitions to which the user adding the code has access. (ex. a user with access to only partition 1 cannot assign codes in partition 2.)
- The only way to assign a user's authority level is by using the "Add A User" procedure. To change a user's authority level, that user must first be deleted, then added again.
- A user can only be DELETED or CHANGED from within the partition he is assigned.
- User numbers must be entered as 3-digit entries (2-digit for VISTA-32FB). Single digit user numbers must be preceded by a "00" (example, 003, 004, etc.). Security codes are entered as 4-digit numbers.
- Before assigning a security code, be sure it does not conflict with any DURESS code.

Note: When adding, changing or deleting users, all other alpha keypads in that partition will display "User Edit Mode – Please Stand By", and key depressions (except Panic) at those keypads will be ignored. Panic key depressions will cause an alarm and terminate user entry.

To Exit User Edit Mode

You can exit any of the user edit modes described on the following pages at any time by doing the following:

1. Press either * or # , or don't press any key for 10 seconds.
2. System returns to normal mode.

Security Codes & Authority Levels (cont'd)

To Add a User

IMPORTANT: Temporary users should not be shown how to use any system function they do not need to know (e.g. bypassing protection zones).

CODE

1. Enter Master or Manager code and press the key.
2. Enter the new user's 3-digit User Number (002-150).
3. Enter 4-digit security code for that user. The following prompts will appear.

ADD NEW USER?
0 = NO , 1 = YES

Enter 1 to add a new user code. Entering 0 will change the existing user's code to the code entered in step 3. See Changing A User's Code section.

USER NUMBER = 003
ENTER AUTH. LEVEL

Enter the authority level, 1-6, for this user within this partition.

1=master 2=manager 3=operator A
4=operator B 5=operator C 6=duress code

GROUP BYPASSING?
0 = NO , 1 = YES

Enter 1 (YES) to allow this user to perform group bypasses. Enter 0 (NO) this user will not be able to perform group bypasses.

ACCESS GROUP?
ENTER 0-8

If access schedules have been programmed, this prompt appears. Enter the user's access group number (1-8) if this user should have limited access to the system. Enter 0 if no access group should be assigned.

RF BUTTON ?
0 = NO , 1 = YES

This prompt will appear if a 5800 series button transmitter has been supplied and has not yet been assigned to a user. Press 1 if a button transmitter will be assigned to this user. Otherwise press 0.

ENTER BUTTON ZN #
(001-128)

If assigning a button transmitter, this prompt will appear. Enter the button's zone number (see your installer for zone number).

Security Codes & Authority Levels (cont'd)

MULTI-ACCESS ?
0 = NO , 1 = YES

If you as a user have access to other partitions, the keypad will prompt for ability of this new user to access (GOTO) those partitions. Press 0 (NO) or 1 (YES). If no, the system activates this user code and exits "Add a User" mode. If yes, the keypad prompts for the Global Arm option for this user.

GLOBAL ARM ?
0 = NO , 1 = YES

Press 1 (YES) if this user will be allowed to try to arm more than one partition at the same time. Press 0 if this user will arm only his assigned partition.

PART.2 - SHOP?
0 = NO , 1 = YES

The keypad now prompts for the user's access to the next partition (see GOTO command). Again press 0 or 1. If yes, the system will automatically assign a user number for use in that partition and will prompt for authority level and global arm options for this user within the partition (see previous steps).

PART. 1 A0* WHSE
USER 003 AUTH=3G.

When all partitions have been displayed, the keypad will scroll through the partition(s) to which access has been assigned, and will display the user number, authority level and global arm option for each. The "G" after the authority level indicates that the global arm feature is active for this user in the displayed partition. The "*" indicates the partition from which this user can be changed or deleted. The "." at the end of the second line indicates that this user sends open/close reports. Open/close reporting is automatically active for any users added by you, if you have open/close reporting active.

Security Codes & Authority Levels (cont'd)

To Change a User's Code

1. Enter Master or Manager code and press the CODE 8 key + user number to be changed.
2. Enter the new code for that user.

ADD NEW USER?
0 = NO , 1 = YES

The system will recognize that the user number is already in use and will prompt whether or not this is a new user. Enter 0 to change the existing user's code to the code entered in step 3.

USER 002 CHANGED
SUCCESSFULLY

The system will confirm that the change is allowed based on authorization level, and if so, will put the new code into effect.

Note that if changing one's own code, the system will prompt for the new code to be re-entered. This prevents accidentally changing one's own code.

To Delete a User

1. Enter Master or Manager code and press the CODE 8 key + user number to be deleted.
2. Enter Master or Manager code first entered.

OK TO DELETE
0 = NO , 1 = YES

The system will recognize that the User number is already in use and will prompt to confirm that it should be deleted. Press 0 (NO) or 1 (YES).

USER CODE
DELETED

If yes, that user's code will be removed from all partitions to which it was assigned, and all authorization levels and other information about that user will be deleted. Note that a user can only be deleted from the partition in which it was first assigned, and can only be deleted by a user with a higher authority level. A User's security code cannot be deleted by oneself.

Accessing Other Partitions

To Access Another Partition

Each keypad is assigned a default partition for display purposes, and will show only that partition's information. But, if the user is authorized, a keypad in one partition can be used to perform system functions in other partitions by using the **GOTO** command. Note that only those partitions authorized and programmed by the installer can be accessed in this manner.

To GOTO another partition:

1. Enter your security code, then press * + partition number (0-8).

Entering partition number 0 will return the keypad to its original partition.

2.

LOG-ON TO	AAAA
PART. X	COMPLETE

 The keypad will remain in the new partition until directed to go to another partition, or until 2 minutes has elapsed with no keypad activity.

AAAA = alpha descriptor programmed by the installer

X = partition number

Global Arming

The Global Arming option may have been programmed for use by some users. If Global Arming was enabled for use with your security code, a keypad prompt (message) will appear after pressing one of the arming function keys (Stay, Instant, Away, Maximum, Off). Follow the keypad prompts to continue arming the system. See your installer for detailed instructions on the use of this feature.

If global arming does not apply to your security code, use the procedures described in the following pages.

Accessing Other Partitions (cont'd)

Global Arming Notes:

- When performing a Global Arm, if there are faults in any of the selected partitions, the system will enter a Summary Mode. Faulted zones in all the selected partitions will be displayed. These faults must be corrected or bypassed. This Summary Mode will end in approximately 120 seconds if no keys are pressed.
- When performing a Global Disarm, if any of the selected partitions has a condition which would cause the keypad to beep (e.g., alarm memory or a trouble condition), the system enters a Summary Mode and displays the condition. This Summary Mode will end in approximately 120 seconds if no keys are pressed.

Master Keypad Operation

A "Master" keypad is one that reflects the status of the entire system (Partitions 1-8) on its display. This is useful because it eliminates the need for a security officer in a building to have to "log-on" to various partitions from one partition's keypad to find out where an alarm has occurred.

A description of a typical display follows:

SYSTEM	1	2	3	4	5	6	7	8
STATUS	R	R	N	N	A	T	*	B

The status of each partition is directly below the partition number on the display. Possible status indications include:

A = Armed Away	S = Armed Stay	M = Armed Maximum
I = Armed Instant	R = Ready	N = Not Ready
B = Bypassed/Ready	* = Alarm	T = Trouble
F = Fire Alarm	P = AC Power Failure	L = Low System Battery
C = Comm Fail		

To obtain more information regarding a particular partition, enter [*] + [Partition No.] (i.e., *4). This will allow viewing *only* of that partition. In order to affect that partition, the user must log on with a code that has access to that partition. Also, in order for a user of any partition to log onto the "Master" partition (Partition 9) to view the status of *all* partitions, and to perform any functions at the Master keypad, that user must have access to all partitions. Otherwise, access will be denied.

Accessing Other Partitions (cont'd)

The following is an example of what would be displayed for a fault condition on Zone 002 (Loading Dock Window) on Partition 1 (Warehouse) when logging on from a keypad on Partition 9:

WHSE DISARMED
HIT * FOR FAULTS

This is the normal display that appears at Partition 1's keypad(s). Pressing * will display:

FAULT 002 LOADING
DOCK WINDOW

Additional zone faults will be displayed one at a time. To display a new partition's status, press * + [Partition No.]. This will display the status of the new partition.

The "Armed" LED on a Master keypad will be lit only if *all* partitions have been armed successfully. The "Ready" LED will be lit only if *all* partitions are "ready to arm."

The sounder on a Master keypad will reflect the sound of the most critical condition on all of the partitions. The priority of the sounds is as follows:

- A. Pulsing fire alarm sounds
- B. Steady burglar alarm sounds
- C. Trouble sounds

The sounder may be silenced by pressing any key on the Master keypad.

Accessing Other Partitions (cont'd)

Common Lobby Operation

When an installation consists of a partition that is shared by users of other partitions in a building, that shared partition may be assigned as a “common lobby” partition for the system. An example of this might be in a medical building where there are two doctors and a common entrance area.

This option employs logic for automatic arming and disarming of the common lobby. Partitions may be set to affect and/or attempt to arm the common lobby. This will affect the way the lobby will react when arming or disarming activity occurs in another partition.

Partitions that **affect** the lobby will cause the following to occur:

- a. When the first partition that affects the lobby is disarmed, the lobby will also be disarmed.
- b. The common lobby cannot be armed unless every partition selected to affect the lobby is armed.
- c. Arming the last partition that affects the lobby **will not** automatically attempt to arm the lobby.

Partitions set to **arm** the lobby will cause the following to occur:

- a. Arming any partition programmed to arm the lobby will automatically attempt to arm the lobby. If any faults exist in the lobby partition, or another partition that affects the lobby is disarmed, the lobby cannot be armed, and the message “UNABLE TO ARM LOBBY PARTITION” will be displayed.

The following chart summarizes how the common lobby partition will operate:

Partition Affects Lobby	Partition Arms Lobby	Disarms When Partition Disarms	Attempts to Arm When Partition Arms	Can Be Armed if Other Partitions Disarmed
NO	NO	NO	NO	YES
YES	NO	YES	NO	NO
YES	YES	YES	YES	NO
NO	YES	---ENTRY NOT ALLOWED---		

Accessing Other Partitions (cont'd)

How User Codes Affect the Common Lobby

Codes with “Global” Arming

If your code is given global arming when it is defined, the keypad will ask ARM ALL? or DISARM ALL? whenever you try to arm or disarm the partitions you have access to. This allows you to pick and choose the partitions to be armed or disarmed, and so eliminates the automatic operation of the lobby. Keep in mind, however, that if attempting to arm all, and another affecting partition is disarmed, you will not be able to arm the lobby, and the message, UNABLE TO ARM LOBBY PARTITON, will be displayed.

Codes with “Non-Global” Arming

If arming with a non-global code, the lobby partition operation will be automatic, as described in the previous table.

Other Methods of Arming/Disarming

When arming or disarming a partition that affects and/or arms the common lobby in one of the following manners, lobby logic remains active:

- Quick-Arm
- Keyswitch
- Wireless Button
- Wireless Keypad

Checking For Open Zones


Using the READY Key

Before arming your system, all protected doors, windows and other protection zones must be closed or bypassed (see BYPASSING section). Otherwise the keypad will display a "Not Ready" message. Using the **READY** key will display all zones that are faulted, making it easier for you to secure any open zones.

To show faulted zones:

DISARMED - PRESS
* TO SHOW FAULTS

Note: Some keypads light a green LED when the system is ready. If not lit, the system is not ready to be armed.

1. Do not enter security code, but simply press  .

FAULT 005 FRONT
UPSTAIRS BEDROOM

Typical fault display

2.

DISARMED
READY TO ARM

Secure or bypass the zones displayed before arming the system. The "Ready" message will be displayed[†] when all protection zones have been either closed or bypassed.

[†] **NOTE:** All or part of this message may be replaced by a customized message programmed by the installer. Bear this in mind whenever the instructions indicate that the "DISARMED" or "READY" message will be displayed.

Displaying All Zone Descriptors

Using the * READY Key

The Alpha Keypads can also display all the zone descriptors that are programmed in your system. The abbreviated instructions for the **READY** key will appear first, followed by the zone descriptors. Displaying all descriptors is useful when you need to know the zone number of a particular zone, as when bypassing zones.

The "Disarmed-Ready to arm" message must be displayed before zone descriptors can be displayed.

Press the * ^{READY} key and hold down for at least 5 seconds.

Bypassing Protection Zones

Using the **6** BYPASS Key

This key is used when you want to arm your system with one or more zones intentionally unprotected. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed. All bypasses are removed when an OFF sequence (security code plus OFF) is performed. Bypasses are also removed if the arming procedure that follows the bypass command is not successful.

Note: The system will not allow fire or emergency zones to be bypassed.

To bypass zones, the system must be disarmed first.

BYPASS

1. Enter your security code and press **6** .
2. Enter zone number(s) for the zones to be bypassed (e.g., 001, 002, 003, etc.).

Important! All single-digit numbers must be preceded by "00" (for example, enter 001 for zone 1).

3.

BYPASS 007 FRONT UPSTAIRS BEDROOM

Typical bypass message When finished, the keypad will display the word BYPASS along with each bypassed zone number. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.
4.

DISARMED BYPASS READY TO ARM

 Arm the system as usual when the keypad displays "ready" to arm message.

Bypassing Protection Zones (cont'd)

Quick Bypass

Your system allows you to easily bypass all open (faulted) zones without having to enter zone numbers individually.

Note: All bypasses are removed when an OFF sequence (security code plus OFF) is performed.

To use the Quick Bypass feature:

- BYPASS**
1. Enter your security code and press then press .
 2.

BYPASS 007 FRONT UPSTAIRS BEDROOM

Typical bypass message

In a few moments, all open zones will be displayed along with the word BYPASS. Wait for these zones to be displayed before arming. Arming the system before bypassed zones are displayed eliminates all bypasses.
 3.

DISARMED BYPASS READY TO ARM

Arm the system as usual when the keypad displays the "ready" to arm message. Bypassed zones are unprotected and will not cause an alarm when violated while your system is armed.

Displaying Bypassed Zones

For determining what zones have been previously bypassed. Bypassed zones can be displayed only when system is disarmed.

- BYPASS**
1. Enter your security code and press .
 2. Wait for all bypassed zones to be sequentially displayed.

Arming Perimeter Only

(With Entry Delay ON)

Using the 3 STAY key

Use this key when you are staying home, but might expect someone to use the entrance door later.

When armed in STAY mode, the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. Late arrivals can enter through the entrance door without causing an alarm, but they must disarm the system within the entry delay period or an alarm will occur.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)

1. Enter your security code and press 3 ^{STAY} .
Enter your security code and press 3 .
Enter your security code and press 3 .
2.

ARMED ***STAY*** ZONE BYPASSED

 The keypad beeps three times and displays the armed message.
Note: "ZONE BYPASSED" in this display simply indicates that some zones of protection are not armed when using STAY mode.

Arming Perimeter Only

(With Entry Delay OFF)

Using the INSTANT Key

Use this key when you are staying home and do not expect anyone to use the entrance door.

When armed in INSTANT mode, the system will sound an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises. The alarm will also sound immediately if anyone opens the entrance door.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)

- INSTANT
1. Enter your security code and press .

Enter your security code and press .

Enter your security code and press .

2.

ARMED *INSTANT1 ZONE BYPASSED

 The keypad beeps three times and displays the armed message.

Note: "ZONE BYPASSED" in this display simply indicates that some zones of protection are not armed when using INSTANT mode.

Arming All Protection

(With Entry Delay ON)

Using the 2 AWAY Key

Use this key when no one will be staying on the premises.

When armed in AWAY mode, the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm. You may also reenter through the entrance door, but must disarm the system within the entry delay period or an alarm will occur.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section)

1. Enter your security code and press 2 ^{AWAY} .
2.

ARMED **AWAY** YOU MAY EXIT NOW

 The keypad will beep twice and will display the armed message.
Note: The "YOU MAY EXIT NOW" portion of the message disappears when exit delay expires.

Arming All Protection

(With Entry Delay OFF)

Using the 4 MAXIMUM Key

Use this key when the premises will be vacant for extended periods of time such as vacations, etc., or when no one will be moving through protected interior areas.

When armed in MAXIMUM mode, the system will sound an alarm if a protected door or window is opened, or if any movement is detected inside the premises. You may leave through the entrance door during the exit delay period without causing an alarm, but an alarm will be sounded as soon as someone reenters.

Close all perimeter windows and doors before arming (see CHECKING FOR OPEN ZONES section).

1. Enter your security code and press 4 .
2. ARMED *MAXIMUM*
YOU MAY EXIT NOW The keypad will beep twice and will display the armed message.

Note: The "YOU MAY EXIT NOW" portion of the message disappears when exit delay expires.

Disarming And Silencing Alarms

Using the **1** OFF Key

The **OFF** key is used to disarm the system and to silence alarm and trouble sounds. See "SUMMARY OF AUDIBLE NOTIFICATION" section for information which will help you to distinguish between **FIRE** and **BURGLARY** alarm sounds.

IMPORTANT: If you return and the main burglary sounder is on, **DO NOT** enter the premises, but call the police from a nearby safe location. If you return after an alarm has occurred and the main sounder has shut itself off, the keypad will beep rapidly upon entering, indicating that an alarm has occurred during your absence. **LEAVE IMMEDIATELY** and **CONTACT THE POLICE** from a nearby safe location.

To disarm the system and silence burglary or fire alarms:

1. Enter your security code and press **OFF** **1** .

DISARMED
READY TO ARM

2. The Ready message will be displayed (if no alarms have occurred while armed) and the keypad will beep once to confirm that the system is disarmed.

If an invalid code is entered to silence an alarm condition, the keypad stops beeping for 10-15 seconds. If a valid code is not entered during the 10-15 seconds, the keypad resumes beeping.

Memory of Alarm

The keypad displays the zone number and type of alarm for any zone that has an alarm condition. These messages will remain displayed until cleared by a user. If an alarm has occurred, note the zone number displayed on the keypad and repeat step 1 above to clear the "Memory of Alarm" and restore the Ready message display. If the Ready message will not display, go to the displayed zone and remedy the fault (close windows, etc.). If the fault cannot be remedied, notify the alarm agency.

If the system was armed when the alarm occurred, repeat step 1 twice: once to disarm the system, a second time to clear the display.

Using The Keyswitch

General

Your system may be equipped with a keyswitch for use when arming and disarming a partition. A red and green light on the keyswitch plate indicate the status of your system as follows:

Green Light: Lights when the system is **disarmed and ready** to be armed (no open zones). If the system is disarmed and the green light is off, it indicates the system is not ready (one or more zones are open).

Red Light: Lights when system is armed or memory of alarm exists.

Lit Steady: Partition is **armed in AWAY** mode.

Slow Flashing: Partition is **armed in STAY** mode.

Rapid Flashing: Memory of alarm, indicating an alarm has occurred .

Arming


To arm in the AWAY mode, turn the key to the right for 1 second and release. Keypads will beep twice and the red light will stay on steady.

To arm in the STAY mode, turn the key to the right and hold for longer than 10 seconds, then release. Keypads will beep three times and the red light will flash slowly.

Disarming

To disarm the partition, turn the key to the right and release. If an alarm has occurred, the red light will be flashing rapidly (memory of alarm).

NOTE: Your system may be programmed to use the keyswitch to silence fire alarms without affecting the status of the burglary portion of the system. Check with your installer to see if this feature has been enabled.

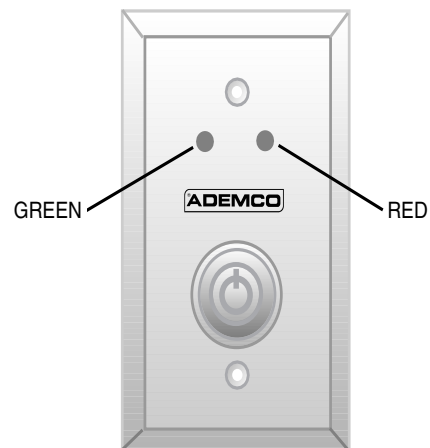

Chime Mode

Using the **9** Key

Your system can be set to alert you to the opening of a door or window while it is disarmed by using CHIME mode. When activated, three tones will sound at the Keypad whenever a protected perimeter door or window is opened, and the Not Ready message will be displayed. Pressing the **READY** key will display the open protection points.

Note that Chime mode can be activated only when the system is disarmed.

1. **To turn Chime Mode on**, enter the security code and press **9** .

CHIME MODE ON

The CHIME MODE ON message will appear for about two seconds then disappear. To display this message again (to determine whether chime mode is on or off), simply press and hold down the **CHIME key** for 5 seconds.

2. **To turn Chime Mode off**, enter the security code and press **9** again.

CHIME MODE OFF

The CHIME MODE OFF message will appear for about two seconds then disappear. To display this message again (to determine whether chime mode is on or off), simply press and hold down the **CHIME key** for 5 seconds.

Viewing Alarm Company Messages

General Information

Users of the system may periodically receive messages on their display screens from their monitoring agency or installer. When a message is waiting to be viewed, the message shown below will appear.

MESSAGE. PRESS 0
FOR 5 SECS.

1. Press and hold down key for 5 seconds.
2. The message could take up to four screens to display all the information available.

NOTE: Any message sent by the central station downloader may be viewed at any partition's keypad.

Panic Keys

(For Manually Activating Silent And/Or Audible Alarms)

Using Panic Keys

Your system may have been programmed to use special key combinations to manually activate panic functions. The functions that might be programmed are Silent Emergency, Audible Emergency, Personal Emergency, and Fire. See your installer for the function(s) that may have been programmed for your system.

Active Panic Functions

(Your installer should note which function(s) is active in your system.)

Keys	Zone	Function
1 and *	995	
3 and #	996	
* and #	999	
A	995	
B	999	
C	996	

To use a paired key panic function, simply press both keys of the assigned pair at the same time.

If your keypad(s) have lettered keys for panic functions, press the designated key and hold down for at least 2 seconds to activate the panic function.

A silent emergency sends a silent alarm signal to the central station, but there will be no audible alarms or visual displays.

An audible emergency sends an emergency message to the central station (if connected) and will sound a loud, steady alarm at your keypad **and** at any external sounders that may be connected (**ALARM** plus a zone number would also be displayed).

A personal emergency alarm sends an emergency message to the central station (*if connected*) and will sound at Keypads, but not at external Notification Appliance Circuits. (**ALARM** plus a zone number would also be displayed.)

A fire alarm sends a fire alarm message to the central station and will uniquely sound external Notification Appliance Circuits. (**FIRE** plus a zone number would also be displayed).

Speed Key (Macros)

General Information

The "A", "B", "C", and/or "D" keys can be used to activate a string of commands up to 32 keystrokes each. These commands are known as a macro and are stored in the system's memory. Typical Speed Key functions include:

- Arming sequences that involve first bypassing certain zones before arming.
- Seldom used but repeatable sequences.
- Relay activation sequences.

NOTE: If a speedkey function includes an arming sequence and the user executing it has global arming, all partitions the user can global arm will arm.

Defining

To program a macro, enter your user code + [#] + [D]. The following appears:

ENTER SPEED KEY # 01-35 00=QUIT

Enter the 2-digit Speed Key number (01-35) being defined and press [*]. Enter up to 32 keystrokes. A Speed Key sequence can include different commands. Press the "D" key to separate different commands. For example, you may want to perform the following sequence.

GOTO partition 2.....Enter *2

Bypass zones 10 & 11Press bypass [6], then the zone numbers 010 & 011

Arm in maximum mode.....Press maximum [4] key

Return to partition 1.....Enter *1

To program that Speed Key sequence, type the following:

*2[D] 6010011[D] 4[D] *1[D] [D]

Note that the "D" key is pressed after each command. Press "D" twice to complete the entry and exit.

NOTE: When defining Speed Key sequences, do not use the [#] key to represent Quick Arming. The system uses the code entered in response to the prompt to initiate commands in a Speed Key sequence, so the quick arm key is unnecessary. The system interprets the use of the [#] key in a Speed Key sequence as its designated function only.

Speed Key (Macros) (cont'd)

Executing

To execute a Speed Key sequence, do the following:

If a lettered key, A-B-C, has been assigned as a Speed Key, press and hold down the appropriate key (about 2 seconds). If a user code is required for any part of the Speed Key sequence, the following prompt appears. Otherwise, the Speed Key sequence automatically begins.

```
ENTER USER CODE
*****
```

Enter your user code. The defined Speed Key sequence will begin automatically.

To activate a Speed Key not assigned to the A-B-C keys, press and hold down the [D] key for 2 seconds until the following prompt appears:

```
ENTER SPEED KEY #
01-32      00=QUIT
```

Enter the desired Speed Key number.

If a user code is required for any part of the Speed Key sequence, the following prompt appears. Otherwise, the Speed Key sequence automatically begins.

```
ENTER USER CODE
*****
```

Enter your user code. The programmed Speed Key sequence will begin automatically.

Using Speed Key For Fire Alarm Function

Instead of a macro sequence, the Speed Keys can be programmed for the following fire alarm functions:

- Fire Sounder Silence - The key, when pressed, silences fire alarms.
- Display Next Fire Alarm - The key, when pressed, causes the keypad to display the next fire alarm in the system.
- Display Previous Fire Alarm - The key, when pressed, causes the keypad to display the previous fire alarm in the system.

NOTE: Each of these functions requires programming by the installer. If you want to use a Speed Key for one of these functions, ask your installer to program the system accordingly.

Access Door Control

General Information

Your system may be set up such that a locked access door (such as in a lobby) can be unlocked momentarily or for a specific period of time, using a keypad command. Ask your installer if this has been done in our system.

Executing

There are several entries that can be entered at the keypad to activate this command:

1. Enter your security code + [0]. The door will unlock for 2 seconds.
2. Enter your security code + [#] + 73, or security code + [#] + 74 + access point. The door will unlock for a specific period of time.
3. Enter your security code + [#] + 75 + access point + function. The functions available are Grant, Protect and Bypass. Grant will temporarily unlock a door to allow an access. Protect will cause a door to unlock only when a valid access is received. Bypass will cause a door to be permanently unlocked to allow continuous access.
4. Access control functions may also be executed use your security code + [#] + 77. See *Using #77 Instant Activation Mode* later in this manual.

Using #70 Relay Menu Mode

General Information

Your system may be set up so that certain lights or other devices can be turned on or off by using the #70 command from either a keypad or a telephone keypad (if 4285 or 4286 VIP module is used). Ask your installer if this has been done in your system.

To activate relays from a keypad, enter 4-digit security code + [#] +70. Follow the keypad prompts described below.

To activate relays using a telephone and 4285 or 4286 VIP module, first dial the 2-digit phone access code. When the system acknowledges the access, enter 4-digit security code + [#] + 70. The following prompts/voice responses will begin.

ENTER DEVICE NO. 00=QUIT	01
-----------------------------	----

Voice: "ENTER DEVICE CODE NOW"

Enter the 2-digit number of the device to be activated. Note that if an invalid number is entered, the system will simply ask you to reenter the number.

NN DEVICE IS OFF HIT 0=OFF , 1=ON

Voice: " <i>voice descriptor</i> DEVICE nn ON/OFF. FOR <i>voice descriptor</i> ON ENTER 1, FOR <i>voice descriptor</i> OFF ENTER 0"
--

Press 0 or 1 to turn the device off or on respectively. "nn" represents the 2-digit device number and *voice descriptor* is the relay voice descriptor programmed by the installer.

NN DEVICE IS OFF HIT THE "*" KEY

Voice: " <i>voice descriptor</i> DEVICE nn ON/OFF. TO EXIT ENTER 00 NOW"

From a keypad, press * to continue. The ENTER DEVICE NO. prompt will appear.

From a telephone keypad, enter 00 to exit, or enter the next relay number to be programmed. The current on/off state of that relay will be annunciated as described above. Alternatively, if 6 seconds elapses with no key depression, the 4285 or 4286 VIP module will annunciate the "ENTER DEVICE CODE NOW" message.

Using Schedules

Delaying the Closing Time

Your system's programmed schedules may automatically arm the system at a predetermined time. In the event a user must stay on the premises later than usual, users with master or manager authority levels can manually delay the automatic arming (closing) time up to 2 hours. **To delay the closing time:**

1. Enter your security code (master or manager authority levels only).
2. Press the key, followed by **82**.
3. A menu prompt will be displayed, asking for the number of hours of delay.

CLOSING DELAY? KEY 0-2 HOURS

Enter the desired number of hours of delay, 1 or 2. The system automatically exits this mode after entry.

Note that the delay is from the **scheduled closing time**, not from the time the command is entered.

IMPORTANT: The selected delay cannot be **reduced** once it is set. A 1 hour delay can be **increased** to 2 hours, though.

4. The system will automatically send a message to the central station informing them that the programmed schedule has been changed.

Temporary Open/Close Schedules

Temporary schedules allow you to override the normal schedules programmed by the installer. Temporary schedules can be in effect for up to one week, and take effect as soon as they are programmed.

They are comprised of an arming (closing) time window and a disarming (opening) time window. A time window is simply a defined period of time, at the end of which arming or disarming will occur.

Before programming, use a worksheet similar to the one below to plan your schedule. This will make it easier when actually programming the schedule.

Arm/Disarm	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Windows							
Disarm Window							
Start Time HH:MM							
Stop Time HH:MM							
Arm Window							
Start Time HH:MM							
Stop Time HH:MM							

Using Schedules (cont'd)

Programming Temporary Schedules

Temporary schedules only affect the partition from which it is entered. Temporary schedules can be reused at later dates simply by scrolling (by pressing #) to the DAYS? prompt (described below) and activating the appropriate days. This should be considered when defining daily time windows. Note that only users with authority level of manager or higher can program temporary schedules.

To program temporary schedules:

1. Enter your security code.
2. Press the key followed by **81**.
3. The following prompts will appear.

MON DISARM WIND. 07:45AM 08:45AM

The cursor will be positioned on the tens of hours digit of the start time for Monday's disarm window. Enter the desired hour. Press * to move to the minutes field. The minutes are entered in the same manner. The AM/PM indication is changed by hitting any key, 0-9, while the cursor is under the letter A/P position. Repeat for the stop time entry. Press the * key to move to the arming window for Monday.

Press # to move to the next screen display without making changes.

MON ARM WINDOW 07:45AM 08:45AM

The cursor will be positioned on the tens of hours digit of the start time for the arm window. Repeat the previous steps to enter the start and stop time for Monday's arming window.

TUE DISARM WIND. 07:45AM 08:45AM

After the windows for that day have been completed, the system will prompt for disarm and arm time windows for the next day. Repeat the procedure for all days of the week.

When all of the days have been completed, the system will ask which days are to be activated.

Using Schedules (cont'd)

DAYS ? MTWTFSS
HIT 0-7 X X

This is the prompt that actually activates the temporary schedule, and allows the temporary schedule to be customized to a particular week's needs. To select the days which are to be activated, enter the desired number 1-7 (Monday = 1). An "X" will appear under that day, indicating the previously entered schedule for that day is active. Entering a day's number again will deactivate that day. Pressing 0 will turn all days on/off.

The temporary schedule will only be in effect for the days which have the letter x underneath them. As the week progresses, the days are reset to the deactive state.

When completed, press * to exit the temporary schedule entry mode.

Programming Device Timers

General Information

Device timers consist of an ON time & an OFF time, and selected days of the week in which they are active. There are up to 20 timers that can be used to control various devices, such as lights or appliances. Your installer will have programmed the appropriate devices into the system (up to 96 devices can be programmed).

Each timer controls a single device (designated as an output number) that you select. For example, timer 1 might be set to turn the porch lights on at 7:00pm and turn them off at 11:00pm. Timer 2 might turn on the air conditioner Monday-Friday at 4:30pm to cool the premises before you arrive at 5:00pm, and turn it off at 10:00pm when you are retiring for the night. If desired, different timers can control the same device. For example, timer 2 could be used Monday-Friday as in the previous example, and timer 3 could be set to turn the air conditioner on and off at different times Saturday and Sunday.

To enter the device timer menu mode:

Enter your security code, then press the key followed by 83.

OUTPUT TIMER # ?
01-20,00=QUIT 01

Up to 20 timers can be programmed. Each timer is identified by a number 1-20. Enter the desired timer number to be programmed (1-20). Press * to accept entry.

06 07:00P 11:45P
PORCH LITE 04

If that timer number has already been programmed, a summary screen will appear. In this example:

06 = Timer #

04 = Output Device # affected by this timer

PORCH LITE = Output Descriptor for Device 4

07:00PM = Start Time;

11:45PM = Stop Time

Press * to continue.

See your installer for device numbers.

00 ENTER OUTPUT#
00

Enter the desired output device number (1-96). As the number is entered, the device's description will appear.

To delete a previously programmed timer, enter 00 as the output number.

Programming Device Timers (cont'd)

00 ON TIME ?
00:00 PM

Enter the time you want the device turned on using 00:01 - 11:59 format. When the display shows the desired time, press the * key to move to the AM/PM field. Press any key 0-9 to change the AM/PM indication.

Enter 00:00 if this timer is not being used to turn something ON for the days selected below. (ex. using one timer to turn lights on one day and using another timer to turn them off on another day).

00 OFF TIME ?
00:00 PM

Enter the time you want the device turned off using 00:01 - 11:59 format. When the display shows the desired time, press the * key to move to the AM/PM field. Press any key 0-9 to change the AM/PM indication.

Enter 00:00 if this timer is not being used to turn something OFF for the days selected below. (ex. using one timer to turn lights on one day and using another timer to turn them off on another day).

00 DAYS? MTWTFSS
HIT 0-7 X X

Select the days on which the device is to be activated by entering 1-7 (Monday = 1). An "X" will appear under that day, indicating the output for that day is active. Entering a day's number again will deactivate that day. Pressing 0 will turn all days on/off. The outputs will only be in effect for the days that have the letter x underneath them. As the week progresses, the days are reset to the inactive state, unless the permanent option is selected (next screen prompt). When completed, press * to continue.

00 PERMANENT ?
0 = NO, 1 = YES 0

Answering 1 (YES) means the system executes this timer continuously. Answering 0 (NO) means the system executes each day's output only once.

Using #77 Instant Activation Mode

The #77 Instant Activation Mode is used to activate outputs, bypass zones, etc. immediately upon exiting the #77 Mode. The actions that may be activated are relay commands, arm/disarm commands, zone bypassing commands, and open/close access conditions.

Relay Commands

<u>Action Code</u>		<u>Action Specifier</u>
01	Relay On	Relay #
02	Relay Off	Relay #
03	Relay Close for 2 seconds	Relay #
04	Relay Close XX minutes *	Relay #
05	Relay Close YY seconds *	Relay #
06	Relay Group On	Relay Group #
07	Relay Group Off	Relay Group #
08	Relay Group Close for 2 seconds	Relay Group #
09	Relay Group Close XX minutes *	Relay Group #
10	Relay Group Close YY seconds *	Relay Group #

* Check with your installer for the amount of time.

Arm/Disarm Commands

Activation times 1 (Beginning), 2 (End), 3 (During) are the only valid choices for automatic arming and disarming functions.

"During" can be used to arm or disarm the control for a specific time only. For example, if "during" is selected with Arm-STAY, the system will automatically Arm-STAY at the beginning of the window and automatically disarm at the end of the window.

<u>Action Code</u>		<u>Action Specifier</u>
20	Arm-STAY	Partition(s)
21	Arm AWAY	Partition(s)
22	Disarm	Partition(s)
23	Force Arm STAY (Auto-bypass faulted zns)	Partition(s)
24	Force Arm AWAY (Auto-bypass faulted zns)	Partition(s)
25	Arm INSTANT	Partition(s)
26	Arm MAXIMUM	Partition(s)

Using #77 Instant Activation Mode (cont'd)

Bypass Commands

Activation times **1** (Beginning), **2** (End), **3** (During) are the only valid choices for bypass commands. If **3** (During) is selected for auto-bypassing, the system bypasses the zone(s) specified on a particular zone list at the beginning of the window and unbypasses them at the end of the window. If it is selected for auto unbypassing, the system removes the bypass at the beginning of the window and restores the bypass at the end of the window.

<u>Action Code</u>	<u>Action Specifier</u>
30 Auto bypass - Zone list	Zone list #
31 Auto unbypass - Zone list	Zone list #

Open/Close Windows

Activation time **3** (During) is the only valid choice for these commands.

<u>Action Code</u>	<u>Action Specifier</u>
40 Enable Opening Window by partition	Partition(s)
41 Enable Closing Window by partition	Partition(s)
42 Enable Access Window for access group	Access Group

Access Control Commands

<u>Action Code</u>	<u>Action Specifier</u>
55 Access Point Grant	Access Point #
56 Access Point Grant with Override	Access Point #
57 Access Point Protect	Access Point #
58 Access Point Bypass	Access Point #
59 Access Point Lock	Access Point #
60 Access Point Exit	Access Point #
61 Access Point Group Grant	Group #
62 Access Point Group Grant with Override	Group #
63 Access Point Group Protect	Group #
64 Access Point Group Bypass	Group #
66 Access Point Group Exit	Group #
67 Access Point Partition Grant	Partition #
68 Access Point Partition Grant with Override	Partition #
69 Access Point Protect by Partition	Partition #
70 Access Point Bypass by Partition	Partition #
71 Access Point Lock by Partition	Partition #
72 Access Point Exit by Partition	Partition #
73 Access Point Trigger On	Trigger #
74 Access Point Trigger Off	Trigger #

Using #77 Instant Activation Mode (cont'd)

Additional Commands

<u>Action Code</u>	<u>Action Specifier</u>
77 Access Point Group Enable	Group #
78 Access Point Group Disable	Group #

To enter the Instant Activation Mode:

Enter your security code, then press the [#] key followed by 77.

ACTION ?

Enter the code for the desired action. The action codes are the events that are to take place when either the system exits the #77 Mode or the scheduled time is reached, depending on the action selected.

Press [*] to continue.

Enter the action specifier. This defines what the action will affect (relay, relay group, partition, zone list, user group). The action specifier screen prompt varies, depending on the type of action selected.

As an example, if you selected "Auto Bypass" as the action, the action specifier prompt would be:

ZONE LIST ?

ARE YOU SURE ?

1 = YES 0 = NO 0

Enter **1** (YES) or **0** (NO).

Press [*] to continue.

QUIT MENU MODE?

1 = YES 0 = NO

Enter **1** (YES) or **0** (NO).

Press [*] to continue.

Event Log Procedures

General Information

The system has the ability to record various events in a history log wherein each event is recorded in one of five categories (listed below), with the time and date of its occurrence. The Event Log holds up to 512 events, with the oldest event being replaced by the logging of any new event after the log is full. Using an alpha keypad, the Event Log can be viewed one category at a time, or can display all events, regardless of category (ALL EVENT LOG). The system also allows selection of displaying the COMPLETE log, or only those events occurring since the last installer service (RECENT). In addition, events in the other partitions can be viewed by users authorized to access those partitions. Note that events are displayed in chronological order, from most recent to oldest.

To Display The Event Log

1. **Enter CODE + [#] + [6] + [0]**
2. **Select the display mode.**
RECENT: Displays only those events occurring since last Event Log Clear command was executed.
COMPLETE: Displays complete event log (up to 512 events).
Press the desired key, 0 or 1.

ENTER 0 = RECENT 1 = COMPLETE

3. **Select the partition, 0-8.**
Enter the partition number for the partition whose events are to be displayed.
Entering 0 (NO) will display all partitions' events.

SCAN LOG BY PART 0=NO 1-8=PART #

Event Logging Procedures (continued)

4. Use the [3] & [1] keys (for next and previous categories respectively) to display the categories of events.

Press [8] to select a category and display the first event. Press [8] again for each subsequent event.

Shows burglary alarm occurred in zone 3 (C03) of partition 1 (P1), at 12:02AM on January 1.

P1 01/01 12:02AM BURGLARY C003

*Typical
Event Log
Display*

After the last event has been displayed, the END OF EVENT LOG message appears for a few seconds, then the system automatically displays the RECENT/COMPLETE mode select screen again (see step 2).

5. To EXIT the Event Log:

Press [*] at any time.

ALARM EVENT LOG TYPE CCC UUU

*Typical
Category
Select Screen*

ALARM EVENT LOG

Displays time and date for zones that have either caused an alarm or have been restored in the selected partition.

CHECK EVENT LOG

Displays time and date for zones that have caused a trouble or supervisory condition in the selected partition.

BYPASS EVENT LOG

Displays time and date for zones that have been bypassed in the partition.

OPEN EVENT LOG

Displays time, date and user number or 6-character descriptor for the user, if programmed, for each arming and disarming of the system for the partition selected.

SYSTEM EVENT LOG

Displays time and date for system problems, such as AC Loss, low battery, etc., regardless of partition.

ALL EVENT LOG

Displays all categories of events in chronological order.

TEST EVENT LOG

Displays the Test mode results.

See your Installer for additional information concerning the event log.

Testing The System (To Be Conducted Weekly)

Using the 5 TEST Key

The **TEST** key puts your system into Test mode, which allows each protection point to be checked for proper operation.

1. Disarm the system and close all protected windows, doors, etc. **READY** should be displayed.
2. Enter your security code and press the 5 **TEST** key.
3. The external sounder should sound for 3 seconds and then turn off. If the sounder does not sound, it may be due to dialer communication activity. Wait a few minutes and try again. If the sounder still does not sound, **CALL FOR SERVICE IMMEDIATELY**.
4. The keypad will sound a single beep every 15 seconds as a reminder that the system is in Test mode. Each time a protection zone is faulted (opened), the keypad should beep three times. If the sounder does not sound, **CALL FOR SERVICE IMMEDIATELY**.

Note: No alarm reports will be sent to the central monitoring station while the system is in Test mode.

Testing Your System

1. Open and close each protected door and window in turn and listen for three beeps. Each faulted protection point should appear on the display.
2. Walk in front of any motion detectors (if used) and listen for three beeps as movement is detected (wireless motion detectors have a 3-1/2 minute lockout between trips). Each detector's should appear on the display when it is activated.
3. Follow the manufacturer's instructions to test all smoke detectors to ensure that all are functioning properly. Each detector should appear on the display when activated.
4. When all protection points have been checked, there should be no zone identification numbers displayed. If a problem is experienced with any protection point (no confirming sounds, no display), **CALL FOR SERVICE IMMEDIATELY**.
5. Turn off Test mode by entering the security code + the **OFF** key.

Fire Alarm System

Your fire alarm system (if installed) is on 24 hours a day, providing continuous protection. In the event of an emergency, the smoke and heat detectors automatically send signals to your Control, triggering a loud interrupting sound from the keypad and the optional exterior sounders. FIRE appears at your keypad and remains on until you silence the alarm.

In Case Of Fire Alarm

1. Should you become aware of a fire emergency before your detectors sense the problem, go to your nearest keypad and manually initiate an alarm by pressing the panic key assigned as FIRE emergency (if programmed by the installer) and hold down for at least 2 seconds.
2. Evacuate all occupants from the premises.
3. If flames and/or smoke are present, leave the premises and notify your local Fire Department immediately.
4. If no flames or smoke are apparent, investigate the cause of the alarm. The descriptor of the zone(s) in alarm appears at the keypad.

Silencing A Fire Alarm

1. Silence the alarm by entering your code and pressing the **OFF** key. To clear the display, enter your code and press the **OFF** key again
2. If the keypad does not indicate a **READY** condition after the second **OFF** sequence, press the **READY** key to display the zone(s) that are faulted. Be sure to check that smoke detectors are not responding to smoke or heat producing objects in their vicinity. Should this be the case, eliminate the source of heat or smoke.
3. If this does not remedy the problem, there may still be smoke in the detector. Clear it by fanning the detector for about 30 seconds.
4. You can clear the display by entering your code + the **OFF** key.

Fire Alarm System (cont'd)

Fire Display Lock

If several zones produce an alarm before any are silenced, the system can be programmed to lock the keypad display with the first zone that produced an alarm. Ask your installer if your system has been activated with this feature.

To display the other zone(s), press the [*] key for each zone. Also the “A”, “B”, or “C” keys can be programmed to scroll the keypad display to view the previous or subsequent fire alarms.

Fire Drill Test (Code + # + 69)

This test causes Notification Appliance Circuits to be activated (in either steady or pulsing manner as programmed in the system), for the purpose of conducting a fire drill or a bell test. This can only be activated by the installer or a master user from Partition 1 keypads as follows:

1. Enter the corresponding security code and press [#] + 69 (make sure the burglary portion of the system is disarmed). Keypads will display “FIRE DRILL ACTIVE” while the test is active.
2. The test may be stopped by entering any security code and pressing **OFF**.

NOTE: The system continues to monitor all 24 hour zones (fire, panic, etc.), while this test is active, and will end the test when an alarm condition is detected. This test should be conducted at periodic intervals as determined by the local authority having jurisdiction.

Trouble Conditions

Typical Trouble Displays

The word **CHECK** or **TRBL** on the Keypad's display, accompanied by a rapid "beeping" at the Keypad, indicates there is a trouble condition in the system.

To silence the beeping sound for trouble conditions, press any key.

- **"CHECK"** or **"TRBL"** display accompanied by a display of **"CALL SERVICE"** indicates that a problem exists with the system that eliminates some of the protection. **CALL FOR SERVICE IMMEDIATELY.**
- **"CHECK"** or **"TRBL"** display accompanied by a display of one or more zone descriptors indicate that a problem exists with those zone(s). First, determine if the zone(s) displayed are intact (this may include Fire and Waterflow type zones) and make them so if they are not. If the problem has been corrected, key an OFF sequence (Code plus OFF) to clear the **"CHECK"** or **"TRBL"** display. If the display persists, **CALL FOR SERVICE IMMEDIATELY.**
- **"CHECK"** or **"TRBL"** display accompanied by a display of **"6XX,"** where XX = 01-32, indicates a trouble on a supervised relay (corresponding relay number 01-32).
- **"CHECK"** or **"TRBL"** display accompanied by a display of **"8XX,"** where XX = 00-30, indicates a trouble on a peripheral device (connected to the panel's keypad terminals).
- **"CHECK"** or **"TRBL"** display accompanied by a display of **"9XX,"** where XX = 00-99, indicates a system trouble exists (dialers, Notification Appliance Circuits, ground fault, etc.). These zones are as follows:

970: Bell 1 Output	975: Dialer 2
971: Bell 2 Output	988: 2 nd RF Receiver – not receiving signals
972: Earth Ground Fault	990: 1 st RF Receiver – not receiving signals
973: J2 Trigger Output	997: Polling Loop Short
974: Dialer 1	
- **"SUPV"** display accompanied by a display of one or more zone descriptors indicate a problem on fire supervisory zone(s). This means that the operation of the fire alarm system may be compromised. First, determine if the zone(s) displayed are intact and make them so if they are not. If the problem has been corrected, key an OFF sequence (Code plus OFF) to clear the **"SUPV"** display, If the display persists, **CALL FOR SERVICE IMMEDIATELY.**

Trouble Conditions (cont'd)

- A display of "**COMM. FAILURE**" at the Keypad indicates that a failure has occurred in the telephone communication portion of your system. CALL FOR SERVICE IMMEDIATELY.
- A display of "**SYSTEM LO BAT**", accompanied by a once per minute "beeping" at the Keypad indicates that a low system battery condition exists. CALL FOR SERVICE IMMEDIATELY.
- A display of "**LO BAT**" and a zone descriptor, accompanied by a once per minute "beeping" at the Keypad indicates that a low battery condition exists in the wireless transmitter displayed. CALL FOR SERVICE IMMEDIATELY.
- A display of "**MODEM COMM**" indicates that the control is on-line with the central station's remote computer. The control will not operate while on-line.
- A display of "**HSENS**" and a zone number, indicates a smoke detector with a high sensitivity level, which may cause false alarms. CALL FOR SERVICE IMMEDIATELY.
- A display of "**LSSENS**" and a zone number, indicates a smoke detector with a low sensitivity level. Detectors with a low sensitivity might not detect a smoke condition. CALL FOR SERVICE IMMEDIATELY.

Power Failure

If the message "**AC LOSS**" is displayed, the Keypad is operating on battery power only. If only some lights are out on the premises, check circuit breakers and fuses and reset or replace as necessary. CALL FOR SERVICE IMMEDIATELY if AC power cannot be restored.

SERVICING INFORMATION

Your local ADEMCO dealer is the person best qualified to service your alarm system. Arranging some kind of regular service program with him is advisable. Your local ADEMCO dealer is:

Name: _____

Address: _____

Phone: _____

Emergency Evacuation

Establish and regularly practice a plan of escape in the event of fire. The following steps are recommended by the National Fire Protection Association:

1. Position your detector or your interior and/or exterior sounders so that they can be heard by all occupants.
2. Determine two means of escape from each room. One path of escape should lead to the door that permits normal exit from the building. The other may be a window, should your path be impassable. Station an escape ladder at such windows if there is a long drop to the ground.
3. Sketch a floor plan of the building. Show windows, doors, stairs and rooftops that can be used to escape. Indicate escape routes for each room. Keep these routes free from obstruction and post copies of the escape routes in every room.
4. Assure that all fire doors are shut while you in the building. This will prevent deadly smoke from entering while you escape.
5. Try the door. If the door is hot, check your alternate escape route. If the door is cool, open it cautiously. Be prepared to slam the door if smoke or heat rushes in.
6. Where smoke is present, crawl on the ground; do not walk upright. Smoke rises and may overcome you. Clearer air is near the floor.
7. Escape quickly; don't panic.
8. Establish a common meeting place outdoors, away from your house, where everyone can meet and then take steps to contact the authorities and account for those missing. Choose someone to assure that nobody returns to the house — many die going back.

Maintaining Your System

Taking Care of Your System

The components of your security system are designed to be as free of maintenance as possible. However, there are some things you can do to make sure that your system is in reliable working condition.

1. Test your system weekly. (See *TESTING THE SYSTEM* and *FIRE ALARM SYSTEM* sections).
2. Test the system after any alarm occurs.

Replacing Batteries in Wireless Sensors

Wireless sensors may not have been used in your security system

Each wireless sensor in your system has a 9-volt or 3-volt battery. The system detects a low battery in any wireless sensor, including smoke detectors, the optional personal emergency transmitter, and the optional portable wireless keypad. (A low battery in a portable wireless keypad is detected as soon as one of its keys is pressed, and the keypad will display **00**.)

Alkaline batteries provide a minimum of 1 year of operation, and in most units and applications, provide 2–4 years of service. Actual battery life will depend on the environment in which the sensor is used, the number of signals that the transmitter in the sensor has had to send, and the specific type of sensor. Factors such as humidity, high or low temperatures or large swings in temperature, may all lead to the reduction of actual battery life in an installation.

If you have a low battery in a wireless sensor, a low battery message is displayed on the keypad.

In addition, a battery-operated smoke detector with a low battery also emits a single "chirp" sound once approximately every 20-30 seconds, identifying itself as the smoke detector with the weak battery. If you do not replace a smoke detector's low battery, the smoke detector may sound continuously, as if there were a fire alarm.

Note: The low battery message comes on as a warning that battery replacement in indicated sensor(s) is due within 30 days. In the meantime, the sensor(s) causing the low battery indication is still fully operational.

Important: Use only batteries recommended by your installer as replacement.

Maintaining Your System (cont'd)

Silencing Low Battery Warning Tones at the Keypad

The keypad's warning tones can be silenced by performing an OFF sequence (code plus OFF key), but the Keypad's low battery message display will remain on as a reminder that you have a low battery condition in one or more of your sensors. When you replace the weak battery with a fresh one, the sensor will send a "good battery" signal to the control as soon as the sensor is activated (opening/closing of door, window, etc.), causing the low battery display to turn off. If the sensor is not activated, the display will automatically clear within approximately 1 hour.

Routine Care

- Treat the components of your security system as you would any other electrical equipment. Do not slam sensor-protected doors or windows.
- Keep dust from accumulating on the keypad and all protective sensors, particularly on motion sensors and smoke detectors.
- The keypad and sensors should be cleaned carefully with a dry soft cloth.
Do not spray water or any other fluid on the units.

NOTE: It is important that your system is tested periodically to insure proper protection. This includes testing the fire alarm portion of your system. See *TESTING THE SYSTEM* and *FIRE ALARM SYSTEM* sections for the testing procedures.

Quick Guide To System Functions

FUNCTION	PROCEDURE	COMMENTS
Check Zones	Press [*].	To view faulted zones when is system not ready
Display All Descriptors	Press and hold [*] for 5 seconds.	Displays all alpha descriptors programmed by installer.
Arm System	Enter code. Press arming key desired (AWAY, STAY, INSTANT, MAXIMUM).	Arms system in mode selected.
Disarm System	Enter code. Press OFF [1].	Disarms system and silences alarms.
Bypass Zones	Enter code. Press BYPASS [6]. Enter zone numbers to be bypassed (use 3-digit entries).	Bypassed zones are unprotected and will not cause an alarm if violated.
Quick Bypass	Enter code. Press BYPASS [6]. Press [#].	Bypasses all faulted zones automatically.
Chime Mode	Enter code. Press CHIME [9].	Keypad will sound if doors or windows are violated while system disarmed.
Test Mode	Enter code. Press TEST [5]	Activates alarm sounder and allows sensors to be tested.
View Messages	Press and hold [0] for at least 5 seconds.	Message from central station will appear.
View User Capabilities	Enter user's code. Press [*] + [*].	Displays partitions & authority levels assigned to the user.
GOTO Partition	Enter security code. Press [*]. Enter partition number (1-8). 0 returns to default partition.	Allows a user at one keypad to perform functions in another partition, if that user is authorized to do so.
Self-Help	Press and hold any function key for at least 5 seconds.	Will display abbreviated instructions for the key pressed.
Add a User	Enter master/manager code. Press CODE [8]. Enter new user's user number. Enter code for that user. Enter authority for that user in this partition (1-5). Follow prompts, 1=Yes, 0=No.	Master & Manager level users can add users to the system, each with its own code and authority level.
Change a User's Code	Enter master/manager code. Press CODE [8]. Enter user's 3-digit number. Enter new code for that user. Press 0 (No) at prompt.	Master & Manager level users can change their own or other users' codes.

Quick Guide To System Functions (cont'd)

FUNCTION	PROCEDURE	COMMENTS
Delete a User	Enter master/manager code. Press CODE [8]. Enter user no. to be deleted. Enter master/manager code. Press 1 (Yes) at prompt.	Master & Manager level users can delete users. A user can only be deleted by a user with higher authority level.
Control Output Device	Enter security code. Press [#] Enter 71 or 72.	Activate output device as programmed.
	Enter security code. Press [#] Enter 70.	Activate output device manually
	Enter security code. Press [#] Enter 77.	Activate output device or system event instantly
Access Control	Enter security code. Enter 0.	Activate access relay for current partition.
	Enter security code Press [#]. Enter 73.	Request to enter or exit at a console.
	Enter security code Press [#]. Enter 74. Enter access point number.	Request to enter or exit at an access point.
	Enter security code. Press [#]. Enter 75. Enter access point number. Enter state (1-3)	Change the access point state.
	Enter security code Press [#]. Enter 79.	Perform an access control card function.

Summary Of Audible Notification

(Alpha Display Keypads)

SOUND	CAUSE	DISPLAY
LOUD, INTERRUPTED* Keypad & External	FIRE ALARM	FIRE is displayed; descriptor of zone in alarm is displayed.
LOUD, CONTINUOUS* Keypad & External	BURGLARY/AUDIBLE EMERGENCY ALARM	ALARM is displayed; descriptor of zone in alarm is also displayed.
ONE SHORT BEEP (not repeated) Keypad only	a. SYSTEM DISARM b. SYSTEM ARMING ATTEMPT WITH AN OPEN ZONE. c. BYPASS VERIFY	a. DISARMED/READY TO ARM is displayed. b. The number and descriptor of the open protection zone is displayed. c. Numbers and descriptors of the bypassed protection zones are displayed (One beep is heard for each zone displayed). Subsequently, the following is displayed: DISARMED BYPASS Ready to Arm
ONE SHORT BEEP (once every 15 sec.) Keypad only	SYSTEM IS IN TEST MODE	Opened Zone identifications will appear.
ONE BEEP (every 60 sec.) Keypad only	LOW BATTERY AT A TRANSMITTER	LO BAT displayed with description of transmitter.
TWO SHORT BEEPS Keypad only	ARM AWAY OR MAXIMUM	ARMED AWAY or ARMED MAXIMUM is displayed. Red ARMED indicator is lit.
THREE SHORT BEEPS Keypad only	a. ARM STAY OR INSTANT b. ZONE OPENED WHILE SYSTEM IS IN CHIME MODE. c. ENTRY WARNING**	a. ARMED STAY ZONE BYPASSED or ARMED INSTANT ZONE BYPASSED is displayed. Red ARMED indicator is lit. b. CHIME displayed, descriptor of open protection zone will be displayed if the [*] key is pressed. c. DISARM SYSTEM OR ALARM WILL OCCUR is displayed.
RAPID BEEPING Keypad only	a. TROUBLE b. AC POWER LOSS ALERT*** c. MEMORY OF ALARM	a. CHECK displayed. Descriptor of troubled protection zone is displayed. b. AC LOSS displayed (may alternate with other displays that may be present). c. FIRE or ALARM is displayed; descriptor of zone in alarm is displayed.
SLOW BEEPING Keypad only	a. ENTRY DELAY WARNING** b. EXIT DELAY WARNING (if programmed)	a. DISARM SYSTEM OR ALARM WILL OCCUR is displayed. Exceeding the delay time without disarming causes alarm. b. ARMED AWAY or ARMED MAXIMUM is displayed along with You May Exit Now

* If bell is used as Notification Appliance, fire alarm is pulsed ring; burglary/audible emergency is steady ring.

** Entry warning may consist of three short beeps or slow continuous beeping, as programmed by your installer.

*** Loss of system battery power is not indicated or annunciated by the keypad (warnings are for loss of AC power only).

UL NOTICE: This is a "GRADE A" system.

"FEDERAL COMMUNICATIONS COMMISSION (FCC) Part 15 STATEMENT"

This equipment has been tested to FCC requirements and has been found acceptable for use. The FCC requires the following statement for your information:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- If using an indoor antenna, have a quality outdoor antenna installed.
- Reorient the receiving antenna until interference is reduced or eliminated.
- Move the receiver away from the control/communicator.
- Move the antenna leads away from any wire runs to the control/communicator.
- Plug the control/communicator into a different outlet so that it and the receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

The user or installer may find the following booklet prepared by the Federal Communications Commission helpful: "Interference Handbook"

This booklet is available from the U.S. Government Printing Office, Washington, DC 20402.

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

IN THE EVENT OF TELEPHONE OPERATIONAL PROBLEMS

In the event of telephone operational problems, disconnect the control by removing the plug from the RJ31X (CA38A in Canada) telephone wall jack. We recommend that your certified installer demonstrate disconnecting the phones on installation of the system. Do not disconnect the phone connection inside the control/communicator. Doing so will result in the loss of your phone lines. If the regular phone works correctly after the control/communicator has been disconnected from the phone lines, the control/communicator has a problem and should be returned for repair. If upon disconnection of the control/communicator, there is still a problem on the line, notify the telephone company that they have a problem and request prompt repair service. The user may not under any circumstances (in or out of warranty) attempt any service or repairs to the system. It must be returned to the factory or an authorized service agency for all repairs.

“FEDERAL COMMUNICATIONS COMMISSION (FCC) Part 68 NOTICE

This equipment complies with Part 68 of the FCC rules. On the front cover of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This equipment uses the following jacks:

An RJ31X is used to connect this equipment to the telephone network.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact the manufacturer for repair and warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.

There are no user serviceable components in this product, and all necessary repairs must be made by the manufacturer. Other repair methods may invalidate the FCC registration on this product.

This equipment cannot be used on telephone company-provided coin service. Connection to Party Line Service is subject to state tariffs.

This equipment is hearing-aid compatible.

When programming or making test calls to an emergency number, briefly explain to the dispatcher the reason for the call. Perform such activities in the off-peak hours; such as early morning or late evening.

**CANADIAN DEPARTMENT OF COMMUNICATIONS
(DOC) STATEMENT**

NOTICE

The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: User should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The **Load Number (LN)** assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.

AVIS

L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunications. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. Dans certains cas, les fils intérieurs de l'entreprise utilisés pour un service individuel à la ligne unique peuvent être prolongés au moyen d'un dispositif homologué de raccordement (cordon prolongateur téléphonique interne). L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations. Actuellement, les entreprises de télécommunications ne permettent pas que l'on raccorde leur matériel aux prises d'abonnés, sauf dans les cas précis prévus par les tarifs particuliers de ces entreprises.

Les réparations du matériel homologué doivent être effectuées pas un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise en terre de la source d'énergie électrique, des lignes téléphoniques de réseau de conduites d'eau s'il y en a, soient raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'**indice de charge (IC)** assigné à chaque dispositif terminal pour éviter toute surcharge indique le pourcentage de la charge totale qui peut être raccordé à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100.

WARNING!
THE LIMITATIONS OF THIS ALARM SYSTEM

While this system is an advanced design security system, it does not offer guaranteed protection against burglary or fire or other emergency. Any alarm system, whether commercial or residential, is subject to compromise or failure to warn for a variety of reasons. For example:

- Intruders may gain access through unprotected openings or have the technical sophistication to bypass an alarm sensor or disconnect an alarm warning device.
- Intrusion detectors (e.g. passive infrared detectors), smoke detectors, and many other sensing devices will not work without power. Battery operated devices will not work without batteries, with dead batteries, or if the batteries are not put in properly. Devices powered solely by AC will not work if their AC power supply is cut off for any reason, however briefly.
- Signals sent by wireless transmitters may be blocked or reflected by metal before they reach the alarm receiver. Even if the signal path has been recently checked during a weekly test, blockage can occur if a metal object is moved into the path.
- A user may not be able to reach a panic or emergency button quickly enough.
- While smoke detectors have played a key role in reducing residential fire deaths in the United States, they may not activate or provide early warning for a variety of reasons in as many as 35% of all fires, according to data published by the Federal Emergency Management Agency. Some of the reasons smoke detectors used in conjunction with this System may not work are as follows. Smoke detectors may have been improperly installed and positioned. Smoke detectors may not sense fires that start where smoke cannot reach the detectors, such as in chimneys, in walls, or roofs, or on the other side of closed doors. Smoke detectors also may not sense a fire on another level of a residence or building. A second floor detector, for example, may not sense a first floor or basement fire. Moreover, smoke detectors have sensing limitations. No smoke detector can sense every kind of fire every time. In general, detectors may not always warn about fires caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. Depending upon the nature of the fire and/or the locations of the smoke detectors, the detector, even if it operates as anticipated, may not provide sufficient warning to allow all occupants to escape in time to prevent injury or death.
- Passive Infrared Motion Detectors can only detect intrusion within the designed ranges as diagrammed in their installation manual. Passive Infrared Detectors do not provide volumetric area protection. They do create multiple beams of protection, and intrusion can only be detected in unobstructed areas covered by those beams. They cannot detect motion or intrusion that takes place behind walls, ceilings, floors, closed doors, glass partitions, glass doors, or windows. Mechanical tampering, masking, painting or spraying of any material on the mirrors, windows or any part of the optical system can reduce their detection ability. Passive Infrared Detectors sense changes in temperature; however, as the ambient temperature of protected area approaches the temperature range of 90° to 105°F, the detection performance can decrease.
- Alarm warning devices such as sirens, bells or horns may not alert people or wake up sleepers if they are located on the other side of closed or partly open doors. If warning devices sound on a different level of the residence from the bedrooms, then they are less likely to waken or alert people inside the bedrooms. Even persons who are awake may not hear the warning if the alarm is muffled from a stereo, radio, air conditioner or other appliance, or by passing traffic. Finally, alarm warning devices, however loud, may not warn hearing-impaired people or waken deep sleepers.
- Telephone lines needed to transmit alarm signals from a premises to a central monitoring station may be out of service or temporarily out of service. Telephone lines are also subject to compromise by sophisticated intruders.
- Even if the system responds to the emergency as intended, however, occupants may have insufficient time to protect themselves from the emergency situation. In the case of a monitored alarm system, authorities may not respond appropriately.
- This equipment, like other electrical devices, is subject to component failure. Even though this equipment is designed to last as long as 10 years, the electronic components could fail at any time.

The most common cause of an alarm system not functioning when an intrusion or fire occurs is inadequate maintenance. This alarm system should be tested weekly to make sure all sensors and transmitters are working properly.

Installing an alarm system may make one eligible for lower insurance rates, but an alarm system is not a substitute for insurance. Homeowners, property owners and renters should continue to act prudently in protecting themselves and continue to insure their lives and property.

We continue to develop new and improved protection devices. Users of alarm systems owe it to themselves and their loved ones to learn about these developments.

Index

#70 command	42	Device Timers	8, 46
4285 or 4286 VIP module	9, 42	Disarm	34
AC Loss	57	DOC	66
Access Another Partition.....	21	Duress.....	16
Access Control Commands	49	Duress Code	15
Access Door.....	41	Emergency	5
Action Code	48	Entry Delay.....	14
Action Specifier	48	Entry/Exit.....	6
Add a User.....	18	Event Log Procedures.....	51
ADD NEW USER.....	20	Exit Delay	14
Add User Code	17	Exit User Edit Mode	17
Ademco Dealer	57	FCC.....	64
Alarm	7	Fire	5, 38
Alkaline batteries.....	59	Fire Alarm.....	54
Alpha Keypads.....	10	Fire Display Lock.....	55
Arm/Disarm Commands.....	48	FIRE DRILL ACTIVE	55
Armed	7	Fire Drill Test.....	55
ARMED INDICATOR	13	Fire Protection.....	6
Audible Emergency.....	38	GLOBAL ARM	19
Audible Signals	63	Global Arming	21
Authority Level	15	Goto	19
Authority Levels	16, 17	GOTO.....	21
Away	7, 21	GOTO Command	8
AWAY	35	Grant- Access Door.....	41
AWAY mode	32	HSENS.....	57
Battery Life.....	59	Instant	7, 21
Burglary	5	INSTANT	14
Burglary Protection	7	INSTANT mode.....	31
Bypass- Access Door.....	41	Keypad	5
Bypass Commands.....	49	Keypad back lighting	10
Bypass Zones	28	Keypads	10
Bypassing	28	Keyswitch	35
Call Service.....	56	LO Bat	57
Change a User's Code.....	20	Low Battery	59
Change User Code	17	Low Battery Warning.....	60
CHECK	56	LSENS	57
Chime	7, 36	macro	39
Closing Time	43	Macros	8
Comm. Failure	57	Manager.....	16
Common Lobby.....	24	Master	16
Delaying Closing Time	43	Master Keypad	9, 22
Delete a User.....	20	Maximum.....	7, 21
Delete User Code	17	MAXIMUM.....	14
Descriptors.....	27	MAXIMUM mode.....	33

Memory of Alarm.....	7, 34	Routine Care	60
Messages.....	37	Schedules.....	8, 43
Modem Comm.....	57	Security Code.....	15
MULTI-ACCESS	19	Security Codes	15
Not Ready	26	Sensing Devices.....	6
Off	21	Silencing A Fire Alarm	54
OFF	34	Silent Emergency	38
Open Zones	26	Smoke Detectors.....	53
Open/Close Schedules.....	43	Speed Key.....	39
Open/Close Windows.....	49	SPEED KEY	8
Operator A.....	16	Stay	7, 21
Operator B.....	16	STAY	35
Operator C	16	STAY mode	30
OUTPUT TIMER	46	System LO Bat	57
Panic Keys	38	System Overview.....	5
PANIC KEYS.....	13	Temporary Schedules	43, 44
Partitioned Security System	5	Temporary Users.....	18
Partitioned System	6	Test Key	53
Personal Emergency	38	Test mode	53
Phone Access	9	Testing Your System	53
POWER/READY INDICATOR.....	13	Time Window.....	43
Protect- Access Door	41	TRBL	56
Quick Arm	13	Trouble Condition	56
Quick Arming.....	15	UNABLE TO ARM LOBBY	24
Quick Bypass	29	User Edit Mode.....	17
Quick Guide	61, 62	User Numbers	15
Ready.....	26	User's Instructions	9
READY.....	36	Using #77 Instant Activation Mode	48
Ready Key.....	26	WARRANTY	71
Relay commands	48	Wireless Sensor	59
Relay Menu Mode	42	Zone Bypassed.....	30
Replacing Batteries	59	Zone Descriptors	27
RF BUTTON.....	18	Zones	6

LIMITED WARRANTY

Honeywell International Inc., 165 Eileen Way, Syosset, New York 11791, warrants its product(s) to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 24 months from the date stamp control on the product(s) or, for product(s) not having a date stamp, for 12 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product(s) which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product(s) is altered or improperly repaired or serviced by anyone other than Honeywell factory service. For warranty service, return product(s) transportation prepaid, to Honeywell Factory Service, 165 Eileen Way, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

Seller does not represent that the product(s) it sells may not be compromised or circumvented; that the product(s) will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the product(s) will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery, fire, or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. **CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THAT THE PRODUCT(S) FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT(S), WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER.**

This warranty replaces any previous warranties and is the only warranty made by Seller on this product(s). No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International, Inc.

www.honeywell.com/security



K3522V2 6/04 Rev A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>