

# CENTRAL PNEUMATIC®

## 1/2" AIR IMPACT WRENCH

Model 02623

### ASSEMBLY and OPERATING INSTRUCTIONS



3491 Mission Oaks Blvd., Camarillo, CA 93011  
Visit our Web site at <http://www.harborfreight.com>

Copyright© 2002 by Harbor Freight Tools® . All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

**For technical questions and replacement parts, please call 1-800-444-3353**

## Specifications

Drive Size	1/2"
Maximum RPM's Forward	6600 RPM's @90 PSI
Maximum RPM's Reverse	6800 RPM's @90 PSI
Maximum Torque	625 FT./LBS.
Average Air Consumption	4.7 CFM at 90 PSI
Air Inlet	1/4" - 18 NPT
Maximum Air Pressure	90 PSI
Blows Per Minute	1200 BPM
Maximum Bolt Capacity	5/8"
Weight	6.6 Lbs.

## Save This Manual

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

## Safety Warnings and Precautions

**WARNING: When using tool, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.**

**Read all instructions before using this tool!**

1. **Keep work area clean.** Cluttered areas invite injuries.
2. **Observe work area conditions.** Do not use machines or power tools in damp or wet locations. Don't expose to rain. Keep work area well lighted. Do not use electrically powered tools in the presence of flammable gases or liquids.
3. **Keep children away.** Children must never be allowed in the work area. Do not let them handle machines, tools, extension cords, or air hoses.
4. **Store idle equipment.** When not in use, tools must be stored in a dry location to inhibit rust. Always lock up tools and keep out of reach of children.
5. **Use the right tool for the job.** Do not attempt to force a small tool or attachment to do the work of a larger industrial tool. There are certain applications for which this tool was designed. It will do the job better and more safely at the rate for which it was intended. Do not modify this tool and do not use this tool for a purpose for which it was not intended .
6. **Dress properly.** Do not wear loose clothing or jewelry as they can be caught in moving parts. Protective, electrically non-conductive clothes and non-skid footwear are recommended when working. Wear restrictive hair covering to contain long hair.
7. **Use eye and ear protection.** Always wear ANSI approved impact safety goggles and ear protection. Wear a full face shield if you are producing metal filings or wood chips. Wear an ANSI approved dust mask or respirator when working around metal, wood, and chemical dusts and mists.

8. **Do not overreach.** Keep proper footing and balance at all times. Do not reach over or across running machines or air hoses.
9. **Maintain tools with care.** Keep tools clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords and air hoses periodically and, if damaged, have them repaired by an authorized technician. The handles must be kept clean, dry, and free from oil and grease at all times.
10. **Disconnect air supply.** Disconnect air hose when not in use.
11. **Remove adjusting keys and wrenches.** Check that keys and adjusting wrenches are removed from the tool or machine work surface before plugging it in.
12. **Avoid unintentional starting.** Be sure the **Trigger (#8)** is not depressed when not in use and before attaching to the air hose. Do not carry the Impact Wrench with the **Trigger (#8)** depressed.
13. **Stay alert.** Watch what you are doing, use common sense. Do not operate any tool when you are tired.
14. **Check for damaged parts.** Before using any tool, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment and binding of moving parts; any broken parts or mounting fixtures; and any other condition that may affect proper operation. Any part that is damaged should be properly repaired or replaced by a qualified technician. Do not use the tool if **Trigger (#8)** does not engage and disengage properly.
15. **Guard against electric shock.** Prevent body contact with grounded surfaces such as pipes, radiators, ranges, and refrigerator enclosures.
16. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with this tool. Approved accessories are available from Harbor Freight Tools.
17. **Do not operate tool if under the influence of alcohol or drugs.** Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not operate the tool.
18. **Use proper size and type extension cord.** If an extension cord is required for the air compressor, it must be of the proper size and type to supply the correct current to the tool without heating up. Otherwise, the extension cord could melt and catch fire, or cause electrical damage to the tool. Check your compressor's manual for the appropriate size cord.
19. **Maintenance.** For your safety, maintenance should be performed regularly by a qualified technician.
20. **Compressed air only.** Never use combustible gases as a power source.
21. Continual exposure to sound levels above 85 decibels could cause hearing damage. Hearing protection is advised with this tool.


**Note:** Performance of the compressor (if powered by line voltage) may vary depending on variations in local line voltage. Extension cord usage may also affect tool performance.

**Warning:** The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

## Unpacking

When unpacking, check to make sure the parts listed on page 6 are included. If any parts are missing or broken, please call Harbor Freight Tools at the number on the cover of this manual as soon as possible.

## Operation

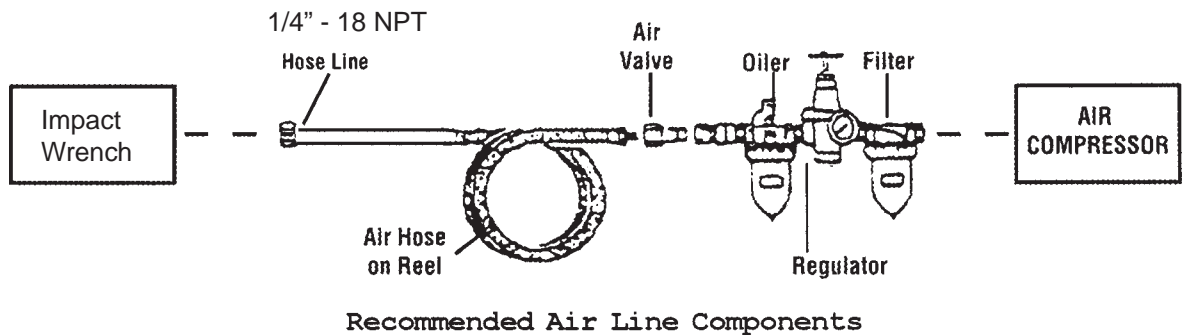

For best service you should incorporate an oiler, regulator, and inline filter, as shown in the diagram above. Hoses, couplers, oilers, regulators, and filters are all available at Harbor Freight Tools.

1. You will need to prepare a 1/4" air connector (sold separately) to connect to the **Air Inlet (#1)**. First, wrap the 1/4" air connector (not included) with pipe thread seal tape before connecting to a Air Source Hose (not included).
2. Attach air hose to the **Air Inlet (#1)** on the Impact Wrench.  
**Note:** If you are not using an automatic oiler system, before operation, add a few drops of Pneumatic Tool Oil to the airline connection. Add a few drops more after each hour of continual use.
3. Set the air pressure on your compressor to 90 PSI. Do not exceed the maximum air pressure of 90 PSI.
4. Check the air connection for leaks.

**Warning!!** This Impact Wrench supplies powerful torque and is designed to be operated with two hands. Failure to operate the Impact Wrench with two hands may result in serious injury.

## Operation (continued)

**Note:** Turn off your air compressor and disconnect the air hose when you are changing sockets. After you attach the socket, attach the air hose and turn the air compressor on.

5. Select the appropriate size 1/2" socket for your needs.

6. Push and snap the socket (not included) onto the **Anvil (#43)**.

### Tightening

**Note:** Push Forward/Reverse Valve #9 to the left for clockwise rotation, push to the right for counterclockwise rotation. This is a sliding valve that is combined with Air Regulator lever (#13).

8. Tighten the nut as tight as you can by hand.

9. Place the socket (not included) over the nut you wish to tighten.

10. Grip the Impact Wrench firmly with two hands and gently squeeze the **Trigger (#8)**.

**Note:** Fine tune the air flow with the **Air Regulator (#13)** knob by adjusting it from positions 1 through 6. One allows the lowest amount of air flow, and six the highest.

**Note:** If the Impact Wrench cannot tighten the nut to your satisfaction, do not raise the air pressure on the compressor over 90 PSI. Air pressure above 90 PSI will strip the workpiece and damage the tool. Use other appropriate methods and tools to tighten the nut.

11. When the nut is tightened, release the **Trigger (#8)**. Turn off the air compressor and disconnect the hose.

12. If available, check the recommended torque specification for the nut. Use a torque wrench to tighten the nut to the proper setting after using the Impact Wrench.

### Loosening

**Note:** Push Forward/Reverse Valve (#9) to the right for counterclockwise rotation.

13. Place the socket (not included) over the nut you wish to loosen.

14. Grip the Impact Wrench firmly with two hands and gently squeeze the **Trigger (#8)**.

**Note:** If the Impact Wrench cannot loosen the nut, do not raise the air pressure on the compressor over 90 PSI. Do not attempt to loosen the nut with the Impact Wrench. Use other appropriate methods and tools to loosen the nut.

15. When the nut is loosened, release the **Trigger (#8)**. Turn off the air compressor and disconnect the hose.

16. If needed, remove the nut from the socket.

## Maintenance

1. Make sure your Impact Wrench is disconnected from the air hose before attempting any maintenance.

2. If you are not using an automatic oiler system, put a few drops of pneumatic tool oil through the air line before and after each use. During use, add a few drops every hour.

3. Apply a few drops of oil to the **Throttle Valve Pin (#6)** before each use.

4. Wipe the Impact Wrench down with a lint free cloth after each use.

5. Make sure the **Anvil (#43)** is clear of dirt or debris. If possible, spray it with compressed air before each use.

## Parts List


Part No.	Description	Qty.	Part No.	Description	Qty.
1	Air Inlet	1	27	Cylinder Dowel	1
2	Throttle Valve Spring	1	29	Rotor Blade	6
4a	Throttle Valve Assy.	1	30	Front End Plate	1
5a	Throttle Valve Seat	1	31	Rear End Plate	1
6	Throttle Valve Pin	1	32	End Plate Gasket	1
7	Exhaust Deflector	1	33	Motor Clamp Washer	2
8	Trigger	1	34	Hammer Frame	1
9	Forward/Reverse Valve	1	35	Hammer Pin	2
11	O-ring	2	37	Hammer	2
12	Motor Housing Assy.	1	38	Hammer Case	1
13	Air Regulator	1	38a	Hammer Case Pilot	1
14	Air Regulator Screw	1	39	Hammer Case Gasket	1
15	Steel Ball	1	40	Hammer Case Bushing	1
16	Steel Ball Spring	1	41	Hammer Case Cap Screw	4
17	Grease Fitting	1	43	Anvil	1
20a	O-ring	1	44	Socket Retainer	1
22	Rotor	1	45	Retainer O-ring	1
23	Rear Rotor Bearing	1	48	Cap	1
24	Front Rotor Bearing	1	49	Screw	1
25	R. Rotor Bearing Ret.	1			
26	Cylinder	1			

**PLEASE READ THE FOLLOWING CAREFULLY**

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

**NOTE:** Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

# Assembly Drawing

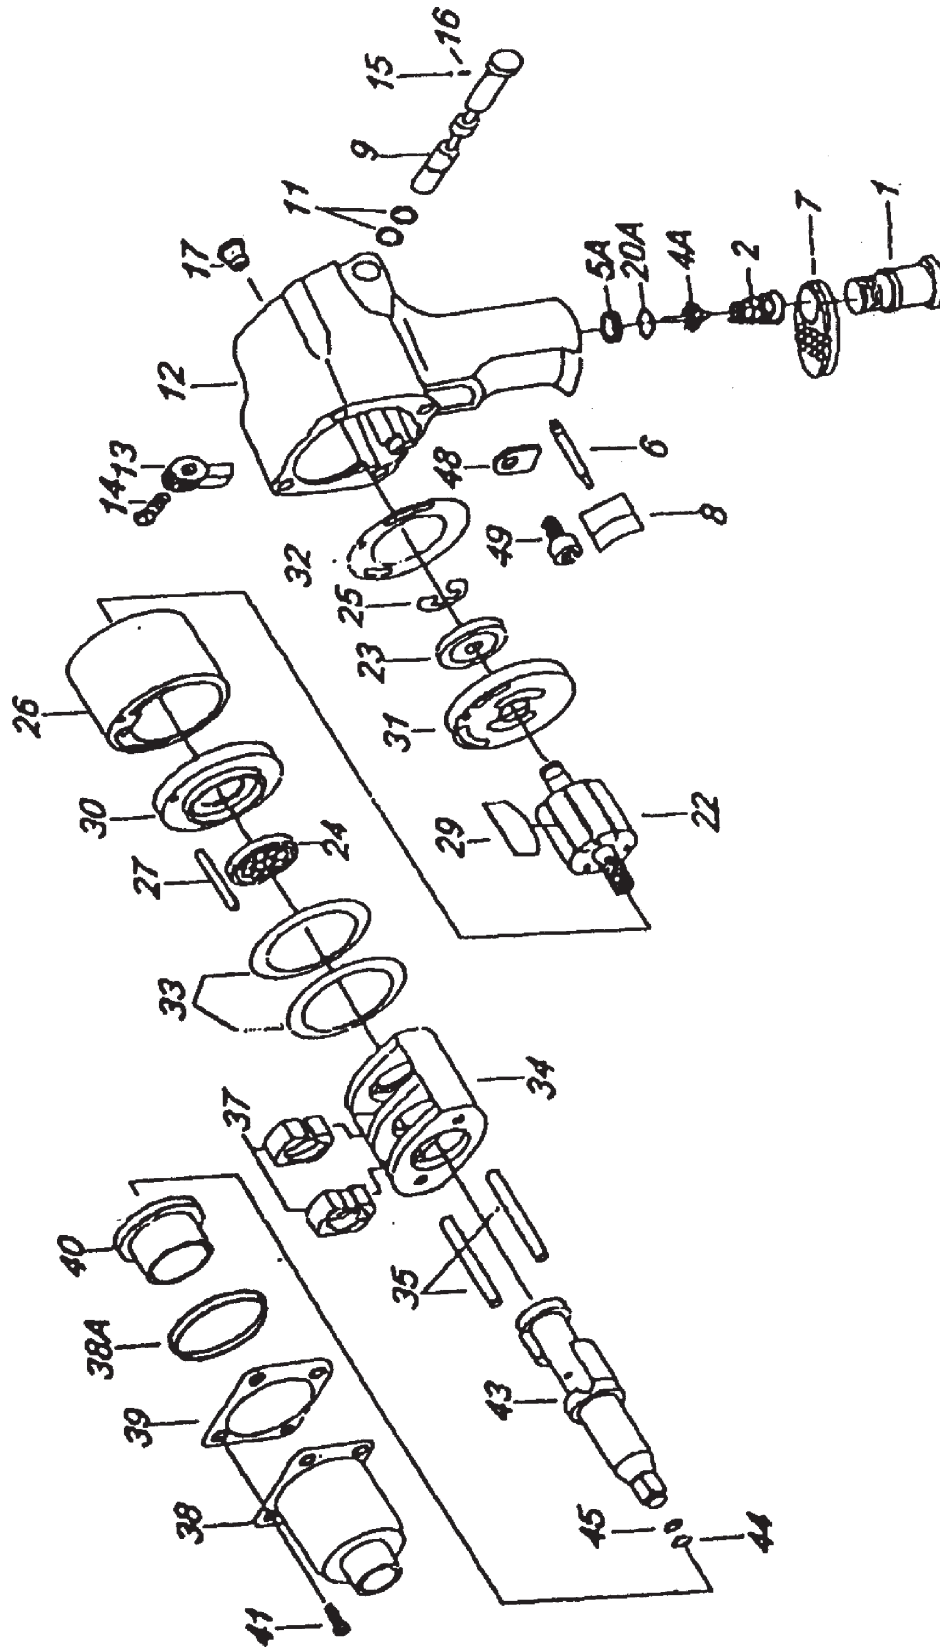

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>