AT3400 AllTouch Remote Control User Guide

The AT3400 AllTouch remote control has been programmed to control your Cisco® set-top box and can be programmed to control your TV.

Before You Begin

Be sure that your television power cord and your Cisco set-top box are not plugged into the same wall outlet.

Install Batteries

The remote requires two alkaline AAA batteries. A diagram inside the battery compartment of the remote indicates proper placement of the batteries.

Know Your Remote

The diagram below describes each key on your remote control. Functions may vary between different services.

Refer to the user guide for your set-top for descriptions of specific functions.

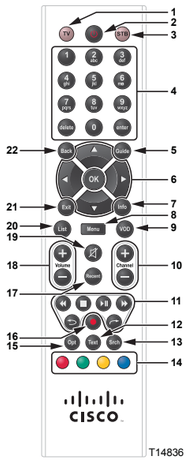

1 Select TV operating keys
2 Turns the currently selected device on and off
3 Select set-top box operating keys
4 Allow direct access to specific channels or menu items
5 View the EPG
6 Navigate through on-screen menus
7 View more info
8 Display the menu
9 View VOD programs
10 Change the channel up and down
11 Control the recorded program
12 In TV Mode only: Text = Teletext On
13 In TV Mode only: Srch = Teletext Off
14 Make on-screen selections
15 In TV Mode only: Opt = AV Control
16 Record the selected program
17 Go to most recently viewed channel
18 Increase or decrease the volume
19 Mute the volume
20 View list of recorded programs
21 Return to TV program
22 Go back to the previous screen

Progamming the AT3400 Manually

Use the steps below to program your AT3400 manually. Find your manufacturer in the list of **TV Setup Codes** and begin with the first code listed. If that code does not work, repeat these steps with the next code listed. Or you can scan for a code using the steps in *Scanning for Codes*.

1. Hold the **TV** key until both device keys begin to flash. Then release the **TV** key.
2. Enter the four-digit code for your TV model. After you press the first digit, the TV key should light up and remain on. After you press the last digit, the TV key flashes three times.
3. Test the remote control to make sure that it controls the TV. If the functions do not work, try the next code listed.

If none of the codes for your TV work, try the steps in *Scanning for Codes*.

Scanning for Codes to Program the TV

The AT3400 can scan all the codes for your TV and find the best match. Use the steps below or see the steps in *Programming the AT3400 Manually*.

1. Make sure that your TV is powered on.
2. Hold the **TV** key until both device keys on the remote control begin to flash. Then release the **TV** key.
3. Press the **Power** key. The TV key stops flashing and remains on.
4. Point the remote control at your TV.
5. Hold the ▲ key until your TV turns off.
6. When the TV turns off, you have found a possible code. Press the **Power** key to turn your TV back on. Test the remote control. If the functions do not work, make sure the device is still powered on. Then go back to step 5 to continue scanning.
7. When you find a code, make sure that the TV is powered on, then press the **OK** key to lock the code. The TV key flashes three times. Go to *Recalling a Device Code* to find out your code and record in the spaces provided.

Programming Volume Control

By default, your volume buttons operate the TV instead of the set-top box. Follow these steps if you want to control volume through the set-top box:

1. Hold the **STB** key until both device keys begin to flash. Then release the **STB** key.
2. Press the **Volume +** key. The STB key stops flashing and remains on.
3. Press the **Volume –** key. The STB key turns off while you press Volume – and turns on again when you release Volume –.
4. Press the **STB** key. The STB key flashes three times.

If you want to revert to the original settings:

1. Hold the **STB** key until both device keys start to flash. Then release the **STB** key.
2. Press the **Volume +** key. The STB key stops flashing and remains on.
3. Press the **Volume –** key, then press the **OK** key. After you release the OK key, the STB device key flashes three times and then turns off.

4. Press the **TV** key. The TV key flashes three times.

Adjusting the Channel Lock

By default, your channel buttons always operate the set-top box instead of the TV. If you want the channel buttons to operate the TV instead, follow these steps:

1. Press the **STB** key until both device keys start to flash. Then release the **STB** key.
2. Press the **Channel +** key, then press and release the **Channel –** key.
3. Press the **OK** key. The STB key flashes three times.
4. Repeat these steps if you want to revert to the original settings.

Turning Off Master Power

By default, your Power button controls both the TV and the set-top box. Follow these steps if you only want it to control the set-top box.

1. Hold the **STB** key until both device keys begin to flash.
2. Press and release the **Power** key, then the **STB** mode key, then the **Power** key again. The STB key flashes three times.

Follow these steps if you want to revert to the original settings.

1. Hold the **STB** key until both device keys begin to flash.
2. Press and release the **Power** key, then the **STB** mode key, then the **TV** mode key, then the **Power** key again. The STB key flashes three times.

Recalling a TV Code

Follow these steps if you need to know your TV code.

1. Hold the **TV** key until both device keys begin to flash. Then release the **TV** key.
2. Press the **OK** key. The TV key flashes each of the four digits in the code, separated by pauses. A rapid flicker represents zero. So a code of 1032 will be shown as:

   FLASH <pause> FLICKER <pause> FLASH… FLASH… FLASH… <pause> FLASH… FLASH

   Write your code in the spaces below:

   ___ ___ ___ ___

Handling Disposable Batteries

This product may contain disposable batteries. Heed the following warning and Battery Safety and Battery Disposal instructions.

WARNING: There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same type of battery. Do not disassemble it or attempt to recharge it outside the system. Do not crush, puncture, dispose of in fire, short the external contacts, or expose to water or other liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.

Battery Safety

- Insert batteries correctly. There may be a risk of explosion if the batteries are incorrectly inserted.
- Do not attempt to recharge 'disposable' or 'non-reusable' batteries.
- Please follow instructions provided for charging 'rechargeable' batteries.
- Replace batteries with the same or equivalent type that we recommend.
- Do not expose batteries to excessive heat (such as sunlight or fire).
- Do not expose batteries to temperatures above 100°C (212°F).

Battery Disposal

- The batteries may contain substances that could be harmful to the environment.
- Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations.

  廢電池請回收

- The batteries may contain perchlorate, a known hazardous substance, so special handling and disposal of this product might be necessary. For more information about perchlorate and best management practices for perchlorate-containing substance, see **www.dtsc.ca.gov/hazardouswaste/perchlorate**

This product conforms to the following European directives:

-2006/95/EC
-2004/108/EC

TV Setup Codes

Default code: Philips TV Code 6896

A.R.SYSTEMS	8644, 7213, 6896, 5090, 7014
ACCENT	7647, 8644, 6896, 3637
ACER	3857
ACTION	4523, 5510, 3637, 4648
ADCOM	4884
ADL	7855
ADMIRAL	3193, 2438, 5553, 5605, 3488, 3637, 4648
ADVENTURA	5874
ADVENTURI	5874
ADYSON	4469, 4523, 4648
AEA	8644, 6896
AEG	5952, 6305, 5319
AGASHI	4469, 3488
AGB	8568
AIKO	7647, 8644, 6896, 4469, 4530, 6482, 5739, 3350, 3518, 3488, 3637
AIM	8644, 6764, 6896, 3036, 7910, 8435, 8484
AIWA	5448, 7733, 6736
AKAI	3350, 7910, 4530, 3011, 8644, 5739, 6669, 3518, 6482, 7647, 3036, 4016, 2429, 8060, 5605, 8568, 6381, 2810, 6896, 4783, 8020, 8394, 4469, 3488, 5393, 2796, 6305, 3840, 7733, 4659, 3451, 5905, 4925, 4523, 3802, 3637, 5874, 4648
AKASHI	7314, 7647
AKIBA	4016, 5896, 7014, 8644, 6896
AKIRA	5553
AKITO	8644, 6896
AKURA	8644, 6896, 5355, 6764, 7647, 4016, 5896, 3488, 8060, 7066, 3637, 4648
ALARON	4469
ALBA	8644, 3840, 6896, 8060, 7647, 5553, 7287, 4530, 5355, 7384, 4016, 4469, 5531, 5605, 6230, 6812, 7733, 5119, 4925, 3637, 4648
ALFA	4648
ALKOS	6482
ALLSTAR	8644, 6896, 4648
ALL-TEL	4677
AMERICAN HIGH	5510
AMERICANA	5510
AMPLIVISION	7287
AMSTRAD	7647, 8568, 3488, 4530, 4016, 8644, 6896, 5739, 6764, 8377, 3840, 3451, 7066, 3637
ANAM	8644, 6896, 7647, 4526
ANAMNATIONAL	8644, 6896, 4526

ANDERSSON	5319, 7660
ANGLO	7647, 3488, 3637
ANITECH	7647, 3488, 8644, 6896, 5896, 4523, 3637, 4648
ANSONIC	7287, 8644, 6896, 7647, 5355, 5090, 5605, 2620, 5531, 4917, 3637
AOC	4523, 4648
APOLLO	4659
ARCAM	4469
ARCENCIEL	7430
ARDEM	2590, 8060, 8644, 5613, 6896
ARISTONA	6896, 8644, 4648
ART TECH	4648
ARTHURMARTIN	5605
ASA	4819, 6092, 4265
ASBERG	8644, 6896, 4648
ASORA	7647, 3637
ASTRA	8644, 6896, 3637
ASUKA	4016, 4469, 3488, 5896
ATD	2924
ATLANTIC	8644, 6896, 4469, 4648
ATORI	7647, 3637
ATORO	3637
AUCHAN	5605
AUDIOSONIC	7647, 8644, 5090, 8033, 6896, 7430, 8060, 6381, 7287, 3488, 4016, 2590
AUDIOSONIC	3637, 4648
AUDIOTON	2590, 7287, 3488, 3637
AUDIOVOX	4648
AUDIOWORLD	2924
AUTOVOX	5531
AVP	7733
AWA	7507, 6812, 7647, 5090, 6764, 8644, 6896, 4469, 6305, 5620, 3488, 4698, 3637
AXXENT	7647
AXXON	8060
B&D	7855
BAIRD	7430, 6127, 6982, 5301, 7910, 3453
BARCO	5605
BASIC LINE	3637, 4648, 5090, 8644, 5605, 5355, 6896, 7647, 4016, 5896, 7014, 6559, 3840
BAUER	8484, 7647
BAUR	7647, 6640, 5265, 3835, 8644, 6896, 3518, 3350, 6736, 3637, 5874, 4648
BEAUMARK	5393

BEC	4648
BECRESE	4523, 3802, 5874, 4648
BEKO	8060, 6482, 2590, 7287, 8644, 5553, 3840, 6896, 6305, 6381, 7361, 4648
BELL & HOWELL	4648
BELSON	4156, 4706
BENCHMARK-BEAUMARK	4523, 5510, 3637, 4648
BENNETT	6896, 8644
BENQ	8016
BEON	8644, 6896, 5553, 4648
BERTHEN	5355
BEST	7287
BESTAR	8644, 6896, 7287, 5090, 4648
BESTAR-DAEWOO	5090
BIGSTON	3637
BLACKDIAMOND	5319, 8033, 3840, 6896, 7837, 3036
BLACKSTAR	5531
BLACKSTRIP	6482, 3802, 5510
BLACKWAY	5896, 4016
BLAUPUNKT	3518, 6640, 5265, 6538, 7839, 5186, 7014, 4849, 6812
BLUESKY	8644, 8060, 3840, 6230, 5355, 6381, 2499, 6896, 4016, 5896, 7014, 7733, 4156, 7361, 6685, 4648
BLUESTAR	5896
BONDSTEC	5531
BOOTS	7647
BOSCH	7839
BPL	8644, 6896, 5896
BRANDT	4884, 7430, 4422, 3270, 6982, 3847
BRANDT ELECTRONIQUE	4422, 3270
BRENDSTAR	3637
BRINKMANN	8644, 6896, 5355, 7350, 5553, 2590
BRIONVEGA	8644, 6896, 8377, 4648
BRIORRYEGA	4648
BRITANNIA	4469
BROCKWOOD	4523, 3802, 5874
BROKSONIC	4523, 3802, 5874
BROTHER	3488
BRUNS	2590
BSR	5605, 3350
BTC	4016
BUSH	5355, 4016, 5605, 7647, 6812, 8644, 4530, 5896, 7384, 2438, 5090, 7350, 3488, 3350, 3840, 6230, 7910, 5952, 5905, 2924, 6896, 8060, 5832, 7733, 5453, 3802, 4648

CAMPLE	4523, 3802, 5874
CANDLE	4523
CANTON	4016
CAPEHART	4523, 3802, 4648
CAPSONIC	3488
CARAD	2696, 8644, 6896, 5355, 3840
CARENA	7014, 8644, 6896
CARREFOUR	6812, 4265, 8644, 6896, 4648
CARVER	4849, 4648
CASCADE	7647, 8644, 6896
CASIO	8644, 6896, 5605, 4648
CATHAY	8644, 6896
CCE	8644, 6896
CELESTIAL	6498, 8033, 7837
CENTREX	7046, 5397
CENTRUM	3840
CENTURION	8644, 6896, 4648
CENTURY	5531
CGE	4752, 6634, 5553, 5531, 7287, 5605, 3637
CGM	3637
CIE	3637
CIHAN	4648
CIMLINE	7647, 4016, 3637
CINEX	3451, 5952
CIRCUIT CITY	4523, 3802, 5874
CITIZEN	4523, 5510, 4648
CITY	7647, 3637
CLARIVOX	5553, 8644, 6896, 4265
CLATRONIC	8644, 7287, 4530, 8060, 4016, 3488, 6896, 5531, 7647, 3451, 6305, 5319, 3637
CLAYTON	3840
CMS	4469
COBOLT	5397
COLORTYME	5510, 4648
COMBITECH	7733
COMPUTRON	3637
CONCORDE	7647, 3637
CONDOR	8644, 6896, 7287, 4469, 7647, 5896, 5531, 5553, 2620, 5605, 3488, 3637, 4648
CONIA	3491, 7837, 4706, 8033
CONIC	4523, 3802, 4648
CONRAC	7361
CONRAD	8644, 6896
CONTEC	4469, 7647, 7507, 6812, 3488, 8644, 6896, 3802, 3637
CONTINENTALEDISON	7430, 4422, 6230

CORONADO	4523
COSMEL	7647, 8644, 6896, 3637
CRAIG	4648
CROSLEY	5531, 4752, 6634, 5605, 3802, 5874, 4648
CROWN	7647, 5716, 7287, 2590, 8644, 6896, 6230, 8060, 6305, 6381, 5553, 7910, 4638, 6559, 3840, 4523, 3637, 4648
CRYSTAL	4648
CSELECTRONICS	4469, 4016, 5531
CTC	5531
CTX	8016
CURTIS MATHES	4523, 3802, 5510, 4648, 3193
CYBERTRON	4016, 3802
CYTRONIX	3191
DAEWOO	5295, 5090, 2499, 4874, 3876, 8644, 6896, 7647, 4469, 4016, 6286, 7733, 3118, 2016, 3620, 4677, 4523, 3637, 4648
DAICHI	3637
DAINICHI	4016, 4469
DAITSU	4201
DANSAI	8644, 6896, 3488, 6482, 4469, 7647, 6812, 7910, 4523
DANSETTE	6764
DANTAX	7287, 2590, 8060, 6305, 6381, 7733
DATSURA	7910
DAWA	7647, 8644, 6896, 4648
DAYTEK	2924, 4979, 8435, 4698
DAYTON	4979
DAYTRON	7647, 5090, 8644, 6896, 4523, 3637
DEC	4167, 7314, 5397
DECCA	8568, 8644, 6896, 6286, 7733, 4648
DEGRAAF	7910, 5605, 4783, 2438
DEITRON	8644, 6896, 5090, 4016
DENKO	3488
DENVER	8644, 6896, 6305, 4485, 8299, 3637
DER	6127
DESMET	8644, 6896, 7647, 3637, 4648
DIAMANT	8644, 6896
DIAMOND	3488, 2924, 7647, 4777, 4469, 4530, 7314, 8033, 3637
DIGATRON	8644, 6896
DIGIHOME	7660
DIGILINE	8644, 6896, 4819, 5355
DIGILOGIC	8644, 6896
DIGITEX	8033
DIGITOR	8644, 6896, 6641
DIGIVISION	3350

DIGIX	3118
DIK	8644, 6896
DIXI	7647, 8644, 6896, 5531, 3637, 4648
DL	5397, 7046, 8644, 8299, 4677
DOMEOS	5355
DOMLAND	3158
DREAMVISION	8561
DSE	6641, 5952, 8033
DTS	7647, 3637
DUAL	6982, 7350, 8644, 6896, 7213, 3158, 5605, 6286, 8394, 7660, 3840, 4648, 3637
DUMONT	4265, 4523, 3802, 5874
DUNAI	5605
DURABRAND	8644, 4917, 6896
DUX	8644, 6896
D-VISION	8644, 7066, 6896
DVX	5397
DYNAMIC	3637
DYNATECH	4523, 3802, 5874
DYNATRON	8644, 6896
EASYLIVING	4596, 5905
EATON	5510
ECCO	2335, 8435
ECR	3802
EDISON-MINERVA	6230
ELBE	3444, 8377, 7287, 5605, 8644, 6896, 4016, 3518, 2620, 2696, 8568, 3350
ELBE-SHARP	8568
ELBIT	4648
ELCIT	5531, 8568, 5605
ELECS	4648
ELECTRATUNE	4523
ELECTRO TECH	3637
ELECTROBRAND	5874
ELECTROHOME	4523, 3802, 5874
ELECTRONIKA	4648
ELEKTA	7647, 8644, 6896, 3488, 5896, 3637
ELFUNK	3573, 3840
ELG	8644, 6896
ELIN	4469, 8644, 6896, 4819, 4783, 3350, 5605, 7647, 3637, 4648
ELITE	4016, 8644, 6896, 4523, 3802, 5510, 4648
ELTA	7647, 3488, 4469, 3637
EMCO	5531
EMERSON	8060, 5393, 5531, 8644, 6896, 4530, 4265, 5896, 3350, 2499, 2590, 7287, 5605, 5355, 4523, 3802, 5874

EMPEROR	5896
ENZER	3036
EON	3802, 5510
ERRES	8644, 6896, 4648
ESC	8644, 6896
ESTLE	5605
ETRON	4709, 8644, 6896, 7647, 5605, 8033, 3637
EUROFEEL	3488
EUROLINE	8644
EUROMAN	4469, 3488, 8644, 6896, 7287
EUROMANN	4648
EUROPA	8644, 6896
EUROPHON	8644, 8568, 5605, 6896, 5531, 4469, 4648
EVESHAM	4596
EXCEL	8644, 6896
EXPERT	5605
EXQUISIT	8644, 6896, 5531
FAGOR	8644, 6896
FAIRTEC	4156
FAMILYLIFE	8644, 6896
FAST	3634
FENNER	5090, 7647, 3637
FERGUSON	5301, 4884, 4422, 3270, 6127, 7430, 3847, 8644, 6896, 6482, 6982, 4638, 5620, 3350, 4783, 5119, 3840, 4648
FIDELIS	3637
FIDELITY	5605, 3835, 2438, 8644, 6896, 4530, 6764, 6127, 4469, 3488, 7733, 3350
FILSAL	3637
FINLANDIA	7910, 6092, 4783, 3350, 5605, 2438, 4422, 6982
FINLUX	4819, 8644, 6896, 8060, 6092, 5605, 8568, 6381, 4265, 2620, 8394, 6753, 8020, 5952, 4659, 5553, 6305, 7361, 3637, 4648
FIRSTLINE	8644, 6896, 5090, 5355, 8060, 5605, 7647, 4469, 5531, 2499, 2620, 7910, 3350, 3840, 4156, 7361, 6685, 5319, 3637, 4648
FISHER	6812, 7910, 7287, 3350, 5605, 3802
FLINT	8644, 6896, 2696, 4016, 7014, 3488, 4648
FORCE	7660
FORGESTONE	6127
FORMENTI	5605, 8644, 6896, 2590, 4469, 4648
FORMENTI-PHOENIX	4469
FORTRESS	3193, 4523, 3802
FRABA	8644, 6896, 7287
FRIAC	7647, 8644, 6896, 7287, 4874, 2696

FRONTECH	5531, 3488, 2438, 7647, 5605, 3637
FUJIMARO	4677
FUJITSU	5605, 7647, 7213, 8644, 6896, 3350, 8360, 4523, 3802, 5874
FUJITSUGENERAL	7647, 5605
FUJITSUSIEMENS	3191, 5905, 5319
FUNAI	5355, 3488, 6764, 4523, 3802, 5874
FURICHI	7314
FUTRONIC	3488, 4167, 7314
FUTURE	8644, 6896
GALAXI	8644, 6896, 3350, 5605
GALAXIS	7287, 5553, 8644, 6896
GALERIA	7647, 3637
GBC	5605, 7647, 5090, 4016, 2438, 3637
GE	6982, 5393, 5896, 3847, 4422, 7430, 3270, 4884
GEANTCASINO	5605
GEC	5605, 3350, 8644, 8568, 6896
GELOSO	5531, 7647, 2438, 5605, 5090, 3637
GEMSOUND	3637
GENERAL	7430, 4422, 3637
GENERAL TECHNIC	3637, 7647
GENERALELECTRIC	6982, 4422
GENESIS	7647, 8644, 6896
GENEXXA	4016, 8644, 6896, 6764, 5605, 7647, 4648
GERICOM	4677, 3191, 7855, 3118
GITEM	4648
GM	3637
GMG	3637
GOLDFUNK	5355
GOLDHAND	4469, 3637
GOLDSTAR	8644, 7647, 7287, 4709, 2796, 5393, 5531, 4469, 6896, 5605, 3350, 7430, 2438, 6305, 8060, 6381, 7014, 4523, 5510, 4648
GOODING	6230
GOODMANS	5295, 5905, 3840, 8644, 4874, 6896, 8060, 5355, 2499, 5090, 6812, 3488, 8568, 7647, 6230, 4530, 6982, 6482, 8020, 3847, 3270, 4016, 7733, 3876, 5832, 3118, 6948, 8299, 4698, 3637, 4648
GORENJE	7287
GPM	4016, 3637
GRADIENTE	4638, 4849, 8644, 6896
GRADIN	3637, 4648
GRAETZ	8060, 3350, 4530, 5605, 8644, 6559, 6896, 5319

GRANADA	8644, 6896, 3001, 5620, 4659, 3270, 3847, 5605, 7910, 6812, 6559, 8568, 2438, 3952, 6982, 4783,4648
GRANDIN	8644, 6896, 7647, 5605, 5090, 5896, 4016, 7014, 2696, 8060, 6381, 5355, 3840, 4677, 4156, 3118
GRANPRIX	3451
GRENADIER	3637
GRONIC	5605
GRUNDIG	5265, 4679, 6640, 3518, 8435, 6896, 8299, 7647, 4265, 6230, 8644, 5119, 6812, 7287, 4925, 7733, 6948, 5393, 4698, 6982
GRUNKEL	5319
GTT	3637
H&B	7361
HAAZ	8435
HAIER	2924, 3488
HALIFAX	3488, 4469
HALLMARK	4523, 3802, 5874
HAMMERSTEIN	3488
HAMPTON	4469
HANIMEX	4016, 7733
HANSEATIC	8644, 6896, 4874, 7350, 5605, 3350, 5896, 3158, 5295, 7287, 3876, 7647, 7361, 2590, 3637, 4648, 2796, 8060
HANTAREX	7647, 8644, 6896, 8568, 3637, 4648
HANTOR	8644, 6896
HARLEY DAVIDSON	4523, 3802, 5510, 5874
HARRAD	4523, 3802, 5874
HARSPER	4677
HARVARD	4523, 3802, 5874
HARWA	2335, 3453, 7789
HARWOOD	7647, 6764, 8644, 6896, 6230
HAUPPAUGE	8644, 6896
HCM	7647, 6764, 8644, 6896, 4016, 5553, 5896, 3488, 3637
HEATHKIT	5874, 4648
HEDZON	6896, 8644
HEMA	7647
HICON	2519
HIFIVOX	7430
HIGASHI	4469
HIGHLINE	3488, 8644, 6896
HIKONA	4016
HILINE	3637
HINARI	7910, 8644, 6896, 7647, 4016, 6812, 5605, 7384, 5119, 6230, 3488, 7733, 3802, 3637, 4648

HISAWA	5896, 4016, 7014, 2696, 7733, 8060
HISENSE	6685, 7910
HITACHI	3952, 6069, 4889, 6812, 6896, 7430, 2438, 4783, 5620, 4659, 5605, 6982, 6619, 5295, 7040, 5393, 8568, 6972, 4874, 8644, 6286, 4819, 6753, 4737, 3350, 3835, 8020, 3840, 8374, 7660, 3802, 5874, 4648
HITACHIFUJIAN	5620, 3952
HITSU	7647, 2696, 7014, 4016
HMV	6127
HOHER	8060, 5952, 4677
HOMEELECTRONICS	6305
HORIZONT	4648
HORNYPHON	8644, 6896, 4648
HOSHAI	4016, 7014, 5896
HUANYU	5090, 4469
HUGOSON	3094, 7855
HYGASHI	4469
HYPER	7647, 4469, 5531, 3637, 4648
HYPERSONIC	3350
HYPSON	8644, 6896, 8060, 6381, 3488, 5896, 7014, 7733, 3840, 5355, 2590, 3637, 4648
HYUNDAI	8644, 4677, 6896, 8435, 7314, 3036, 3620, 5952
IBERIA	8644, 6896
ICE	3488, 8644, 4530, 7647, 6896, 4016, 4469, 3637, 4648
ICES	4016, 4469
ICT	8644, 6286, 6896
IISONIC	4698
IIYAMA	7855, 3094
IMA	4523, 3802, 5874
IMPERIAL	8644, 5605, 7287, 4752, 6634, 6896, 2620, 3350, 5553, 5531, 4648
INDIANA	8644, 6896, 4648
INFINITY	4648
INFOCUS	3251
INGELEN	6230, 2696, 8060, 5605, 3350
INGERSOLL	7647, 3637
INNOHIT	7647, 8644, 6896, 4016, 3637, 4648, 5896, 5319, 8568, 5531
INNOVATION	7350, 8644, 6896
INNOWERT	4677, 3191
INOTECH	2335, 8033
INTERACTIVE	8644, 6896, 3835, 7839, 5605, 3350, 7287, 7430, 2620

Download from Www.Somanuals.com. All Manuals Search And Download.

TV Setup Codes - continued

INTERBUY	7647, 8644, 3488, 5531, 3835, 6896, 3637
INTERDISCOUNT	4648
INTERFUNK	8644, 6896, 3835, 7839, 5605, 3350, 7287, 7430, 5531, 6538, 4648
INTERNAL	8644, 6896, 4874, 5090, 2499
INTERNATIONAL	4469
INTERVISION	5896, 7014, 8644, 4530, 2796, 7350, 2590, 7287, 3488, 5531, 7647, 6896, 3158, 6230, 4016, 5605
IRRADIO	7647, 8644, 6896, 4016, 5531, 4530, 3637, 4648
IST	4648
ISUKAI	4016, 8644, 6896, 5896, 7014, 4648
ITL	3637
ITS	8644, 4530, 4016, 5896, 3488, 4469, 7647, 6896, 3637
ITT	5605, 8020, 3350, 4659, 4783, 6127, 6092, 6559, 7910, 2696
ITTNOKIA	3350, 4783, 5605, 4659, 6305, 2696, 8394, 2438, 8020, 6092, 7910, 6559
ITV	3488, 8644, 6896, 5531, 5090
JBL	4648
JCB	5874
JDV	7066
JEAN	6812
JEC	6482
JETPOINT	5510, 4648
JMB	8644, 4874, 5295, 5090, 6896, 5119, 7733
JOCEL	5716
JUBILEE	6896
JUMBOTROIC	4648
JVC	4638, 6812, 6127, 4530, 4016, 6305, 5553, 3193, 4526, 3802, 4648
KAISER	4648
KAISUI	4016, 5896, 8644, 6896, 4469, 7014, 7647, 3637, 4648
KAMBROOK	2796
KAMP	4469
KAPSCH	5605, 3350
KARCHER	8644, 6896, 7287, 2696, 5605, 5896, 3488, 5453, 8060, 5952, 6305, 3637, 4648
KATHREIN	6896, 8644
KAWA	4530

KAWASHO	4469
KBARISTOCRAT	5605
KENDO	2696, 8644, 6896, 5605, 7350, 3835, 7287, 2796, 2438, 2620, 5531, 8377, 3451, 3840, 4917, 2590, 3637, 4648
KENDWOOD	4523
KENNEDY	5605, 3444
KENNEX	3840
KENWOOD	4819
KINGSLEY	4469
KIOTA	4709, 3637
KITON	6896, 8644, 5355
KLH	4523, 3802, 5874
KLOSS	5510
KNEISSEL	8644, 7287, 2696, 2620, 5090, 4874, 6896, 3444, 8377, 7733
KOBIC	3637
KOBRA	2519
KOLSTER	8644, 6896, 5531, 4016, 4648
KONICHI	7647, 3637
KONKA	8644, 6896, 4530, 8060, 5553, 4016, 8485, 8299, 3491, 4706
KONTAKT	6230
KORPEL	8644, 6896, 4648
KORTING	7287
KOSMOS	8644, 6896
KOTRON	6764, 3488
KOYODA	7647
KTV	4523, 3802, 5874
KUASHO	4523, 4648
KUBA	5605
KUBAELECTRONIC	5605
KYOSHU	6764, 5553, 3488
KYOTO	5605, 4469
L&SELECTRONIC	4677, 8060
LASAT	2590, 7287
LAVIS	3840, 8644, 5605
LEADER	7647, 3637
LECSON	8644, 6896
LEGEND	7647, 3637
LEMAIR	2620
LENCO	8644, 7647, 5605, 5090, 6896, 8299, 3840, 3637, 4648
LENOIR	3637, 7647
LESA	5531
LEVISAUSTRIA	8644, 6896

LEXSOR	3453
LEYCO	3488, 8644, 6896, 4648
LG	8644, 5393, 7287, 7647, 7430, 2924, 6381, 8265, 2796, 5447, 4709, 6896, 4156, 6944, 4312, 5531, 8060, 4469, 5605, 6305, 3350
LIESENKOTTER	7839, 8644, 6896, 4648, 8644, 7839, 5186, 6896
LIFE	3637
LIFETEC	8644, 7647, 7350, 5090, 5355, 3835, 3840, 6286, 6896, 4016, 3488, 4596, 8060, 3637, 4648
LINITRON	4523, 3802
LLOYD	4523, 3802, 3637, 5874
LLOYD'S	4709, 7647
LODOS	3840, 7660
LOEWE	3835, 5613, 7337, 8644, 6896, 7287, 8377, 8568, 4648
LOGIK	7507, 2924, 2335, 7647, 6127, 3488, 4530, 4709, 3118, 7855, 3840
LOGIX	5355, 7350
LUKER	7066
LUMA	8644, 2438, 5605, 2620, 6896, 5090, 7647, 8377, 3637, 4648
LUMATRON	2438, 8644, 6896, 8377, 5605, 3350, 3488, 5301
LUX MAY	4648, 8644, 7647, 6896
LUXOR	5319, 2438, 8020, 6753, 6092, 4659, 3840, 8394, 3350, 7910, 4783, 5605
LXI	5393, 4648
M ELECTRONICS	3637, 4648
MACYS	4523, 3802
MADISON	8644, 6896
MAGNADYNE	5531, 8568, 5605, 3637, 4648
MAGNAFON	4648, 8568, 4469, 5301
MAGNASONIC	4523, 3637, 4648
MAGNAVOX	8644, 6896, 6812, 7046, 3802, 4648
MAGNUM	3451, 8060, 8644, 6896, 6381, 3730
MANDOR	3488
MANESTH	8644, 6896, 3488, 6482, 5605, 2438, 4648
MANHATTAN	8644, 6896, 5355, 3840, 4201, 5605, 5453
MARANTZ	8644, 6896, 6764, 4648
MARCYS	3802
MARK	8644, 6896, 4469, 5090, 7647, 8060, 6381, 4648
MASTER'S	4874, 8644
MASUDA	4016, 4530, 7647, 3488, 8644, 6896
MATSUI	8644, 6896, 6230, 7647, 5605, 8568, 6482, 7910

MARK	7507, 7384, 6812, 4530, 5265, 3518, 3270, 8060, 5739, 5119, 2438, 7014, 7733, 3840, 3637, 4648
MATSUSHITA	4526
MATSUVIAMA	8299
MAVA	4523
MAX_MULTI	4648
MAX_TIP1	3637
MAX_TIP4	4648
MAXAM	3488, 3637
MAXDORF	2335
MAXELL	3637
MAXIM	7066, 5952
MCE	7647, 3637
MEDIATOR	8644, 6896, 4648
MEDION	8644, 8060, 7361, 7350, 2924, 7733, 3840, 4917, 5355, 6896, 3835, 6286, 5832, 4596, 3118, 3730
MEGAS	2696
MEGATRON	5393
MEI	3840, 8644, 6896
MELECTRONIC	6092, 8644, 3835, 7430, 2620, 5605, 4422, 6896, 6982, 5531, 4819, 5090, 5295, 3350, 3518, 5265, 7647, 8020, 6753, 4469, 3876, 8060
MEMOREX	7647, 5393, 4526, 3637
MEMPHIS	3637, 7647
MERCURY	4709, 8644, 7647, 6896, 3637
MERRITT	4783, 3350, 5605
METZ	2769, 6975, 5313, 2410, 8644, 6896, 8299, 5355, 5319, 5265, 6640, 3518, 3840, 7324
MGA	5393, 8644, 6896, 4016
MICROMAXX	8644, 6896, 5355, 3840, 7361
MICROSTAR	7361
MICROTEK	8033
MIDLAND	4523
MIKOMI	7660
MINATO	8644, 6896
MINERVA	6230, 6640, 5265, 4265, 3518, 8568, 5620
MINOKA	6764, 8644, 6896, 4648
MIRROR	5832
MISTRALELECTRONICS	6127
MITSUBISHI	5620, 3193, 3835, 8644, 5393, 6812, 6127, 6640, 6896, 7910, 3840, 3802, 3637, 4648
MITSURIGENERAL	5605
MIVAR	7287, 4469, 4318, 8568
MONACO	7647

MONITOR	5510
MORGAN'S	8644, 6896
MOTOROLA	3193, 4648
MTC	7287, 3835, 5605, 4469, 3350, 4523, 5510
MTLOGIC	8060, 6948
MULTIBROADCAST	6127
MULTITEC	8644, 6896, 2590, 5355, 3840, 5952
MULTITECH	7647, 2438, 2590, 8644, 7287, 6896, 4469, 5531, 3488, 4523, 3802, 3637, 5874, 4648
MURPHY	4469, 5605
MUSIKLAND	8644, 4016, 5531, 6896
MYCOM	4698, 5393
MYRYAD	6896, 8644
NAD	5393, 3350, 5605, 3802
NAIKO	8644, 7066, 6305, 6896
NAKIMURA	5090, 8644, 6896
NAMSUNC	3637
NAONIS	2438, 5605
NAP	4648
NARITA	7066
NAT	3001
NATIONAL	3001, 4648
NEC	4849, 8299, 7976, 3726, 8644, 6896, 7507, 8561, 6812, 7014, 7647, 5090, 4874, 4638, 3876, 3637, 3802, 5510
NECKERMANN	8644, 3518, 7287, 6736, 5553, 5531, 2620, 2438, 6538, 6896, 5605, 7839, 3835, 3637, 5874, 4648
NEI	8644, 6896, 4530, 5605, 4648
NEOVIA	4677, 4698
NESCO	5531, 7733
NETSAT	8644, 6896
NEUFUNK	8644, 7647, 6896, 2696, 4016, 5896, 8060, 8644, 7647, 6896, 6982, 3637, 4648
NEWWORLD	4016
NICAMAGIC	4469
NIKKAI	4016, 8644, 6896, 3488, 6482, 4469, 7647, 6812, 4523, 4648
NIKKEI	8060
NIKKO	5393
NISSAN	5510
NOBLEX	3637
NOBLIKO	4265, 4469
NOGAMATIC	7430
NOKIA	3350, 5605, 8020, 4783, 5090, 8394, 6305, 6092, 6753, 4659, 6559, 7910, 2696, 7430, 5510, 3637, 4648

NONAME	4648
NORDMENDE	7430, 8060, 5397, 4422, 6896, 3270, 5605, 5905, 3847, 6982, 5265, 8644, 4648
NORFOLK	5605
NORMEREL	8644, 6896
NOVABEAM	4648
NOVAK	8644, 6896
NOVATRONIC	8644, 4819, 5090, 6896, 3637, 4648
NURNBERG	5605, 3350
NU-TEC	7014, 2924
O GENTERAL	3637
OCEANIC	5605, 3350, 7910, 4659, 4783, 8020
ODEON	3488
OKANO	7287, 8644, 6896, 3488, 7647, 3637
OLIDATA	4698
OLYMPIC	3637
OMEGA	3488
OMNI	7046, 5397, 2924
ONCEAS	3637
ONWA	4530, 2810, 4016, 5739
OPERA	8644, 6896, 4648
OPTIMUS	4526
OPTONICA	3193
ORAVA	4648
ORBIT	8644, 6896, 4648
ORCOM	4262
ORIENT	3637
ORION	8644, 5119, 7384, 6896, 6764, 8568, 7733, 3118, 8060, 7507, 7647, 3488, 3453, 3637, 5874, 4648, 4523, 3802
ORLINE	8644, 4016, 6896
ORMOND	5355, 3840, 8644, 6896
ORSOWE	8568
OSAKI	4016, 3488, 8644, 6764, 5090, 7384, 6896
OSIO	8644, 6896
OSO	4016
OSUME	6812, 4016, 8644, 6896
OTF	3637
OTTO	3802, 3637, 5874, 7350, 3518, 3350, 7430,
VERSAND	3001, 6736, 6812, 3193, 3835, 5531, 7647, 5896, 6982, 8644, 6896, 6640, 5265, 8568
OVP	4648
PACE	7733
PACIFIC	8644, 6896, 6286, 8060, 3840, 5119
PAEL	4469

PALLADIUM	7287, 8644, 2620, 8060, 5553, 6896, 5531, 7839, 6286, 3518, 6736, 6538, 5605, 7350, 2438, 4648
PALSONIC	3488, 6764, 8644, 2796, 4709, 5553, 5453, 3453, 4016, 2924, 6896, 2335
PANAMA	7647, 3488, 4469, 8644, 6896, 5531, 3637
PANASHIBA	4709, 3637
PANASONIC	4526, 5620, 3001, 3350, 5605, 4783, 7605, 4709, 2410, 8568, 8644, 6896, 8360, 5393, 4648
PANAVISION	8644, 2620, 6896
PANAVOX	3637
PANORMA	3637
PAPOUW	8644, 6896
PATHECINEMA	5605, 4469, 7287
PATHEMARCONI	7430
PAUSA	7647, 3637
PCE/PEC	4523, 3802, 5510
PENNEY	4523, 5510
PERDIO	5605, 8644, 4469, 5896, 6896
PERFEKT	8644, 6896, 4648
PERFORMANCE	3802, 5874
PHILCO	6634, 4752, 5553, 5531, 5605, 7287, 8644, 6896, 3802, 3637, 4648, 7350
PHILEX	6127, 5605
PHILIPS	6896, 8644, 3518, 6127, 6538, 8016, 3802, 5874, 6982, 5090, 3350, 7647, 4648
PHOCUS	3730, 6948, 8060
PHOENIX	8644, 6896, 7287, 2590, 5605, 4469, 4648
PHONOLA	8644, 6896, 6127, 4469, 4648
PILOT	6896, 8644, 5716, 8435, 5510
PIONEER	4174, 7507, 8644, 4849, 3350, 7430, 5605, 4422, 6896, 8209, 7287, 6982, 2590, 3835, 4648, 7287, 2590
PLANTRON	8644, 6896, 3488, 7647, 3637, 4648
PLAYSONIC	8060, 8644, 6559, 6381
POLICOM	7430, 3350, 5605, 4265, 4752, 6634, 6640
POLYTRON	5896
POPPY	7647, 3637
PORTLAND	5090, 2499, 4523, 5874, 4648
POWERPOINT	6230, 8644, 6896, 2924
PRANDONI-PRINCE	5531, 8568, 3350, 2438
PREMIER	7647, 3488
PRESIDENT	7314
PRIMA	7647, 3488, 6764, 7789, 4523, 3802, 5510, 3637, 4648
PRINCESS	2924, 3637

PRINSTON	3840
PRINZ	3350
PROELCO	4648
PROFEX	7647, 5605, 3350, 2438, 3637
PROFI	7647
PROFITRONIC	8644, 6896, 4648
PROLINE	8644, 6896, 4884, 5295, 2620, 4698
PROSCAN	5510
PROSONIC	8644, 6896, 7287, 5090, 4530, 5355, 8060, 4469
PROTEC	3637, 4648
PROTECH	8644, 6896, 7647, 5531, 3488, 5553, 5355, 5896, 5605, 2590, 3840
PROTON	5393, 4523, 3637
PROVISION	4874, 8644, 6896, 3840, 8060
PULSER	4523, 5510, 3637, 4648, 4156
PYE	8644, 6896, 5090, 6764, 4648
PYMI	7647, 3637
QTY1	4648
QUADRAL	4016
QUASAR	5531, 4526, 4677, 7647, 6634, 5186, 4265, 4819
QUELLE	8644, 6736, 7507, 7430, 5355, 6896, 5265, 6538, 3835, 6640, 3518, 3350, 3488, 3840, 6092, 7647, 6812, 5531, 4752, 7839, 4523, 3802, 3637, 5874, 4648
QUESTA	6812, 3802
R LINE	4648
RADIALVA	7430, 4016, 5605, 8644, 6896, 4422
RADIO SHACK	4523
RADIOLA	8644, 6896, 4648
RADIOMARELLI	8568, 5531, 8644, 6896
RADIOSHACK	8644, 6896, 5393
RADIOTONE	7647, 8644, 6896, 7287, 3488, 3840, 3637, 4648, 5553, 6764, 3451, 5355
RANK	4265
RANKARENA	6812, 2810, 3036
RBM	4265
RCA	4884, 3193, 3847, 3270, 6982, 3036, 5510
REALISTIC	5393
RECOR	8644, 5553, 6896, 4648
RECORD	4648
RECTILIGNE	8644, 6896
REDIFFUSION	3350, 4783, 6812, 6092
REDSTAR	8644, 6896

REFLEX	8644, 6896, 3840, 5355
REGENTE	3637
RELISYS	4677, 2108, 4979, 3191
REOC	8060, 5295, 2499
REVOX	8644, 6896, 7287, 4648
REVOX/STUDER	4648
REX	2438, 2620, 5531, 5605, 3488
RFT	7287, 3488, 8644, 6896, 2590
RHAPSODY	4469
RICE CLUB	5510
RICOH	8644, 6896
RINEX	2335, 5553
R-LINE	8644, 6896, 5605
RMB	4523
ROADSTAR	3840, 7647, 5553, 8644, 3488, 5896, 4485, 5832, 6896, 8060, 5355, 4016, 3637
RODEX	8644, 6896
ROSITA	3637
ROVER	6812, 2108
ROWA	3488, 2924, 5716, 7647, 4469, 8299, 8644, 6896, 3637
ROYAL	3637
ROYALLUX	7287, 6764, 3270
RUKOPIR	6896, 8644
RUNCO	5510
SABA	4884, 7430, 3847, 6982, 2104, 3270, 4783, 4526, 4422, 5605, 8568, 3350, 8060
SAGEM	2696, 7014, 5896, 2820, 2517
SAISHO	8568, 7647, 7507, 5605, 3488, 4648
SAIVOD	8644, 7066, 6896, 5319, 5355, 5716, 3840
SAKA	5605
SAKIO	3637
SAKURA	3637
SAKYNO	7014
SALORA	5605, 3350, 8568, 2438, 4783, 6559, 7910, 8020
SALSA	3270
SAMBERS	8568
SAMPO	4523
SAMSUNG	2517, 8299, 8644, 5393, 7910, 7350, 5605, 4884, 6896, 7736, 3193, 4495, 4523, 5510, 3637, 4648, 7647, 7287, 3488, 4469
SAMSUX	4523

SANDRA	4469
SANKY	4523
SANSUI	8644, 2429, 6896, 8435, 4530, 2810, 7014, 6641, 3036, 4523, 5510, 3637, 4648
SANTON	7647
SANYO	7910, 3573, 6812, 7507, 5605, 8644, 5620, 6896, 7287, 6559, 4469, 7647, 2590, 4849, 3802, 3637
SAVE	8644, 6896
SAVILLE	7733
SBR	8644, 6896, 6127, 4648
SCHAUBLORENZ	4783, 8060, 3350, 6305, 2590, 5090, 4156
SCHNEIDER	6286, 8644, 6896, 7350, 3840, 5605, 3451, 8060, 3158, 7213, 6982, 5531, 2499, 7733, 7066, 4265, 4530, 3350, 4016, 5355, 3637, 4648
SCOTLAND	5605
SCOTT	4485, 5393, 4523, 3802, 5874
SEARS	5393
SEAWAY	5295
SEELVER	6896, 3840, 8644
SEG	8644, 6896, 3840, 4917, 8377, 4469, 5319, 4016, 5355, 6230, 7647, 5605, 2499, 3634, 8060, 3637, 3488, 5295, 6812, 5531, 4523, 3802
SEI	6736, 5605, 8568, 8644, 6896
SEI-SINUDYNE	8568, 6736, 8644, 6896, 5874, 4648
SEITECH	7855
SELECO	2438, 8377, 5605, 2620, 3444, 3488, 6092, 6812, 4530
SEMUA	4523
SENCORA	7647, 3637
SENTRA	6482, 4016, 7647
SERINO	2696, 7014, 4469, 3193
SHARP	3193, 7138, 6812, 4638, 6127, 8568, 6538, 4174, 7409, 5319, 4523, 3802
SHINTOM	5874
SHINTOSHI	8644, 6896
SHIVAKI	8644, 6896, 5119, 5090, 5393
SHOW	5553, 7647, 3637
SIAREM	5605, 8568
SIEMENS	3518, 6640, 6538, 5265, 7839, 5186, 8644, 6896, 3350
SIEMES	4523, 4648
SIERA	8644, 6896, 8299

SIERRA	4648
SIESTA	7287
SIGMAX	5510
SIGNATURE	5874
SILMA	4648
SILVA	8644, 6896, 4469, 3350, 3451, 3637
SILVASCHNEIDER	5952
SILVER	6812, 8644, 7014, 3350, 6896, 6381, 5605, 3802
SILVERCREST	3840, 8644, 6896
SINGER	7647, 3011, 8644, 6896, 5531, 3444, 3270, 5605, 3637, 4648
SINOTEC	2335
SINUDYNE	5605, 3350, 8568, 6736, 8644, 6896, 7733
SKY	8644, 5896, 3118, 5393, 6896, 4262
SKYMASTER	4819
SKYSONIC	3036
SLIDING	4677, 3118
SLX	5355
SMARAGD	6230
SNYDER	4648
SOEMTRON	4677, 3191
SOLAVOX	3350, 5605, 4783, 8644, 6896
SONAWA	4016
SONIKO	8644, 6896
SONIQ	2519
SONITRON	7910, 7287, 6559
SONNECLAIR	8644, 6896
SONOKO	8644, 6896, 7647, 3488, 3637, 5896, 4648
SONOLOR	7910, 5605, 6736, 4783, 3350, 5896
SONTEC	8644, 6896, 7287, 7647, 4648
SONY	6736, 2762, 7507, 6219, 3193, 4849, 4752, 5874, 3078, 6812, 8644, 6896, 3802
SOUND&VISION	4016, 5090, 8644, 6896
SOUNDESIGH	4523, 3802, 5510, 5874, 5393
SOUNDMASTER	3637
SOUNDWAVE	8644, 6896, 5553, 6381
SOYEA	2335
SPECRICIAN	4523, 4648
SPECTRA	7647
SSANGYONG	7647
STAKSONIC	7647
STANDARD	8644, 6896, 3840, 4016, 7647, 5090, 3637
STARLITE	7647, 5605, 8644, 6896, 3488, 6764, 3637
STARLUX	3637
STENWAY	5896, 4016

STERN	5605, 2438, 3488, 2620, 3444
STEVISON	7066, 5952
STRATO	8644, 6896, 3488, 7647
STRONG	5319, 7660, 3840, 8644, 6896
SUNICLINE	8644, 6896
SUNKAI	7384, 7014, 4016, 2696, 8644, 6896, 6230, 4677
SUNSTAR	4530, 8644, 6896, 7647, 3488, 3637
SUNWATT	7014
SUNWOOD	8644, 6896, 7647, 3637, 4648
SUPERLA	8568, 4469
SUPERSONIC	7910, 6896, 2924, 3488, 8484, 7014
SUPERTEC	3637, 4648
SUPERTECH	7647, 8644, 6896, 4469, 4016, 3637
SUPRA	5393, 5090, 7647, 3637
SUPREMACY	4523, 3802
SUPREME	5874
SUSUMU	3270, 4016, 4422
SUTRON	7647, 3637
SVASA	8484
SWISSLINE	5531
SWISSTEC	4262, 3118
SYC LINE	3637
SYDNEY	4469
SYLVANIA	4648
SYMPHONIC	4523, 3802, 5874
SYSLINE	8644, 6896
SYTONG	4469
T+A	6975
TANDBERG	2410, 2620, 7430, 8377, 3350, 5605
TANDY	4016, 5531, 3193, 5605
TASHIKO	6812, 4849, 4469, 5605, 2438, 3802
TATUNG	5952, 8644, 6896, 8568, 7507, 7733, 8016, 5905, 4156, 4648
TCM	8060, 3730, 7361
TEAC	2924, 3835, 8644, 4917, 5393, 7647, 6764, 5896, 3840, 6896, 5716, 5355, 5553, 4849, 8060, 7660, 7014, 8435, 3488, 2499, 5991
TEAK	3637
TEC	7647, 5531, 3270, 8644, 6896, 3350, 5605, 3637, 3637
TECHICA	4016
TECHLINE	8644, 6896, 5355, 4917, 5319
TECHLUX	4485
TECHNICA	7066
TECHNICS	4526, 4648

TECHNILAND	4648
TECHNISAT	8644, 6896, 5605, 4201
TECHNISSON	8060, 3730
TECHNOSONIC	8644, 6896
TECHWOOD	5319, 5510, 5874
TECNIMAGEN	6896
TECNISON	3637
TEDELEX	5553, 6305, 3011, 7647, 8435, 7910, 2924, 8299, 5397, 8644, 6896, 3637
TEHNOL	3637
TEIRON	7647
TEKNANT	3637, 4648
TEKNIKA	4523, 5510
TEKON	5510, 3637
TELEAVIA	7430, 4422, 6982
TELECOR	8644, 6896, 5605, 4016, 3158
TELEFAC	3637
TELEFUNKEN	4884, 3847, 4752, 8299, 4262, 4422, 6634, 3270, 7430, 2924, 6982, 5716, 5301, 8644, 6896, 2590, 2104, 8033, 2707, 3491, 8060, 5952, 6092, 7837
TELEFUSION	8644, 6896
TELEGAZI	8644, 5605, 4016, 3488, 6896
TELEMEISTER	8644, 6896
TELEOPTA	3637
TELESONIC	8644, 6896
TELESTAR	7647, 8644, 6896, 6764, 3637
TELETECH	8644, 6896, 5355, 7647, 5531, 3840, 3637
TELETON	5605, 6812, 2438
TELEVIDEON	5605, 4469
TELEVIEW	8644, 6896
TEMPEST	7647, 8644, 6896, 3488, 3637
TENNESSEE	8644, 6896
TENSAI	4016, 8644, 6896, 7647, 4819, 5090, 4530, 2796, 5531, 6381, 5605, 3840, 3637, 4648
TENSON	3637, 7647
TESLA	8644, 4648
TESLA ORAVA	4648
TEVION	7350, 4706, 5905, 3191, 3451, 5355, 6286, 8060, 8644, 5952, 6896, 7361, 3840, 4596, 3730
TEXET	5090, 7647, 4469, 4016
THOMAS	4523, 5510, 3637, 5874, 4648
THOMSON	4884, 3847, 6982, 4422, 7430, 3270, 8644, 6896, 4469

THORN	5620, 6127, 7430, 5301, 8644, 6896, 7507, 3270, 3952, 6982, 3350, 6736, 3835, 6812, 5090, 6482, 4752, 6634, 4874, 6640, 4265, 3802
THORN-FERGUSON	5620, 7430, 6127, 3350, 3270, 4874, 5301, 6482
TINY	3453, 7789, 5393, 5510
TOBISHI	4016
TOBO	3637
TOKAI	8644, 6896, 5355, 5605, 5090, 7647, 3840, 4648
TOKAIDO	3840
TOKYO	4469, 6482, 5510
TOMASHI	5896, 4016
TONGTEL	7046, 8299
TOPLINE	3840, 5355
TOSHIBA	4679, 4081, 6482, 3730, 7733, 7647, 2924, 8644, 6812, 4265, 8060, 7430, 3251, 5319, 4925, 5952, 4940, 5265, 3518, 2517, 5447, 4526, 8561, 3802, 5510
TOSONIC	4523, 5510
TOTEVISION	4523
TOYODA	7647, 4530, 3488
TRAKTON	7647, 3488
TRANSCONTINENS	5355, 3840, 8644, 6896, 2590
TRANSCONTINENTS	4677
TRANSONIC	8644, 6896, 7014, 8299, 3835, 3488, 2924, 5716, 5553, 7647
TRANSTEC	4469
TRC	3637
TREVI	3637
TRIAD	8644, 6896, 4016, 4648
TRIDENT	8568
TRILUX	4648
TRISTAR	3488, 4016, 6127
TRIUMPH	8568, 6092, 6896, 8644
TRIVISION	3637
TSOSCHI	5896
TVTEXT95	6896
UHER	8644, 6896, 5090, 5553, 2590, 7287, 8020, 4648
ULTRAVOX	5090, 5531, 4469, 5605, 8644, 6896
UMA	4648
UNICLINE	8644, 6896, 4659, 7014
UNIMOR	4648
UNITED	8060, 8644, 6381, 6896, 7733, 3840, 8299, 7066
UNIVERSAL	8644, 6896

UNIVERSUM	6092, 4819, 5265, 4659, 2620, 4752, 7839, 5186, 6640, 3350, 5531, 6753, 6736, 5355, 7430, 8377, 8020, 7287, 6538, 5553, 8394, 7647, 6634, 3634, 7507, 8644, 3835, 6812, 3840, 4917, 4849, 5319, 4265, 5605, 3488, 6896, 7660, 2517, 3637, 4648
UNIVOX	8644, 6896, 5605
URANYA	3637
UTAX	5605
V7VIDEOSEVEN	5991, 5393, 3118, 4698, 7855
VANGUARD	3637
VECO	3637
VESTEL	8644, 5605, 6896, 5355, 3840, 5319, 4648
VEXA	7647, 8644, 6896, 3637, 4648
VICTOR	4638
VIDEO SYSTEM	4648
VIDEOLOGIC	4016, 4469
VIDEOLOGIQUE	4469, 4016
VIDEOSAT	5531
VIDEOSYSTEM	8644, 6896
VIDEOTECHNIC	4469, 5090
VIDEOTON	5605
VIDION	3637
VIDTECH	6812, 5393
VIEWSONIC	5991
VISIOLA	4469
VISION	8644, 3488, 6896, 3637
VISON	4648
VISTAR	3350
VOCSON	4648
VORTEC	8644, 6896
VOTREC	4648
VOXSON	8644, 6896, 2438, 5553, 5605, 5393
WALTHAM	5553, 4422, 8644, 6896, 5355, 7430, 3840, 5605, 5119
WARDS	4648

WATSON	3840, 4596, 8644, 6896, 5605, 7647, 5355, 4016, 4698, 7839, 3637, 4648, 7350, 3158, 7733, 4917
WATTRADIO	5605, 4469
WEGA	8644, 6896, 6812, 3802
WEGAVOX	7647, 8644, 6896, 3637, 4648
WELLTECH	8060
WELTBLICK	8644, 6896, 4648
WESTON	8644, 6896
WHARFEDALE	8644, 6641, 7350, 2707, 6896, 5952
WHITE WESTINGHOUSE	4648, 4469, 8644, 6896, 2499
WINDSOR	5355, 3840
WINDSTAR	5896
WINDYSAM	6896
WINSTON	3637, 4648
WINTEL	8060
WINTERNITZ	3637
WORLD-OF-VISION	3118, 3094, 4677, 3730, 3191, 2108, 7855
WORLDVIEW	7014, 3637, 4648
XENIUS	5295
XLOGIC	2924, 7314
XORO	3453, 7855
XRYPTON	8644, 6896
X-VIEW	4156
YAMAHA	4526, 8374
YAMISHI	5896, 7014, 4016, 8644, 6896
YOKAN	8644, 6896
YOKO	8644, 6896, 4016, 3488, 7647, 7287, 6559, 4469, 5531, 3637, 4648
YORK	4648
YORX	4016
ZANUSSI	2438
ZENITH	2499, 5874, 4648
ZENOR	6559
ZX	7733

Cisco Systems, Inc.
5030 Sugarloaf Parkway, Box 465447
Lawrenceville, GA 30042

678 277-1120
800 722-2009
www.cisco.com

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at **www.cisco.com/go/trademarks**. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1009R) Product and service

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com