

LOG PLACEMENT GUIDE FOR LENNOX DIRECT VENT AND B-VENT SERIES MULTI-OPEN GAS FIREPLACE HEATERS

GENERAL INFORMATION

This log placement guide has been prepared to present detailed log placement illustrations and provide instruction to assist in the placement of logs at the initial (new appliance) setup and after the annual cleaning and inspection cycles. The information provided here is to be used in conjunction with the Homeowner's Care and Operation Instructions provided together with this document in the appliance literature packet. Please read the Homeowner's Care and Operation Instructions completely before completing the procedures detailed in this placement guide.

INITIAL INSTALLATION CONSIDERATIONS

If the logs are being installed for the first time, the following paragraphs apply:

DO NOT attempt to install the logs until the appliance installation has been completed, the gas line connected and tested for leaks and the initial burner operation has been checked out.

Step 1. Remove the appliance front door.

Step 2. Remove the foamed log set from the interior of the firebox. Remove the logs from their packaging. **Handle logs carefully to prevent breakage.**

CERAMIC FLOOR PANELS, LOGS AND GLOWING EMBER PLACEMENT

Step 1. Install the Ceramic Floor Panels as shown in **Figure 3** (for Direct Vent fireplaces only).

Note: This appliance is provided with enough Glowing Embers for several applications, do not feel compelled to use all that is in a new bag. For best glowing effect, replace the ember material annually. Replacement Glowing Embers are available (Catalog Number 88L53).

Step 2. Position the individual logs as shown in **Figures 4A and 4B on pages 3 and 4.** Logs should be placed in the order shown. All logs that have notches to fit over the grate tines should be positioned with these notches directly against the grate. Proper log placement is critical to encourage outstanding flame appearance and prevent sooting. When positioned properly as shown, logs will be positioned between flame peaks and will not impinge any flames.

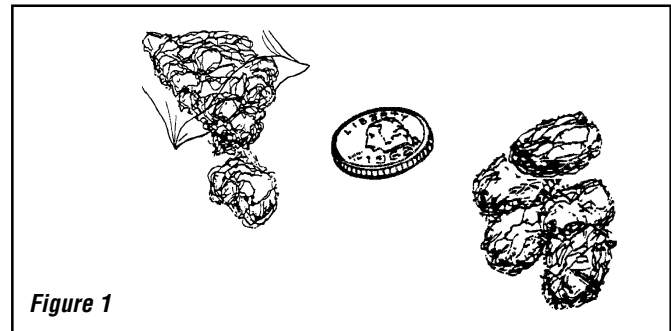


Figure 1

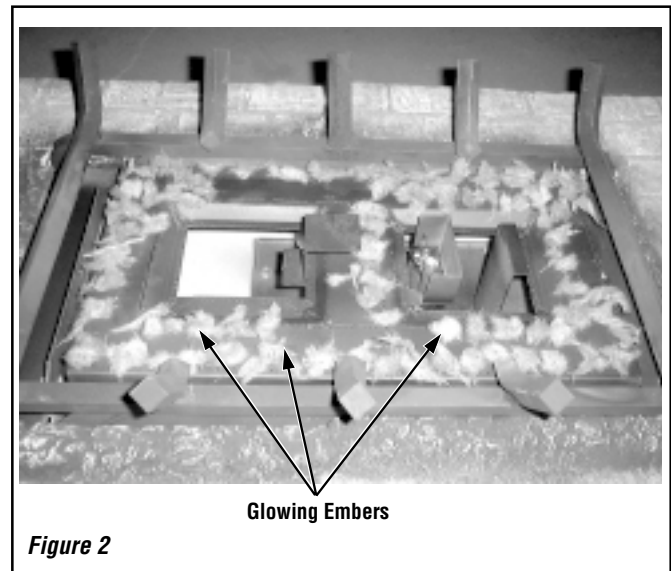


Figure 2

Note: Do Not place Glowing Embers (Rockwool) over burner slots.

Step 3. Separate the Glowing Ember (Rockwool) into pieces about the size of a quarter **Figure 1.** Keep the pieces fluffed up, not matted. Distribute these pieces over the front surface of the burner, as shown in **Figure 2.** Do not use more than is necessary. When properly positioned, the Glowing Embers will cover approximately 65% of the front burner and with no appreciable gaps or openings. Ensure that the main burner ports remain uncovered by the ember material.



OMNI-Test Laboratories, Inc.

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.


CERAMIC FLOOR PANEL PLACEMENT (Direct Vent Fireplaces Only)

Catalog Number for the Ceramic Floor Panel set: 55M4901 (For EDVPF), 55M5101 (For EDVCL), 55M5501 (For EDVST) And 55M7601 (For EDVCR).

1 1/4" Dia. Through Holes (4 Places)

Log Support

Burner

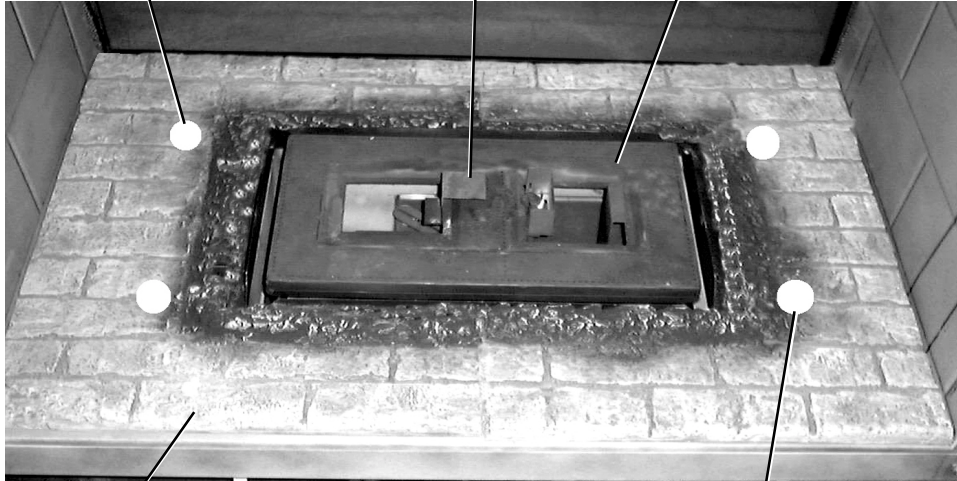

Ceramic Floor Panel


EDVST Shown

Place The Four Legs Of The Grate Assembly In The Four Holes Of The Ceramic Floor Panel

Small Door Opening

Burner

1 1/4" Dia. Through Holes (4 Places)

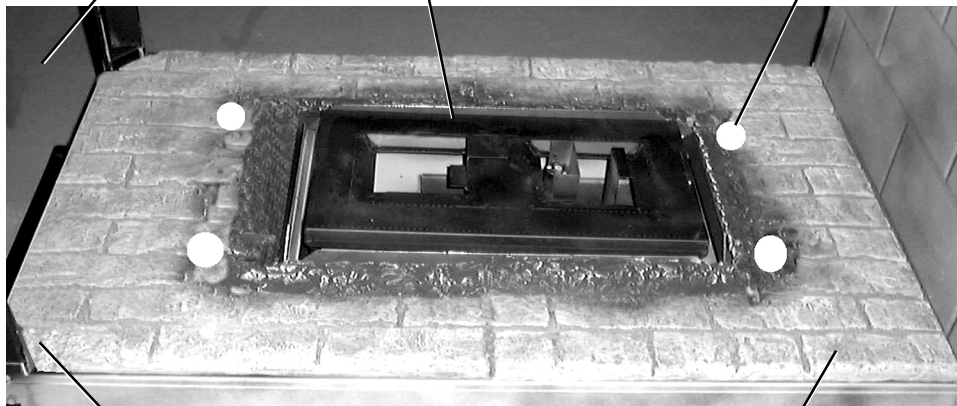

Chamfer Corner Pointing Toward Small Door Opening


EDVCL Shown*

Ceramic Floor Panel

***NOTE: EDVCR & EDVPF Are Installed In Similar Fashion With Chamfer End Pointing Toward Small Door Opening**

Figure 3


EDVPF, EDVST, EDVCL, EDVCR, EBVPF, EBVST, EBVCL & EBVCR LOG PLACEMENT

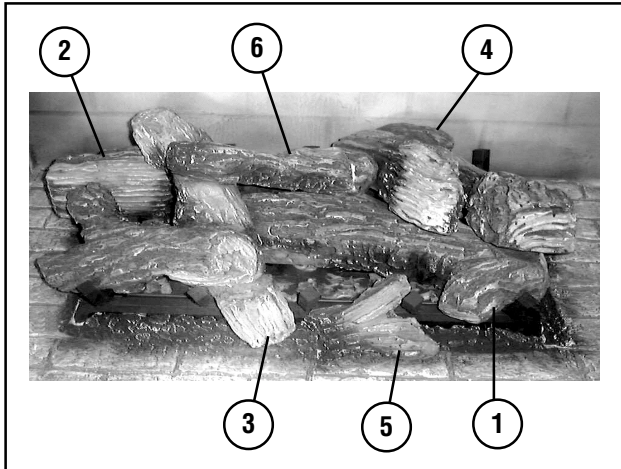

Log Number	Description	Part Number
1	Log, Corner	55M1801
2	Log, Rear/Left	55M1901
3	Log, Front/Left	55M2001
4	Log, Rear/Right	55M2101
5	Log, Front/Center	55M2201
6	Log, Center/Top	55M2301

Catalog Number for the entire log set: 55M0401


STEP 1

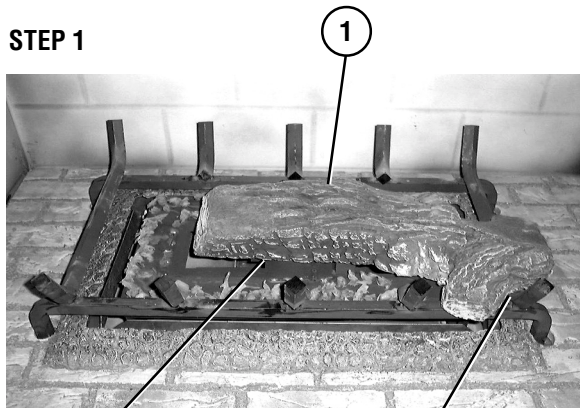

Position Groove At The Bottom Of Log (1) Over The Burner Log Support Bracket

Position The Groove At The Bottom Of Log (1) Over The Grate And Slide It Forward Against The Grate Here


STEP 2

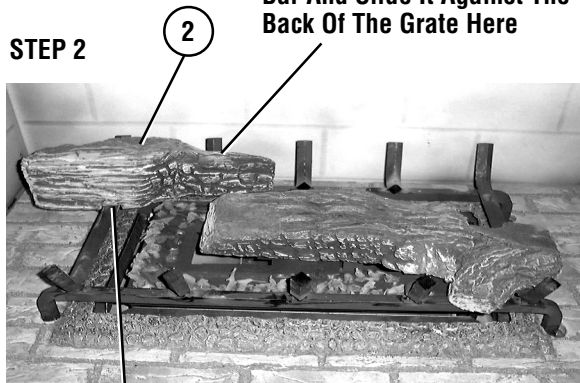

Position Groove At The Bottom Of Log (2) Over The Grate Here And Slide It Against The Back Of The Grate

Position Log (2) Over The Grate Bar And Slide It Against The Back Of The Grate Here


STEP 3

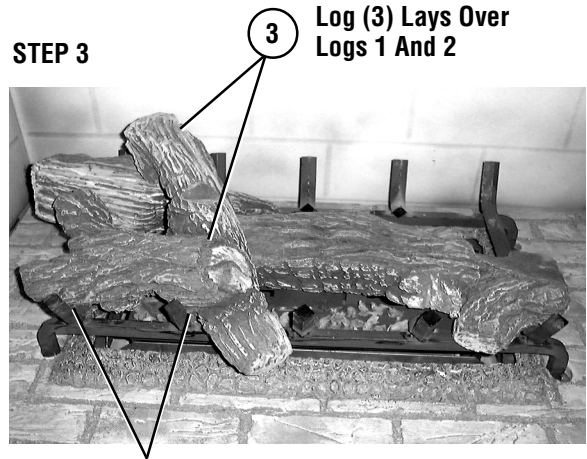

Place Bottom Hole Of Log (3) On Pin In Log (2). Position Grooves At The Bottom Of Log (3) Over The Grate.

Log (3) Lays Over Logs 1 And 2

STEP 4

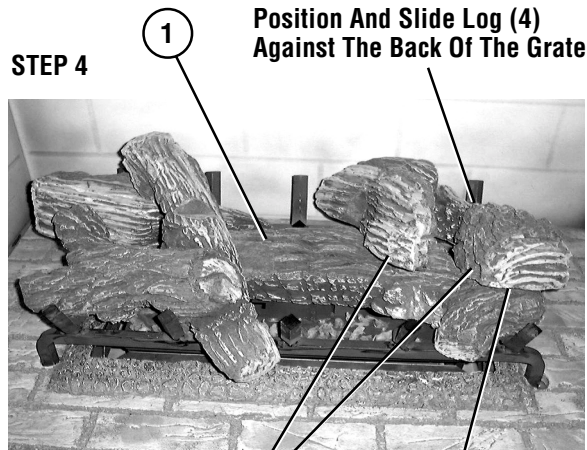


Place Log (4) Over The Flat Spot On Log (1) Here

Position And Slide Log (4) Against The Back Of The Grate

Figure 4A

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

EDVPF, EDVST, EDVCL, EDVCR, EBVPF, EBVST, EBVCL & EBVCR LOG PLACEMENT (CONTINUED)

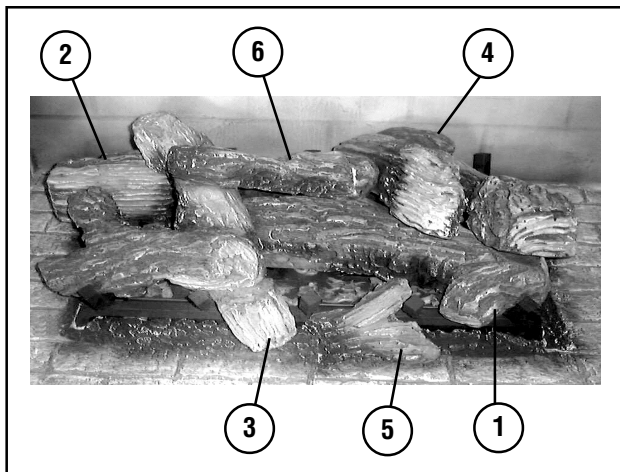

Log Number	Description	Part Number
1	Log, Corner	55M1801
2	Log, Rear/Left	55M1901
3	Log, Front/Left	55M2001
4	Log, Rear/Right	55M2101
5	Log, Front/Center	55M2201
6	Log, Center/Top	55M2301

Catalog Number for the entire log set: 55M0401

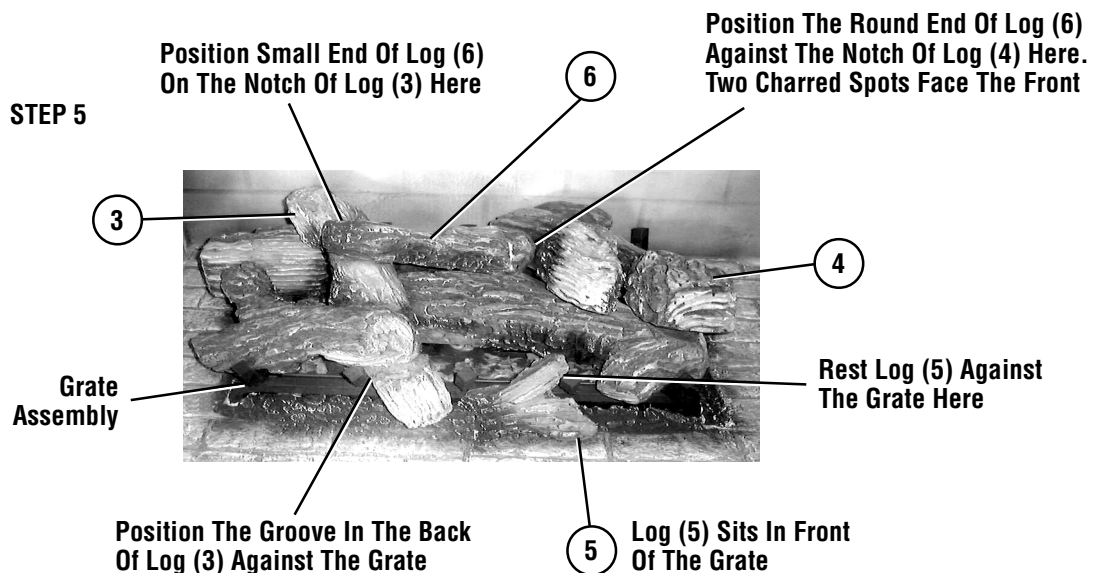


Figure 4B

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

Lennox reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2003 by Lennox
P/N 750,161M REV. B 10/2004

LENNOX[®]

HEARTH PRODUCTS

1110 West Taft Avenue • Orange, CA 92865

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>