

**(3)- (MAYTAG) FRONT LOAD WASHER MACHINE
CONTROL BOARD KIT #12001454, AND #12001725.**

Instruction Sheet

16008915

2707490-0200

This instruction sheet is to be used with :

REPAIR PART NO. : 12001454, 12001725


DESCRIPTION : Machine Control Board Kit

This kit contains:

- | | |
|---------------------------------------|----------------------------|
| 22002988 Machine Control Board | 16002292 Schematic |
| 22002335 Jumper Wire (Red Wire No. 3) | 16008915 Instruction Sheet |
| 22002281 Pilot Lamp (Yellow based) | |

The following chart will depict which components apply to the washer you are servicing.

Model Number	Prior to Series 17	Series 17 & Later
MAH3000AWA	A	B
MAH3000AWQ	A	B
MAH3000AWW	A	B

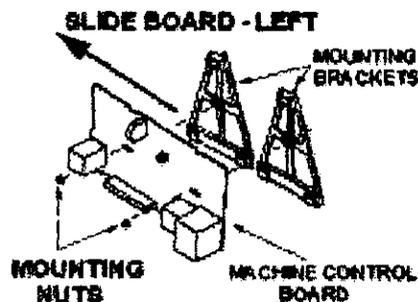

A = Use all components and follow instruction steps 1 - 11 below.

B = Use only the 22002988 board and follow instruction steps 1, 2, 9, 10 & 11 below.

Procedure:

1. Unplug the washer.
2. Remove the three screws securing the rear console cover plate to the console and lay the console forward carefully onto a service blanket on the top cover.
3. Locate the ON Light in the console and remove the Black No. 3 wire and the White No. 11 wire from the signal lamp assembly. Unsnap and discard the ON Light lamp assembly.
4. Fold the Black No. 3 wire back and tape the wire to the main harness out of the way.
5. Locate and remove connector P7 from the left side of the Machine Control board.
6. Insert the jumper wire (Red Wire No. 3), found in the service repair assembly, into position number 5 of the P7 connector, then reconnect the P7 connector back onto the Machine Control Board.
7. Remove the Yellow based indicator lamp found in the service assembly and position the lamp where the previous ON Light lamp assembly was previously removed. Then snap the new lamp assembly into the console.
8. Connect the White No. 11 wire and the Red No. 3 wire to the new yellow based lamp assembly.
9. Remove the existing electrical schematic taped to the rear wall of the console and replace with the electrical schematic found in the service assembly.
10. Reposition the console into the upright position on the topcover and secure the three screws fastening the console to the rear console cover plate.
11. Replacement is complete.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>