



*ELITE Series*TM

PORTABLE GENERATORS

Illustrated Parts List Las Partes ilustradas Listan

Questions? Help is just a moment away!
Preguntas? La ayuda es justa un momento lejos!

Call: **Generator Helpline**

Llame: **Línea Directa del Generador**

1-800-743-4115 M-F 8-5 CT

web: www.briggsandstratton.com


030385
(8000W)



BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.

Manual No. 195693A
Revision A (01/23/2008)

EXPLODED VIEW - MAIN UNIT

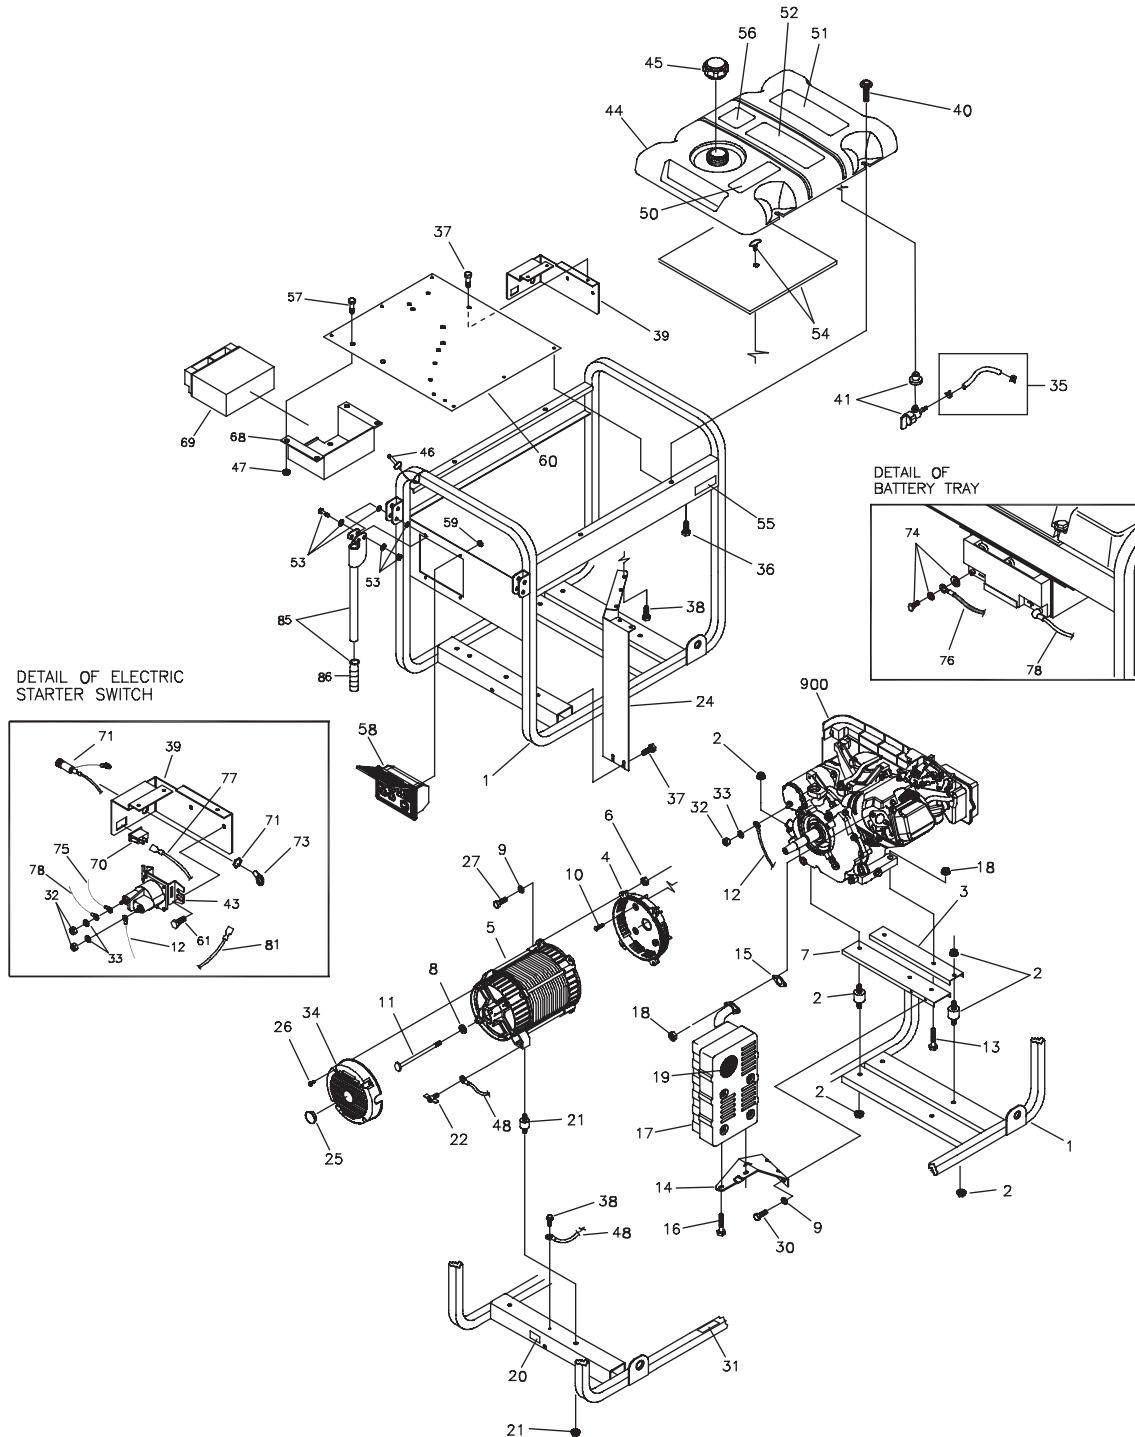


EXPLODED VIEW - PARTS LIST

Item	Part #	Description	Item	Part #	Description
1	M195438GS	KIT, Cradle (Includes Items 20 & 31)	44	194217GS	ASSY., Tank Fuel (Includes Items 41, 50, 51, 52 & 53)
2	196400GS	KIT, Vibration Mount	45	B4363GS	CAP, Tank Fuel
3	M92531GS	BRACKET, Support Engine	46	B4135GS	PIN, Handle Release
4	190220GS	ADAPTER, Engine	47	77395GS	NUT, M6 Flange Lock
5	NSP	ASSY., Alternator (see page 4)	48	195373GS	WIRE, Ground
6	*	NUT, Hex, M8 - 1.25	50	188333GS	DECAL, Instruction Fuel Level
7	M190723GS	BRACKET, Support Eng/Muffler	51	194799GS	DECAL, Danger
8	96796GS	WASHER, 8.4 x 22.2 x 3	52	189235GS	DECAL, Start Instructions
9	*	WASHER, Lock, 5/16 - M8	53	194034GS	KIT, Fold-down Handle Hardware
10	190274DGS	SBHC, 3/8-16 x 7/8"	54	194448GS	KIT, Insulation w/ clip
11	73068GS	HHCS, 5/16 - 24 x 8-7/8	55	197798GS	DECAL, Fuel Shutoff
12	189302LGS	ASM WIRE, #16, Red	56	202997GS	DECAL, Warning, CO
13	*	HHCS, M8 - 1.25 x 40	57	*	ASSY. Control Panel
14	92532GS	BRACKET, Muffler	59	189164GS	PALNUT, 3/16
15	710250	GASKET, Exhaust	60	195537GS	HEATSHEILD
16	*	HHCS, M6 - 1.0 x 12	61	B4300GS	HHS, 1/4 - 20 x 1/2, Trilobular
17	B4206GS	MUFFLER	68	195680GS	TRAY, Battery
18	67989GS	NUT, M8 Flange Serrated	69	193463GS	BATTERY
19	83083GS	SCREEN, Spark Arrest	70	87799GS	SWITCH, Rocker On/Off
20	B4986GS	DECAL, Ground	71	196626GS	ASSY, Jack, Coax, DC
21	195625GS	KIT, Vibration Mount	73	192351GS	LUG, 1/4, #22/18
22	86494GS	SCREW, Wing M6 - 1.0 x 16	74	193347GS	KIT, Hardware Battery
24	194390GS	ASSY., Heat Shield	75	196627AGS	WIRE-A, #13, Red
25	191190GS	CAP	76	185939KGS	ASM WIRE, #55 Blk
26	74908GS	TAPTITE, M5 - 0.8 x 10	77	196627BGS	WIRE-A, #13B, Red
27	*	HHCS, M8 - 1.25 x 25	78	189302MGS	ASM WIRE, #13 Red
30	*	HHCS, 5/16 - 18 x 3/4	81	196627EGS	WIRE-A, #0, Blk
31	196830GS	DECAL, Exhaust Warning	85	B193200GS	ASSY., Fold Down Handle
32	*	NUT, 1/4 - 20	86	198669GS	GRIP, Handle
33	*	WASHER, 1/4 Lock	900	§	ENGINE
34	195422GS	COVER, RBC Plastic w/Cap	Parts Not Illustrated		MANUAL, Operator's
35	791745	KIT, Hose, Fuel (cut to fit)	195693GS		BOTTLE, Oil (Qty 2 Required)
36	192376GS	SCREW, 12 - 24 x 1/2 Thread Forming	BB3061BGS		CHARGER, Battery
37	56893GS	CRIMPTITE, 10-24 x 1/2	B4177GS		HARNES, Wire, Power
38	B2153GS	SCREW, Self Driller, 12-14 x 7/8	194274GS		KIT, Decal Service
39	B196810GS	BRACKET, Starter	197112GS		
40	199256GS	BOLT, Shoulder, M6-1.0, w/Neoprene Washer			
41	192980GS	VALVE, Fuel			
43	691656	SOLENOID			

* - Items without part numbers are common fasteners and are available at your local hardware store.


§ - Contact Engine Manufacturer

EXPLODED VIEW AND PARTS LIST - ALTERNATOR

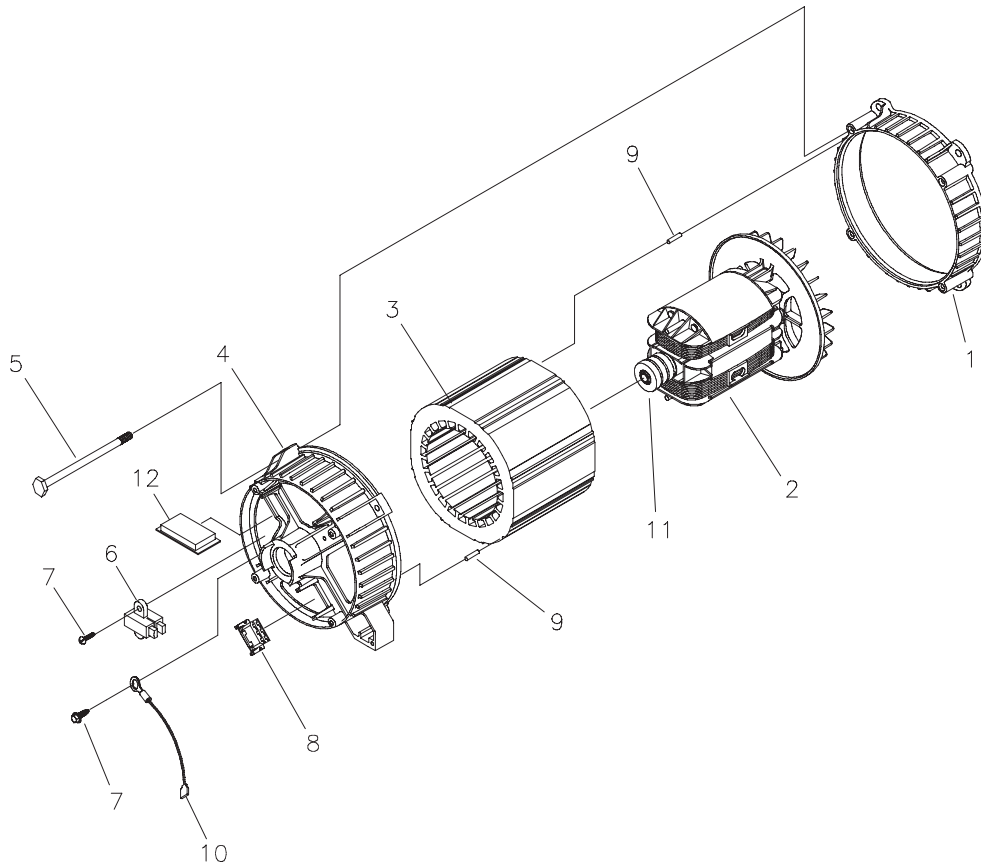

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	195616GS	ROTOR (Includes Item 11)
3	196706AGS	STATOR
4	193336GS	RBC, (with O-Ring p/n 189197GS)
5	86308KGS	HHCS, M6 - 1.0 x 140 SEMS
6	66386GS	ASSY, Holder, Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	ASSY, Wire, Ground
11	65791GS	BEARING
12	189769GS	BOARD, Circuit, System Control


EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

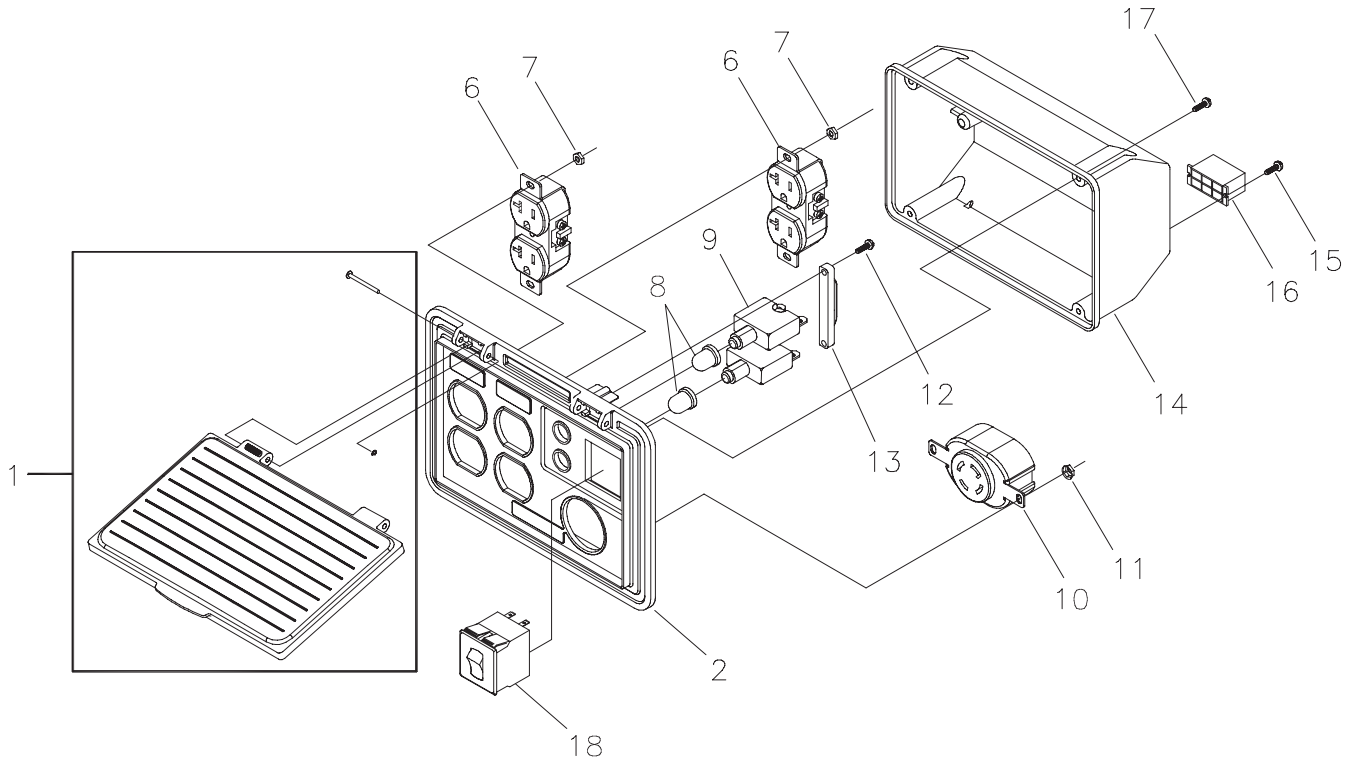

Item	Part #	Description
1	195112GS	ASSY, Control Lid Panel
2	192273DGS	CONTROL PANEL, Compact
6	68759GS	OUTLET, 120V, 20Amp, Duplex
7	*	NUT, Palnut, Pushnut, 5/32
8	84198GS	CAP, Circuit Breaker
9	75207GS	CIRCUIT BREAKER
10	43437GS	OUTLET, 120/240 Locking, 30A
11	*	NUT, Palnut, Pushnut, 3/16
12	*	PPHMS, 3.5 x 18
13	93857GS	BAR, Retaining
14	192274GS	BOX, Rear Cover
15	82308GS	SCREW, Tapping, STC 3 x 18
16	22694GS	HOUSING, Receptacle
17	192241GS	SCREW, Tapping, 3.5 x 14
18	192785GS	BREAKER, 30A

* - Items without part numbers are common fasteners and are available at your local hardware store.

EXPLODED VIEW AND PARTS LIST - WHEEL KIT

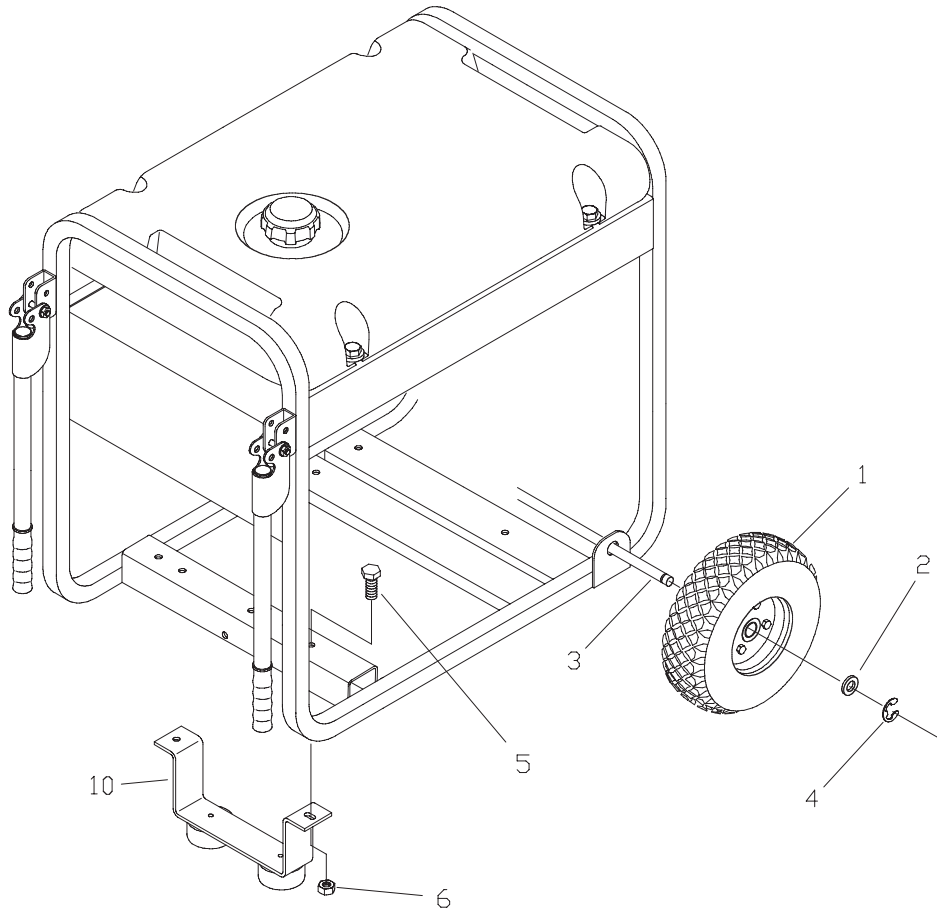

Item	Part #	Description
1	B4966GS	WHEEL
2	*	WASHER, 5/8"
3	191267RGS	AXLE, 5/8"
4	191265GS	E-RING
5	*	HHCS, M8 1.25 x 20
6	52858GS	NUT, M8 - 1.25, Lock
10	195686GS	Assy Support

Parts Not Illustrated

199919GS SUBKIT, Hardware

* - Items without part numbers are common fasteners and are available at your local hardware store.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>