


dreamer DESIGN

INSTRUCTION MANUAL

Congratulations on your purchase of a Dreamer Design Jogging Stroller.

DITTO RPS™

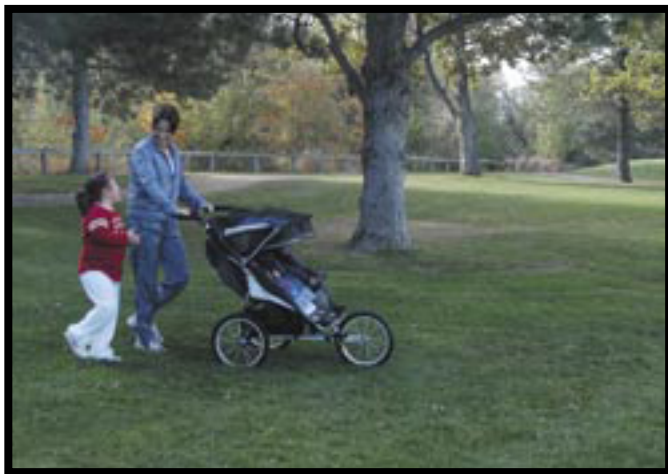

INTRODUCTION


Before we walk you through the simple assembly of your new stroller we would like you to take a moment and read through the entire instruction booklet to insure the process goes as smoothly as possible. After you have finished assembling your stroller keep this booklet for future reference.

Please note that if you don't follow the instructions you or your child could be seriously injured. Correct assembly of the stroller is vital and outside of the manufacturer's and distributor's liability.

Don't throw your box away! It's good to keep it around so you have it if you need to ship or transport your stroller in the future.

I N T R O D U C T I O N

Check to make sure you have all the parts and necessary items needed to assemble the stroller.
If you don't have something that is pictured please call our customer service line at
800.278.9626.

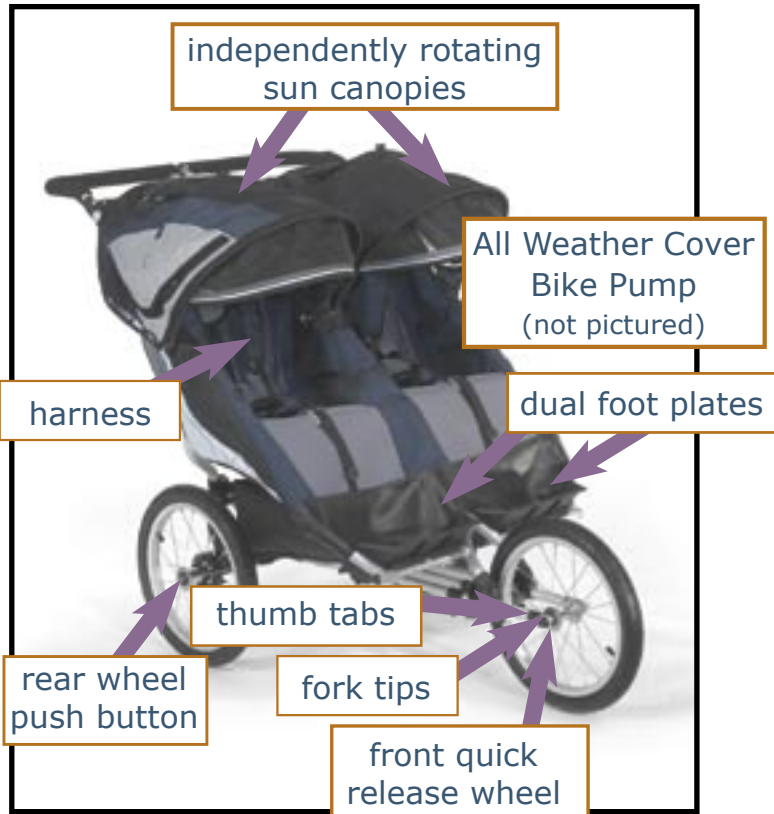

A S S E M B L Y

Lay the stroller flat on the fork tubes,
as shown.


Remove the rubber protectors from the
ends of the forks and thumb tabs.

*watch fingers when folding - folding
mechanism could be a pinching hazard*



A S S E M B L Y

Unfold the frame and insert the thumb tabs into the slots.

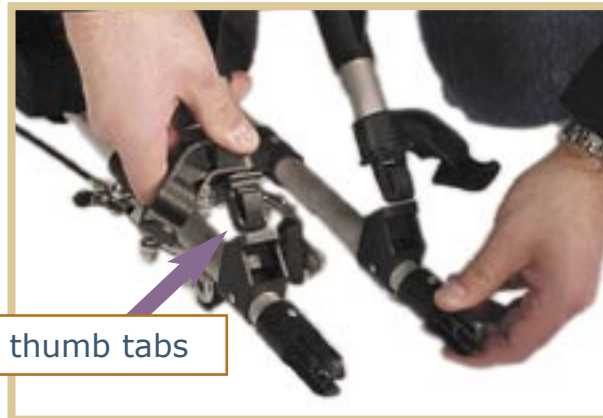

Fold the plastic swing clasps in, to latch around the frame.



Make sure the foot brake is in the unlocked, up, position.




Remove and discard the foam protectors on the wheel axles.

be sure to discard the plastic bags from the wheels - they are a suffocation hazard for children


To put the rear wheels on, push the button on the wheel while pushing the wheel axle into the stroller frame.

check to make sure the wheels are secure before each use

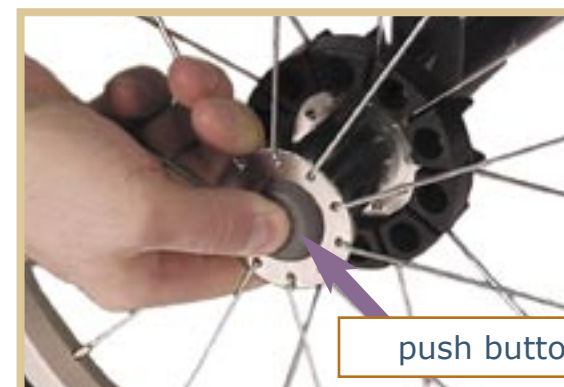


Tip the stroller back so it is resting on its handle and rear wheels to put the front wheel on.

Make sure the brake release lever is pointed out, away from the stroller.

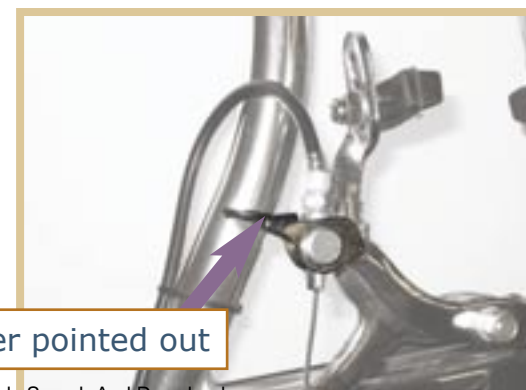


A S S E M B L Y


Starting at the bottom of the brake pads, push the wheel up and in between the brake pads.

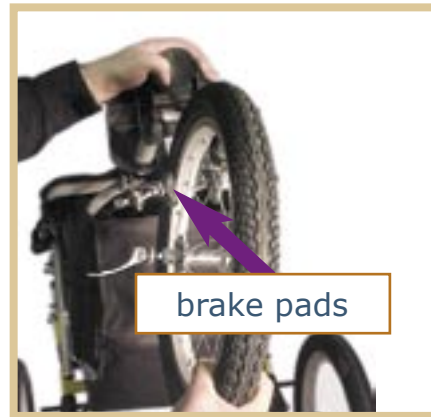

Rotate the tire upwards and find the flat sides on the round axle and slide all the way to the back of the forks, on BOTH

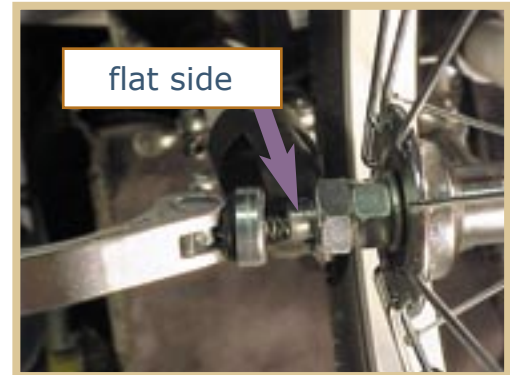

The quick release lever should be straight out. While holding the lever, tighten the thumb nut until it is barely snug. The axle should not move side to side.

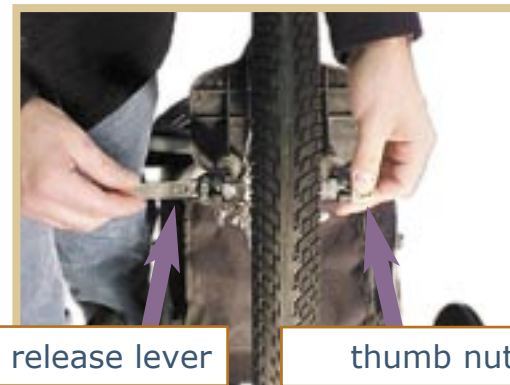


Push the quick release lever down so it is flush with the frame. Give the wheel a tug to make sure it is secure.



check to make sure the wheel is secure before each use

Be sure to close the brake calipers by pushing the lever forward all the way.


check to make sure the brake caliper is locked before each use

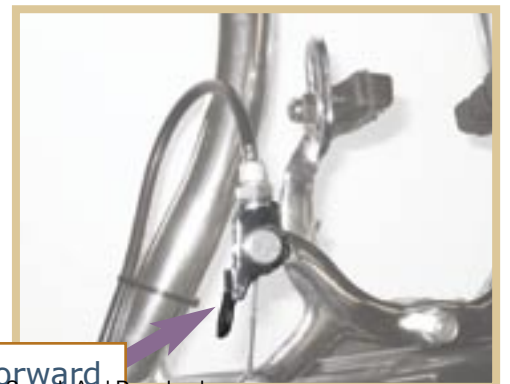


B R A K E S

Your stroller comes with two parking brakes: a foot brake and a hand brake. The hand brake, located on the handle, locks the front wheel. The foot brake is located near the basket, on the rear axle. It locks the rear wheels.

You should always use both brakes when the stroller is not being pushed.

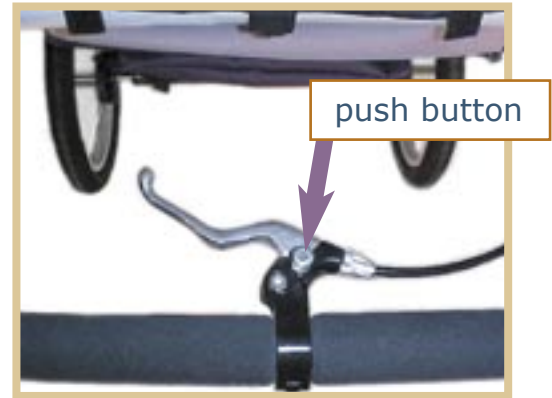

To lock the hand brake, pull the lever in and hold it while you push the button down. As you hold the button down, release the brake lever.

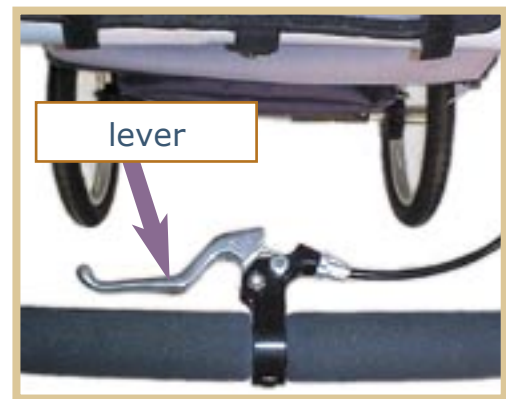

To release the hand brake pull the lever in until the button pops up.

If the front wheel still moves, see the brake adjustment section on page 24



To lock the foot brake you simply push it down with your foot. Then try to push the stroller to make sure the brake is secure.

Pull the foot brake up with your foot to release it.

NEVER trust your brakes 100%! Always keep an eye on your stroller. Always use your safety wrist strap any time a child is in the stroller.

check to make sure the brake caliper is locked before each use



BUBBLE SUN CANOPY™

Your canopy has multiple adjustments. It also has a side ventilation system, with flaps that roll up and velcro into place.

Use the canopy at it's fully extended position during midday sun to provide your child with the most amount of shade.

To bring the canopy to it's next position, flip the mesh portion under.

When the canopy is not needed, pull it all the way back.

To shade your child during early morning or late evening sun, unstrap the strap at the back of the canopy, and pull it all the way forward.

To view your child through the top window, simply roll back the sun cover and velcro into place. To clean the canopy window use a damp cloth.



BUBBLE SUN CANOPY™

To remove the sun canopy you will need a Phillips screwdriver to remove the screws from both sides of the canopy. Unsnap the canopy from the back and lift it out.

It may be snug, but it will lift out.

Before washing the canopy, remove the frame. The canopy may be washed in cold water with mild detergent. Place the canopy back on the stroller to dry.

When the canopy is wet, extend it fully until completely dry to prevent any mildew from forming.



SEAT

The amount of recline on the seat is adjusted by holding the buckle behind the seat and pull the strap to make the seat more upright.



To make the seat recline more, hold the strap and pull the buckle.

The seat is fully reclined by unbuckling the strap behind the seat.



⚠ WARNING Child may slip into leg opening and strangle. Never use in reclined position unless the firmness panel is in place.

The seat is removed by undoing the velcro and the straps from the foot plate and the frame. The seat also needs to be unsnapped from the frame.




S E A T

To wash the seat take out the firmness panels by unzipping the pouch at the top and underneath the seat.

The seat may be washed in cold water with mild detergent. Snap the seat back on the frame to dry, to prevent mildewing.

Do not remove the firmness panels when using your stroller. Removing the panels could cause suffocation.

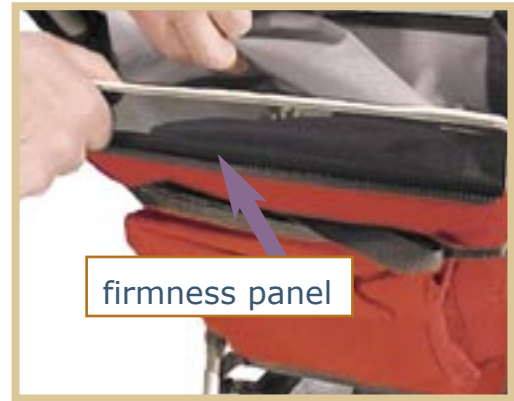

H A R N E S S

Undo both buckles from the padded center strap.



Place the child in the seat.

Adjust the padded center strap forward or backward to fit your child.

Adjust the padded shoulder harness up or down on the Velcro strips to fit your child.

Buckle the two buckles to the padded center strap.


Pull the adjustment strap until the padded center strap and the padded shoulder harness are both snug.

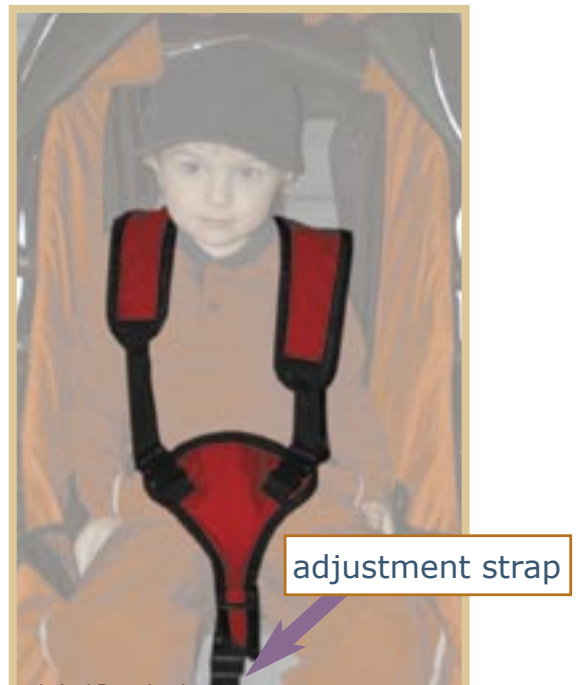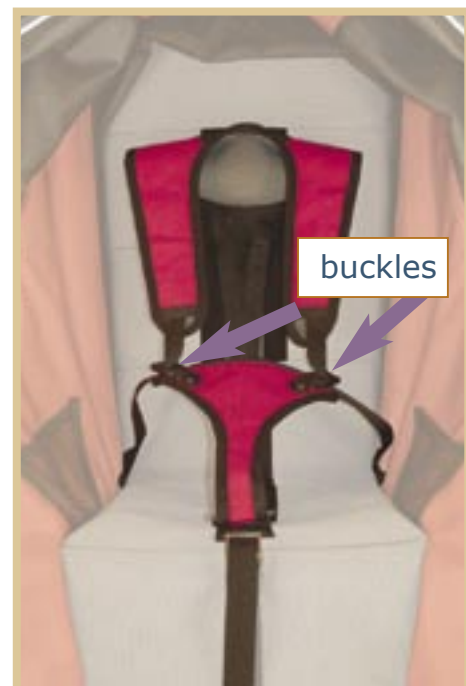

⚠ WARNING Avoid serious injury from falling or sliding out. Always use seat belt.

S T O R A G E

Your stroller has many places to store your stuff. There are two pockets located on the back of the seat, as well as pockets for keys or a cell phone on both sides.

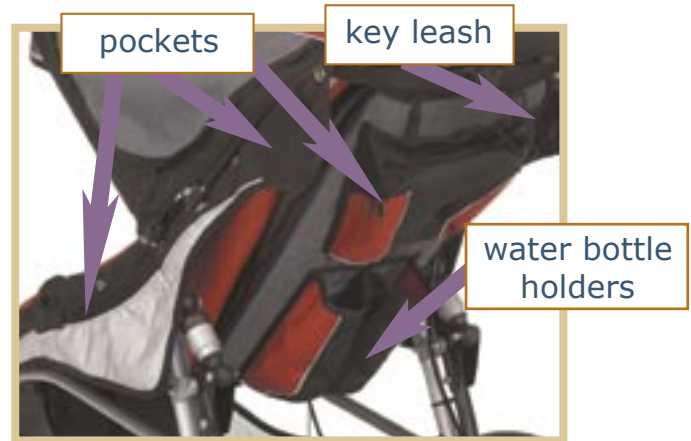

There is also a key leash and four water bottle holders located on the back of your stroller.

Another place for storage is the basket under the seat.



▲ WARNING Do not store more than 12 pounds between the pockets and basket. Overloading the stroller may cause it to become unstable and tip over.

Your basket can be removed and washed in cold water with mild detergent.

Place the basket back on the stroller to dry to prevent mildewing.



To remove the basket, undo the velcro straps attaching the basket to the frame underneath the stroller and the straps attaching the basket to the seat.




ALL WEATHER COVER

If you get stuck in the rain, your all weather cover will keep your child dry. Just drape the cover over your bubble canopy and seal the back velcro strips together.



all weather cover

Next, velcro the straps around the foot plate, which attach underneath between the brake calipers and the frame.

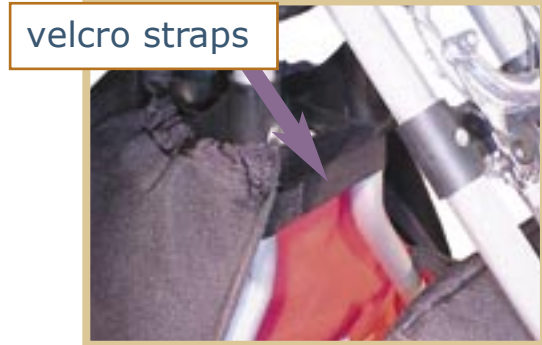

velcro straps

FOLDING

Unsnap the straps on either side of frame, by the basket. Undo the front velcro straps of the basket.



basket velcro straps

swing clasp

Undo the swing clasps on either side. Push on the thumb tabs of the fork tips to remove them.

thumb tabs

Lift the frame out and fold back. Then fold it in half again, pushing the fork tips up to meet the handle.




TRACKING

If your stroller is pulling to the left or right check to see if it is one of the following things.

Check to make sure the tire pressure in all the wheels is equal.

If that doesn't work and it continues to pull to the right, unscrew the front wheel thumb nut and shift the tire to the left. Tighten the tire again and push to stroller to see if it rolls straight. If it pulls to the left, shift the tire to the right.

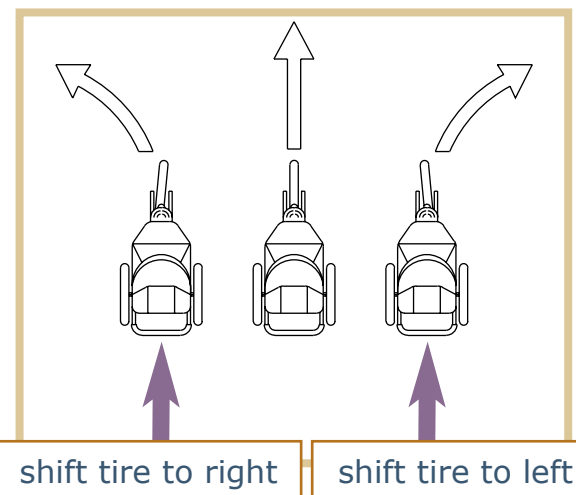


shift tire to right

shift tire to left


MAINTENANCE

We recommend that you have an experienced dealer perform these maintenance checks once a year. Lubrication of the following items is necessary:

- 1 pivot point and cable of hand brake
- 2 hand brake cable by caliper lever
- 3 front wheel axle
- 4 quick release lever
- 5 insert in frame for rear wheels
- 6 wheel nub and ball bearings of rear wheel

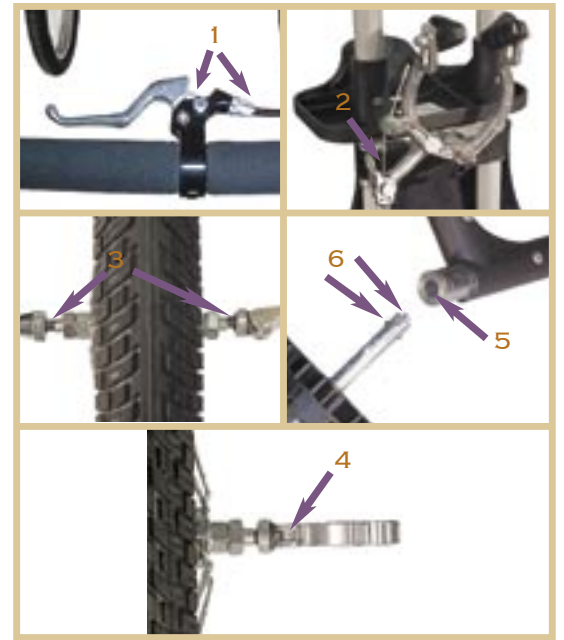


Replace the brake pads when the grooves become worn away. Check all bolts are tight and springs are secure for rear foot brake.

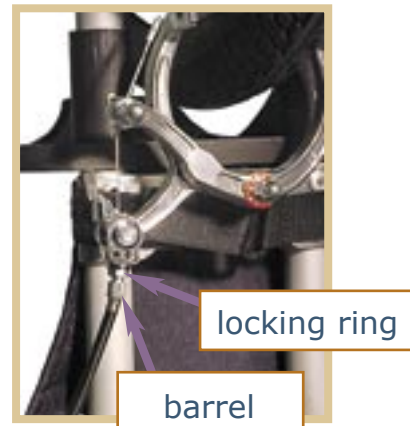

Check fabric seams and straps for fraying or tearing. Keep it out of the sun and in a dry place, when not in use, to prevent fading and mildew. Check the frame for loose rivets, cracks and wear. Check to make sure all nuts and bolts are tight on the frame.



To adjust the hand brake if it becomes loose, turn the barrel towards you, away from the locking ring. Tighten the locking ring to make a gap no more than a 1/4" wide. If still too loose, adjust barrel down by the brake calipers.

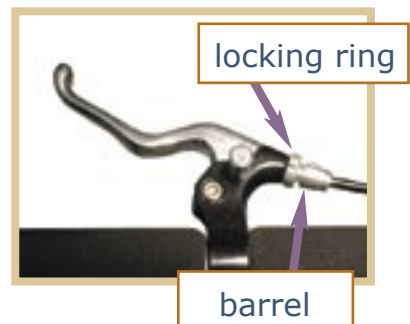

these adjustments should be done in small increments - only a small amount of adjustment is necessary

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>