

Radio Controlled Projection Clock Model: RM303P USER MANUAL

EN BRIEF INTRODUCTION


Thank you for your purchase of this Projection Alarm Clock. Please read these instructions carefully and keep the manual well for future reference.

The unit has a clear and easy-to-read display that shows the time, date and alarm status.

This product is designed to synchronize its date and time automatically once it is within range of the signal from the atomic clock in US.

OVERVIEW

REVIEWER

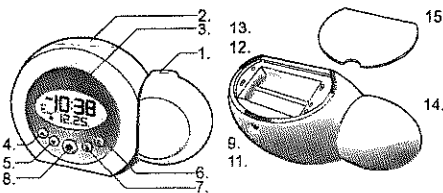

- Projector:**
 - Use it to project the time.
- SNOOZE / LIGHT key:**
 - In normal time mode, press it once to turn on the backlight for 5 seconds.
 - Press it to silence the current alarm when it is going and enter the snooze mode for 8 minutes.
- LCD display:**
 - Displays time and date.
- ▲ key:**
 - In time setting mode, press it to increase the setting values.
- ▼ key:**
 - In time setting mode, press it to decrease the setting values.
- SET CLOCK key:**
 - In normal time mode, press it once to enter the normal time setting mode.
 - In normal time setting mode, press it once to step into the setting items. Press and hold it to exit the setting mode in any step.
- SET ALARM key:**
 - Press it once to turn on the backlight for 5 seconds, and press it again to enter the alarm time setting mode.
 - In alarm time setting mode, press it once to step into the setting items.
- ALARM ON / OFF key:**
 - Press it once to turn on the backlight and display the alarm time for 5 seconds.
 - Press it again to turn on / off the alarm.
- DC jack:**
 - Plug DC adaptor to power the clock.
- BATTERY COMPARTMENT:**
 - Accommodates 2 AA batteries.
- RESET key:**
 - Press it to return all values to default values.
 - In case of malfunction, the unit may be required to reset.
- PROJECTION ON / OFF slide switch:**
 - Slide it to turn on / off the projector.
- 180° FLIP key:**
 - Press it to rotate the projected image by 180°.
- RCC key:**
 - In normal time mode, press it once to receive the RC signal for reception testing.
- BATTERY DOOR**

- Low battery indicator
- Time
- Alarm time & Date



- Insert 2 new AA size batteries as per the polarity information marked on the battery compartment.
- Press "RESET" key to restart the clock.
- Replace the battery door.

RECEPTION OF RADIO CONTROLLED TIME SIGNAL

The time and calendar are radio-controlled. The current time and calendar are automatically synchronized with time signal transmitted from US.

When used for the first time (after inserting batteries or pressing "RESET" key), the clock will start to receive the time signals and the signal reception indicator will be flashing for 5 minutes.

SIGNAL RECEPTION INDICATOR

The wave segment flashing means time signals are being received. The signal quality could be classified into 3 types:



No signal



Weak signal




Excellent signal

- The unit will automatically search for the time signal at 2:00 (3:00 or 4:00 is also available if the signal is not received at 2:00), 8:00, 14:00 and 20:00 each day.
- Always place the unit away from interfering sources such as TV set, computer, etc.
- Avoid placing the unit on or next to metal plates.
- Closed area such as airport, basement, tower block or factory is not recommended.
- Do not start reception in moving articles such as vehicles or trains.

TIME AND CALENDAR MANUAL SETTING


If you are out of reach of the Radio Controlled sensor or if the reception is not reachable, the time and calendar can be set manually. As soon as the signal of sensor is received again, the clock will automatically synchronize with the exact time and calendar.

- In normal time mode, press "SET CLOCK" key once to enter the time setting mode.
- Press "▲" or "▼" key to change the settings.
- Press "SET CLOCK" to confirm. The setting order is: 12 / 24 -hr format, time, + / - 23 hours time difference, year, day / month format, date.
- Press "SET CLOCK" key to save and exit the setting mode.

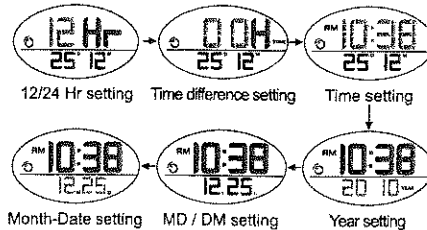

ALARM TIME SETTING

- In normal time mode, press "SET ALARM" key once to enter the alarm time setting mode.
- Press "▲" or "▼" key to set hour / minute.
- Press "SET ALARM" key to save and exit the setting mode. "ALARM ON" indicates alarm is ON.

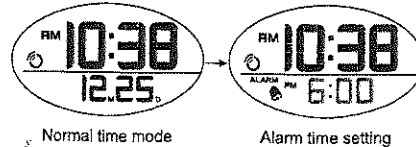


USING ALARM FUNCTION

- Set the alarm time as the above section.
- In normal time mode, press "ALARM ON / OFF" key once to display the current alarm time.
- Press it again to turn alarm ON / OFF.

TO SILENCE THE ALARM

- Press "SNOOZE / LIGHT" to silence the alarm for 8 minutes. The "ALARM ON" will be flashing.
- Press any other key to turn the alarm off and activate it again after 24 hours.
- If no key is pressed within 120 seconds, the alarm will be turned off and be activated again after 24 hours.

Slide "PROJECTION ON / OFF" to turn on / off the projector, and project to a dark background within 1-4 meters so that the time will be shown as below:

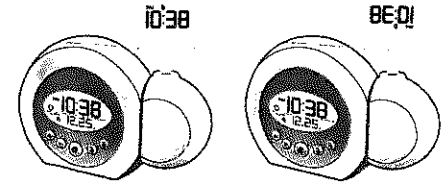

- Slide "PROJECTION ON / OFF" to turn on the projection function.
- Press "SNOOZE / LIGHT" to turn on the projector for 5 seconds.
- When using DC power adapter, the projector will be turned on all the time.
- If alarm is turn on, the alarm icon "ALARM ON" will also be projected.
- Press "180 FLIP" to rotate the projected image by 180°.

BATTERY REPLACEMENT

If the low battery indicator "LOW BATT" displays beside the time, it indicates that battery power of main unit is not enough and you should replace with 2 new AA size batteries at once.

Low battery indicator



Attention! Please dispose of the used unit or batteries in an ecologically safe manner.



SPECIFICATIONS

TYPE	DESCRIPTION
MAIN UNIT	
L x W x H	149 x 57 x 100 mm (5.87 x 2.24 x 3.94 in)
Weight	
Power	2 x AA 1.5V batteries

We recommend that you use alkaline batteries with this product for longer usage and lithium batteries in temperatures below freezing.

PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials. Do not tamper with the unit's internal components. This invalidates the warranty.
- Only use fresh batteries. Do not mix new and old batteries.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment and not as normal household waste.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific™ will not be responsible.
- Consult the furniture manufacturer's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

The technical specifications for this product and the contents of the user manual are subject to change without notice.

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific™ products. If you're in the US and would like to contact our Customer Care department directly, please visit:

www2.oregonscientific.com/service/support
OR
Call 1-800-853-8883.

For international inquiries, please visit:
www2.oregonscientific.com/about/international

EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that the Radio Controlled Projection Clock (Model RM303P) is in compliance with the essential requirements and other relevant provisions of Directive 1995 / 5 / EC.

A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.



COUNTRIES RTTE APPROVAL COMPLIED
ALL EU countries, Switzerland 
and Norway 

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com or on the warranty card for this product) for all inquiries instead.

We

Name: Oregon Scientific, Inc.
Address: 19861 SW 95th Ave., Tualatin,
Oregon 97062 USA
Telephone No.: 1-800-853-8883

Declare that the product

Product No.: RM303P
Product Name: Radio Controlled Projection
Clock
Manufacturer: IPM Concepts Limited
Address: Block C, 9/F, Kaiser Estate,
Phase 1, 41 Man Yue St.,
Hung Hom, Kowloon,
Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1.) This device may not cause harmful interference.
- 2.) This device must accept any interference received, including interference that may cause undesired operation.

© 2010 Oregon Scientific™. All rights reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>