

Weather Forecast Station with Atomic Time Model: BAR206 / BAR206A


USER MANUAL

CONTENTS

Overview	2
Front View	2
Back View	2
Remote Sensor	3
Getting Started	3
Insert Batteries	3
Remote Sensor	3
Sensor Data Transmission	4
Clock	4
Clock Reception	4
Manually Set Clock	5
Weather Forecast	5
Temperature And Humidity	6
Ice Warning	6
Backlight	6
Reset	6
Precautions	6
Specifications	7
About Oregon Scientific	7
EU-Declaration of Conformity	7
FCC Statement	7
Declaration of Conformity	8

OVERVIEW


FRONT VIEW (FIG 1)

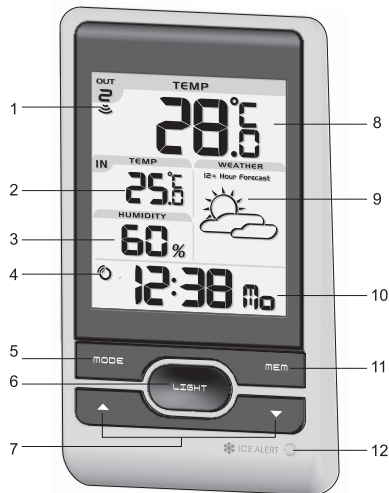

1. Remote sensor reception indicator
2. Indoor temperature
3. Indoor humidity
4. Clock signal reception indicator
5. **MODE**: Change settings / display
6. **LIGHT**: Activate backlight for 5 seconds


7. ▲ / ▼: Increase / decrease setting; activate / deactivate clock reception signal
8. Outdoor temperature
9. Weather forecast
10. Clock with weekday
11. **MEM**: View current, maximum and minimum temperature / humidity
12. Ice alert LED indicator

BACK VIEW (FIG 2)

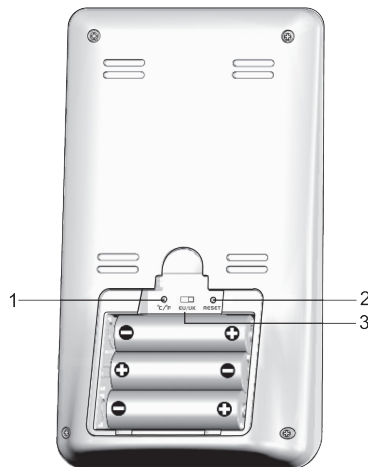

1. °C / °F: Select temperature unit
2. **RESET**: Reset unit to default settings
3. **EU / UK**: Select the nearest radio signal (BAR206 only)

REMOTE SENSOR (FIG 3)

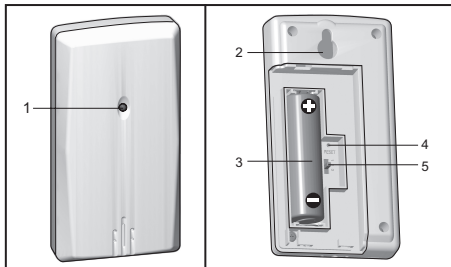


1. LED status indicator
2. Wall mount hole
3. Battery compartment
4. **RESET** hole
5. **CHANNEL** switch

GETTING STARTED

INSERT BATTERIES

1. Remove the battery compartment.

2. Insert the batteries, matching the polarities (see FIG 2).
3. Press **RESET** after each battery change.

 LOCATION	MEANING
Clock / alarm and indoor temperature area	Main unit batteries low
Outdoor temperature area	Sensor batteries low


REMOTE SENSOR

The main unit can collect data from up to 3 sensors.

To set up the sensor:

1. Open the battery compartment (see FIG 3).
2. Select a channel then press **RESET**.
3. Close the battery door.
4. Place the sensor within 30 m (98 ft) of the main unit using the table stand or wall mount.

TIP Ideal placements for the sensor would be in any location on the exterior of the home at a height of not more than 1.5 m (5 ft) and which can shield it from direct sunlight or wet conditions for an accurate reading.

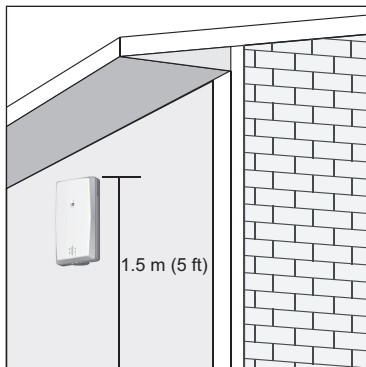

NOTE Use alkaline batteries for longer usage and consumer grade lithium batteries in temperatures below freezing.

SENSOR DATA TRANSMISSION

To search for a sensor:

Press and hold **▲ + MODE**.

The sensor reception icon in the remote sensor area shows the status:

ICON	DESCRIPTION
	Main unit is searching for sensor(s).

	A channel has been found.
	The sensor cannot be found.

TIP The transmission range may vary depending on many factors. You may need to experiment with various locations to get the best results.

CLOCK

CLOCK RECEPTION

This product is designed to synchronize its clock automatically with a clock signal.

BAR206:

Slide **EU / UK** to select the signal received.

- EU: DCF-77 signal: within 1500 km (932 miles) of Frankfurt, Germany.
- UK: MSF-60 signal: within 1500 km (932 miles) of Anthorn, England.

BAR206A:




- WWVB-60 signal: within 3200km (2000 miles) of Fort Collins Colorado.

To enable / disable signal reception:

Press and hold **▲** to enable or **▼** to disable signal reception.

NOTE Reception takes 2-10 minutes. If the signal is weak, it can take up to 24 hours to get a valid signal. If signal reception is unsuccessful, place your unit next to a window, press and hold ▲ to force another signal search.

Clock signal reception indicator:

STRONG SIGNAL	WEAK SIGNAL	NO SIGNAL
		

MANUALLY SET CLOCK

To set the clock manually, disable the signal reception first.

1. Press and hold **MODE**.
2. Press ▲ or ▼ to change the settings.
3. Press **MODE** to confirm.
4. The settings order is: time zone, 12/24 hr format, hour, minute, year, calendar mode (day – month / month – day), month, day and language.

BAR206: Time zone offset sets the clock +/- 23 hours from the received clock signal time.

BAR206A: Select the time zone: (P) Pacific, (E) Eastern, (C) Central or (M) Mountain.






NOTE The language options are English (E), German (D), French (F), Italian (I), and Spanish (S).

To select display mode:

Press **MODE** to choose between clock with seconds / weekday / calendar.

WEATHER FORECAST

This product forecasts the next 12 to 24 hours of weather within a 30-50 km (19-31 mile) radius with a 75% accuracy.

	Sunny
	Partially Cloudy
	Cloudy
	Rainy
	Snowy

TEMPERATURE AND HUMIDITY

To toggle temperature unit:

Press °C / °F.

To auto-scan between sensors:

Press and hold ▼ + MEM to display each sensor's data for 3 seconds.

To end press ▲ .

To toggle between current, minimum and maximum records for the selected sensor:

Press MEM repeatedly.

To clear the records:

Press and hold MEM.

ICE WARNING

If the channel 1 sensor falls between 3°C to -2 °C (37°F to 28°F), LED indicator will flash, and will stop flashing once the temperature is out of this range.

BACKLIGHT

Press LIGHT to activate backlight for 5 seconds.

RESET

Press RESET to return to the default settings.

PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit's internal components. This invalidates the warranty.
- Only use fresh batteries. Do not mix new and old batteries.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacturer's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

NOTE The technical specifications for this product and the contents of the user manual are subject to change without notice.

SPECIFICATIONS

TYPE	DESCRIPTION
MAIN UNIT	
L x W x H	94 x 49 x 164 mm (3.70 x 1.93 x 6.46 in)
Weight	241 g (8.5 oz) without battery
Temperature range	-5°C to 50°C (23°F to 122°F)
Resolution	0.1°C (0.2°F)
Signal frequency	433 MHz
Humidity range	25% - 95%
Humidity resolution	1%
Power	3 x UM-3 (AA) 1.5 V batteries
REMOTE UNIT (THN132N)	
L x W x H	96 x 50 x 22 mm (3.78 x 1.97 x 0.87 in)
Weight	62 g (2.22 ounces)
Transmission range	30 m (98 ft) unobstructed
Temperature range	-20°C to 60°C (-4°F to 140°F)
Power	1 x UM-3 (AA) 1.5 V batteries

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit: www2.oregonscientific.com

[com/service/support](http://www.oregonscientific.com/service/support)

OR

Call 1-800-853-8883.



For international inquiries, please visit: www2.oregonscientific.com/about/international

EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that this Weather Forecast Station with Atomic Time (Model: BAR206 / BAR206A) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.



COUNTRIES RTTE APPROVAL COMPLIED

All EC countries, Switzerland 
and Norway 

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com), or on the warranty card for this product) for all inquiries instead.

We

Name: Oregon Scientific, Inc.
 Address: 19861 SW 95th Ave., Tualatin,
 Oregon 97062 USA
 Telephone No.: 1-800-853-8883

declare that the product

Product No.: BAR206 / BAR206A
 Product Name: Weather Forecast Station with
 Atomic Time
 Manufacturer: IDT Technology Limited
 Address: Block C, 9/F, Kaiser Estate,
 Phase 1, 41 Man Yue St.,
 Hung Hom, Kowloon,
 Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.

© 2007 Oregon Scientific. All rights reserved.
P/N: 086L00 sample



**Weather Forecast Station with Atomic Time
Model: BAR206 / BAR206A**

USER MANUAL

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>