

Installation Guidelines

Congratulations on purchasing a SonoFlat™ SFS-184™ System from Auralex® Acoustics. You're now on your way to creating a world class listening environment.

SonoFlat Systems offer a sophisticated look by utilizing a specialized flat-faced cut of Auralex's industry-leading Studiofoam®. The SFS-184 system contains SonoFlat Panels, SonoColumns and Q'Fusors, which when used together, provide incredibly effective broadband absorption and diffusion in any room. Use the SFS-184 alone for treatment of small to medium-sized rooms or in combination with other Auralex products for full control of larger spaces.

Thank you for Purchasing Auralex® Total Sound Control® Products!



SonoFlat SFS-184 General Information

Recommended Additional Installation Materials

- Caulk-gun (for Tubetak Pro)
- Carpenters Level

- Tape measure
- Small ladder (depending on ceiling height)

Optional Additional Installation Materials

Foamtak Spray Adhesive*


- T-Pins
- * This system includes Tubetak Pro Adhesive, which is safe to use on all included products. You may wish to use Auraley's Foamtak Spray Adhesive for quicker drying times. Foamtak is available through all Auralex authorized dealers. Do NOT use Foamtak to install Q'Fusors.

Q'Fusor Installation Guide

Apply Tubetak Pro to the back of the Q'Fusor, as pictured.



Carefully press Q'Fusor into the face of a SonoFlat Panel or directly to the surface of a wall or ceiling.

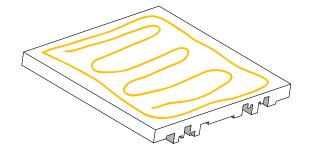




If you plan on painting the Q'Fusor, make sure to do so before applying it to the wall or ceiling.




CAUTION)

Use only lwater-based paints on the Q'Fusor. Oil-based paints will cause severe deterioration of the product.


SonoColumn Placement Options

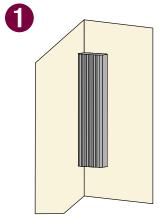


Flush in corner

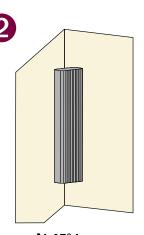

At 45° to corner

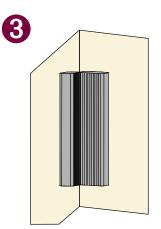


Side-by-side in corner

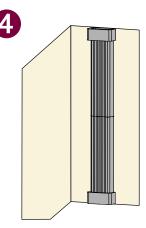


On wall w/ Collars



SonoColumn Installation Guide



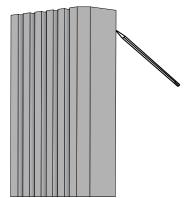


Carefully press **SonoColumn** to the marked location of the wall or ceiling. Maintain continuous pressure. Depending on environmental and surface conditions, it will take anywhere from 2-4 minutes to hold.




TIPL

For a stronger hold, with the adhesive applied, press SonoColumn firmly into place, immediately remove panel and press it firmly again into the same spot. Apply **Tubetak Pro** to either the back or the beveled edge of the **SonoColumn**, depending on chosen placement.

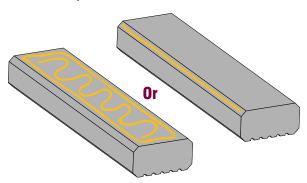


Place SonoCollar around SonoColumn, if desired. The inside section of each SonoCollar can also be used to increase the height of the SonoColumn by 6".

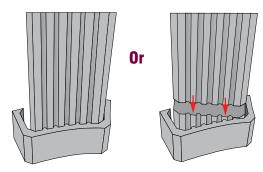


SonoFlat Panel Installation Guide

Mark intended location of each **SonoFlat Panel** on the wall or ceiling.

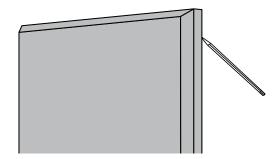

Carefully press SonoFlat Panel to the marked location. Maintain continuous pressure. Depending on environmental and surface conditions, it will take anywhere from 2-4 minutes to hold.

Apply **Tubetak Pro** to the back of the **SonoFlat Panel**, as pictured.

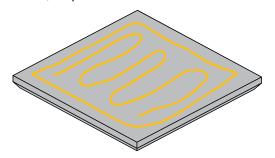

You can use T-Pins to temporarily hold the panel in place while the adhesive sets.

SonoFlat System Installations









See the Auralex® Acoustics website, www.auralex.com, for more information about these and other Total Sound Control® products.

These are general recommendations. Should you have any additional questions about the installation of your SonoFlat™ System, feel free to contact an Auralex® Application Specialist via email at appsupport@auralex.com or call 1-800-95-WEDGE.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com