



## Companion® Infant Restraint System Model # E9L14 Assembly Visual Inspection Instructions




**WARNING:** Remove infant from carrier before beginning visual inspection.



Remove infant carrier from base. The base can remain in the vehicle during visual inspection of carrier.




Turn carrier upside down so the underside of the carrier faces upward.

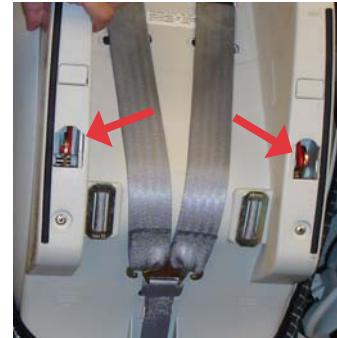

On bottom of carrier where rubber strips run along edges of support rails, there is an exposed opening with attachment hooks.




Approximately 1.5" from each attachment hook (toward the red carrier-release handle) are tabs.

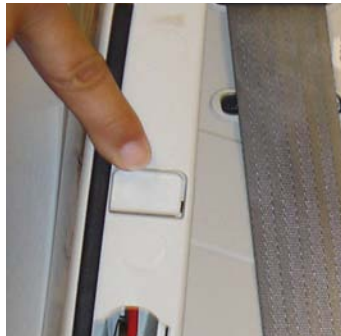

Verify that tabs are intact and fully cover the opening.



If one or both tabs do not fully cover the opening, contact Britax Child Safety, Inc. at 888-427-4829 for further instruction. If both tabs are not fully covered, you may continue to use the carrier in vehicle without the base.

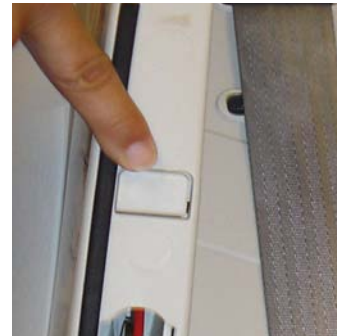

If both tabs fully cover the openings, the carrier is safe for continued use. Britax Child Safety, Inc. apologizes for any inconvenience.



First class travel for children

Britax Child Safety, Inc.  
13501 South Ridge Drive  
Charlotte, NC 28273  
Consumer Services: 1.888.4Britax  
For more information visit: BritaxUSA.com  
© 2006 Britax® Child Safety, Inc.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>